

4 CH	6 CH	7 CH	8 CH	11 CH	VALUES	FUNCTIONS
1	1	1	1	1	000-255	<b>RED</b> 0%-100%
2	2	2	2	2	000-255	<b>GREEN</b> 0%-100%
3	3	3	3	3	000-255	<b>BLUE</b> 0%-100%
4	4	4	4	4	000-255	<b>WHITE</b> 0%-100%
						<b>COLOR MACROS</b>
					000-007	No Effect
					008-015	Moroccan Pink
					016-022	Pink
					023-030	Special Rose Pink
					031-037	Fillies Pink
					038-045	Fuchsia Pink
					046-052	Surprise Pink
					053-060	Congo Blue
					061-067	Tokyo Blue
					068-075	Deep Blue
					076-082	Just Blue
					083-090	Medium Blue
					091-097	Double CT Blue
					098-105	State Blue
					106-112	Full CT Blue
					113-120	Half CT Blue
					121-127	Steel Blue
					128-135	Lighter Blue
					136-142	Light Blue
					143-150	Medium Blue Green
					151-157	Dark Green
					158-165	Primary Green
					166-172	Moss Green
					173-180	Fern Green
					181-187	JAS Green
					188-195	Lime Green
					196-202	Spring Yellow
					203-210	Deep Amber
					211-217	Chrome Orange
					218-225	Orange
					226-232	Gold Amber
					233-240	Millennium Gold
					241-247	Deep Gold Amber
					248-255	Flame Red

4 CH	6 CH	7 CH	8 CH	11 CH	VALUES	FUNCTIONS
						<b>SHUTTER &amp; STROBING</b>
					000-031	LED Off
					032-063	LED On
		5	5	6	064-095	Strobing Slow - Fast
					096-127	LED On
					128-159	Pulse Strobing
					160-191	LED On
					192-223	Random Strobing Slow - Fast
					224-255	LED On
	5	6	6	7	000-255	<b>MASTER DIMMER</b> 0%-100%
	6	7	7	8	000-255	<b>DIMMER FINE</b> 0%-100%
						<b>DIMMER MODES</b>
					000-020	Standard
					021-040	Stage
					041-060	TV
					061-080	Architectural
					081-100	Theatre
					101-120	Stage 2
						<b>DIMMER DELAY TIME</b>
					121	0.1Sec.
					122	0.2Sec.
					123	0.3Sec.
					124	0.4Sec.
					125	0.5Sec.
					126	0.6Sec.
					127	0.7Sec.
					128	0.8Sec.
					129	0.9Sec.
					130	1.0Sec.
					131	1.5Sec.
					132	2.0Sec.
					133	3.0Sec.
					134	4.0Sec.
					135	5.0Sec.
					136	6.0Sec.
					137	7.0Sec.
					138	8.0Sec.
					139	9.0Sec.
					140	10Sec.
					141-255	Default to Unit Setting

4 CH	6 CH	7 CH	8 CH	11 CH	VALUES	FUNCTIONS	
				10		<b>REFRESH RATE</b>	
						000-015	Default to Unit Setting
						016-030	900HZ
						031-045	1000HZ
						046-060	1100HZ
						061-075	1200HZ
						076-090	1300HZ
						091-105	1400HZ
						106-120	1500HZ
						121-135	2500HZ
						136-150	4000HZ
						151-165	5000HZ
						166-180	6000HZ
						181-195	10000HZ
						196-210	15000HZ
					211-225	20000HZ	
					226-255	25000HZ	
				11		<b>GAMMA</b>	
						000-020	Default to Unit Setting
						021-040	1.0
						041-060	2.0
						061-080	2.2
						081-100	2.4
						101-120	2.6
						121-130	2.8
					131-255	No Function	