




Static Gobo Wheel

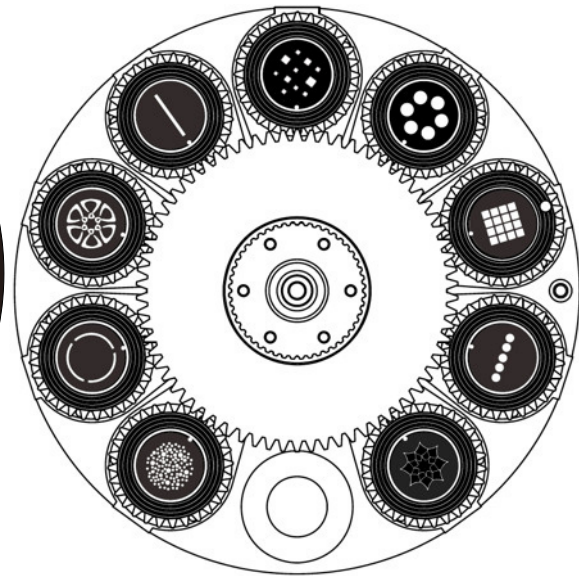

Rotating Gobo Wheel

⚠ DANGER! ⚠

Before installing or changing the gobo wheel, make sure the device has been switched off.



Color Wheel

22 Channels:

Channel	Value	Function
1	000 - 255	Pan 0° - 540°
2	000 - 255	Pan Fine
3	000 - 255	Tilt 0° - 270°
4	000 - 255	Tilt Fine
5	000 - 255	Cyan 0% - 100%
6	000 - 255	Magenta 0% - 100%
7	000 - 255	Yellow 0% - 100%
8	000-005	Color White
	006-011	Red
	012-017	Dark Orange
	018-023	Dark Green
	024-029	Dark Blue
	030-035	Pink
	036-041	Light Purple
	042-047	Light Green
	048-053	Light Orange
	054-059	Cyan
060-127	White to Cyan	
128-189	Clockwise Rotation Fast to Slow	
190-193	Stop	
194-255	Counter-Clockwise Rotation Slow To Fast	

Channel	Value	Function
		Static Gobo
	000-002	White
	003-005	Gobo 1
	006-008	Gobo 2
	009-011	Gobo 3
	012-014	Gobo 4
	015-017	Gobo 5
	018-020	Gobo 6
	021-023	Gobo 7
	024-026	Gobo 8
	027-029	Gobo 9
	030-032	Gobo 10
	033-035	Gobo 11
	036-038	Gobo 12
	039-041	Gobo 13
	042-044	Gobo 14
	045-054	Gobo15
9	055-058	Gobo1 Shaking Slow To Fast
	059-062	Gobo2 Shaking Slow To Fast
	063-066	Gobo3 Shaking Slow To Fast
	067-070	Gobo4 Shaking Slow To Fast
	071-074	Gobo5 Shaking Slow To Fast
	075-078	Gobo6 Shaking Slow To Fast
	079-082	Gobo7 Shaking Slow To Fast
	083-086	Gobo8 Shaking Slow To Fast
	087-090	Gobo9 Shaking Slow To Fast
	091-094	Gobo10 Shaking Slow To Fast
	095-098	Gobo11 Shaking Slow To Fast
	099-102	Gobo12 Shaking Slow To Fast
	103-106	Gobo13 Shaking Slow To Fast
	107-110	Gobo14 Shaking Slow To Fast
	111-127	Gobo15 Shaking Slow To Fast
	128-189	Clockwise Rotation Fast to Slow
	190-193	Stop
	194-255	Counter-Clockwise Rotation Slow To Fast

Channel	Value	Function
10		Rotating Gobo
	000-006	White
	007-013	Gobo1
	014-020	Gobo2
	021-027	Gobo3
	028-034	Gobo4
	035-041	Gobo5
	042-048	Gobo6
	049-055	Gobo7
	056-062	Gobo8
	063-083	Gobo9
	084-087	Gobo1 Shaking Slow To Fast
	088-092	Gobo2 Shaking Slow To Fast
	093-097	Gobo3 Shaking Slow To Fast
	098-102	Gobo4 Shaking Slow To Fast
	103-107	Gobo5 Shaking Slow To Fast
	108-112	Gobo6 Shaking Slow To Fast
	113-117	Gobo7 Shaking Slow To Fast
	118-122	Gobo8 Shaking Slow To Fast
	123-127	Gobo9 Shaking Slow To Fast
128-189	Clockwise Rotation Fast to Slow	
190-193	Stop	
194-255	Counter-Clockwise Rotation Slow To Fast	
11	000 – 255	Gobo Rotation 0% - 100%
12	000 – 007 008 – 255	Prism 1 Close Open
13	000 – 255	R-Prism 1 0% – 100%
14	000 – 007 008 – 255	Prism 2 Close Open
15	000 – 255	R-Prism 2 0% – 100%

Channel	Value	Function
16	000 – 003	Strobe Light OFF
	004 – 103	Strobe At Linearly Variable Frequency (Low – High)
	104 – 107	Light ON
	108 – 207	Pulsation At Linearly Variable Speed, (Slow – Fast)
	208 – 212	Light ON
	213 – 225	Random Strobe At Low Frequency
	226 – 238	Random Strobe At Medium Frequency
	239 – 251	Random Strobe At High Frequency
17	000 - 255	Dimmer 0% – 100%
18	000 – 255	Focus 0% – 100%
19	000 – 255	Zoom 0% - 100%
20	000 – 007	Frost Close
	008 – 255	Open
21	000 – 255	Pan/Tilt Speed Fast to Slow
22	000 – 069	Special Function No Function
	070 – 079	Blackout While Pan Tilt Move Enable
	080 – 089	Blackout While Pan Tilt Move Disable
	090 – 099	Blackout While Color Move Enable
	100 – 109	Blackout While Color Move Disable
	110 – 119	Blackout While Gobo Move Enable
	120 – 129	Blackout While Gobo Move Disable
	130 – 139	Lamp On
	140 – 149	Reset XY
	150 – 159	Reset Effect
	160 – 199	No Function
	200 – 209	Reset All
	210 – 230	No Function
	231 – 239	Lamp Off
	240 – 255	No Function

24 Channels:

Channel	Value	Function
1	000 - 255	Pan 0° - 540°
2	000 - 255	Pan Fine
3	000 - 255	Tilt 0° - 270°
4	000 - 255	Tilt Fine
5	000 - 255	Cyan 0% - 100%
6	000 - 255	Magenta 0% - 100%
7	000 - 255	Yellow 0% - 100%
8	000 - 005	Color White
	006 - 011	Red
	012 - 017	Dark Orange
	018 - 023	Dark Green
	024 - 029	Dark Blue
	030 - 035	Pink
	036 - 041	Light Purple
	042 - 047	Light Green
	048 - 053	Light Orange
	054 - 059	Cyan
	060 - 127	White to Cyan
	128 - 189	Clockwise Rotation Fast to Slow
	190 - 193	Stop
194 - 255	Counter-Clockwise Rotation Slow To Fast	

Channel	Value	Function
		Static Gobo
	000 - 002	White
	003 - 005	Gobo 1
	006 - 008	Gobo 2
	009 - 011	Gobo 3
	012 - 014	Gobo 4
	015 - 017	Gobo 5
	018 - 020	Gobo 6
	021 - 023	Gobo 7
	024 - 026	Gobo 8
	027 - 029	Gobo 9
	030 - 032	Gobo 10
	033 - 035	Gobo 11
	036 - 038	Gobo 12
	039 - 041	Gobo 13
	042 - 044	Gobo 14
	045 - 054	Gobo15
9	055 - 058	Gobo1 Shaking Slow To Fast
	059 - 062	Gobo2 Shaking Slow To Fast
	063 - 066	Gobo3 Shaking Slow To Fast
	067 - 070	Gobo4 Shaking Slow To Fast
	071 - 074	Gobo5 Shaking Slow To Fast
	075 - 078	Gobo6 Shaking Slow To Fast
	079 - 082	Gobo7 Shaking Slow To Fast
	083 - 086	Gobo8 Shaking Slow To Fast
	087 - 090	Gobo9 Shaking Slow To Fast
	091 - 094	Gobo10 Shaking Slow To Fast
	095 - 098	Gobo11 Shaking Slow To Fast
	099 - 102	Gobo12 Shaking Slow To Fast
	103 - 106	Gobo13 Shaking Slow To Fast
	107 - 110	Gobo14 Shaking Slow To Fast
	111 - 127	Gobo15 Shaking Slow To Fast
	128 - 189	Clockwise Rotation Fast to Slow
	190 - 193	Stop
	194 - 255	Counter-Clockwise Rotation Slow To Fast

Channel	Value	Function
10	000 - 006	Rotating Gobo White
	007 - 013	Gobo1
	014 - 020	Gobo2
	021 - 027	Gobo3
	028 - 034	Gobo4
	035 - 041	Gobo5
	042 - 048	Gobo6
	049 - 055	Gobo7
	056 - 062	Gobo8
	063 - 083	Gobo9
	084 - 087	Gobo1 Shaking Slow To Fast
	088 - 092	Gobo2 Shaking Slow To Fast
	093 - 097	Gobo3 Shaking Slow To Fast
	098 - 102	Gobo4 Shaking Slow To Fast
	103 - 107	Gobo5 Shaking Slow To Fast
	108 - 112	Gobo6 Shaking Slow To Fast
	113 - 117	Gobo7 Shaking Slow To Fast
118 - 122	Gobo8 Shaking Slow To Fast	
123 - 127	Gobo9 Shaking Slow To Fast	
128 - 189	Clockwise Rotation Fast to Slow	
190 - 193	Stop	
194 - 255	Counter-Clockwise Rotation Slow To Fast	
11	000 - 255	Gobo Rotation 0% - 100%
12	000 - 007	Prism 1 Close
	008 - 255	Open
13	000 - 255	R-Prism 1 0% - 100%
14	000 - 007	Prism 2 Close
	008 - 255	Open
15	000 - 255	R-Prism 2 0% - 100%

Channel	Value	Function
16	000 – 003	Strobe Light Off
	004 – 103	Strobe At Linearly Variable Frequency (Low – High)
	104 – 107	Light On
	108 – 207	Pulsation At Linearly Variable Speed (Slow – Fast)
	208 – 212	Light On
	213 – 225	Random Strobe At Low Frequency
	226 – 238	Random Strobe At Medium Frequency
	239 – 251	Random Strobe At High Frequency
	252 - 255	Light On
17	000 – 255	Dimmer 0% – 100%
18	000 – 255	Focus 0% - 100%
19	000 – 255	Focus Fine 0% - 100%
20	000 – 255	Zoom 0% – 100%
21	000 – 255	Zoom Fine 0% – 100%
22	000 – 007	Frost Close
	008 – 255	Open
23	000 - 255	Pan/Tilt Speed Fast to Slow
24	000 – 069	Special Function No Function
	070 – 079	Blackout While Pan Tilt Move Enable
	080 – 089	Blackout While Pan Tilt Move Disable
	090 – 099	Blackout While Color Move Enable
	100 – 109	Blackout While Color Move Disable
	110 - 119	Blackout While Gobo Move Enable
	120 – 129	Blackout While Gobo Move Disable
	130 – 139	Lamp On
	140 – 149	Reset XY
	150 – 159	Reset Effect
	160 – 199	No Function
	200 – 209	Reset All
	210 – 230	No Function
	231 – 239	Lamp Off
	240 – 255	No Function