

INTERCHANGEABLE HOLE PUNCH & EYELET PLIERS

Stock No. **31096** Part No. **HP**



Hole punch diameters: 2.8, 3, 3.5, 3.8, 4, 5mm.
Supplied with 4mm eyelets.

For best results follow this procedure:

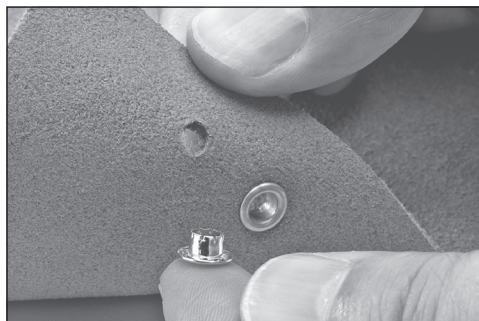


Fig. 2



Fig. 1

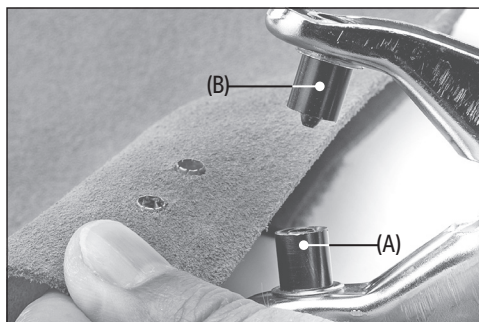


Fig. 3

1. Unscrew the formers from the jaws of the plier. Replace with the brass anvil and the correct punch hole size for the eyelet to be used. Then punch the hole through the material.
2. Unscrew the brass anvil and punch and refit the formers to the plier jaws.
3. Push the eyelet through the material. Then position the 'finished' end of the eyelet into the former (A) with the hole. The former (B) with the raised cone will shape the other end of the eyelet.
4. Then squeeze the pliers closed until the eyelet is formed and holds the material.