

DRAPER

 
EN

Original Instructions
Version 2
January 2026

787mm

TOWER FAN

09125

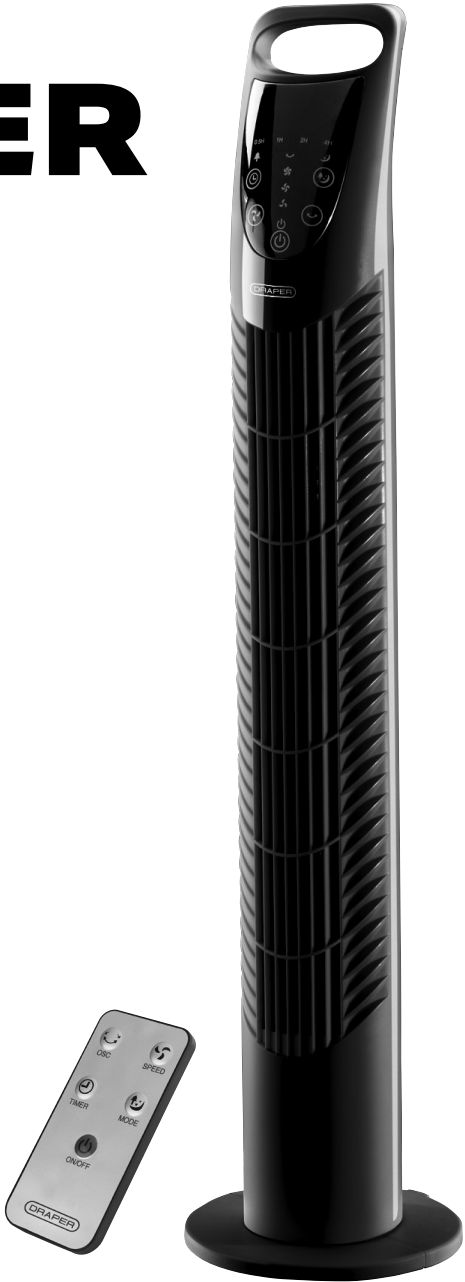

**UK
CA** **CE**

1. Preface

1.1 Product Reference

User Manual for: 787mm Tower Fan

Stock No: 09125

Part No: FAN17

1.2 Revisions

Version 1: February 2018
First release

Version 2: January 2026

As our manuals are continually updated, always ensure that the latest version is used.

Please visit drapertools.com/manuals for the latest version of this manual and the associated parts list, if applicable.

1.3 Understanding the Safety Content of This Manual



WARNING! – Situations or actions that may result in personal injury or death.



CAUTION! – Situations or actions that may result in damage to the product or surroundings.

Important: – Information or instructions of particular importance.

1.4 Copyright © Notice

Copyright © Draper Tools Limited.

Permission is granted to reproduce this manual for personal and educational use **ONLY**. Commercial copying, redistribution, hiring or lending is strictly prohibited.

No part of this manual may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases, this copyright notice must remain intact.

2. Product Introduction

2.1 Intended Use

This remote-controlled oscillating tower fan is designed for air circulation in home and office environments.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

Read this manual in full before using this product and retain it for future use. Always use the latest version of the manual. Please visit drapertools.com/manuals for the latest version.

2.2 Specification

Stock No.	09125
Part No.	FAN17
Rated voltage	220 – 240V/50Hz
Rated input	40W
Number of speeds	3
Speed 1	1800 +/-10%
Speed 2	2100 +/-10%
Speed 3	2100 +/-10%
Dimensions (approx.)	790 X 180mm
Net Weight	1.8kg
Remote control battery	1 X CR2025 coin battery (supplied)

Important: Read all the Health and Safety instructions before attempting to operate, maintain or repair this product. Failure to follow these instructions may result in injury or damage to the user or the product.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they **DO NOT** play with the appliance.
- Ensure that the fan is situated and used in an area free from loose furnishings, clothing, curtains etc; that could get sucked into the fan air inlet.
- **DO NOT** leave the fan running unattended.
- Ensure the fan is situated in an area free from dust and air that could be sucked up, causing air pollution or damage the motor.
- For indoors use only. **DO NOT** use outdoors.
- Disconnect the fan from the power supply before moving, adjusting, servicing or carrying out any maintenance.
- Complete the assembly procedure prior to connecting to the power supply or switching on after cleaning.
- **NEVER** insert fingers, pencils or any other objects through the protective grille while the fan is running.
- **ALWAYS** operate the fan on a secure, firm and level surface.
- **DO NOT** operate the fan with the guards/grille or any safety devices removed.
- **DO NOT** use the fan near an open window, as rain can create an electrical hazard.
- If the power supply cord becomes damaged it should be replaced immediately.
- **DO NOT** use this fan with an independent externally connected speed control device.
- **DO NOT** cover the fan when in use.
- **DO NOT** run the power cord under carpeting or cover with throw rugs or runners. Arrange the cord away from high traffic areas where it will not be tripped over.
- **DO NOT** use in close proximity to a bath, shower or swimming pool.

3.1 Remote Control Coin Battery Health & Safety



BATTERY WARNING!
KEEP OUT OF REACH OF CHILDREN

If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed in any part of the body, seek immediate medical attention.

Battery swallowed - No obvious symptoms

Unfortunately, it is not obvious and there are no specific symptoms when a button or coin battery is stuck in a child's oesophagus (food pipe).

The child might:

- cough, gag or drool alot;
- appear to have a stomach upset or virus;
- be sick;
- point to their throat or stomach;
- have a pain in their abdomen, chest or throat;
- be tired or lethargic;
- be quieter or more clingy than usual or 'not themselves';
- loss of appetite or reduced appetite; and
- not wanting to eat solid food/be unable to eat solid food.
- These sorts of symptoms will vary or fluctuate, as the pain increases or subsides.

A specific symptom to button or coin battery ingestion is vomiting fresh bright red blood. If the child does this seek immediate medical help.

The lack of clear symptoms is why it is important to be vigilant with 'flat' or spare button or coin batteries in the home and the product that contains them.

3.2 Connection to the Power Supply



CAUTION! Risk of electric shock.
DO NOT open.

This appliance is supplied with an approved plug and cord for your safety.

This appliance is Class II' and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.


If the power supply cord is damaged, it must be replaced by Draper Tools, an authorised service agent or similarly qualified personnel in order to avoid a hazard.

The damaged or incomplete plug, when cut from the cord, shall be disabled to prevent connection to a live electrical outlet.

The value of the fuse fitted is marked on the pin face of the plug. Should the fuse need replacing, use a small plain-slot screwdriver to remove the fuse cover. Ensure the substitute is of the correct rating, approved to BS 1362 and ASTA or BS Kite marked. This should only be performed by suitably qualified personnel.



Important: If an extension lead is required, use an approved and compatible lead rated for this appliance. Unwind the entire cable and follow all the instructions supplied with the extension lead.

†Double insulated : This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

3.3 Residual Risks

The safety instructions in this manual cannot account for all possible conditions and situations that may occur. Exercise common sense and caution when using this product and protect against any additional conceivable risks.

 
4. Identification

4.1 Product Overview

Carefully remove the product from the packaging and examine it for any signs of damage that may have occurred during shipment. If any part is damaged or missing, do not attempt to use the product.

Please contact the Draper Helpline; contact details can be found at the back of this manual.

1. Remote control
2. Louvered air vents
3. Transport handle
4. Control panel
5. Air inlet
6. Base
7. Cord and plug

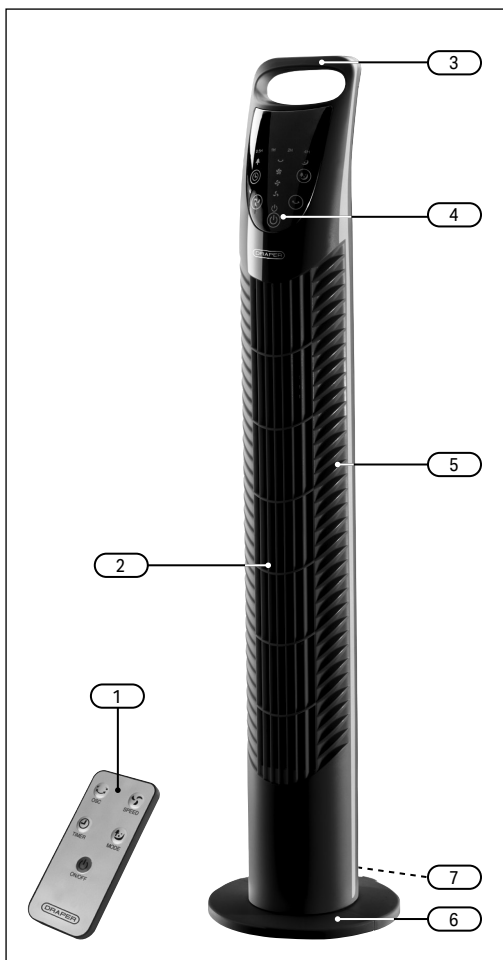

4.2 Packaging

Keep the product packaging for the duration of the warranty period for reference should the product need to be returned for repair.

WARNING! Keep packaging materials out of reach of children. Dispose of packaging correctly and responsibly and in accordance with local regulations.

Please visit drapertools.com for our full range of accessories and consumables.

5. Assembling Instructions

Important: Before assembling this product, read and understand all the safety instructions listed in this manual. Ensure that the product is switched off and unplugged before assembling.

5.1 Assembling the Base to the Fan Body

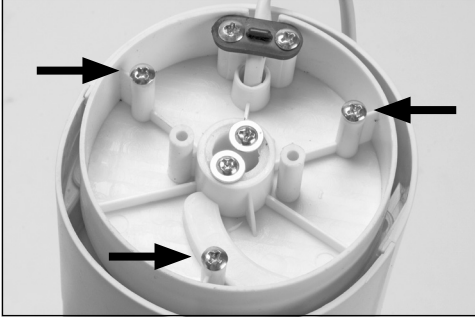 


Fig. 1

1. Remove the three base securing screws.

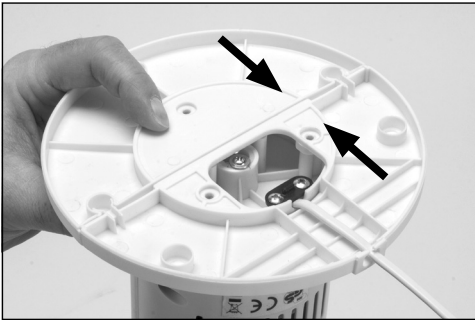 


Fig. 2

2. Bring the two halves of the base sections together while ensuring the power cord passes through the gap created when assembled.

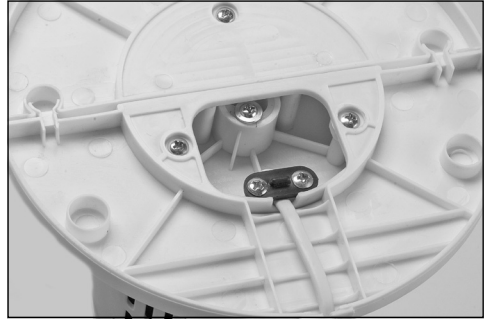 


Fig. 3

3. Secure the assembled base to the fan body using the three screws provided.
- For safety, ensure the cord is slotted into the moulded clip on the underside of the base and sits flat where the base is on the floor.

5.2 Remote Control Battery Installation

1 X CR2025 coin battery supplied.

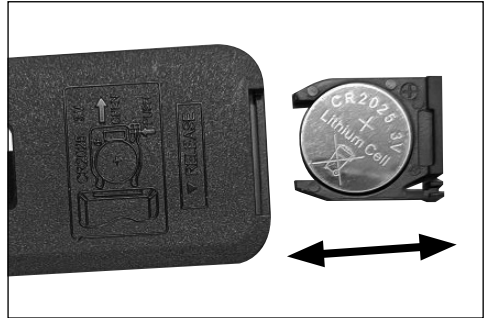 


Fig. 4

1. To replace the battery, slide out the battery compartment.
2. Remove the exhausted battery and replace with a new CR2025 battery – ensure the '+' side is uppermost.
3. Refit the battery compartment to the remote control.







6. Basic Operation



Important: Before operating this product, read and understand all the safety instructions listed in this manual. Ensure that the product is fully assembled and correctly prepared for use.

6.1 Control Panel (4)



Fig. 5

Button	Action
	ON/OFF Press once = ON Press again = OFF Defaults to the lowest speed setting when pressed.
	Fan Speed selection Switch ON , then press to cycle through the speeds  HIGH  MEDIUM  LOW The indicator will light up to show the speed selected.
	Timer Switch ON , then, press to cycle through the fan operation times. Programmable from 30 minutes up to a maximum of 7.5 hours. To select 7.5 hours, press until all the timer indicator lights are on.

Button	Action
	Natural / Sleep Mode Switch ON , then press to switch between 'NATURAL' and 'SLEEP' Mode. NATURAL: The fan operates continuously (timer dependent) at the selected speed. SLEEP: The fan operation at low speed.
	Oscillating Switch ON , then press to rotate the tower. Once in the desired direction, press the button again to stop the rotation .

6.2 Remote Control Operation



Fig. 6

- All the functions available on the control panel, can be activated using the remote control.
- Point the remote at the control panel and press the appropriate button.
- The operational range of the remote control is up to approx. 5 metres distance and $\pm 60^\circ$ of the control panel.

Note: Direct sunshine can adversely affect the lens of the remote signal receiver.

7. Maintenance and Disposal

Important: ALWAYS switch off and unplug the fan before cleaning or carrying out any maintenance.

- Clean all the plastic components with a damp cloth. **DO NOT** spray with water/cleaning agents or immerse the fan unit in water.

 **WARNING! DO NOT allow any water or cleaning detergent to enter the motor housing or switch mechanism.**

- To ensure adequate air circulation to the motor, keep the rear vents free from dust, etc. by periodically vacuuming them.
- At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.
- **DO NOT** dispose of this product with domestic waste; most local authorities provide appropriate recycling facilities.



10. Warranty

12 months from date of purchase.

Visit drapertools.com/warranty for full details.



Read the instruction manual.



Keep out of the reach of children.



Warning!



Rated voltage



Rated input.



Number of speeds.



Programmable timer.



DO NOT expose to rain or wet conditions.



Class II construction (Double insulated).



WEEE – Waste Electrical & Electronic Equipment.
DO NOT dispose of this product with domestic waste



UK Conformity Assessed.



European conformity.

Contact Details

Draper Tools

Draper Tools Limited
Hursley Road
Chandler's Ford
Eastleigh
Hampshire
SO53 1YF
UK

Website: drapertools.com

Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344

Telephone Sales Desk: +44 (0) 23 8049 4333

General Enquiries: +44 (0) 23 8026 6355

Draper Tools Europe B.V.

Oude Graaf 8
6002 NL
Weert
Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.