



EN

Original Instructions
Version 1: March 2026

MECHANICS **CREEPER & SEAT**

32861



1. Product Introduction

1.1 Intended Use

This creeper is designed to be used for sliding under vehicles for maintenance, repairs, and inspections. It can also be converted quickly and simply from a creeper to a seat.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

Read this manual in full before using this product and retain it for future use. Always use the latest version of the manual. Please visit drapertools.com/manuals for the latest version.

1.2 Specification

Stock No.	32861
Part No.	CC1
Maximum load capacity:	
Creeper:	135kg
Seat:	135kg
Dimensions (LxWxH):	915 X 440 X 130mm
Net Weight:	7.2kg

2. Health and Safety Information

EN

Important: Read all the Health and Safety instructions before attempting to operate, maintain or repair this product. Failure to follow these instructions may result in injury or damage to the user or the product.

- Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this creeper.
- **DO NOT** exceed the maximum load capacity stated.
- Use on a hard, level, stable surface capable of sustaining the weight.
- **DO NOT** place under car tyres or use to move or reposition vehicle.
- **DO NOT** use as a toy or skateboard.
- **DO NOT** stand on the creeper/seat or use as a stepping device.
- **DO NOT** use if any part of the product is defective or damaged in any way.
- Regularly check for wear and damage. Stop using the product immediately, if any damage is found.

- **ALWAYS** store in an upright position in a secure place.
- Keep out of the reach of children.
- **ALWAYS** use axle stands and ensure the vehicle is correctly support before using this product underneath.
- The creeper material is flammable. Keep away from open flames.
- If the vehicle is on the ground, block the tyres, apply the handbrake and put it into gear or Park mode before sliding the creeper underneath.



WARNING! If the vehicle is raised to work under it, ALWAYS set the vehicle on axle stands. DO NOT work under a vehicle raised on jack(s).



CAUTION! Folding components can present pinch and crush hazards during use of this product. Exercise caution when making adjustment and during use of this product.

3. Converting from Creeper to Seat

EN



- Pull the safety pin (A) out and fold either into the seat position or back down into the creeper position.
- Ensure the pin is securely fitted back in once the position is changed.

4. Maintenance, Storage and Disposal

EN

- Keep the creeper clean and periodically lubricate the wheels with a light oil.
- Clean with a damp cloth only.
- At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.

Contact Details

Draper Tools

Draper Tools Limited
Hursley Road
Chandler's Ford
Eastleigh
Hampshire
SO53 1YF
UK

Website: drapertools.com

Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344

Telephone Sales Desk: +44 (0) 23 8049 4333

General Enquiries: +44 (0) 23 8026 6355

Draper Tools Europe B.V.

Oude Graaf 8
6002 NL
Weert
Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.