



# RECHARGEABLE HEAD TORCH

90064 – INSTRUCTIONS FOR USE

## 1. Product Introduction

### 1.1 Intended Use

This rechargeable head torch has 4 light settings, an adjustable elasticated headband and supplied with a Micro USB charging cable.

## 2. Health and Safety Information

**Important:** Read all the Health and Safety instructions before attempting to operate, maintain or repair this product. Failure to follow these instructions may result in injury or damage to the user or the product.

- DO NOT turn the light on when it is being charged.
- DO NOT shine the light directly into eyes.
- DO NOT allow children to use the light.
- DO NOT handle or move the light whilst it is being charged.
- DO NOT leave battery in a discharged state, recharge battery immediately.
- If the battery is replaced ensure that it is fitted in the correct +/- orientation.
- **WARNING!** To reduce the risk of burns or fire:
  - **DO NOT** crush, puncture, short external contacts or dispose of in fire or water.
  - **DO NOT** expose to temperatures above 50°C.
  - **DO NOT** use this product if the casing or battery is damaged in any way or if there is evidence of battery leakage.
  - Recycle or dispose of used battery as stipulated by local regulation.

## 3. Identification and Unpacking



Fig. 1

- |                          |                            |
|--------------------------|----------------------------|
| 1. ON/OFF button         | 4. USB Charging port cover |
| 2. Light                 | 5. Battery compartment     |
| 3. Adjustable head strap | 6. USB charging cable      |

## 4. Charging the Light

**Important:** Before the light can be used open the battery compartment (5) and remove the clear plastic disc (Refer to 6.2 Replacing the battery).

1. Charge the light before initial use.
2. Lift up the charging port cover (4). Then fit the USB charging cable (6) supplied into the USB charging port and plug into a suitable power output.
3. Charging will take approximately 4hours.
4. The red indicator light will be solid when fully charged.

## 5. Operation

### 5.1 ON/OFF

Press the **ON/OFF** button to switch on and keep pressing to cycle through the settings.

Press	Mode	Fast Flashing or SOS/Slow Flashing
X1	On/Low	Whilst a mode is selected press and hold the ON/OFF button for 2 – 3 seconds.
X2	Mid	
X3	High	X 1 – Fast flashing
X4	OFF	X 2- SOS/slow flashing

## 6. Maintenance and Storage

### 6.1 General Maintenance and storage

- Clean the torch with a damp cloth.
- Store in a dry child proof area.
- Before storage, fully charge the battery, subsequently recharge the battery at least once every six months of non-use.

### 6.2 Replacing the Battery

1. If the battery needs replacing, unscrew the battery compartment cover (5).
2. Fit 1 X 3.7V 2200mAh Li-ion battery - ensure that the battery is fitted in the correct +/- orientation.
3. Re-fit the battery compartment cover.

## 7. Spares, Returns and Disposal

For spare parts, servicing, and repair and replacement options, please contact the Draper Tools Product Helpline for details of your nearest authorised agent.

Any servicing or repairs carried out by unauthorised personnel or installation of spare parts not supplied by Draper Tools will invalidate your warranty.

At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.

- **DO NOT** dispose of this product with domestic waste; most local authorities provide appropriate recycling facilities.



WEEE –  
Waste Electrical & Electronic Equipment  
Do not dispose of Waste Electrical & Electronic Equipment  
in with domestic rubbish

- **DO NOT** burn or mutilate batteries; this may release toxic or corrosive substances.



Do not incinerate or throw onto fire

## 8. Warranty

Visit [drapertools.com/warranty](https://www.drapertools.com/warranty) for full details.

Please visit [drapertools.com/manuals](https://www.drapertools.com/manuals) for the latest version of this manual and the associated parts list, if applicable.