


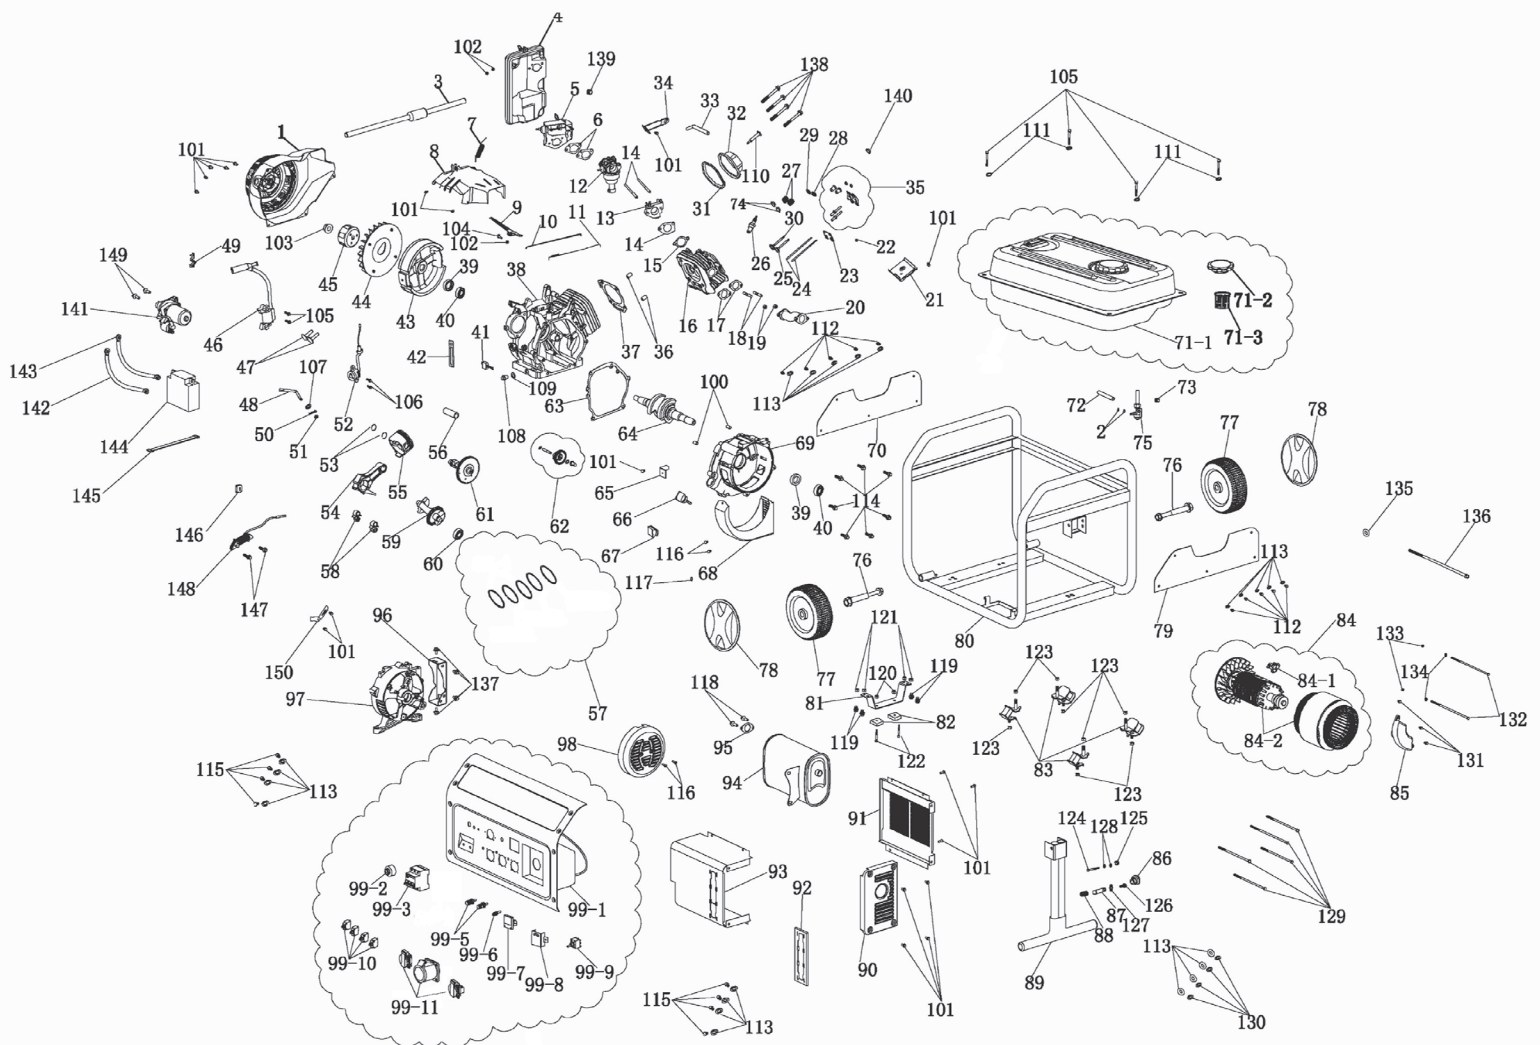

PETROL GENERATOR WITH WHEELS

16143 - PG68W SPARE PARTS DRAWING





PETROL GENERATOR WITH WHEELS

16143 – PG68W SPARE PARTS LISTING

Key No.	Part No.	Stock No.	Description	Key No.	Part No.	Stock No.	Description
1	Y-PG68W-01	17208	Starter assembly	41	Y-PG68W-41	17258	Diode assembly
2	Y-PG68W-02	17210	Oil clip	42	Y-PG68W-42	17260	Bar line clip
3	Y-PG68W-03	17211	One way valve for choke plate	43	Y-PG68W-43	17261	Flywheel
4	Y-PG68W-04	17212	Air cleaner assembly	44	Y-PG68W-44	17263	Flywheel fan
5	Y-PG68W-05	17213	Choke plate assembly	45	Y-PG68W-45	17264	Starting cup
6	Y-PG68W-06	17214	Air cleaner gasket	46	Y-PG68W-46	17266	Ignition coil unit
7	Y-PG68W-07	17215	Back spring	47	Y-PG68W-47	17267	Tappet
8	Y-PG68W-08	17216	Regulating mount	48	Y-PG68W-48	17268	Regulating sway bar
9	Y-PG68W-09	17218	Regulating arm	49	Y-PG68W-49	17269	O clip
10	Y-PG68W-10	17219	Pulling rod	50	Y-PG68W-50	17270	Split pin
11	Y-PG68W-11	17220	Fine regulating spring	51	Y-PG68W-51	17271	Oil seal
12	Y-PG68W-12	17221	Carburettor	52	Y-PG68W-52	17273	Oil alarm
13	Y-PG68W-13	17222	Carburettor connecting block	53	Y-PG68W-53	17274	Piston pin circlip
14	Y-PG68W-14	17223	Carburettor gasket	54	Y-PG68W-54	17278	Connecting rod
15	Y-PG68W-15	17224	Inlet gasket	55	Y-PG68W-55	17279	Piston
16	Y-PG68W-16	17226	Cylinder head assembly	56	Y-PG68W-56	17281	Piston pin
17	Y-PG68W-17	17227	Exhaust pipe gasket	57	Y-PG68W-57	17283	Piston ring assembly
18	Y-PG68W-18	17228	Bolt	58	Y-PG68W-58	17285	Clip
19	Y-PG68W-19	17229	Nut	59	Y-PG68W-59	17286	Trunnion shaft
20	Y-PG68W-20	17230	Muffler bending tube assembly	60	Y-PG68W-60	17288	Bearing 6207
21	Y-PG68W-21	17231	Fairing assembly	61	Y-PG68W-61	17290	Camshaft assembly
22	Y-PG68W-22	17232	Cap	62	Y-PG68W-62	17291	Regulator assembly driven gear
23	Y-PG68W-23	17234	Pusher assembly	63	Y-PG68W-63	17292	Crankcase gasket
24	Y-PG68W-24	17235	Pusher	64	Y-PG68W-64	17294	Crankshaft set
25	Y-PG68W-25	17236	Exhaust valve	65	Y-PG68W-65	17296	Crankcase baffle
26	Y-PG68W-26	17237	Spark plug	66	Y-PG68W-66	17297	Oil rule
27	Y-PG68W-27	17238	Valve spring	67	Y-PG68W-67	17299	Crankcase block cover
28	Y-PG68W-28	17239	Exhaust valve spring seat	68	Y-PG68W-68	17300	Crankcase baffle 2
29	Y-PG68W-29	17240	Spring seat	69	Y-PG68W-69	17301	crankcase cover
30	Y-PG68W-30	17241	Intake valve	70	Y-PG68W-70	17303	Side panel
31	Y-PG68W-31	17242	Cylinder head cover gasket	71-1	Y-PG68W-71-1	17304	Fuel tank
32	Y-PG68W-32	17243	Cylinder head cover assembly	71-2	Y-PG68W-71-2	17305	Fuel cap
33	Y-PG68W-33	17244	Exhaust pipe	71-3	Y-PG68W-71-3	17306	Fuel filter
34	Y-PG68W-34	17245	Air cleaner stay	72	Y-PG68W-72	17307	Outlet pipe
35	Y-PG68W-35	17246	Valve rocker assembly	73	Y-PG68W-73	17308	Rubber tubing
36	Y-PG68W-36	17247	Set pin	74	Y-PG68W-74	17309	Int/exh valve spring seat
37	Y-PG68W-37	17248	Cylinder head gasket	75	Y-PG68W-75	17310	Oil switch
38	Y-PG68W-38	17249	Crankcase	76	Y-PG68W-76	17311	Wheel axle axle guide
39	Y-PG68W-39	17254	Oil seal	77	Y-PG68W-77	17312	Wheel
40	Y-PG68W-40	17256	Bearing 6202	78	Y-PG68W-78	17313	Wheel cap



PETROL GENERATOR WITH WHEELS

16143 – PG68W SPARE PARTS LISTING

Key No.	Part No.	Stock No.	Description	Key No.	Part No.	Stock No.	Description
79	Y-PG68W-79	17314	Side panel	108	Y-PG68W-108	17363	Bolt
80	Y-PG68W-80	17315	Frame comp	109	Y-PG68W-109	17364	Washer
81	Y-PG68W-81	17316	Balance stay	110	Y-PG68W-110	17365	Bolt
82	Y-PG68W-82	17317	Cushion	111	Y-PG68W-111	17366	Flat gasket
83	Y-PG68W-83	17318	Shock mount a b	112	Y-PG68W-112	17367	Bolt
84	Y-PG68W-84	17319	Alternator assembly	113	Y-PG68W-113	17368	Plain washer
84-1	Y-PG68W-84-1	17320	Brush assembly	114	Y-PG68W-114	17369	Bolt
85	Y-PG68W-85	17321	Voltage regulator	115	Y-PG68W-115	17370	Bolt
86	Y-PG68W-86	17323	Puller	116	Y-PG68W-116	17371	Bolt
87	Y-PG68W-87	17324	Handle plug	117	Y-PG68W-117	17372	Tooth shape coil
88	Y-PG68W-88	17325	Spring	118	Y-PG68W-118	17373	Bolt
89	Y-PG68W-89	17327	Handles 1 and 2	119	Y-PG68W-119	17374	Bolt
90	Y-PG68W-90	17328	Muffler cover assembly	120	Y-PG68W-120	17375	Nut
91	Y-PG68W-91	17329	Muffler side hood	121	Y-PG68W-121	17377	Nut
92	Y-PG68W-92	17330	Muffler inner hood gasket	122	Y-PG68W-122	17378	Bolt
93	Y-PG68W-93	17331	Muffler inner hood assembly	123	Y-PG68W-123	17379	Nut
94	Y-PG68W-94	17332	Muffler hood assembly	124	Y-PG68W-124	17380	Bolt
95	Y-PG68W-95	17333	Exhaust pipe gasket	125	Y-PG68W-125	17381	Nut
96	Y-PG68W-96	17335	Muffler framework	126	Y-PG68W-126	17383	Bolt
97	Y-PG68W-97	17336	Generator stay	127	Y-PG68W-127	17384	Tooth shape coil
98	Y-PG68W-98	17337	Generator end cover	128	Y-PG68W-128	17385	Plain washer
99-1	Y-PG68W-99-1	17338	Panel	129	Y-PG68W-129	17386	Bolt
99-2	Y-PG68W-99-2	17339	Electric start key	130	Y-PG68W-130	17387	Spring washer
99-3	Y-PG68W-99-3	17341	Air brake switch	131	Y-PG68W-131	17388	Bolt
99-4	Y-PG68W-99-4	17344	230v 16a industrial socket	132	Y-PG68W-132	17389	Bolt
99-5	Y-PG68W-99-5	17346	Dc terminals	133	Y-PG68W-133	17392	Nut
99-6	Y-PG68W-99-6	17347	Earth terminal	134	Y-PG68W-134	17393	Spring washer
99-7	Y-PG68W-99-7	17348	Voltmeter	135	Y-PG68W-135	17394	Flat gasket
99-8	Y-PG68W-99-8	17349	Voltmeter protection cover	136	Y-PG68W-136	17395	Bolt
99-9	Y-PG68W-99-9	17352	Switch	137	Y-PG68W-137	17396	Bolt
99-10	Y-PG68W-99-10	17353	Hot circuit breaker	138	Y-PG68W-138	17397	Bolt
99-11	Y-PG68W-99-11	17354	110v 16a industrial socket	139	Y-PG68W-139	17398	Flue gas leading bushing
100	Y-PG68W-100	17355	Set pin	140	Y-PG68W-140	17412	Exhaust oil block cover
101	Y-PG68W-101	17356	Bolt	141	Y-PG68W-141	17413	Starting dynamo
102	Y-PG68W-102	17357	Nut	142	Y-PG68W-142	17414	Positive battery lead
103	Y-PG68W-103	17358	Nut	143	Y-PG68W-143	17416	Negative battery lead
104	Y-PG68W-104	17359	Nut	144	Y-PG68W-144	17417	Battery
105	Y-PG68W-105	17360	Bolt	145	Y-PG68W-145	17418	Battery fixing strip
106	Y-PG68W-106	17361	Bolt	146	Y-PG68W-146	17419	Wire bushing
107	Y-PG68W-107	17362	Washer	147	Y-PG68W-147	17420	Bolt

16143 – PG68W SPARE PARTS LISTING