


32.5cc


PETROL BRUSH CUTTER

80880 - GTP34 SPARE PARTS DRAWING/LISTING

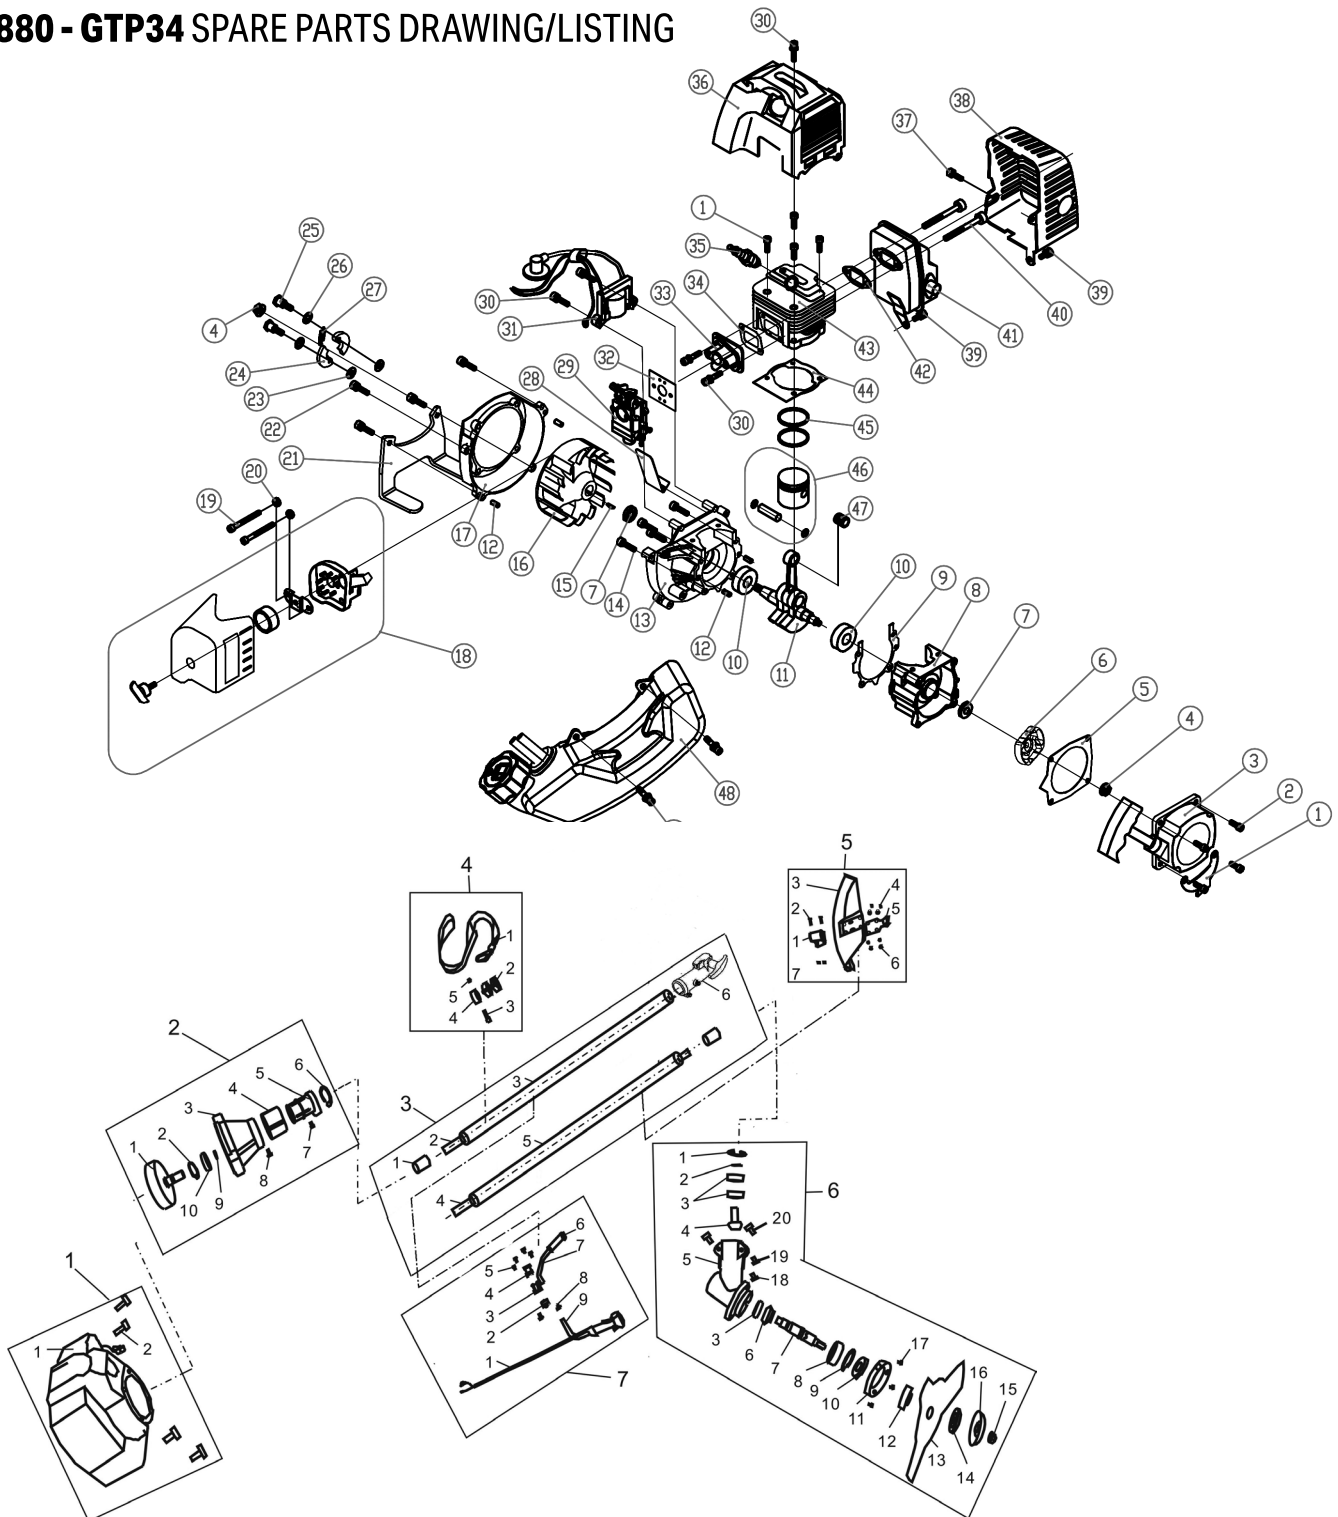

32.5cc
PETROL BRUSH CUTTER

80880 - GTP34 SPARE PARTS DRAWING/LISTING

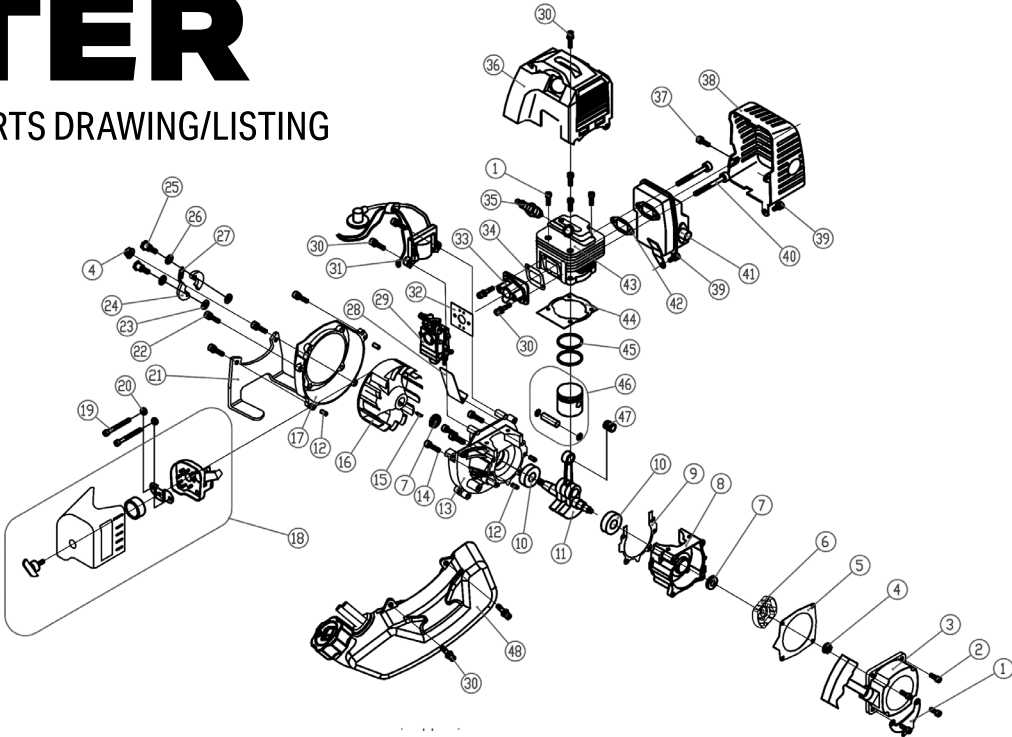


Key No.	Part No.	Stock No.	Description	Key No.	Part No.	Stock No.	Description
1	Y-GTP33-01	85217	Plate.	25	Y-GTP33-25	85241	Bolt.
2	Y-GTP33-02	85218	Bolt.	26	Y-GTP33-26	85242	Washer.
3	Y-GTP33-03	85219	Starter Assembly.	27	Y-GTP33-27	85243	Clutch Spring.
4	Y-GTP33-04	85220	Nut.	28	Y-GTP33-28	85244	Stop.
5	Y-GTP33-05	85221	Washer.	29	Y-GTP33-29	85245	Carburetor.
6	Y-GTP33-06	85222	Real Starter.	30	Y-GTP33-30	85246	Bolt.
7	Y-GTP33-07	85223	Oil Seal.	31	Y-GTP33-31	85247	Electric Ignition.
8	Y-GTP33-08	85224	Crank Case (Small).	32	Y-GTP33-32	85248	Carburetor Washer.
9	Y-GTP33-09	85225	Gasket Crank Case.	33	Y-GTP33-33	85249	Intake Hose.
10	Y-GTP33-10	85226	Bearing Needle.	34	Y-GTP33-34	85250	Intake Hose Washer.
11	Y-GTP33-11	85227	Crankshaft.	35	Y-GTP33-35	85251	Spark Plug.
12	Y-GTP33-12	85228	Pin.	36	Y-GTP33-36	85252	Cylinder Cover.
13	Y-GTP33-13	85229	Crank Case (Big).	37	Y-GTP33-37	85253	Bolt.
14	Y-GTP33-14	85230	Bolt.	38	Y-GTP33-38	85254	Cover Muffler.
15	Y-GTP33-15	85231	Key-Flywheel.	39	Y-GTP33-39	85255	Bolt.
16	Y-GTP33-16	85232	Flywheel.	41	Y-GTP33-41	85256	Muffler.
17	Y-GTP33-17	85233	Cover.	42	Y-GTP33-42	85257	Muffler Gasket.
18	Y-GTP33-18	85234	Air Filter.	43	Y-GTP33-43	85258	Cylinder.
19	Y-GTP33-19	85235	Bolt.	44	Y-GTP33-44	85259	Cylinder Gasket.
21	Y-GTP33-21	85236	Flat Washer.	45	Y-GTP33-45	85260	Piston Ring.
22	Y-GTP33-22	85238	Bolt.	46	Y-GTP33-46	85261	Piston.
23	Y-GTP33-23	85239	Washer.	47	Y-GTP33-47	85262	Needle Bearing.
24	Y-GTP33-24	85240	Spring Drum Clutch.	48	Y-GTP33-48	85263	Oil Tank Assembly.

32.5cc

PETROL BRUSH CUTTER

80880 - GTP34 SPARE PARTS DRAWING/LISTING

Key No.	Part No.	Stock No.	Description
6-13	AGTP33-BLD	85279	Blade
1-1			Engine Unit
1-2	Y-GTP34-1A2	01830	Bolt M6X30.
2A	YGTP34-2A	01831	Clutch Assembly (Include 2-1 To 2-10)
2-1			Clutch Drum
2-2			Inner Ring Snap ϕ 35
2-3			Transit Base Complex
2-4			Rubber Grip
2-5			Plywood
2-6			Ring Snap ϕ 45
2-7			Bolt M6X25
2-8			Bolt M6X18
2-9			Spring ϕ 15
2-10			Bearing Needle 6206
3A	YGTP34-3A	01844	Aluminium Tube Quick Change Assembly (Include 3-1 To 3-6)
3-1			Bearing Needle
3-2			Transmission Shaft
3-3			Aluminium Tube
3-4			Transmission Shaft
3-5			Aluminium Tube
3-6			Quick Change
4A	YGTP34-4A	29558	Belt Assembly (Np) (Include 4-1 To 4-5)
4-1			Belt
4-2			Circlip
4-3			Bolt M5X20
4-4			Ring
4-5			Screw M5
5A	YGTP34-5A	01855	Protect Cover Assembly (Inclde 5-1 To 5-7)
5-1			Protect Cover Support
5-2			Bolt M5X25
5-3			Protect Cover
5-4			Bolt M5X25
5-5			Protect Cover Connect Plate
5-6			Self Control Screw M5
5-7			Screw M5

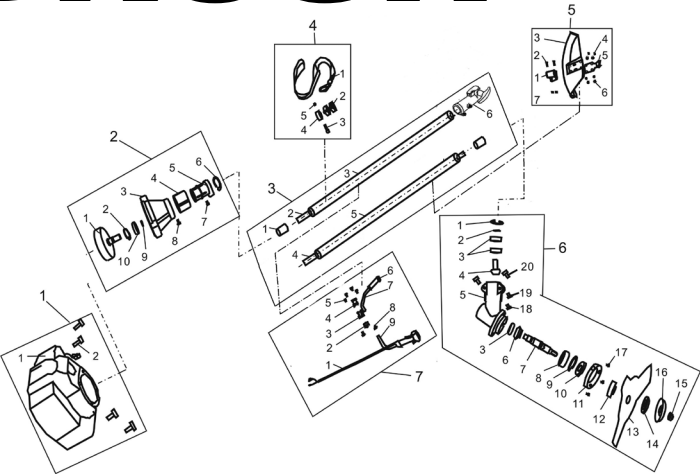

Key No.	Part No.	Stock No.	Description
6A	YGTP34-6A	01866	Gear Assembly (Include 6-1 To 6-20, No Blade)
6-1			Ring Snap ϕ 26
6-2			Ring Snap ϕ 10
6-3			Bearing Needle 6000
6-4			Initiative Gear
6-5			Gear Case
6-6			Passivity Gear
6-7			Transmission Shaft
6-8			Bearing Needle 6002
6-9			Ring Snap ϕ 32
6-10			Oil Seal 28X12X7
6-11			Protect Cover
6-12			Washer
6-14			Blade Plate
6-15			Screw
6-16			Protect Cover
6-17			Bolt M5X10
6-18			Bolt M6X12
6-19			Bolt M6X18
6-20			Bolt M5X25
7A	YGTP34-7A	01883	Handle Assembly (Include 7-1 to 7-9)
7-1			Switching Line
7-2			Plate
7-3			Handle Support
7-4			Plate
7-5			Bolt M5X25
7-6			Left Handle
7-7			Left Handle Cover
7-8			Bolt M5X25
7-9			Right Handle