


# AIR SHEARS

## 84130 - DAT-ASH SPARE PARTS LISTING

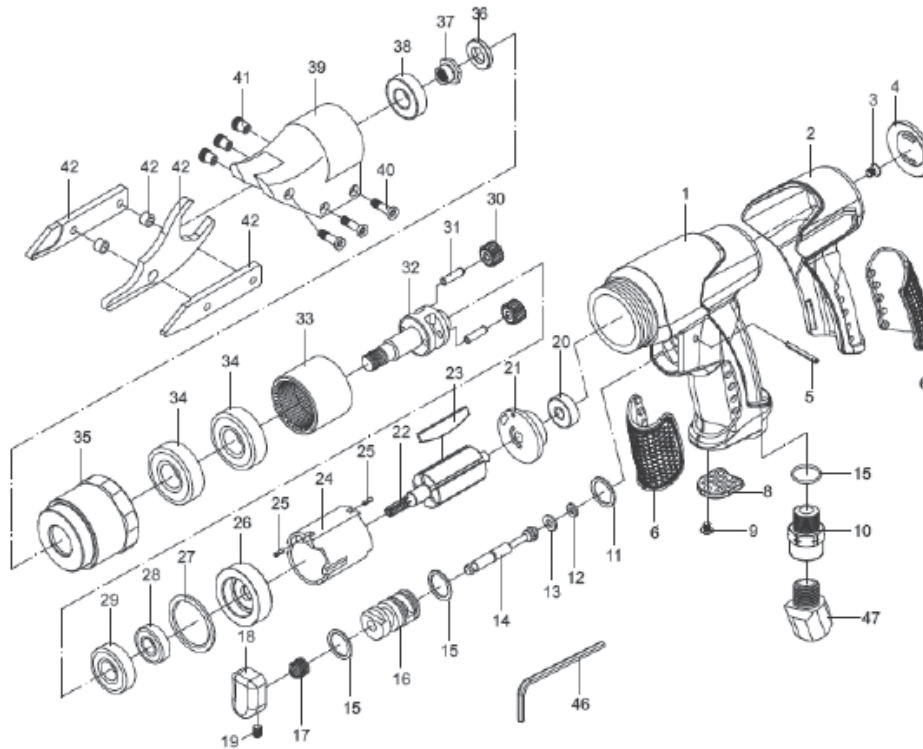

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	YDAT-ASH-1	00867	Housing
2	YDAT-ASH-2	00868	Housing Cover
3	YDAT-ASH-3	00869	Screw
4	YDAT-ASH-4	00870	Rear Cover
5	YDAT-ASH-5	00871	Pin
6	YDAT-ASH-6	00873	Soft Grip Set
8	YDAT-ASH-8	00875	Exhaust Deflector
9	YDAT-ASH-9	00876	Screw
10	YDAT-ASH-10	00877	Air Inlet
11	YDAT-ASH-11	00878	O-Ring
12	YDAT-ASH-12	00879	O-Ring
13	YDAT-ASH-13	00881	O-Ring
14	YDAT-ASH-14	00882	Valve Stem
15	YDAT-ASH-15	00883	O-Ring
16	YDAT-ASH-16	00884	Trigger Sleeve
17	YDAT-ASH-17	00885	Spring
18	YDAT-ASH-18	00886	Trigger
19	YDAT-ASH-19	00887	Set Screw
20	YDAT-ASH-20	00888	Bearing
21	YDAT-ASH-21	00889	Rear Plate
22	YDAT-ASH-22	00890	Rotor
23	YDAT-ASH-23	00891	Rotor Blade

KEY No.	PART No.	STOCK No.	DESCRIPTION
24	YDAT-ASH-24	00892	Cylinder
25	YDAT-ASH-25	00893	Bolt
26	YDAT-ASH-26	00894	Front Plate
27	YDAT-ASH-27	00895	Gasket
28	YDAT-ASH-28	00896	Bearing
29	YDAT-ASH-29	00897	Bearing
30	YDAT-ASH-30	00899	Gear
31	YDAT-ASH-31	00900	Bolt
32	YDAT-ASH-32	00901	Work Spindle
33	YDAT-ASH-33	00902	Ring Gear
34	YDAT-ASH-34	00903	Bearing
35	YDAT-ASH-35	00904	Clamp Nut
36	YDAT-ASH-36	00906	Spacer
37	YDAT-ASH-37	00907	Eccentric Nut
38	YDAT-ASH-38	00908	Bearing
39	YDAT-ASH-39	00909	Cutter Housing
40	YDAT-ASH-40	00910	Lock Screw
41	YDAT-ASH-41	00911	Lock Nut
42	YDAT-ASH-42	00912	Blade Set
46	YDAT-ASH-46	00916	Hex Key
47	YDAT-ASH-47	00915	Plug