

DRAPER

EN

Original Instructions
Version 1
December 2025

18V

WEED REMOVER

31866



These are the original product instructions.
Read the instruction manual in full and retain
for future reference.

Please visit [drapertools.com/manuals](https://www.drapertools.com/manuals) for the latest
version of this manual and the associated parts list,
if applicable.

UK
CA CE

1. Preface

1.1 Product Reference

User Manual for: 18V Weed Remover

Stock No: 31866

Part No.: DXGW01

1.2 Revisions

Version 1: December 2025

First release

As our manuals are continually updated, always ensure that the latest version is used.

Please visit drapertools.com/manuals for the latest version of this manual and the associated parts list, if applicable.

1.3 Understanding the Safety Content of This Manual



WARNING! – Situations or actions that may result in personal injury or death.



CAUTION! – Situations or actions that may result in damage to the product or surroundings.

Important: – Information or instructions of particular importance.

1.4 Copyright © Notice

Copyright © Draper Tools Limited.

Permission is granted to reproduce this manual for personal and educational use **ONLY**. Commercial copying, redistribution, hiring or lending is strictly prohibited.

No part of this manual may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases, this copyright notice must remain intact.

2. Contents

1. Preface	2
1.1 Product Reference	2
1.2 Revisions	2
1.3 Understanding the Safety Content of This Manual	2
1.4 Copyright © Notice	2
2. Contents	2
3. Product Introduction	3
3.1 Intended Use	3
3.2 Specification	3
4. Health and Safety Information	4-8
4.1 General Power Garden Tool Safety Warnings	4
4.2 Additional Safety Warnings for Weed Removers	6
4.3 Safety instructions for Main Powered Chargers & Battery Packs	7
4.4 Connection to the Power Supply (Charger)	8
4.5 Residual Risk	8
5. Identification and Unpacking	9
6. Assembly instructions	10-11
6.1 Fitting the Guard	10
6.2 Fitting or Changing the Brush	10
6.3 Charging the Battery	10
6.4 Battery Pack Charge Status	11
6.5 Tool Battery Fitting	11
7. Operating the Weed Remover	12-13
7.1 ON/OFF Trigger	12
7.2 Adjusting the Front Handle Position	12
7.3 Adjusting the Length of the Telescopic Pole	12
7.4 Adjusting the Angle of the Brush Head	13
7.5 Basic Operation	13
8. Maintenance and Storage	14
8.1 General Maintenance	14
8.2 Troubleshooting Guide	14
9. Disposal	15
10. Warranty	15
11. Explanation of Symbols	15

3. Product Introduction

3.1 Intended Use

This tool is designed for removing weeds and moss from between paving stones, patios and other paved surfaces.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

This product is intended for domestic use only.

3.2 Specification

Stock No.	31866
Part No.	DXGW01
Rated Voltage	18V
Speed (no load)	1,200rpm
Brush	
Max diameter	115mm
Telescopic handle extendable length	280mm

Noise Emissions

Sound pressure level	70.23dB(A)
Sound power level	78.23dB (A)
Uncertainty (K)	3dB (A)

Vibration level	0.696m/s²
Uncertainty (K)	1.5m/s ²
Net Weight (without battery)	1.77kg
Run time with no load (approx.)	25 mins

2.0Ah Battery Pack

Type	Li-ion
Rating	2000mAh/36Wh
Rated voltage	18V

2.4A Charger

Rated Input	230V/50Hz
Rated output	43.2W

Rated DC Output

Voltage	18V
Current	2.4A
Construction	Class II
Charging temperature	5 to 30°C
Charging time (approx.)	60mins (2Ah battery)

4. Health and Safety Information

4.1 General Power Garden Tool Safety Warnings



WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this garden power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term 'power tool' in the warnings refers to your mains-operated (corded) garden power tool or battery-operated (cordless) garden power tool.

Work Area Safety

- **Keep work area clean and well lit.**
 - Cluttered or dark areas invite accidents.
- **DO NOT operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
 - Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.**
 - Distractions can cause you to lose control.

Electrical Safety

- **Power tool plugs must match the outlet. NEVER modify the plug in any way. DO NOT use any adapter plugs with earthed (grounded) power tools.**
 - Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
 - There is an increased risk of electric shock if your body is earthed or grounded.
- **DO NOT expose power tools to rain or wet conditions.**
 - Water entering a power tool will increase the risk of electric shock.
- **DO NOT abuse the cord. NEVER use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.**
 - Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.**
 - Use of a cord suitable for outdoor use reduces the risk of electric shock.

- **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
 - Use of an RCD reduces the risk of electric shock.

Personal Safety

- **Stay alert, watch what you are doing and use common sense when operating a power tool. DO NOT use a power tool while you are tired or under the influence of drugs, alcohol or medication.**
 - A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.**
 - Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the 'OFF' position before connecting to power source, picking up or carrying the tool.**
 - Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.**
 - A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **DO NOT overreach. Keep proper footing and balance at all times.**
 - This enables better control of the power tool in unexpected situations.
- **Dress properly. DO NOT wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.**
 - Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**
 - Use of dust collection can reduce dust-related hazards.
- **DO NOT let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.**
 - A careless action can cause severe injury within a fraction of a second.

Power Tool Use and Care

- **DO NOT force the power tool. Use the correct power tool for your application.**
 - The correct power tool will do the job better and safer at the rate for which it was designed.
- **DO NOT use the power tool if the switch does not turn it on and off.**
 - Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool, before making any adjustments, changing accessories or storing power tools.**
 - Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and DO NOT allow persons unfamiliar with the power tool or these instructions to operate the power tool.**
 - Power tools are dangerous in the hands of untrained users.
- **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.**
 - Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.**
 - Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.**
 - Use of the power tool for operations different from those intended could result in a hazardous situation.
- **Keep handles and grasping surfaces dry, clean and free from oil and grease.**
 - Slippery handles and grasping surfaces **DO NOT** allow for safe handling and control of the tool in unexpected situations.

Service

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.**
 - This will ensure that the safety of the power tool is maintained.
- **NEVER service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorised service providers.**

Battery Tool Use and Care

- **Recharge only with the charger specified by the manufacturer.**
 - A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **Use power tools only with specifically designated battery packs.**
 - Use of any other battery packs may create a risk of injury and fire.
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.**
 - Shorting the battery terminals together may cause burns or a fire.
- **ALWAYS switch off the tool and remove the battery before changing accessories or adjusting the tool.**
- **DO NOT use a battery pack or tool that is damaged or modified.**
 - Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- **DO NOT expose a battery pack or tool to fire or excessive temperature.**
 - Exposure to fire or temperature above 130 °C may cause explosion.
- **Follow all charging instructions and DO NOT charge the battery pack or tool outside the temperature range specified in the instructions.**
 - Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.
- **If the tool is operated continuously until the battery pack has discharged, allow the tool to rest for 15 minutes before continuing with a fresh battery.**

4.2 Additional Safety Warnings for Weed Removers

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Cleaning and user maintenance shall not be made by children.
- Children should be supervised to ensure they do not play with the garden tool.
- Local regulations may restrict the age of the operator.
- The operator is responsible for accidents causing injury to other people or damage to property.
- **NEVER** operate the tool while people, especially children, or pets are nearby.
- Wear appropriate PPE (personal protective equipment) including hearing and eye protection.
 - **ALWAYS** wear substantial footwear and long trousers while operating the tool.
 - **DO NOT** operate the machine when barefoot or wearing open sandals.
- Before each use visually inspect the tool for missing or damaged parts. Check for signs of wear or damage and replace parts if necessary.
- **ONLY** use the tool in daylight or good artificial light.
- **DO NOT** overreach and keep your balance at all times.
- **ALWAYS** be sure of your footing on slopes.
- Walk, **NEVER** run.
- **NEVER** operate the weed remover if the brush guard, brush or guide wheel are damaged or missing.
- **ALWAYS** ensure that all assembly points are securely fastened before use.
 - Ensure that the brush attachment is mounted securely and soundly before **EVERY** use.
- Ensure that the planned route is free from obstructions and that the work surface is suitable for use with this tool.
- Keep a firm and secure grip on the handles during use.
- **ALWAYS** keep the brush attachment clear of the work surface and surrounding objects during start-up.
- Keep hands, feet and loose clothing well away from the brush attachment while the product is switched on.
 - **ALWAYS** switch off and remove the battery pack

when clearing jammed or binding brushes.

- Be aware of stones or other debris that may be thrown into the air by the brush attachment.



WARNING! DO NOT touch moving parts. Switch off and remove the battery from the tool and wait until the rotating parts have come to a complete stop. These parts continue to rotate after the tool is switched off.

- **ALWAYS** switch off and remove the battery:
 - When leaving the tool unattended or not in use.
 - Before clearing a blockage.
 - Before checking, cleaning or carrying out any maintenance.
 - After striking a foreign object to inspect the tool for damage.
- If the tool starts to vibrate abnormally, check immediately.
- **NEVER** operate the tool with defective guards or without the guard fitted.
- Avoid using the tool in bad weather conditions especially when there is a risk of lightning.
- Only use replacement parts and accessories recommended by Draper Tools.
- Keep the ventilation openings clear of debris.
- The garden tool should only be serviced and repaired by an authorised repairer.

Brushes



WARNING! The brush continues to rotate after the motor has stopped. DO NOT attempt to stop the brush with your hands. Always allow the brush to stop by itself.

- **DO NOT** fit brushes to this tool that run faster than the maximum brush speed specified.
- **DO NOT** use damaged brushes.
- Discolouring as a result of rust, or other signs of chemical or mechanical damage may cause the brush to wear out faster.
- Store brushes in a suitable place, protected from the following:
 - High relative humidity, heat, water and other liquids that can damage the brush.
 - Acid or acid vapour can cause damage.
 - Low temperatures that can result in condensation on the brush.

- Deformation of the brush parts.

4.3 Safety instructions for Main Powered Chargers & Battery Packs

- Before using the battery pack or charger, read all instructions and cautionary markings on the battery, charger and the product using the battery.

Chargers

- The charger is for indoor use only. **DO NOT** expose to rain.
- Prior to plugging the charger in to the supply, check that the plug, cord and charger casing are in good condition. If any are damaged, have the defective part(s) replaced immediately by a suitably qualified person.
- **ONLY** use a correctly rated mains outlet to provide power, **DO NOT** plug into site generators, attach to engine generators or D.C. sources. **DO NOT** use a mains socket outlet that is not switched.
- Use the correct Draper charger in conjunction with its corresponding battery pack (Visit drapertools.com for more information).
- The charger must be disconnected from the power supply before removing the battery.
- **DO NOT** charge any other batteries with Draper chargers. Any other application is considered misuse.
- **DO NOT** attempt to charge non-rechargeable batteries.
- **DO NOT** attempt to charge battery packs that are too hot (over 30°C) or too cold (under 5°C), if these conditions apply set the battery pack aside to 'normalise' before proceeding with the charging operation.
- Set up the charger and cord in a safe place where they will not be knocked, tripped over, stepped on, etc. and where it is well ventilated. Ensure the ventilation slots in the charger case are not obstructed.
- Switch the charger on and check that the correct indicators illuminate, allow the battery pack to charge. Once charging is complete, switch the charger off, disconnect from power supply, remove the battery pack and store.

Battery Packs

- **ONLY** use Draper recommended battery packs with this tool.
- Inspect the battery pack for damage, if it is undamaged, plug it into the charger, ensuring the correct orientation.
- **DO NOT** short the battery pack:
 - **DO NOT** touch the terminals with any conductive material.
 - Avoid storing battery pack in a container with other metal objects such as nails, coins, etc.
 - **DO NOT** expose battery pack to water or rain.
- The battery must be removed from the tool before it is recycled.
- The battery is to be disposed of in-line with local authority procedures.
- **DO NOT** crush, open or burn the battery. Exposure to potentially harmful materials may occur.
- In case of fire use CO2 or dry chemical extinguisher.
- **DO NOT** expose to high temperatures >50°C. The battery may degrade at high temperatures.
- Charge battery in conditions between 5°C to 30°C with the designated charger for the battery.
- **DO NOT** use battery if it has been stored at 5°C or less. Allow it to 'normalise' at room temperature before usage/charging.



WARNING! Leaking battery packs

- The electrolyte in battery packs is corrosive. Avoid contact with the skin.
- If contact is made, flush the area with clean water, pat dry and seek medical attention at the earliest opportunity.

4.4 Connection to the Power Supply (Charger)



CAUTION!

Risk of electric shock. DO NOT open.

This appliance is supplied with an approved plug and cord for your safety.

This appliance is Class II and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

If the power supply cord is damaged, it must be replaced by Draper Tools, an authorised service agent or similarly qualified personnel in order to avoid a hazard.


The damaged or incomplete plug, when cut from the cord, shall be disabled to prevent connection to a live electrical outlet.

The value of the fuse fitted is marked on the pin face of the plug. Should the fuse need replacing, use a small plain-slot screwdriver to remove the fuse cover. Ensure the substitute is of the correct rating, approved to BS 1362 and ASTA or BS Kite marked. This should only be performed by suitably qualified personnel.

ASTA  BSI 

Important: If an extension lead is required, use an approved and compatible lead rated for this appliance.

Unwind the entire cable and follow all the instructions supplied with the extension lead.

†Double insulated : This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

4.5 Residual Risks

The safety instructions in this manual cannot account for all possible conditions and situations that may occur. Exercise common sense and caution when using this product and protect against any additional conceivable risks.

5. Identification and Unpacking

EN

Carefully remove the product from the packaging and examine it for any signs of damage that may have occurred during shipment. If any part is damaged or missing, do not attempt to use the product. Please contact the Draper Helpline; contact details can be found at the back of this manual.



- | | | | |
|----|---------------------------------------|------|-----------------------------|
| 1. | ON/OFF speed trigger | 10. | Brush |
| 2. | Battery compartment | 10.1 | 1 x Metal (supplied fitted) |
| 3. | Top handle | 10.2 | 1 x Nylon |
| 4. | ON/OFF trigger lock | 11. | Spindle lock |
| 5. | Front handle | 12. | Wheel |
| 6. | Front handle position adjustment knob | 13. | Angle adjustment button |
| 7. | Telescopic pole adjustment collar | 14. | Battery |
| 8. | Telescopic pole | 15. | Battery charger |
| 9. | Brush guard | | |

Please visit drapertools.com for our full range of batteries, chargers, accessories and consumables.
This cordless product is also compatible with the D20 range of batteries and chargers.

6. Assembly instructions

Important: ALWAYS remove the battery from the tool before assembly.

6.1 Fitting the Guard

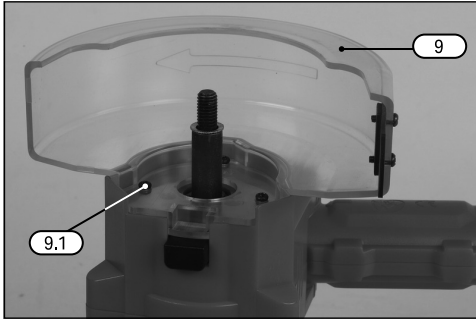


Fig. 1

- Fit the guard (9) to the brush head using the three screws (9.1) supplied.

6.2 Fitting or Changing the Brush

- The steel brush is supplied fitted.

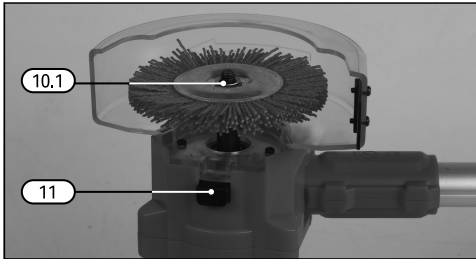


Fig. 2

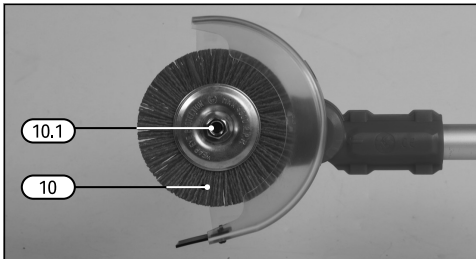


Fig. 3

To remove the fitted brush

1. Undo the locking nut (10.1). Then press the spindle lock (11) and lift the brush off.

To fit the new brush

2. Press the spindle lock (11) and hold in position.

3. Then fit the brush (10) to the axle.
4. Add the washers either side of the brush and secure using the locking nut (10.1).
5. Release the spindle lock.

6.3 Charging the Battery

Important: ONLY use Draper designated battery packs and chargers with this product. Use of any other third-party battery packs/chargers is considered misuse and will invalidate the warranty. Once connected to the mains supply, recharging of the battery can be left generally unsupervised.

WARNING! Check the condition of the charger and battery prior to each charge. **DO NOT** use if there is any sign of damage. The battery pack must be charged before initial use.

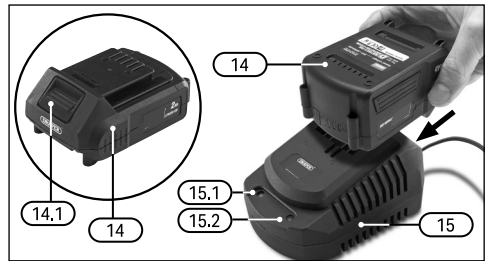


Fig. 4

1. Remove the battery (14) from the tool before charging by pressing the release button (14.1). Then slide the battery pack from the battery compartment (2).
2. Plug the battery charger (15) into a suitable mains power supply socket.
3. Slide the battery (14) into the charger (the battery is designed to fit into the charger only one way). Ensure the battery is fully inserted correctly into the charger.

Status	Indicator Lights	
	Green (15.2)	Red (15.1)
Charger plugged in	OFF	ON
Battery charging	Flashing	ON
Battery fully charged	ON	OFF
Foreign object in charger's battery slot/Faulty	-	Flickering

4. Once fully charged, unplug the charger and remove the battery from the charger by pressing the release button (14.1).
- Always unplug the charger after use.



CAUTION!

- **DO NOT** pull the plug out of the power outlet by the cord.
- If the battery charger has been in continuous use it will be hot. Once charging is completed, leave the charger to cool for at least 15 minutes. Only charge cooled batteries.

6.4 Battery Pack Charge Status

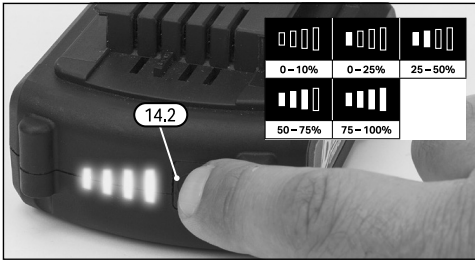


Fig. 5

- To check the battery (14) charge status press the charge level indicator button (14.2).

6.5 Tool Battery Fitting

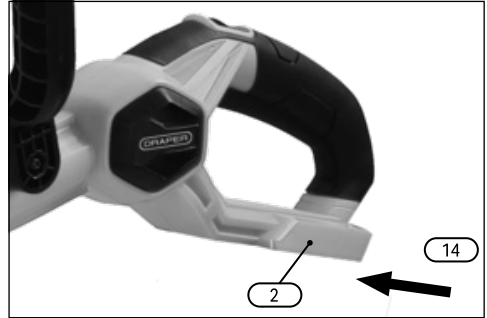


Fig. 6

- Slide the battery pack (14) into the battery compartment (2) on the base of the handle.

To release the battery pack



Fig. 7

- Press the battery release button (14.1) and slide the battery pack off.

7. Operating the Weed Remover

Important: Before operating this tool, read and understand all the safety instructions listed in this manual. Ensure that the product is fully assembled and the battery is fitted.

- **DO NOT** use without the brush guard (9) fitted.

7.1 ON/OFF Trigger

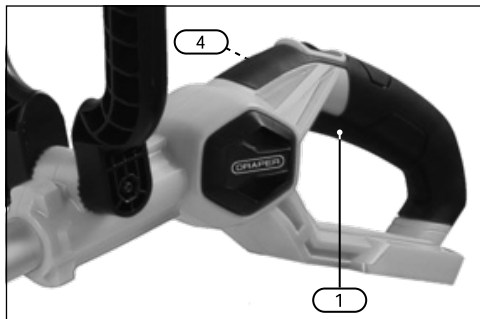


Fig. 8

1. Push the safety lock (4) down, then squeeze the **ON/OFF** trigger (1).

- There is no continuous operation mode.

2. To turn off release the **ON/OFF** trigger.

7.2 Adjusting the Front Handle Position

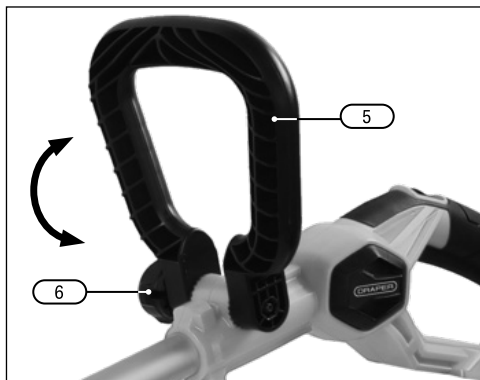


Fig. 9

- Adjust the handle (5) position by loosening the locking knob (6) and then move the handle up or down to the appropriate position.

7.3 Adjusting the Length of the Telescopic Pole

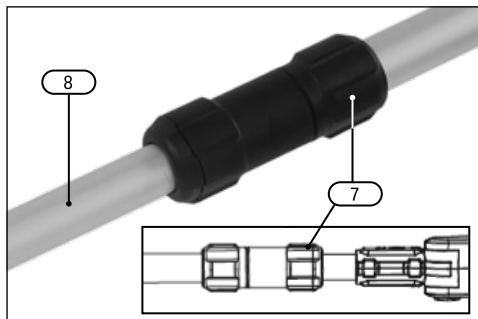


Fig. 10

- Loosen the adjustment collar (7) and extend the telescopic pole (8) to the required length.
- Then retighten the collar to secure in place.

7.4 Adjusting the Angle of the Brush Head

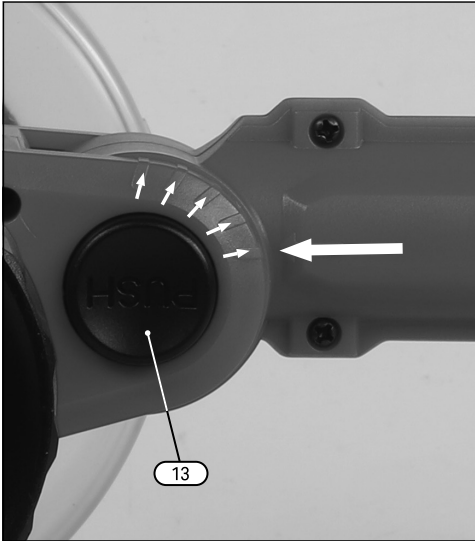


Fig. 11

- Hold the handle firmly.
- Press the angle adjustment button (13) and adjust the angle of the brush head as required. Align the arrow on the handle shaft with one of the five positions marked above the button.
 - The brush head can be positioned at five different head angles (-36°, -18°, 0°, 18° & 36°).
- Release the adjustment button to secure in position.

7.5 Basic Operation

- **ALWAYS** trial the weed remover on a small and discreet area before full use to assess the risk of any damage to the surface.
 - This product is suitable for use on horizontal ground surfaces **ONLY**.
 - **DO NOT** use this product to clear walls or other vertical surfaces, or the underside of overhanging ledges.
 - Assess the suitability of each brush for the operation before **EVERY** use.
 - Metal brush (10.1) is suitable for robust surfaces and stubborn weeds.
 - Nylon brush (10.2) is used for light vegetation and where the surface may be too sensitive for the steel brush.
 - **DO NOT** use on sensitive materials like bricks or tiles.
 - Only use brushes that are in good condition. Replace worn or damaged brushes immediately.
1. Slowly and carefully lower the brush into the joint in the surface until the brush contacts the material and the guide wheel (12) rests on the surface.
 2. Grip with both handles and guide the brush along the joint until the required materials have been cleared.
 - For best results work at a steady pace and repeat the cleaning over the same area if necessary.
 3. To switch off and release both the trigger switch when the cleaning is complete.

8. Maintenance and Storage

Important: **ALWAYS** ensure the weed remover is switched off and the battery pack is removed before carrying out any cleaning, servicing or maintenance.

8.1 General Maintenance

- Wipe over with mild soap and a damp cloth.
- Keep the remover dry and **DO NOT** spray with water.
- **DO NOT** use solvents or abrasives to clean the weed remover.
- Keep the ventilation slots clean free from debris.
- Store the remover in a safe dry area, out of the reach of children.
- Always remove the battery pack for long term storage and when replacing or changing the brushes.

8.2 Troubleshooting Guide

Problem	Possible Cause	Remedy
Weed remover will not operate.	Battery discharged.	Recharge battery - refer to 6.3.
	Battery not fitted.	Insert battery into handle battery compartment.
	ON/OFF trigger or motor defective.	Contact Draper Tools for advice.
Poor cleaning performance.	Brush worn or damaged.	Replace brush - refer to 6.2.
	Insufficient battery charge.	Recharge battery - refer to 6.3.

9. Disposal

- At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.
- **DO NOT** dispose of this product with domestic waste; most local authorities provide appropriate recycling facilities.



Li-ion

- **DO NOT** incinerate.
- **DO NOT** burn or mutilate batteries; this may release toxic or corrosive substances.



- **DO NOT** short circuit cells, may cause burns.
- The battery pack must be removed from the tool before it is scrapped and disposed of safely.
- **DO NOT** dispose of batteries in a charged condition.
- Expired batteries must be recycled/disposed of in accordance with the appropriate regulation or legislation. They should be returned to your local warranty agent/stockist.

10. Warranty

12 months from date of purchase.

Visit drapertools.com/warranty for more information.

11. Explanation of Symbols **EN**



Read the instruction manual.



Wear ear defenders and safety glasses.



Wear protective footwear.



Wear protective gloves.



Keep out of the reach of children.



DO NOT incinerate or throw onto fire.



Warning!



Warning! Risk of electric shock.



DO NOT operate the machine indoors.



DO NOT expose to rain or wet conditions.



Class II construction (Double insulated).



Rated Voltage.



Speed (no load).



WEEE – Waste Electrical & Electronic Equipment.
DO NOT dispose of this product with domestic waste



UK Conformity Assessed.



European conformity.

Contact Details

Draper Tools

Draper Tools Limited
Hursley Road
Chandler's Ford
Eastleigh
Hampshire
SO53 1YF
UK

Website: drapertools.com

Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344

Telephone Sales Desk: +44 (0) 23 8049 4333

General Enquiries: +44 (0) 23 8026 6355

Draper Tools Europe B.V.

Oude Graaf 8
6002 NL
Weert
Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.