
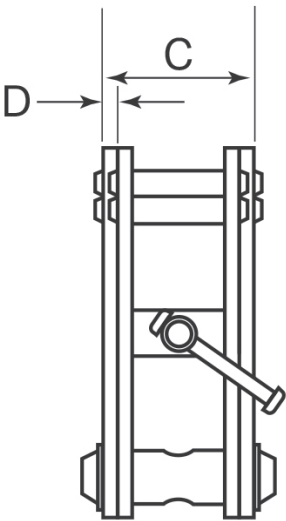


BEAM CLAMPS

48346 – BC2000 / 48348 – BC5000

Specification

Stock No.	Safe Working Load	Girder Beam Width A (Min)	Girder Beam Width A (Max)	Beam Clamp Width B (Min)	Beam Clamp Width B (Max)	Beam Depth C	Steel Plate Width D
48346	2000kg	75mm	220mm	180mm	360mm	74mm	5.5mm
48348	5000kg	80mm	320mm	235mm	480mm	110mm	9.5mm

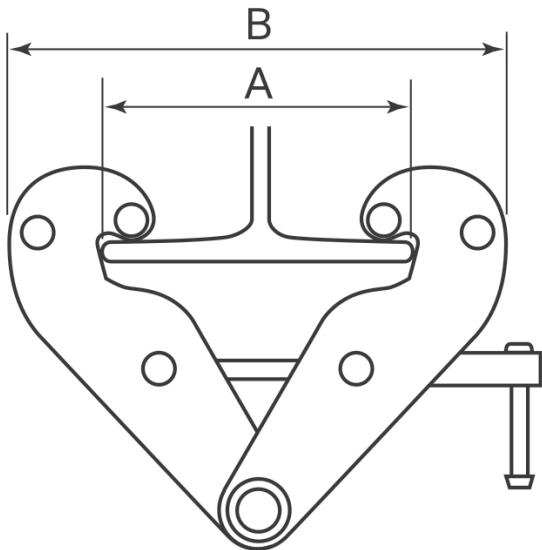

Health and Safety Information

Important: Read all the Health and Safety instructions before attempting to operate, maintain or repair this product and retain for future use. Failure to follow these instructions may result in injury or damage to the user, the product or the workpiece.

- Always read and adhere to all instructions supplied with other components of the lifting equipment that the beam clamp is used with.
- **ALWAYS** ensure the load does not exceed the rated capacity (safe working load) of the beam clamp.
- Ensure that the structure to which the trolleys, clamps, hoists or blocks are attached meet or exceed the safety parameters as specified by the HSE.
- Inspect the beam clamp before each use for damage, loose or missing parts.
- Operating temperature for the beam clamp is between -10°C to 50°C.
- **DO NOT** use damaged equipment. If adjustments or repairs are necessary, or any defects are known, have the problem corrected before further use. Only a qualified technician should perform maintenance on the equipment.
- Wear appropriate PPE (Personal protective equipment) including eye and head protection and steel-toed footwear during operation of lifting equipment.
- Use the beam clamp only as intended.
- **NEVER** use for lifting people or lifting loads over people.
- **DO NOT** allow the load to swing during operation.
- **DO NOT** subject the beam clamp and any other equipment being used to shock loads.
- Ensure all non-essential persons keep at a safe distance while the beam clamp is in use.
- Store in a safe dry location when not in use.

Disposal

At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.

Warranty

12 months from date of purchase - Visit [drapertools.com/warranty](https://www.drapertools.com/warranty) for full details.

Contact Details

Draper Tools Limited	Draper Tools Europe B.V.
Hursley Road	Oude Graaf 8
Chandler's Ford	6002 NL
Eastleigh	Weert
Hampshire	Netherlands
SO53 1YF	
UK	

Website: [drapertools.com](https://www.drapertools.com)
Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344
Telephone Sales Desk: +44 (0) 23 8049 4333
General Enquiries: +44 (0) 23 8026 6355

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.