

1) WHAT DO I DO IF OPTIKA DOESN'T TURN ON?**2) WHAT DO I DO IF OPTIKA TURNS ON ONLY PARTIALLY?****(A WHITE LIGHT MAY APPEAR ON THE CLAMP: FAINT AND/OR FLASHING)****3) WHAT DO I DO IF THE ENTER OR ESC PUSH BUTTONS DON'T WORK OR DON'T RESPOND?****4) WHAT HAPPENS IF THERE IS A MARK ON THE CLAMP GLASS SLIDE?****1) WHAT DO I DO IF OPTIKA DOESN'T TURN ON?**

- a) Check that the green led on the feeder is on.
- b) Check that the jack at the rear of the OPTIKA device is properly connected.
- c) Try pressing ENTER to check whether the ignition process starts.

2) WHAT DO I DO IF OPTIKA TURNS ON ONLY PARTIALLY?**(A WHITE LIGHT MAY APPEAR ON THE CLAMP: FAINT and/or FLASHING)?**

- a) Try disconnecting the jack at the rear of the OPTIKA device and the 220V power lead from the mains, wait 10 seconds then reconnect the power lead and the jack at the rear of the device, in that order.
- b) Make sure the temperature in the place where OPTIKA is situated is not below 10°C.

3) WHAT DO I DO IF THE ENTER OR ESC PUSH BUTTONS DON'T WORK OR DON'T RESPOND?

If the "Enter" or "Esc" push buttons do not work it is advisable to turn OPTIKA off and on by disconnecting and re-connecting the power jack at the rear of the device.

4) WHAT HAPPENS IF THERE IS A MARK ON THE CLAMP GLASS SLIDE?

This is something that can normally appear on some clamps, but it does not compromise proper operation of the device.

Silca's staff will be happy to provide suitable assistance at any time.

Contact: service@silca.it