


ONEK8 KIT WIRING AND PROGRAMMING

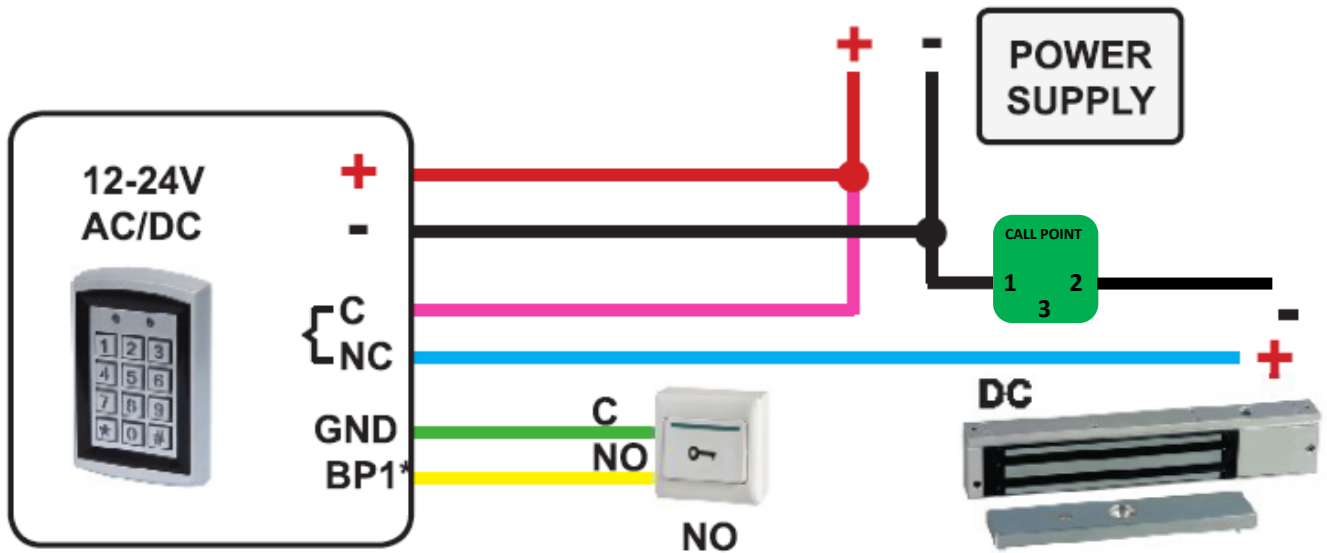

Add a user	
ATTENTION: Please note that the master code don't unlock the door!	
► RELAY 1 (from 001 to 999 users) ◀	
CARD OR CODE	
Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter * 001	long BEEP + right LED will turn yellow
Enter the position from 001 to 999 (3 mandatory digits)	left LED will turn green + right LED will flash yellow
if CARD : Swipe the card 1 X if CODE : Enter a code 1 X	long BEEP + left LED will turn green + right LED will flash yellow
Enter # #	right LED will turn green

CARD AND CODE	
(in this case the relay 2 is in idle state (inactive))	
Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter * 002	long BEEP + right LED will turn yellow
Enter the position from 001 to 999 (3 mandatory digits)	left LED will turn green + right LED will flash yellow
Swipe the card 1 X and enter a code 1 X	long BEEP + right LED will flash yellow long BEEP + right LED will turn yellow
Enter # #	right LED will turn green

► RELAY 2 (from 01 to 09 users) ◀	
CARD OR CODE	
Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter * 4	right LED will flash yellow
Enter the position from 01 to 09 (2 mandatory digits)	left LED will turn green + right LED will flash yellow
<u>if CARD</u> : Swipe the card 1 X <u>if CODE</u> : Enter a code 1 X	long BEEP + left LED will turn green + right LED will flash yellow
Enter # #	right LED will turn green



The codes or user cards from relay 1 and 2 must be different from each other.

Delete one user	
► RELAY 1 (from 001 to 999 users) ◀	
Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter the position (3 mandatory digits) (from 001 to 999)	left LED will turn red + right LED will flash yellow
Enter **	left LED will turn green + right LED will flash yellow
Enter # #	right LED will turn green
► RELAY 2 (from 01 to 09 users) ◀	
Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter * 4	right LED will flash yellow
Enter the position (2 mandatory digits) (from 01 to 09)	left LED will turn red + right LED will flash yellow
Enter **	left LED will turn green + right LED will flash yellow
Enter # #	right LED will turn green

Delete all users	
! All user codes and cards will be removed	
Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter * 888	long BEEP + right LED will flash yellow
Enter # #	right LED will turn green

Changing a master code

It is recommended to modify the master code which allows to open the setup session for security reasons. The user codes must be different from mastercode.

Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter * 3	right LED will flash yellow
Enter the new code 2 X	long BEEP + right LED will turn yellow
Enter # #	right LED will turn green

How to restore the default master code (1234)

(in case of lost or forgotten master code)

Switch off the power supply from the keypad Press # key. Keep it pressed for 3 seconds while powering the device again	all LEDs light off short BEEP + right LED will turn green
--	--

SETTING OF THE UNLOCKING TIME

► RELAY 1 (from 01 to 99 seconds) ◀

Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter * 1	right LED will flash yellow
Enter the 2-digits value (mandatory): from 01 to 99 sec. Enter 00 for toggle mode	long BEEP + right LED will turn yellow
Enter # #	right LED will turn green

► RELAY 2 (from 01 to 99 seconds) ◀

Enter the master code 2 X or swipe the master card 1 X (Default code is 1234)	long BEEP + right LED will turn yellow
Enter * 5	right LED will flash yellow
Enter the 2-digits value (mandatory): from 01 to 99 sec. or enter 00 (for bistable function)	long BEEP + right LED will turn yellow
Enter # #	right LED will turn green