 



Indoor Lighting | Anti-Glare Integrated Downlight

Anti-Glare Integrated Downlight

ID-AGFCCT

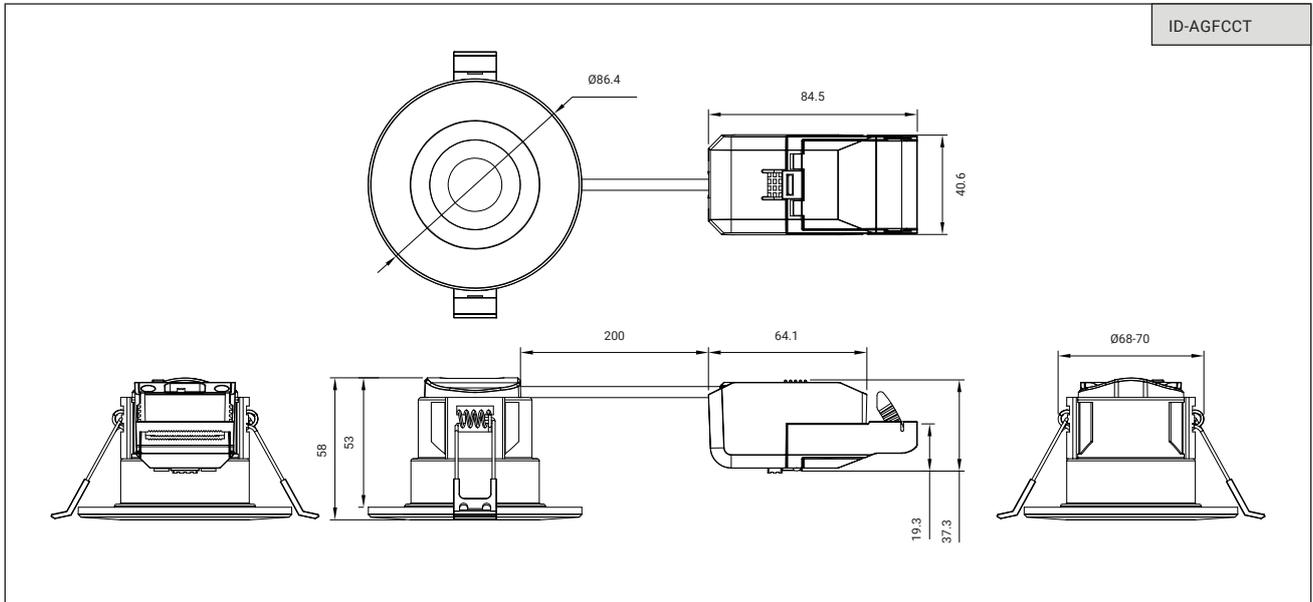

IMPORTANT INFORMATION

- Please read these instructions carefully before installation or operation.
- Retain this manual for future reference.
- Please refer to product listing for detailed information.
- This product must be installed by a suitably competent person.
- This product should be installed in accordance with local IEE wiring regulations and building regulations.
- Remove product from packaging.
- Fully uncoil all cables.
- Ensure mains supply is disconnected before installation.
- Ensure others cannot restore the electrical power supply without your knowledge.
- This product contains a light source of energy efficiency class F please refer to product - listing for detailed information.
- Do not open, modify, or repair the unit. No user-serviceable parts inside.

SAFETY PRECAUTIONS

- Please read these instructions carefully before installation or operation.
- This product must be installed by a suitably competent person.
- Ensure mains supply is disconnected before installation.
- Ensure others cannot restore the electrical power supply without your knowledge.
- Do not install or use the product if it is damaged.
- The LED light source and control gear are non-replaceable.
- For indoor use only.
- Use only with compatible Triac dimmers.
- Allow adequate ventilation around the luminaire.

OPERATION

- This luminaire is compatible with leading or trailing-edge Triac dimmers.
- Do not operate outside the specified ambient temperature range.
- The LED light source and control gear are non-replaceable. When product reaches its end of life the whole luminaire shall be replaced.
- Use only with high-quality leading- or trailing-edge dimmers rated for LED loads. Performance may vary depending on the dimmer model.
- Minimum dimming level may vary; flicker-free operation is achieved only within the rated dimming range.

INSTALLATION INSTRUCTIONS

- Ensure mains supply is disconnected before installation.
- Ensure others cannot restore the electrical power supply without your knowledge.
- Prepare the ceiling cut-out.
- Open the junction box and connect supply cables, no earth is required:
 - Brown = Live (L)
 - Blue = Neutral (N)
- Select desired colour temperature using the switch on the driver.
- Compress spring clips and insert the downlight into the cut-out until flush with the ceiling surface.
- Restore power and test the installation.

MAINTENANCE

- Before cleaning or maintenance, ensure the luminaire is disconnected from the mains.
- Clean only with a dry, soft cloth.
- Do not use chemical cleaners or solvents.
- Do not open, modify, or repair the unit. No user-serviceable parts inside.

DISPOSAL & RECYCLING

- This product must not be disposed of with household waste.
- Please return to an authorised recycling facility in accordance with local environmental regulations.

FIRE COMPLIANCE

This product has been independently tested by SGS and is compliant with BS 476-20:1987 + AC:2014 and BS 476-21:1987 + AC:2014 standards. The luminaire achieved the following fire resistance ratings:

- Solid Timber: 30 / 60 / 90 minutes
- Metal Web Joist: 30 minutes
- Joist: 30 minutes

All fire resistance testing was assessed against Loadbearing Capacity, Integrity, and Insulation. Certificates are available upon request.

PRODUCT WARRANTY

1. A warranty period is provided for products in normal use. For any faults arising during the period that are confirmed to be quality related by inspection by the company, a product of the same specification will be replaced for free.
2. The warranty does not cover any of the following:
 1. Any product damage due to usage not allowed in the instructions.
 2. Any product damage due to disassembling or wrong operation by the user.
 3. Severe appearance damage or deformation of the product.