
User Manual




Chronos by Tagra | Pixel LED String Lights

DIMENSIONS

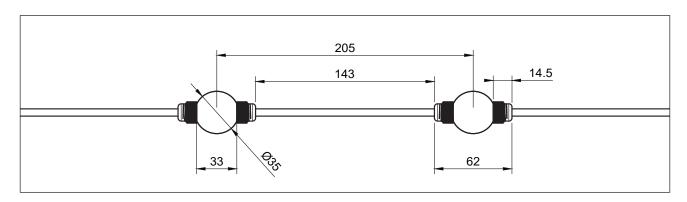

DIAGRAM

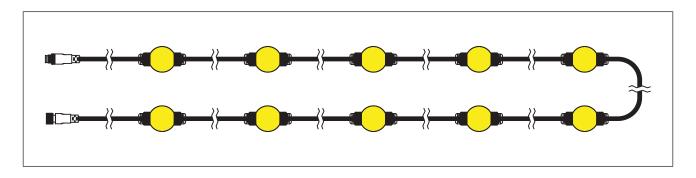















IMPORTANT INFORMATION

- Please read these instructions carefully before installation or operation.
- Retain this manual and cable tag for future reference.
- This product should be installed in accordance with local IEE wiring regulations and building regulations.
- · Ensure mains supply is disconnected before installation.
- · Ensure others cannot restore the electrical power supply without your knowledge.
- Do not connect directly to mains electrical supply. Ensure correct polarity before powering.
- · This product must be used with a good quality SELV constant voltage LED driver and compatible SPI pixel controller.
- · Ensure that the voltage output of the driver matches rated voltage of the LED product.
- · Ensure that the power capacity of the LED driver is greater than the total load of all the LED products connected to it.
- To reduce the risk of strangulation the flexible wiring connected to this luminaire shall be effectively fixed to the wall if the wiring is within arm's reach.
- Do not open, modify, or repair the unit. No user-serviceable parts inside.
- Do not install or use the product if it is damaged.
- The LED light source is non-replaceable. When product reaches its end of life the light source shall be replaced.

INSTALLATION GUIDELINES

ELECTRICAL

- · Connect to a good quality SELV constant voltage LED driver. Connect polarity and data input correctly.
- · Plug the connector from the controller output into the corresponding connector on the LED product.
- Ensure controller IC type matches the LED product specification.
- · Fit a suitable fuse or circuit protection between driver and LED product (as close to driver as possible).
- Keep signal cable between controller and first pixel ≤ 5m; use amplifier beyond 5m.
- · Ensure that the total current used does not exceed the maximum capacity of the controller and cabling.
- · Do not exceed a maximum connected string length of 6M.

MECHANICAL

- · Fully uncoil all cables.
- Do not twist, crush or tightly bend connecting cables.
- · Protect cables from mechanical stress and strain. Seal all unused connectors and end caps after installation
- Do not use the LED product as a structural load-bearing element.
- Take care not to dislodge any components during installation.
- · Ensure that wires connecting the LED product cannot be pulled.
- · Provide strain relief at controller and first pixel; protect cables from pull.


ENVIRONMENTAL

- IP67 (potted construction)
- · Only install in a location free from chemicals, corrosives, gases and flammable materials.
- Ensure gaskets and seals remain intact for ingress protection.
- Not suitable for permanent outdoor installation.
- · Suitable for outdoor use. Maintain connector seals and end caps to preserve ingress protection.

MAINTENANCE

- · Before cleaning or maintenance, ensure the LED product is disconnected from the mains.
- Clean only with a dry, soft cloth.
- Do not use chemical cleaners or solvents.
- Do not open, modify, or repair the unit. No user-serviceable parts inside.
- · Inspect connectors and seals regularly.

WIRING

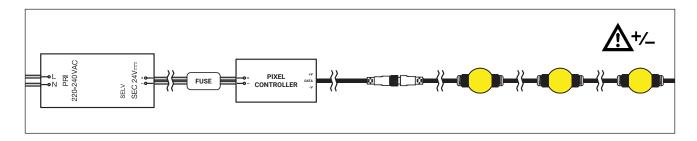

Wire Colour	Controller
Red	DCV+
Green	DI (Data In)
Blue	DO (Data Out)
Black	GND-


WARNING: This product must be installed by a suitably competent person. Check polarity (+/-) is correct before turning on.




WARNING: Never connect DATA to +V.


SIGNAL FLOW

- Signal flows through the string lights from the male end towards the female end.
- Signal Load Limit: Each signal output should control no more than 1024 pixels.
- · For installations where more than 5 metres of cable is used, boost the signal using an amplifier.
- Only use the recommended accessories.

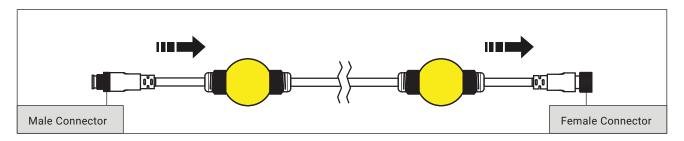

CABLING

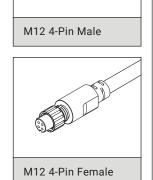

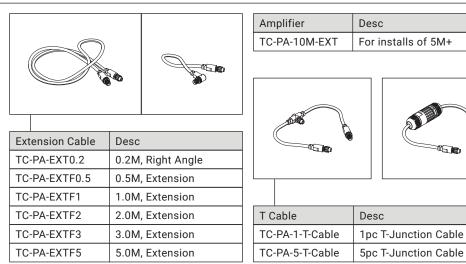

TROUBLESHOOTING

- Q String lights don't respond to controller
- A Check that the data output of the controller is connected to the data input of the string lights, not the output.
- Q String lights don't respond to controller
- A Check that the input power of the controller is the same as the input power of the string lights (24V).
- **Q** The string lights are on but the animation is distorted
- A Check that the IC type setting on the controller matches the IC type of the LED string lights.
- **Q** String lights produce single colours but animation is distorted.
- A Check that the GND of each string light is connected to the GND on the controller.

 Check that the length of the cables between the controller and data-in on the string lights is shorter than 5 metres. For more than 5 metres, use an amplifier.

PRODUCT WARRANTY

- 1. A warranty period is provided for products in normal use. For any faults arising during the period that are confirmed to be quality related by inspection by the company, a product of the same specification will be replaced for free.
- 2. The warranty does not cover any of the following:
 - 1. Any product damage due to usage not allowed in the instructions.
 - 2. Any product damage due to disassembling or wrong operation by the user.
 - 3. Severe appearance damage or deformation of the product.