



Indoor Lighting | Plaster-In Downlight


Mini Plaster-In Downlight

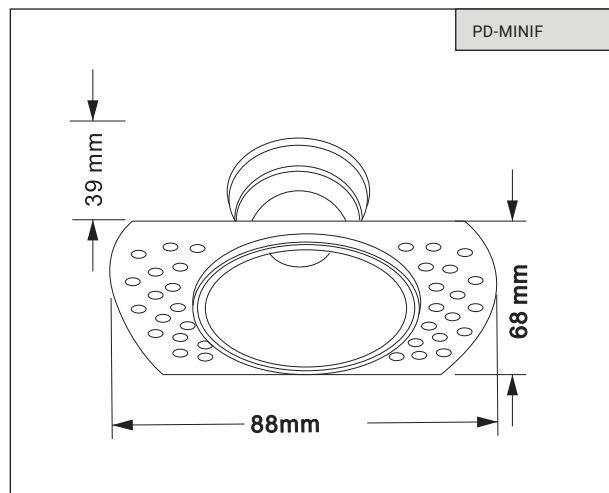

Standard Tiltable Plaster-In Downlight

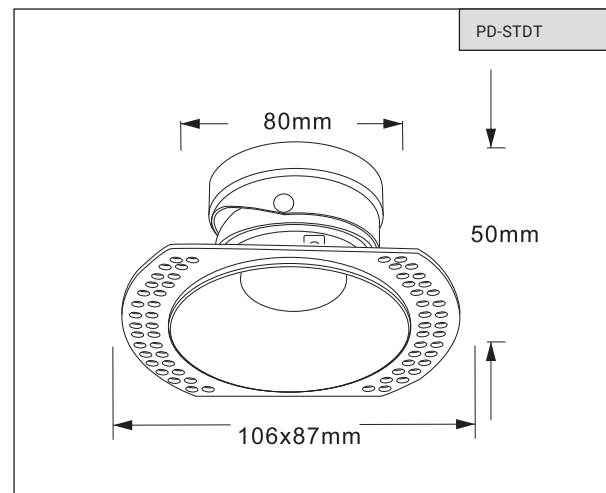

Standard Fixed Plaster-In Downlight

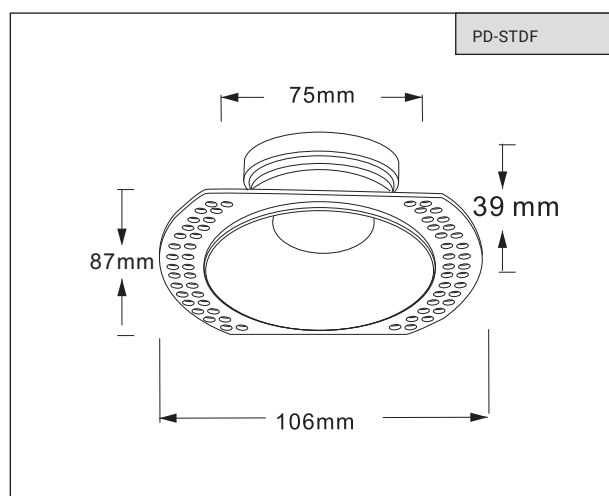

IMPORTANT INFORMATION

- Please read these instructions carefully before installation or operation.
- Retain this manual for future reference.
- Please refer to product listing for detailed information.
- Luminaire housing suitable for Class I, II or III installation depending on final configuration and associated control gear.
- This product is a fire-rated downlight housing supplied without any light source or control gear.
- It is designed to accept compatible retrofit lamp types and suitable control gear as determined by the installer.
- The electrical classification (Class I, II, or III) will depend on the final configuration once the light source and driver are installed.
- This product must be installed by a suitably competent person.
- This product should be installed in accordance with local IEE wiring regulations and building regulations.
- Remove product from packaging.
- Fully uncoil all cables.
- Ensure mains supply is disconnected before installation.
- Ensure others cannot restore the electrical power supply without your knowledge.
- Do not open, modify, or repair the unit. No user-serviceable parts inside.

SAFETY PRECAUTIONS

- This product must be installed by a suitably competent person.
- Ensure mains supply is disconnected before installation.
- Ensure others cannot restore the electrical power supply without your knowledge.
- Do not install or use the product if it is damaged.
- For indoor use only.
- Allow adequate ventilation around the luminaire.

OPERATION

- Do not operate outside the specified ambient temperature range.

INSTALLATION INSTRUCTIONS

- Ensure mains supply is disconnected before installation.
- Ensure others cannot restore the electrical power supply without your knowledge.
- Prepare the ceiling cut-out.
- Compress spring clips and insert the downlight into the cut-out until flush with the ceiling surface.
- Ensure the selected lamp and driver combination are compatible and comply with the relevant standards for the final installation.
- Ensure that the final installation method, wiring arrangement, and control gear selection correspond to the declared electrical safety class.
- Restore power and test the installation.

MAINTENANCE

- Before cleaning or maintenance, ensure the luminaire is disconnected from the mains.
- Clean only with a dry, soft cloth.
- Do not use chemical cleaners or solvents.
- Do not open, modify, or repair the unit. No user-serviceable parts inside.

DISPOSAL & RECYCLING

- This product must not be disposed of with household waste.
- Please return to an authorised recycling facility in accordance with local environmental regulations.

FIRE COMPLIANCE

This product has been independently tested by SGS and is compliant with BS 476-20:1987 + AC:2014 and BS 476-21:1987 + AC:2014 standards. The luminaire achieved the following fire resistance ratings:

- Solid Timber: 30 / 60 / 90 minutes
- Metal Web Joist: 30 minutes
- Joist: 30 minutes

All fire resistance testing was assessed against Loadbearing Capacity, Integrity, and Insulation. Certificates are available upon request.

PRODUCT WARRANTY

1. A warranty period is provided for products in normal use. For any faults arising during the period that are confirmed to be quality related by inspection by the company, a product of the same specification will be replaced for free.
2. The warranty does not cover any of the following:
 1. Any product damage due to usage not allowed in the instructions.
 2. Any product damage due to disassembling or wrong operation by the user.
 3. Severe appearance damage or deformation of the product.