 


! WARNING

- 1. To avoid electric shock, disconnect power at source prior to installation.
- 2. The installation should be performed by qualified electricians or lighting technicians.
- 3. Before installation, maintenance, or removal, disable all power.
- 4. Do not touch the fixture while it is in service.
- 5. If there is any problem with the fixture, turn off power and DO NOT attempt repair unless you are a qualified technician or the customer service member.

 
Recessed Installation




Remove the original ceiling panel. Lift the mounting brackets and twist them 90° into position.



2 Ensure that the power is turned off at the breaker. Connect power to the driver as show in the Wiring Diagram.




 $3^{ ext{Place}}$ the fixture with it's four (4) mounting brackets so that they are positioned above the T-bar.

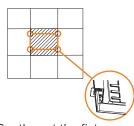


4 Gently rest the fixture onto the T-bar and ensure that it fits properly.

Accessories

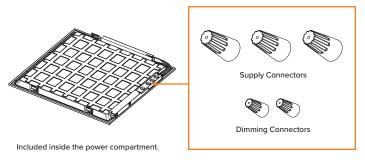



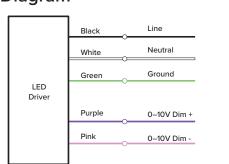

Field Adjustable Wattage and CCT

◀ Kelvin and wattage can be adjusted using the dip switches located on the driver.

Select the desired kelvin and wattage by sliding the dip switch.

