

CLEAR MUG User Manual

 
MUJI 無印良品

○Please read this manual carefully before using the product. In addition, please keep this manual properly for confirmation at any time.

Safety Advice

To prevent accidents due to misuse, the following graphic symbols are used to illustrate the contents to be observed.

Meanings of symbols are as following:



△Pay attention to the content that may cause minor injuries or product damage.

●Before use

- Do not use the product if any small scars or cracks. Otherwise, the product may be damaged.
- △Before use, all parts should be cleaned with warm water, and keep parts assembly correctly.
- Do not feed boiling water for disinfection, which may cause the product deformed.
- Do not keep the following objects inside the product.
 - Dry ice, carbonated drinks, fermented food. The product may break due to the increase of internal air pressure.
 - Milk, milk-containing beverages, fruit juice, pulp, etc. Otherwise, this product may cause food spoilage and deterioration.
 - Tea, coffee powder, teabags with ropes, etc. If the residue is caught in the sealing, it may cause the product to leak.


●In use

- Do not put drinks with excessive temperature in this product. Otherwise, it may result in scalding, deformation, damage and water leakage of the product. When filling boiled drinks such as tea, it is recommended to wait until the water temperature drops before filling.
 - It is recommended that the drink temperature be below 50°C to avoid scalding.
- △When screwing on the lid, please keep it level with the main body. Otherwise, there will be gaps, resulting in water leakage.
- Do not use it as a storage container. Otherwise, this product may cause food spoilage and deterioration.
- Do not use this product in the freezing room or cold room below the ice node. Otherwise, the liquid will expand due to freezing, which may cause the main body damaged.
- Please avoid strong impact such as falling or overturning or excessive pressure on the product. Otherwise, the product may be damaged or water leakage.
- Do not use it during car running. Otherwise, the car and clothes may be stained. In addition, when driving, it will cause inattention and may cause great danger.
- Do not heat, refrigerate or freeze in the state of filling drinks.
- Do not put the product near fire sources and heat sources such as cooking ranges and stoves, or use it in microwave ovens and baking ovens. Otherwise, the product may be deformed or damaged.
- Minors should use this product under the guidance of adults.

●After use

- When cleaning, do not use sponges, metal cleaning balls, detergent powder, containing abrasives, etc.
 - May damage the surface layer of the product, resulting in product breakage.
- △When the dirt is serious, use appropriate diluted neutral detergent for cleaning.
- Do not cover the main body with detergent. Otherwise, the product may be damaged.
- Do not boil this product. Otherwise, the product may be deformed, cracked, whitened or discolored due to heat.
- Do not use dishwasher to clean this product. Otherwise, the product may be deformed, cracked, whitened or discolored due to heat.
- Do not use thinner, gasoline, alcohol, kerosene, etc. Otherwise, the product may be damaged.

●Part Names

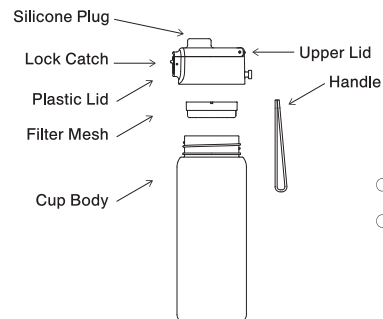

Sealing Ring Installation Position



- Before use, please ensure that the sealing ring is properly installed in the lid.
- The sealing ring is a consumable item. Please check its condition annually and replace it promptly if any leakage or damage is detected.

●Instructions for Use

- Before use, rinse the cup with cold or warm water.
 - When drinking, keep the cup in an upright position and slide the lock catch downward to unlock. Press the lock catch to open the upper lid, then tilt the cup slowly to drink.
 - After drinking, while keeping the cup upright, close the upper lid. A clicking sound will indicate that the lid is securely closed. Slide the lock catch upward to lock it in place.
- The figures illustrate the lock catch in both the open and closed positions. When not in use, always slide the lock catch upward to secure it and prevent accidental opening.



Open



Close

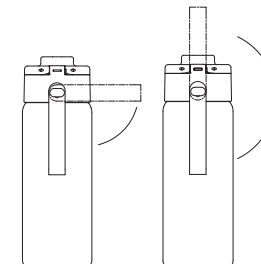


Figure 1

Figure 2

- To remove the silicone handle, adjust its position so that it is perpendicular to the cup body, then gently pull it out (as shown in the dashed outline in Figure 1).
- Do not apply excessive force when removing or installing the handle to avoid damaging the silicone handle.
- When washing, detach the filter mesh from the main body and clean it with a soft sponge using a diluted neutral detergent.
- Beverage droplets may remain on the inner side of the plastic lid. Be cautious of dripping water when opening or closing the lid.
- After washing, wipe off any remaining water droplets with a soft cloth.
- When using the handle for hanging or lifting, rotate it upward before hanging or lifting (as shown in the dashed outline in Figure 2).

●Disposal

- When disposing of this product, please follow the disposal regulations applicable in your region.

●Certification

Material Information			
Part Names	Silicone Rubber	White Plastic Lid/Filter Mesh	Cup Body/Flip Lid
Material Name	Silicone Rubber	Polypropylene	Polymer of dimethyl terephthalate and 1,4-cyclohexanedimethanol, 2,2,4,4-tetramethyl-1,3-cyclobutanediol
Heat Resistance	120°C	100°C	100°C
Cold Resistance	-20°C	0°C	0°C

*The temperatures listed in this material information refer to the material's tolerance limits and are not the recommended usage temperatures.

Food contact

Manufactured by MUJI (SHANGHAI) COMPANY LIMITED
Address: Room 3501-3508, 35th Floor, No. 1601 Nanjing West Road, Jing'an District, Shanghai, China
Tel: +86-21-63756677
www.muji.com