

MUJI 無印良品

LED化妝鏡

型號 MS-CMW1CN

使用說明書

- 感謝您購買本產品。
- 使用前，請務必閱讀本使用說明書，在充分理解的基礎上正確使用。
- 請務必保管本使用說明書。

使用說明書編號：MS111·23F01
使用說明書發行日：2023 年 8 月


目錄	頁碼
安全注意事項.....	1~4
鋰電池的處理方法.....	5
產品簡介.....	6
功能操作.....	7~8
保養和清潔方法.....	9
異常情況時.....	10
產品規格.....	11

安全注意事項 請務必遵守。


為了預防對使用者或其他人帶來危害和財產損失，安全正確地使用產品和使用說明書中記載了重要內容。請充分理解下列內容（標記、圖記號）之後，閱讀正文，遵守記載事項。


• 標記的說明





 **警告** “設想會死亡或受重傷”的內容。











 **注意** “設想會受傷或產生物質損失”的內容。











• 圖記號的說明











 是不得進行的“禁止”的內容。

 “設想會受傷或產生物質損失”的內容。










 警告	
	請勿擅自改造，非修理技術人員請勿拆卸或修理。產品修理請諮詢購買本產品的店鋪人員。 否則可能導致火災、觸電、受傷。
	請勿將本產品存放在兒童和嬰幼兒的接觸範圍之內。此外還請勿讓他們單獨接觸或操作本產品。 否則可能導致事故、觸電、受傷。
	請勿在以下場所使用或保管： • 室外或窗邊等陽光直射的地方 • 強光照射的地方 • 高溫場所 • 有油煙或蒸汽的場所 • 容易濺水或浴室等潮濕環境中 否則可能會導致火災、觸電、變形或故障。

 警告	
	請勿沾水或灑水。濕手請勿使用本產品。 否則可能會導致短路或觸電。
	在家中使用電子醫療機械時，請勿使用本產品。 否則磁場可能導致家用電子治療儀器誤動作。
	請勿使連接頭短路，且不可接觸金屬片或鉛筆芯等導電性異物。 否則可能導致火災、故障。
	請勿在 USB 充電線有損傷或連接點鬆動時使用本產品。 否則可能導致觸電、起火或短路。
	請勿損壞、加工充電線，請勿用力彎曲、拉拔或扭曲充電線。 另外，請勿在充電線上面放置重物、擠壓充電線或靠近高溫處。 否則可能導致充電線破損，從而引起火災、觸電。
	充電時請使用產品配套的專用充電線。 否則可能引起異常發熱，從而導致引火或短路。
	使用電腦等 USB 接口充電時，請勿連接輸出電壓為 5V 以外的機器。 否則可能導致起火或觸電。
	請勿將充電線纏繞在機身上，請勿將充電線捆紮使用。 否則可能導致 USB 線斷線、火災、觸電。
	以下情況請勿使用： <ul style="list-style-type: none"> • USB 充電線或本體異常變熱或冒煙 • USB 充電線有較深的劃痕 • USB 充電線有燒焦味或臭味 否則可能導致火災、故障。

 
 
⚠ 警告	
	打雷時請勿接觸 USB 充電線。 否則可能導致打雷觸電。
	請勿在 USB 充電線扭曲時使用。 否則可能因短路導致冒火花。
	請勿在浴室等有水或潮濕的地方使用。請絕對不可用水清洗本產品。 否則可能導致觸電、火災或短路。
	請務必使用額定輸出為 5V=2A 的充電頭。請按說明書要求正確使用充電頭。否 可能 致火災或觸電。
	使用心髒起搏器等醫療電子設備的人員，請在使用前諮詢醫生。 否則磁場可能導致醫療電子設備誤動作。
	USB 充電線必須留用余量使用。 如果 USB 充電線被拉伸或反復彎曲，可能導致短路。
	請保持 USB 充電線清潔。連接頭有灰塵時請擦拭幹淨。 否則可能造成短路、火災。
	不使用時請務必切斷電源，並將電源插頭從插座上拔出。 否則可能導致受傷、燒傷，或由于絕緣老化而引起觸電或漏電火災。
⚠ 注意	
	請勿摔落、撞擊本產品。 否則可能導致觸電、起火、故障、損壞。
	請勿在 USB 充電線與連接產品時搬運或移動。 否則可能導致損壞。

⚠ 注意	
	保養時，請勿使用揮發油、稀釋劑、酒精、煤油等溶劑或藥品類、拋光粉等。 否則可能導致開裂、觸電、起火。
	使用電腦等 USB 接口充電時，請勿與外接硬盤等大功率機器同時使用。也請勿振動或撞擊本產品。 否則可能損壞電腦等設備，導致數據丟失或故障。
	請勿放置在不穩定的場所。 否則可能導致故障、損壞、受傷。
	請勿靠近或放置在以下受磁場影響的設備附近： <ul style="list-style-type: none"> • 電腦、手機、電視、音響、微波爐、鐘表等精密儀器 • 信用卡等受磁力卡片 • 盒式磁帶、軟盤等依靠磁場的產品 否則可能受磁場影響，導致儀器誤動作或數據丟失。
	請勿用濕手插拔 USB 充電線 否則可能因觸電、短路導致起火。
	拔出 USB 充電線時，請務必握住插口前端。 否則可能因觸電、短路導致起火。
	調整角度時，請留意勿夾到手指。 否則可能導致受傷。
	請務必在 5℃~35℃ 的環境下充電。 否則可能導致電池起火、發燙、破裂
	產品上沾有化妝品或美發產品時，請做好清潔保養。 否則可能導致產品劣化。
	請勿在浴室等有水或潮濕的地方使用。 否則可能因絕緣劣化導致觸電。

鋰電池的處理方法

 警告	
	如電解液泄露並接觸到眼睛，請立即用自來水等清水徹底沖洗並接受醫生治療。 否則可能導致眼部障礙。
	禁止以下操作： <ul style="list-style-type: none">• 請勿擅自拆解、改造。• 請勿對其加熱或將其投入火中。• 請勿沾水或打濕。• 請勿將其用于其它產品。• 請勿跌落、撞擊、刮傷。• 連接處請勿擅自用鐵絲等金屬連接。 否則可能導致液體泄露、起火、短路、破裂。
	如從鋰電池上泄露的液體接觸皮膚或衣服上，請立即用水沖洗。 否則可能導致皮膚過敏。
	超過指定時間未完成充電時，請停止充電。 否則可能導致過充電、液體泄露、發燙。
	請勿刮傷、撕掉電池外皮。 會導致電池起火、短路、發燙、破裂。
 注意	
	請務必在 5°C~35°C 的環境下充電。 否則可能導致電池起火、發燙、破裂。
	請勿在高溫環境（如直射陽光下或其它熱源附近、烈日下的車廂等）使用或放置。 否則會導致電池發燙、起火或破裂。

產品簡介

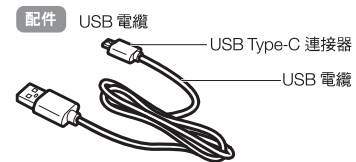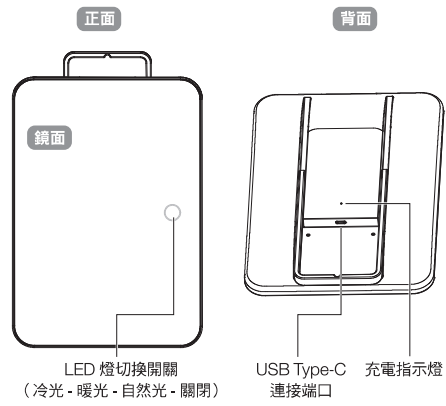

功能操作

鏡面角度調整

通過調整背面支撐支架，可以調整鏡面角度。

- 鏡面設計角度：0°、60°、90°、120°、180°。
- 調整角度時，請留意不要夾到手指。

電源操作與燈光切換

- ① 按住電源開關 0.8s，產品開機且 " 冷光 " 燈亮起。
- ② 短按 2 次切換成 " 暖光 "。
- ③ 短按 3 次切換成 " 自然光 "。
- ④ 短按 4 次關機。關機過程中燈光逐漸變暗，至電源關閉約 2 秒時間。

注意：

- 觸碰開關時用手輕觸鏡面即可，請勿大力按壓。
- 每次短按，請間隔 2 秒以上，否則可能導致誤動作。

燈光亮度調節

- ① LED 燈亮起時，長按電源開關 2 秒以上，燈光將逐漸變暗，但不熄滅。
- ② 停止長按後，再重複以上操作，燈光將逐漸變亮。

電量提示功能

當工作電壓低至約 3.1V 時，燈光會連續閃動 5 次後自動關機

記憶功能

在電源不斷電的情況下，每次短按開關鍵開燈時的亮度會被記憶，于下次短按開關鍵開燈時，停在上次記憶的亮度。

產品充電

- 首次使用本產品或長時間閒置後，請務必對本產品進行充電。如電池長時間不使用，電壓可能會下降。
 - 充滿電預計需要 4.5 個小時。
 - 產品在充電時，不建議邊充電邊使用，否則會直接影響產品電池蓄電量及有可能燒壞元器件或可能導致電池損壞以及影響電池的使用壽命。
 - 若長期不使用本產品，建議二個月充電一次，長時間不使用、不充電，有可能導致電池損壞或者影響電池的使用壽命。
- ①將產品放在平整穩定的台面上，背面朝上。
 - ②連接市售 AC 適配器（額定輸出電壓為 5V=2A）和 USB 充電線，將 USB 充電線的 Type-C 端口插入本體背面連接端口。
 - ③將 AC 適配器插入電源插座。
 - 充電時，背面充電指示燈會亮紅燈。
 - 充滿電後，背面充電提示燈轉白燈亮。
 - 充電過程中，產品和 AC 適配器略微發熱屬於正常現象。
 - ④充電完成後，請關閉電源，並將 AC 適配器從電源插座上拔出。充滿電後，產品背面充電指示燈轉為白色。先將 AC 適配器拔出後，再將 USB 充電線從產品上拔出。

保養和清潔方法

- 在清潔之前，請務必關閉電源，並將充電線拔下。

主體

輕微髒污可用柔軟的幹布擦拭。

若髒污嚴重，可用布沾上稀釋了的中性洗滌劑擦拭，然後再用柔軟的幹布擦拭掉剩余的水或洗滌劑。

鏡面

當鏡面變暗或髒污時，可用柔軟的幹布擦拭。

若鏡面附着化妝品或指紋，可用布沾上稀釋了的中性洗滌劑擦拭，然後再用柔軟的幹布擦拭掉剩余的水或洗滌劑。

注意：

- 本產品不可用水沖洗。
- 本產品不可使用揮發油、稀釋劑、酒精、煤油等溶劑或藥品類、拋光粉等。

保管方法

請置于嬰幼兒接觸不到的地方，並在幹燥且灰塵較少處存放。

注意：

- 請勿存放在容易濺水或浴室等潮濕環境中。
- 請勿暴曬。
- 請勿沾上化妝品或美發劑以免腐蝕產品。

異常情況時

如果遇到開機無法運作的情況，請按以下內容仔細檢查產品。

故障現象	可能的原因	處理方式
LED 燈光弱	沒有充滿電。	請充電。
	使用了調光功能調暗了燈光。	請長按開關調整亮度。
LED 不亮燈	充電線的 Type-C 接頭與本體連接鬆動。	請重新連接到位。
	充電線的 USB 接頭與 AC 適配器連接鬆動。	請重新連接到位。
	AC 適配器與插座連接鬆動。	請重新連接到位。
	電量耗盡。	請充電後使用。
LED 燈閃	低電壓提示，非異常現象。	請充電後使用。

產品規格

型號	MS-CMW1CN
額定輸入電壓	5V = 2A
產品尺寸(長×寬×高)	250×175×24mm
產品重量	約 420g
鋰電池容量	2000mAh
充電時間	約 4.5 小時
配件	使用說明書、60cm Type-C USB 充電線 ×1
使用時間	約 3 小時(最亮) ~9 小時(最暗)



“僅適用於海拔 2000m 以下地區安全使用”



“僅適用於非熱帶氣候條件下安全使用”

委製商

無印良品(上海)商業有限公司

地址：上海市靜安區南京西路1601號35樓3501-3508室

電話：021-63756677

www.muji.com

Specifications

Model	MS-CMW1CN
Rated Voltage	5V $\overline{=}$ 2A
Dimensions (Length×Width×Height)	250×175×24mm
Weight	Approx. 420g
Lithium Battery Capacity	2000mAh
Charging Time	Approx. 4.5 hours
Accessories	User Manual, 60cm Type-C USB charging cable ×1
Usage time	Approx. 3 hours (brightest) ~9 hours (darkest)



**“Only suitable for using safely in regions
up to 2000m above sea level”**



**“Only suitable for using safely in non-
tropical climates”**

Manufactured by MUJI (SHANGHAI) COMPANY LIMITED
Address: Room 3501-3508, 35th Floor, No. 1601 Nanjing
West Road, Jing'an District, Shanghai, China
Tel: +86-21-6375-6677
www.muji.com

Troubleshooting

If the product does not operate after turns on, please check it according to the table below.

Malfunction	Possible Cause	Solution
Weak LED light	Not fully charged.	Charge the product.
	The light is dimmed by the dimmer function.	Press and hold the switch to adjust brightness.
LED lights do not light up	Loose connection between the Type-C connector and the main body.	Reconnect properly.
	Loose connection between the USB connector of the charging cable and the AC adapter.	Reconnect properly.
	Loose connection between the AC adapter and the socket.	Reconnect properly.
	The battery ran out.	Recharge before use.
Flickering LED lights	Low-voltage indication. This is not an abnormal phenomenon.	Recharge before use.

dry cloth.

CAUTION:

- This product cannot be rinsed with water.
- This product cannot be cleaned with solvents such as volatile oils, diluents, alcohol and kerosene, pharmaceuticals, polishing powders, etc.

Storage

Keep the product out of reach of infants and children and store it in a dry, less dusty area.

CAUTION:

- Do not store in places where are prone to splashes or in humid environment such as bathrooms.
- Do not expose to sunlight.
- Do not get cosmetics or hairdressers on the product to avoid corrosion.

- ③ Plug the AC adapter into a power outlet.
- When charging, the charging indicator on the back lights up red.
 - When fully charged, the charging indicator on the back turns white.
 - During charging, it is normal for the product and the AC adapter to heat up slightly.
- ④ When charging is completed, turn off the power and unplug the AC adapter from the power outlet.
- After fully charged, the charging indicator on the back of the product turns white.
- Unplug the AC adapter first, and then unplug the USB charging cable from the product.

Maintenance and Cleaning

- Always turn off the power and unplug the USB charging cable before cleaning.

Main Body

Minor stains can be wiped with a soft, dry cloth.

For severe contaminants, wipe with a cloth moistened using diluted neutral detergent, and then wipe off any remaining water or detergent with a soft, dry cloth.

The Mirror

When the mirror gets dark or dirty, wipe with a soft, dry cloth.

For cosmetics or fingerprints attaching on the mirror, wipe with a cloth moistened with diluted neutral detergent, and then wipe off any remaining water or detergent with a soft,

Low-Battery Alert Function

When the operating voltage is down to approx. 3.1V, the product will turn off automatically after the light flashes for 5 successive times.

Memory Function

With uninterrupted power supply, the light brightness will be memorized when turning off the lights by pressing the switch, and will be restored when turning on the lights by pressing the switch the next time.

Charging the Product

- Be sure to charge the product after it is used for the first time or not in use for an extended period. The battery voltage may reduce if it is not used for a long time.
- It may take 4.5 hours to fully charge the battery.
- It is not recommended to use and charge the product at the same time. Doing so may directly affect battery capacity and may burn out components or result in battery damage or reduced battery lifetime.
- It is recommended to charge in every two months if the product is not in use for an extended period. Not using and charging it for a long time may result in battery damage or reduced battery lifetime.

① Place the product on an even and stable platform.

② Connect the commercially available AC adapter (with 5V=2A rated output voltage) to the USB charging cable, and plug the Type-C port of the cable into the connection port on the back of the product body.

Assembly Instructions

Adjusting Mirror Angle

The angle of the mirror can be adjusted with the support bracket on the back.

- Angles available: 0° , 60° , 90° , 120° , and 180° .
- Mind your fingers to avoid being pinched while adjusting the angle.

Switching Power and Lights

- ① Press and hold the power switch for 0.8s to turn the product on with "cold light" .
- ② Press twice to switch to "warm light" .
- ③ Press 3 times to switch to "natural light" .
- ④ Press 4 times to turn the product OFF. The light will gradually dim till the power shuts off in approximately 2 seconds.


CAUTION:

- Gently touch the switch with hand, do not press it excessively.
- Wait for more than 2 seconds before pressing it again. Failure to do so may result in maloperation.

Adjusting Light Brightness

- ① When the LED lights are on, press and hold the power switch for more than 2 seconds, the light will dim gradually but will not go off.
- ② After stop holding the switch, repeat the above-described operation and the light will gradually grow brighter.

Product Overview

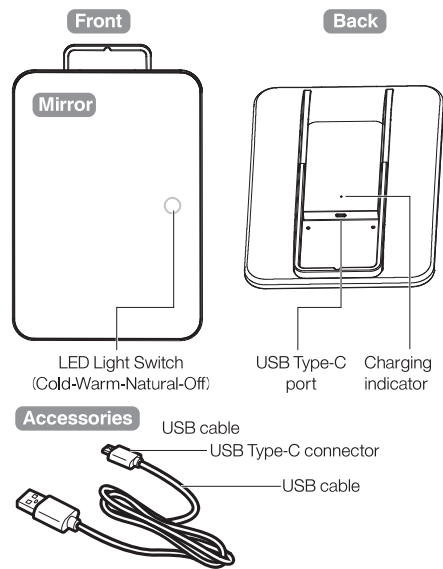











⚠ WARNING	
!	If the liquid leaked from the lithium battery comes into contact with your skin or clothes, rinse immediately with water. Failure to do so may result in skin allergy.
!	Stop charging if it is not completed after the specified time. Failure to do so may result in overcharge, liquid leakage or overheat.
!	Do not scratch or tear off the outer cover of the battery. Doing so may cause the battery to catch fire, short-circuit, overheat, or rupture.
⚠ CAUTION	
!	Always charge between 5 ° C and 35 ° C. Failure to do so may cause the battery to catch fire, heat or rupture.
⊘	Do not use or position the battery in an environment with high temperature (e.g., under direct sunlight or near other heat sources, or in a car under scorching sun). Doing so may cause the battery to overheat, catch fire or rupture.





⚠ CAUTION	
!	Always charge between 5 ° C and 35 ° C. Failure to do so may cause the battery to catch fire, heat or rupture.
!	Clean and maintain the product properly when it is stained with cosmetics or hair products. Failure to do so may deteriorate the product.
⊘	Do not use this product in bathrooms or where there is water or humid. Doing so may result in electric shock due to deteriorated insulation.








Handling Lithium Battery







⚠ WARNING	
!	If the electrolyte leaks and comes into contact with eyes, immediately rinse thoroughly with clean water such as tap water and receive medical attention. Failure to do so may result in eye disorders.
⊘	The following operations are prohibited: <ul style="list-style-type: none"> • Disassemble or remodel. • Heating or putting the battery into fire. • Exposing the battery to water or wetting it. • Using the battery on other products. • Dropping, hitting or stretching the battery. • Using iron wire or other metal for connection. Doing so may result in liquid leakage, fire, short circuit or rupture.







⚠ CAUTION	
	When charging the product using the USB port on computer or other devices, do not use external hard disk or other high-power machines at the same time. Do not vibrate or hit the product during charging. Doing so may damage the computer or other devices used, which may result in data loss or malfunction.
	Do not position this product in an unstable location. Doing so may result in malfunction, damage or injury.
	Do not position this product near the following devices which are subject to the influence of magnetic field: <ul style="list-style-type: none"> • Precision instruments such as computers, cell phones, televisions, stereos, microwave ovens and clocks • Magnetic cards such as credit card • Cassette tapes, floppy disks and other products that are dependent on magnetic field Otherwise, the product may be affected by magnetic field, resulting in maloperation or data loss.
	Do not plug or unplug the USB charging cable with wet hand. Doing so may result in fire because of electric shock or short circuit.
	Always hold the front of the plug when unplugging the USB charging cable. Failure to do so may result in fire because of electric shock or short circuit.
	When adjusting the angle, please mind your fingers to avoid being pinched. Failure to do so may result in injury.

 WARNING	
	The USB charging cable must be used with a spare capacity. Stretching or repeatedly bending the USB charging cable may result in short circuit.
	Keep the USB charging cable clean. Wipe the connector when there is dust. Failure to do so may result in short circuit or fire.
	Always disconnect power supply and unplug the product from the socket when it is not in use. Failure to do so may result in injury, burns, or electric shock or electrical fire due to aged insulation.

 CAUTION	
	Do not drop or hit this product. Doing so may result in electric shock, fire, malfunction or damage.
	Do not handle or move this product when it is connected to the USB charging cable. Doing so may damage the product.
	Do not use solvents such as volatile oils, diluent, alcohol and kerosene, pharmaceuticals or polishing powders for maintenance. Doing so may result in cracks, electric shock or fire.

 WARNING	
	<p>Do not use the product in the following cases:</p> <ul style="list-style-type: none"> • Abnormal heat or smoke from the USB charging cable or the product • Deep scratches on the USB charging cable • Burning or other unpleasant odors from the USB charging cable <p>Otherwise, it may result in fire or malfunction.</p>
	<p>Do not touch the USB charging cable during lightning storms. Doing so may result in lightning-induced electric shock.</p>
	<p>Do not use the USB charging cable when it is twisted. Doing so may result in sparks due to short circuit.</p>
	<p>Do not use this product in bathrooms or where there is water or humid. Never clean it with water. Doing so may result in electric shock, fire or short circuit.</p>
	<p>Always use a 5V==2A power adapter and use it properly as specified in the user guide. Failure to do so may result in fire or electric shock.</p>
	<p>Persons using electronic medical devices such as pacemakers should consult a doctor before using this product. Otherwise, the magnetic field may result in malfunction of the electronic medical device.</p>


 WARNING	
	Do not use this product when the USB charging cable is damaged or loosely connected. Doing so may result in electric shock, fire or short circuit.
	Do not damage or process the charging cable, or bend, pull or twist it excessively. Also, do not place it under heavy objects, squeeze it or position it near heat sources. Doing so may result in charging cable damage which may subsequently cause fire or electric shock.
	Use the charging cable provided with the product for charging. Failure to do so may result in abnormal heating which may subsequently cause fire or short circuit.
	When charging the product using USB ports on computer or other devices, only connect it to devices with 5V output voltage. Otherwise, it may result in fire or electric shock.
	Do not warp the charging cable around the product body or use it in a bundle. Doing so may break the USB cable or result in fire or electric shock.


 WARNING	
	Do not leave this product within reach of children and infants. In addition, do not let them touch or operate it alone. Doing so may result in accident, electric shock, or injury.
	Do not use or store this product in the following places: <ul style="list-style-type: none"> • Outdoors, near windows or other places exposed to direct sunlight • Places exposed to intense lighting • Places with high temperature • Places where there are fumes or vapors • Humid environments such as bathrooms or where water is easily splashed Doing so may result in fire, electric shock, deformation or malfunction.
	Do not expose this product to drips or splashes. Do not use it with wet hands. Doing so may result in short circuit or electric shock.
	Do not use this product while using electronic medical device at home. Otherwise, the magnetic field may cause malfunction of the at-home electric medical device.
	Do not short-circuit the connector or have it come into contact with conductive foreign objects such as metal sheets or pencil lead. Doing so may result in fire or malfunction.

Safety Precautions The instructions must be followed.

This User Guide contains important information for safe use of this product to prevent harm to users and other individuals as well as damage to property. Please note the following contents (indications and graphic symbols) before reading the main contents of this guide and follow the given instructions.


- Explanations of indications



 WARNING	Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury” to the user.
--	--

 CAUTION	Indicates a hazard with a level of risk which, if not avoided, could result in injury to the user or property damage.
--	---

- Explanation of Graphic Symbols

	indicates what is “prohibited”
---	--------------------------------

	indicates what “may result in injury to the user or property damage”
---	--

 WARNING	
	Do not remodel this product. Only repair technicians are allowed to disassemble or repair it. Please consult the staff at the store from which you purchased this product for repair. Otherwise, it may result in fire, electric shock or injury.

MUJI 無印良品

LED Makeup Mirror

Model: MS-CMW1CN

User Manual

- Thank you for your purchase.
- Please read carefully and fully understand this User Guide before use.
- Please store this User Guide in an easily accessible place for future reference.

User Guide Serial Number: MS111 · 23F01

Date of issuance: August 2023

Table of Contents	Pages
Safety Precautions	1~7
Handling Lithium Battery.....	7~8
Product Overview.....	9
Assembly Instructions.....	10~12
Maintenance and Cleaning.....	12~13
Troubleshooting.....	14
Specifications.....	15