



150320 / 1K1500



150310 / 2K2500

ENGLISH

Table of contents

1. Safety 16
1.1 Safety instructions 16
1.2 Key to symbols 18
1.3 Hazard sources 18
1.4 Proper use 20

2. General information 21
2.1 Liability and Warrantees 21
2.2 Copyright protection 21
2.3 Declaration of conformity 21

3. Transport, packaging and storage 22
3.1 Delivery check 22
3.2 Packaging 22
3.3 Storage 22

4. Technical data 23
4.2 Technical specification 25

5. Installation and operation 25
5.1 Installation 25
5.2 Operation 26

6. Cleaning 27

7. Waste disposal 28

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- This device may only be operated in technically proper and safe condition.
- The device can be used by children **8 years and up**, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers.
- **Children** should not play with the device.
- Cleaning and **maintenance cannot be performed by children** younger than 8 years old and must be done under supervision.
- **Children under the age of 8 years old** must be kept away from the device and its power cord.

- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device.
Do not attempt to repair the device yourself.
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.
- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- The device is not adapted for use with an external timer or remote control.
- **Never** leave the device unattended when in use.
- Do not move or tilt the device when in operation.
- Only use the device indoors.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Hazard sources



DANGER!

Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Do not use the machine in case of incorrect operation, damages or dropping on the floor.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable. Always use the device handles.

- In any case do not open the device housing. In case of electrical or mechanical modifications the electric shock hazard will occur.
- Never immerse the device or the plug in water or other fluids.
- Do not use any acid agents and make sure no water ingresses the device.
- Never operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



DANGER!

Suffocation hazard!

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements.



HOT SURFACE!

Burn hazard!

To avoid the hazard results please follow the safety instructions below.

- During the operation do not touch hot surfaces of the countertop electric hob or cookwar with bare hands!
- Also after switching off, the surface of the countertop electric hob and cookware are hot for a longer time. Allow the the countertop electric hob to cool down before cleaning it or moving it to another place.
- **Never** move the countertop electric hob during cooking or with hot dishes on the hot plate.



CAUTION!

To avoid damage to the electric hot plate, follow the instructions below:

- Never use abrasive cleaning agents or powders that could scratch the surface.

- If water gets on the surface of the countertop electric hob, wipe it off immediately.
- To ensure a long product life, do not allow any objects to be dropped on the countertop electric hob.

1.4 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

The device is not designed for continuous operation in the industrial applications.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in similar business areas;
- in agricultural farms;
- by guests of hotels, motels and other typical places of accomodation;
- in Bed and Breakfast facilities.

The **countertop electric hob** is designed only for **preparing and heating** food while using the appropriate cookware.

Do not use the **countertop electric hob** for:

- heating rooms;
- heating and warming flammable, harmful, volatile or similar liquids or materials.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.


Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.

4. Technical data


4.1 Overview of parts

Countertop electric hob 150320 / 1K1500

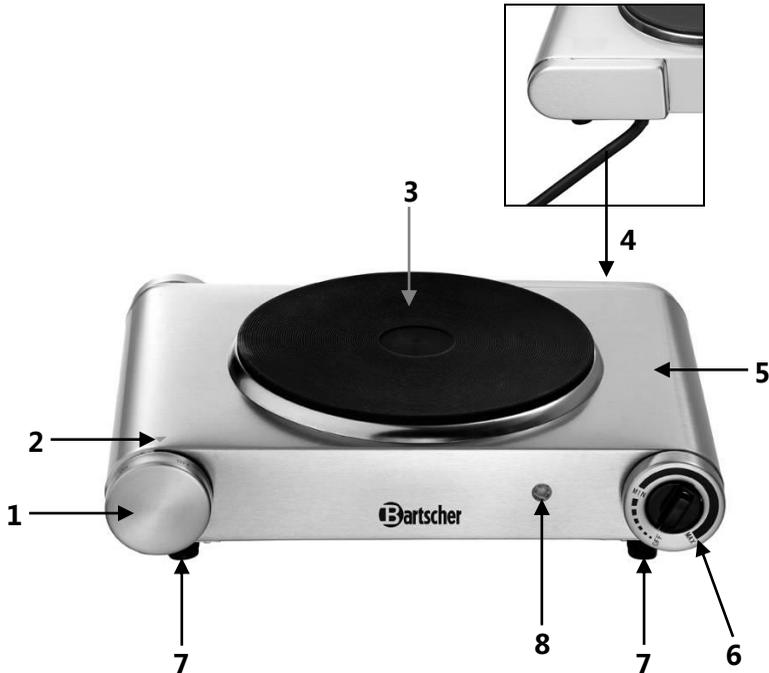

- 1 ON-/OFF knob
- 2 „ON“ position
- 3 Hot plate
- 4 Power cable
- 5 Housing
- 6 Temperature regulator
- 7 Adjustable feet (4)
- 8 Hot plate control light (orange)

Countertop electric hob 150310 / 2K2500

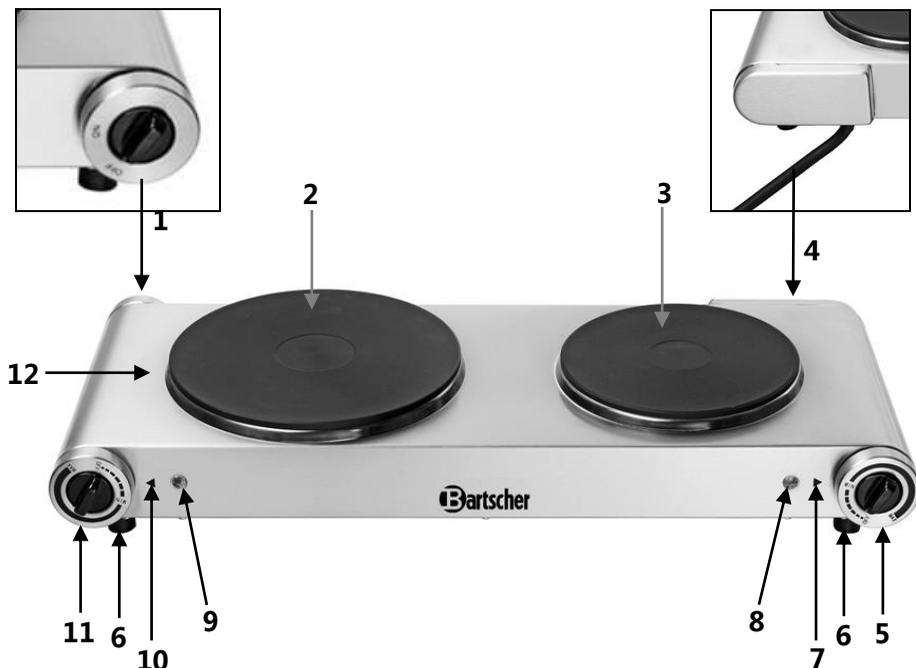

- 1** ON-/OFF knob
- 2** Left hot plate
- 3** Right hot plate
- 4** Power cable
- 5** Right plate temperature regulator
- 6** Adjustable feet (4)
- 7** Mark for setting the temperature of right plate
- 8** Right hot plate control light (orange)
- 9** Left hot plate control light (orange)
- 10** Mark for setting the temperature of left plate
- 11** Left plate temperature regulator
- 12** Housing

4.2 Technical specification

Name	Countertop electric hob 1K1500	Countertop electric hob 2K2500
Code no.:	150320	150310
Material:	stainless steel	stainless steel
Power:	1.5 kW / 230 V / 50 Hz	2.5 kW / 230 V / 50 Hz
Temperature control:	infinitely variable	infinitely variable
Hot plate power:	1500 W	1000 W / 1500 W
Hot plate diameter:	185 mm	155 mm / 190 mm
Dimensions:	W 305 x D 245 x H 85 mm	W 535 x D 225 x H 90 mm
Weight:	2.1 kg	4 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all packing material.



CAUTION!

Never remove the rating plate and any warning signs from the device.

- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- **Never** place the device at the edge of a table to avoid accidents.
- **Never** place the device in humid or wet environment.
- **Never** place the device on the flammable surfaces.
- Place the device so that the plug is easily accessible so as to quickly disconnect the device if the need arises.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

- Before the first use, clean the device according to the instructions included in section 6 „Cleaning“.
- Turn the **ON/OFF** knob to „OFF“ position.
- Connect the countertop electric hob to a single-phase socket.
- Place the food in a suitable cookware on the hot plate.



NOTE!

Do not use unstable dishes that may easily tip over.

Use dishes with a flat bottom only, in order to ensure total contact with the hot plate, to ensure maximum use of the generated heat.

- Turn the **ON/OFF** knob to the „ON“ position.



- Set the desired temperature for a selected hot plate.
- By turning the temperature regulator right you can regulate the temperature in an infinitely variable way within the range from „MIN“ to „MAX“.
- The orange control light comes on and goes off when the desired temperature is reached. When the temperature drops, the thermostat is activated and the hot plate starts heating again. The orange control light comes on again.



HOT SURFACE! Risk of burns!

Do not touch the hot surface of the countertop electric hob nor any cookware with bare hands. Always use protective hands or pot holders!

- If the device is no longer used, set the temperature regulator and **ON/OFF** knob in „**OFF**“ position and disconnect it from the power supply (pull the plug from the socket!).
 - ❖ The device is equipped with **protection against overheating**. In the event of overheating, the protection mechanism comes on and the device is turned off. If this occurs, remove the device's plug from its socket and leave it to cool. The device can be reconnected after it has cooled, as described above.

6. Cleaning



WARNING!

**Disconnect the unit from the power supply (unplug!) before cleaning.
Do not use pressurized water just for cleaning!
Protect the device from the water penetration.**

- Clean the countertop electric hob regularly.
- Wipe the housing of the electric hot-plate and hot plates with a damp cloth. A mild cleaning agent may be used for more stubborn dirt.
- **Never** use harsh or abrasive cleaning agents or sprays.
- Do not use steel wool for cleaning. It is possible that small pieces of the wool may come into contact with electrically charged elements of the countertop electric hob and create a risk of electrocution.
- **Never** use flammable substances for cleaning (spirit, etc.) as there is an increased risk of fire or explosion when the device is switched on again.
- After cleaning, dry and polish the surface using a soft, dry cloth.

Storage of the countertop electric hob

- If the countertop electric hob is to remain unused for a longer time, clean it thoroughly as described above and store in a dry, clean place protected against freezing and sunlight and unaccessible to children.
- Do not place heavy objects on the countertop electric hob.

7. Waste disposal

Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.