




refrigeration range

User Manual

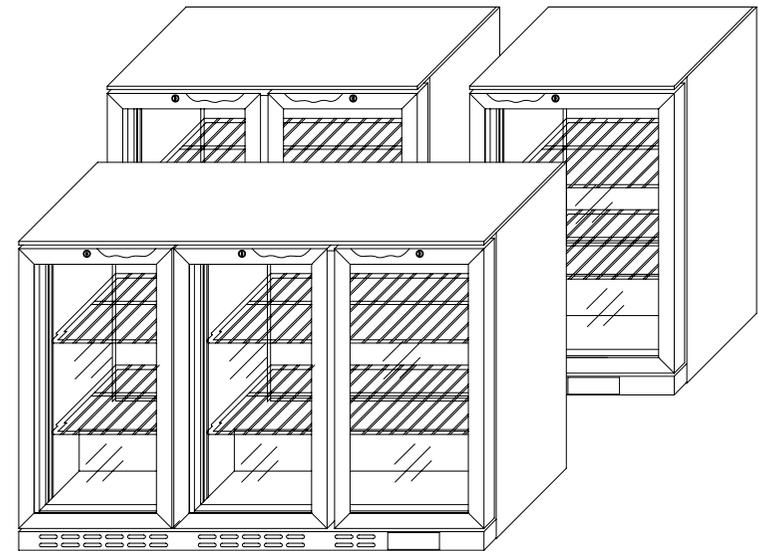

To ensure safe operation, please read this instruction manual thoroughly before use.

Welcome to your new chiller

Thank you for buying this commercial chiller. It has been designed and manufactured for many years of trouble-free service.

Operation is very simple, but please take a few minutes to read this booklet. It contains safety information, and tips to ensure you receive from your chiller.



WARNING: RISK OF ELECTRICAL SHOCK HAZARD

This unit must be earthed.

If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard. Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the chiller.

DISPOSAL OF OLD APPLIANCES

BE SURE TO MAKE ANY LOCKS UNUSABLE, REMOVE ANY DOOR(S) AND DISCARD SEPARATELY.

WARNING-CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY DISPOSAL PROCEDURES.

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

CLEANING

1. UNPLUG your chiller and remove any stock to a suitable back-up chiller.

2. Wash the inner compartment with warm water and neutral detergent. DO NOT allow the control panel, cables or plug to get wet.

NEVER use corrosive detergents, wire brushes, or abrasive scourers to clean your chiller.

NEVER use metal or sharp implements to remove debris.

3. Dry all surface thoroughly.

4. To ensure trouble-free operation the condenser should be cleaned every three months where appropriate using a vacuum hose. The condenser is located behind lower grill of the cabinet. In exceptionally dusty locations the condenser should be cleaned more often.

5. Use mild soapy water to clean the gasket and seals.

REPLACING LAMPS

1 Unplug the power plug.

2. Remove the screws on both end of the light cover, take down the lamp cover, pull out the wires, then take away the lamp.

3. Install the new lamp, connect the wires, place the lamp cover and fasten it.

4.Caution: If the lamp is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

PLUG IN

Once plugged in the display will show the temperature inside the chiller and the compressor will run late on (the indicator light of cooling will on at the same time). This temperature is the actual temperature recorded by the probes inside the chiller and as the chiller cools to the set point so the number on the display will descend accordingly.

OPERATING FRONT PANEL DISPLAY

Set point temperature press  button for one second the current set point will flash display, then press   button or   button to change the set point, select the desired target and then press  button to confirm the new value.

Stop or start the compressor

If you want the compressor stop working you can press   button for three seconds. When the front panel display show **OF** and the current temperature alternately, which means the compressor has stopped working. If you need the compressor to re-start, press   button for three seconds again, the compressor will run normally.

Defrosting

- The system will defrost periodically automatically, this is to stop the build of ice on the evaporator which would reduce cooling performance. Whilst on defrosting the compressor will stop working and the temperature inside the chiller will rise slowly. After about 30 minutes the defrost period is complete the compressor will work as normal.
- In some extreme cases ,this may occasionally occur during periods of high climatic humidity but may also be due to excessively frequent or extended door openings, moist items being placed in the chamber, or too low an operating temperature. A significant build up of ice may impair the performance of the product and a manual defrost should be performed. To start defrosting, press   button for 3 seconds. If you want stop defrosting , press   button for 3 seconds again.

Please note: the refrigeration system contains gases and refrigerants which require specialist waste disposal. The valuable materials in a refrigerator can be recycled. Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions.

Please ensure the pipe work of your refrigerator is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal.

DISPOSAL OF PACKAGING

Do not allow children to play the packaging, and destroy plastic bags safely.

The cardboard may be broken or cut into smaller pieces and given to a waste paper disposal service. The wrapping foil is made of polyethylene. The polyethylene pads and stuffing contain no fluorochloric hydrocarbons.

All these valuable materials may be taken to a waste collecting depot and used again after adequate recycling. Consult your local authority for the name and address of the waste paper disposal services nearest to you.

IMPORTANT SAFETY INSTRUCTIONS

Before switching on your chiller for the first time, read the information in this user manual carefully. The manual contains important observations relating to the assembly, operation and maintenance of the appliance.

Please keep this booklet in a safe place for future reference. If you ever sell your chiller, hand this user manual to the new owner.

The manufacture does not accept responsibility for any damages that may arise due to non-observation of these instructions. The user is liable for any material damage or bodily injury (product liability) cause by using the refrigerator carelessly or failing to follow instructions.

- Do not use damaged appliances. If you are in any doubt, consult an engineer.
- Connection and installation of your chiller are to be carried out in strict compliance with the relative instructions in this manual.
- For safety, the appliance must be properly earthed in accordance with specifications
- Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If the refrigerant comes into contact with the eyes, it may cause serious eye injury.
- Always remember to unplug the appliance before cleaning. Never unplug your appliance by pulling on the power cable. Always grip plug firmly and pull straight out from the socket. Always check that the plug and cable are undamaged.
- All repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous. Never try to repair the refrigerator yourself.
- Should the cover of the interior light or fan fall off or break, switch the refrigerator off immediately and replace the cover.
- Ensure your chosen location has a flat and stable surface. The unit may be leveled by turning either or both of the adjustable feet in the front corners. Check the unit is level using a spirit level.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- Be sure to leave at least 60mm of distance between the back,side of the chiller and walls for ventilation
- The instructions concerning persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge and children playing with the appliance are not required.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

- Do not obstruct or cover the ventilation aperture.
- Do not allow children to play with the appliance, or to sit on it or to hang onto the door.
- Make sure there is a suitable power Outlet (220-240V/50Hz, 13 amps outlet) with proper grounding to power the refrigerator.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowlerige, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

BEFORE USING FOR THE FIRST TIME

Do not position this appliance with its rear panel directly against a wall. For good circulation and operating efficiency, the ventilation grilles must never be blocked.

Remove all packaging and place the chiller on a stable, secure flat surface. Position the chiller away from heat sources, where the unit is well-ventilated and protected from moisture, or extremes of heat or cold. The refrigerator may not function properly if the temperature rises above +30°C (standard models). The refrigerator meets the operating conditions according to climate class 4.

A 13A fuse is fitted. Never replace with a fuse rated higher than this.

NEVER USE AN EXTENSION LEAD. If the mains cable will not reach the nearest socket, either rearrange your store layout or ask a qualified electrician to fit a new socket.

If power is cut off, wait for at least 5 minutes before plugging the unit in again to avoid damaging the compressor.

Do not place combustible, explosive or volatile articles, corrosive acid or alkali, or liquid in glass containers into the chiller. Always exercise caution if adjusting the temperature.

The maximum load for a shelf is 30Kg.