FORCE 5K & 10K

INSTRUCTION MANUAL


VERSION 3.8



READ CAREFULLY BEFORE OPERATION

IMPROPER USE OF THIS DOLLY CAN CAUSE DAMAGE TO YOUR TRAILER, PERSONAL INJURY OR EVEN DEATH.



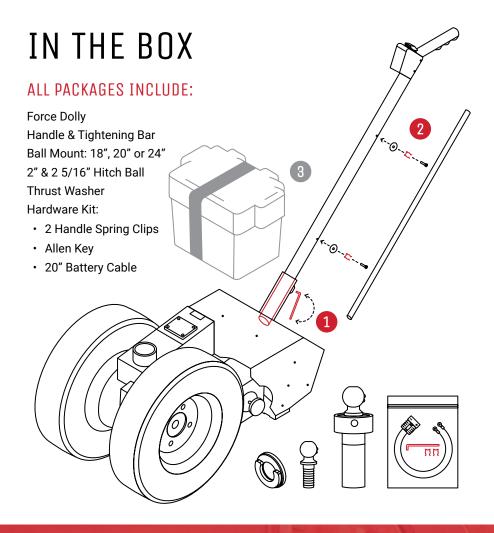

ASSEMBLY

Insert the Handle into the Dolly and tighten both Allen Screws to secure it.

Connect the two Handle Control Cables. Make sure the Arrows on the Cable Heads are aligned. Twist the plastic nut over the connection.

Install the Spring Clips onto the Handle to store the Tightening Bar.

OPTIONAL: MOUNT BATTERY BOX WITH PROVIDED STRAP.



VOLT METER

Digital Meter that measures and displays Power Level of Battery.

FREEWHEEL KNOB

Engages or Disengages Motor to move the Dolly With or Without Power.

BATTERY CHARGER (B2+B3)

Activates when the Dolly is plugged into a Wall Socket. Stops charging automatically when charger is full.


SMART BRAKE (B2+B3)

 
7-Way Power Plug that Controls the Trailer's Electric or Surge Brakes.

OPTIONAL PARTS

Telescopic Frame Adapter 1 7/8" or 50mm Hitch Ball Pintle Hitch Adapter 80" Battery Cable Smart Brake U1 Battery Kit*



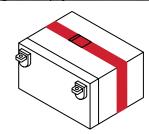






ORDER ONLINE OR CALL TOLL-FREE:

1-888-926-5517 EXT. 1 OR 4

PARKIT360.COM





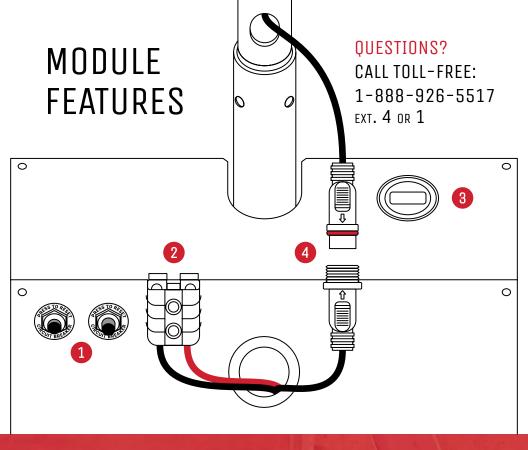

1 CIRCUIT BREAKERS

Prevents Motors and Smart Brake from overheating. If a breaker trips, the Reset Button will extend up to 1/2" from the panel.

Allow 30 seconds for the system to cool down, then press Reset.

3 VOLT METER

Digital Meter that measures and displays Power Level of Battery. Fully Charged Batteries Rest between 12.6 to 13V.

2 BATTERY CABLE PLUG

Plug the 20" or 80" Battery Cable into this port to turn on the Dolly.

4 HANDLE POWER CABLES

Make sure the pins and flat faces are properly aligned. Do NOT force them together.





Twist the locking cap over the connection to secure it.

DRIVE MODES: FREEWHEEL KNOB



FREEWHEEL


NEUTRAL. MOVE THE DOLLY <u>WITHOUT</u> POWER WHILE IT IS NOT UNDER LOAD.

If you are in Engaged Mode, the wheels will be locked in the drive position.

Without power, the Dolly will only move an inch forwards or backwards before stopping.

Rock the Dolly so the wheels rest in between these two stop points.

Pull on the Knob and turn it clockwise. Rest the small pin on the outer edge, not in the pin hole.

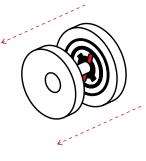

REST PIN OUTSIDE


ENGAGED

DRIVE. FOR CONNECTING TO THE TRAILER AND PARKING WITH POWER.

Ensure the Dolly is in parking position and ready to connect to the trailer hitch.

Pull on the Knob and turn it clockwise. Align the small pin with the corresponding slot.

Rock the Dolly back and forth. The knob will pop in with a "click", engaging the Dolly into Drive.

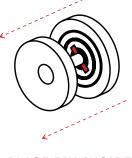

PLACE PIN INSIDE

POWER OPTIONS




DOLLY-MOUNTED BATTERY


SINGLE 12V BATTERY

Connect the 20" Cable to one of the following battery types:

- · Group 24 Deep Cycle
- Marine
- U1 Sealed

Batteries can be purchased at a local Hardware Store.

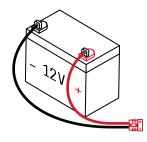

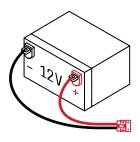


GROUP 24 OR MARINE

U1 SEALED

TRAILER BATTERY


TWO 12V BATTERIES

Connect the 80" Cable to either Trailer Battery:

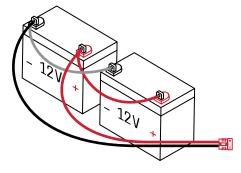


TWO 6V BATTERIES

Connect the 80" Cable across Both Batteries:

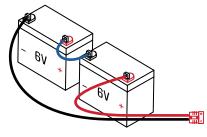

PLUG CABLE INTO DOLLY TO TURN ON OFF

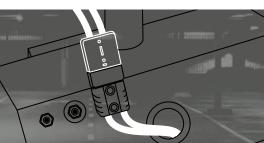



DO NOT EXCEED DOLLY'S MAX. WEIGHT CAPACITY

CAN CAUSE DAMAGE TO YOUR TRAILER, SERIOUS INJURY, OR EVEN DEATH.

FORCE 5K UP TO 5,000 LBS FORCE 10K
UP TO 10.000 LBS

RE-TIGHTEN BALL MOUNT BEFORE OPERATION

USE JACK POST CONNECTION OR TELESCOPIC FRAME ADAPTER FOR TRAILERS:

- BETWEEN 8,000-10,000 LBS GROSS WEIGHT
- WITH MORE THAN 800 LBS TONGUE WEIGHT
- WITH ARTICULATED HITCHES


DO NOT OPERATE ON MORE THAN 6% GRADE

RISK OF RUNAWAY TRAILER.
DO NOT OPERATE ON STEEP INCLINES.

CONNECTING TO YOUR TRAILER:

BALL MOUNT ADAPTER

While in **Freewheel Mode**, move the Dolly and Accessories to the Trailer. Choose your preferred **Hitch Ball Size**, and assemble the **Ball Mount**.

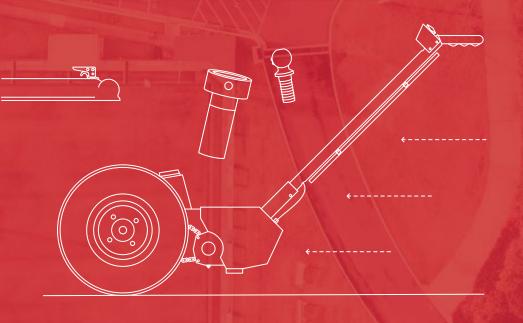


BALL MOUNT ASSEMBLY

HITCH BALL

Thread desired **Hitch Ball** into the Ball Mount. Apply a generous portion of **All-Purpose Grease** along the top surface of the **Ball Mount Collar**.

The shoulder of the Hitch Ball should rest slightly below the top of the collar.

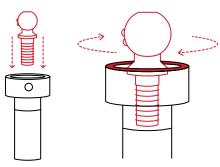


HITCH BALL PLACEMENT

WELD SPOTS

Insert the assembled Ball Mount into the Hitch and lock as normal.

Make sure the **Weld Spots** on the Hitch Ball are pointed towards the **rear left side of your trailer at about 10 o'clock.**

The hitch may not lock if they are not positioned properly!

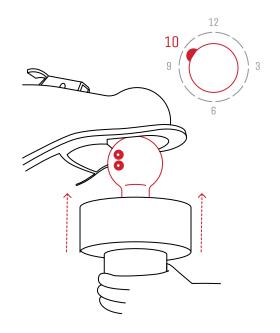

HITCH CONNECTION

Turn the Ball Mount **Counter Clockwise** until the gap between the Ball Mount Collar and Trailer Tongue closes **tightly**, with **no gap**.




Have a **Step Down Hitch** or another obstruction preventing a flat connection? SEE THRUST WASHER INSTALLATION.






STILL HAVING TROUBLE? SEE ALTERNATE CONNECTIONS.

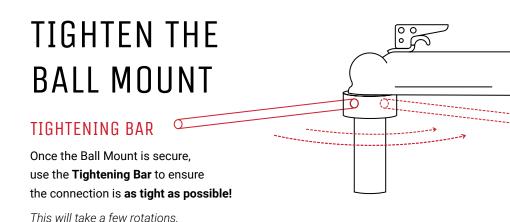




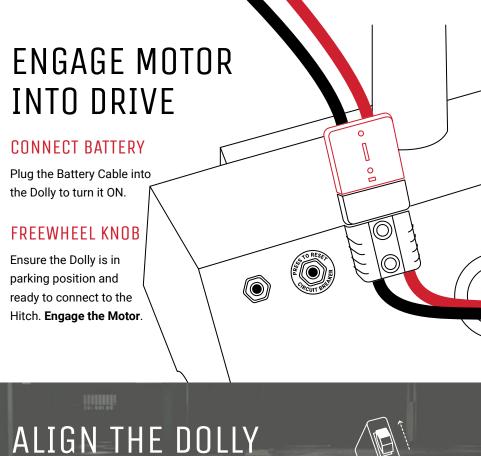



Using the Handle Toggle Switch, Drive the Dolly underneath the hitch. Align the Ball Mount with the top of the Dolly's Receiver Tube.



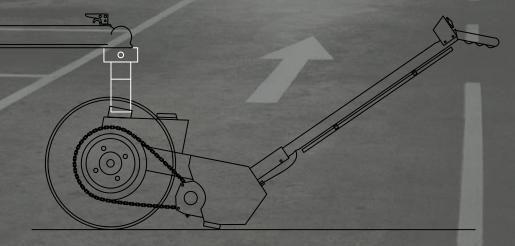

INSERT BALL MOUNT

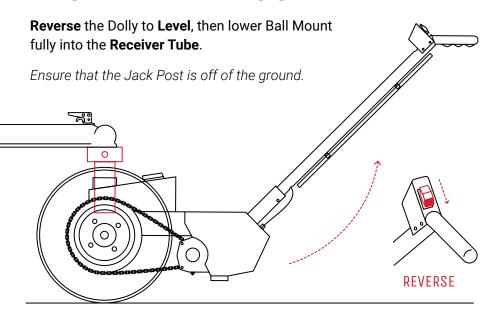

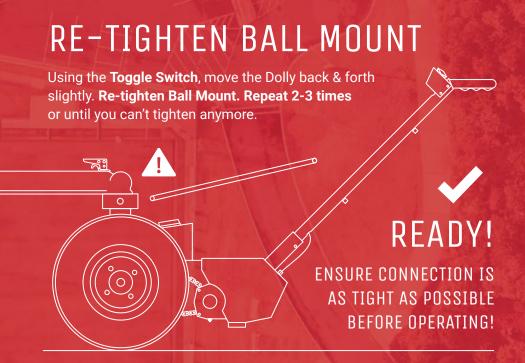

PARKING YOUR TRAILER

Use the **Forward** and **Reverse** Toggle Switch to steer into tight spaces that are nearly impossible for vehicles.



DISCONNECTING THE HITCH

Chock Trailer Wheels to prevent a runaway trailer.
Unplug the Battery Cable from the Dolly.
Raise the Trailer to withdraw the Ball Mount.

The Ball Mount can be removed or left on the hitch for later use.

STORAGE

Freewheel the Dolly to desired storage area, preferably under cover. Plug the Dolly into a Wall Outlet to Charge the Battery.

MAINTENANCE

Grease the Receiver Tube and **Lubricate the Chain** with **Chain Lube** Can be done Annually, or more often if used more frequently.

QUESTIONS?

CALL TOLL-FREE:


1-888-926-5517 FXT. 4 OR 1

ALTERNATE CONNECTIONS

TRAILER JACK POST

Remove the Ball Mount Adapter. Lower the Trailer Jack into the Dolly's Receiver Tube, following the standard connection process.

The trailer should rest as close to the Dolly's Tires as possible to reduce strain on the Jack Shaft.

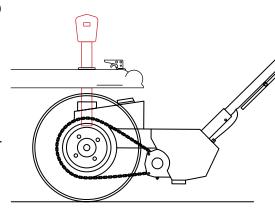


TELESCOPIC FRAME ADAPTER

Remove the Ball Mount Adapter.

Attach the Telescopic Adapter to the Y section of the trailer frame.

Lower the Telescoping Pipe into the Dolly, following the standard connection process. Slide the Adapter's locking pin into place.

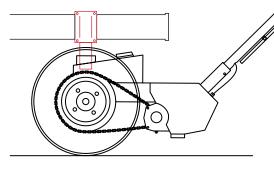

CALL TOLL-FREE: 1-888-926-5517

Ext. 1 - Sales

Ext. 2 - Administration

Ext. 4 - Technical Support

OFFICE HOURS (WEEKDAYS) 8AM-6PM EST

sales@parkit360.com admin@parkit360.com support@parkit360.com

2 YEAR PARTS & REPAIR WARRANTY

Your Parkit360 Dolly is covered for 2 years from the initial date of purchase. If a defect is found during this time, contact us with the original sales receipt number and details of the fault encountered.

Our Technical Support will attempt to solve the issue remotely. If the issue appears to be caused by defective parts, we will provide free replacement parts, excluding shipping costs.

If the 2 Year Warranty has expired or if you are not the original owner, you will have to pay the cost of parts and shipping. This repair will be covered for 3 months, starting 7 days from the date of shipment.

The Repair Warranty will expire either at the end of the 3 month period, or at the expiration of the original 2 -Year Warranty, whichever is later.

30 DAY RETURN POLICY

If a material defect is found or if the Parkit360 has failed to perform to your expectations, return it within 30 days of the date of sale for a refund, less the flat shipping cost of \$250 and 20% restocking fee.

- 1. Call us at 1-888-926-5517 EXT.1 to let us know about your return. Please provide us with your Sales Receipt or Online Order number.
- 2. Our staff will provide you with an RMA# that must be written on the box prior to sending. If your Unit came with a Battery Box, please keep it. This accessory does not need to be returned.
- 3. Tell us when the package is ready. Our staff will provide you with a Shipping Label that must be affixed to the box prior to drop off at your nearest FedEx Depot. If you are unable to drop off the Unit, Pick-Up can be arranged.
- 4. Receive your refund minus the shipping and restocking fee once the Dolly arrives at our warehouse.

EXCLUSIONS AND LIMITATIONS

The 2 Year Warranty and 30 Day Return Policy do not cover:

- · Normal wear and tear of the Parkit360 from use
- · Shipping Costs for Returns / Repairs
- Customer Neglect and Improper Use or Storage of the Parkit360
- · Modified Dollies, or if the Serial Number has been altered or removed



DO NOT EXCEED DOLLY'S MAX. WEIGHT CAPACITY

RE-TIGHTEN BALL MOUNT BEFORE OPERATION

DO NOT OPERATE ON MORE THAN A 6% GRADE



PARKIT360 INC.

130 Industrial Ave, Unit 600 Carleton Place, ON K7C 3T2 Canada 1-888-926-5517 or PARKIT360.com