

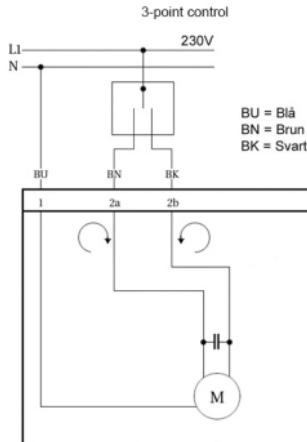


Electrical wiring, Nicab Maxi (2005-2009)

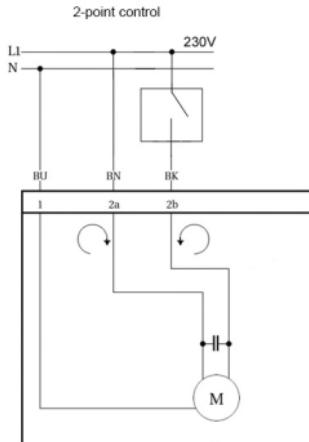

Port 1 är stängd vid leverans.

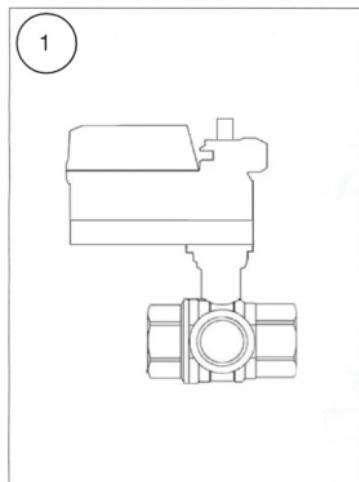

Installation

The valve can not be mounted with the actuator below the horizontal line. (Figure 2)
The valve can be manually operated in case of electrical failure. (Figure 3)

