







Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb
/ Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu


XX = AA, GN, ...

Pos.	Part No.
1	A 861 451 XX
2	A 861 417 XX
3	A 861 397 NU
4	A 960 197 NU
5	A 960 486 NU
6	A 962 370 NU
7	B 960 845 NU
8	E 1482 XX
9	A 861 277 XX

5 l/min + full flow

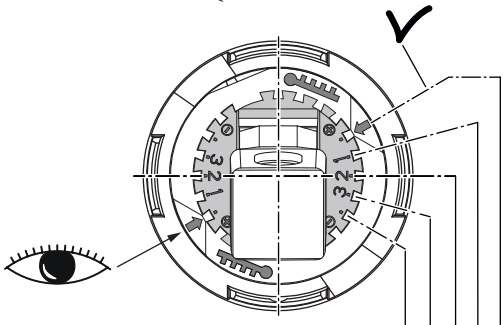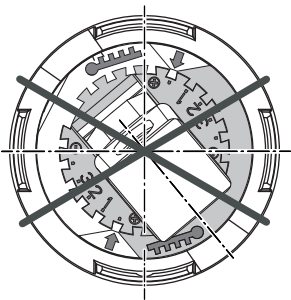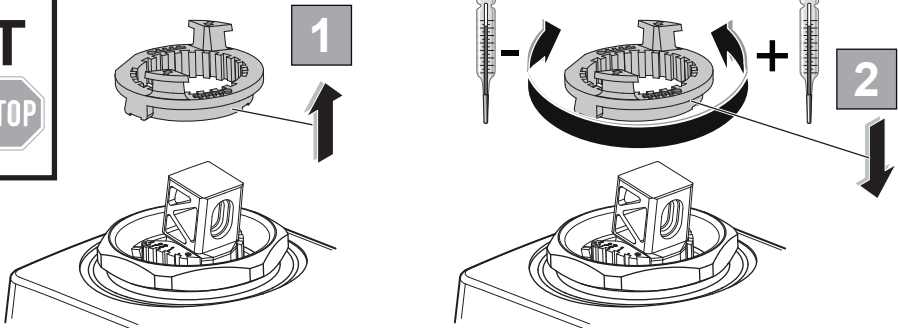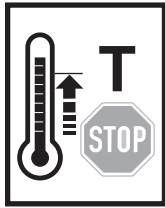

P	50°C	15°C	4	3	2	1	0
			°C	°C	°C	°C	°C
0,3 MPa 3 bar	65°C	15°C	27	33	41	48	50
	85°C	15°C	33	42	53	63	65
			41	53	68	83	85

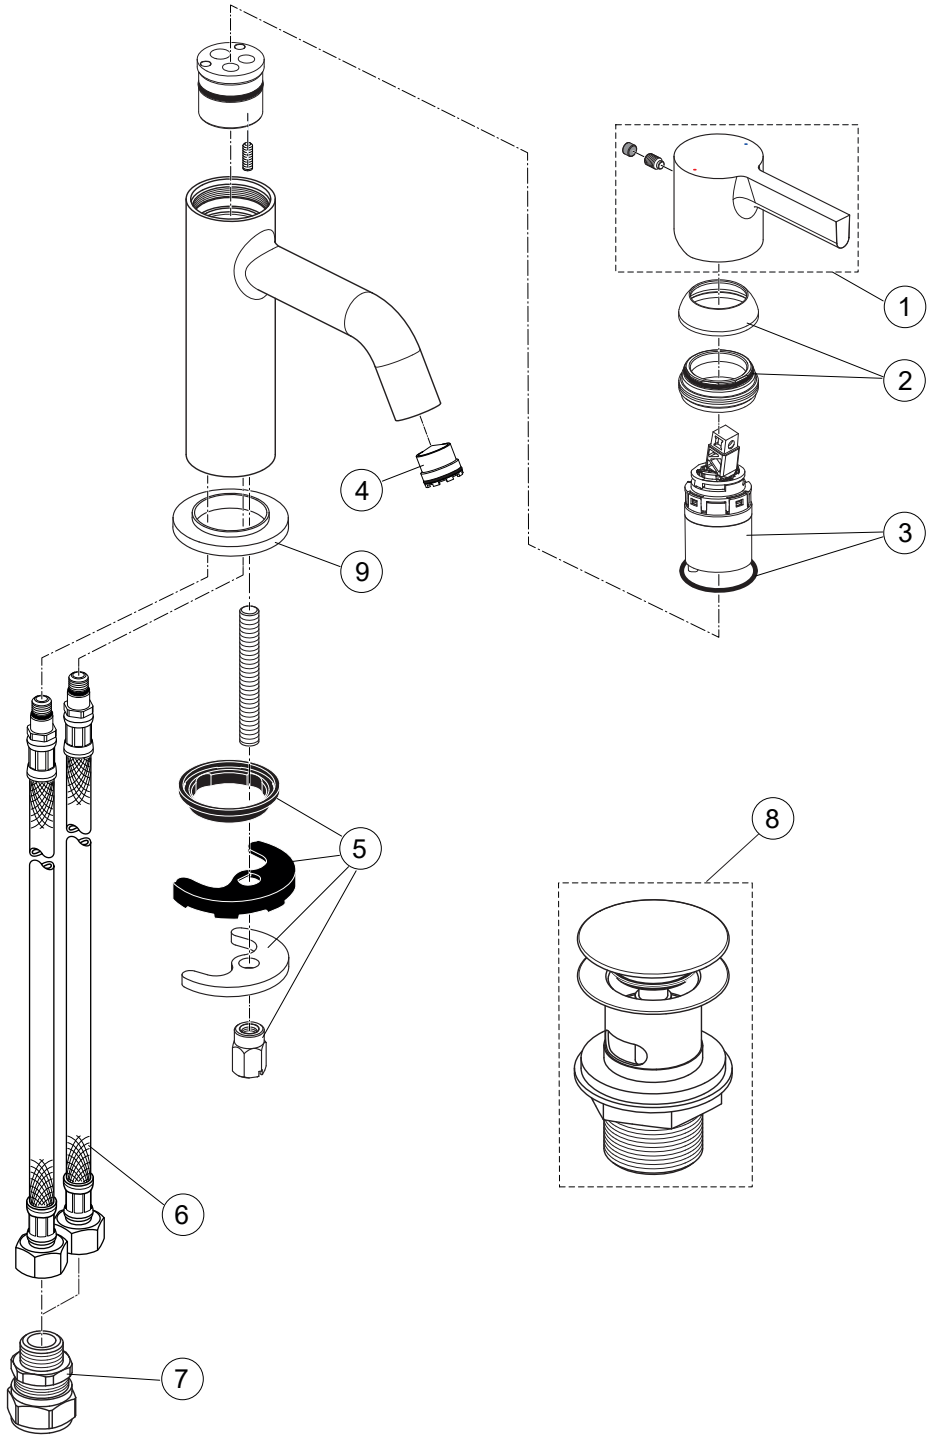


Ideal Standard


Joy

BC 799 .. BC 800 ..
BC 801 .. BC 802 ..


1221 / A 868 628

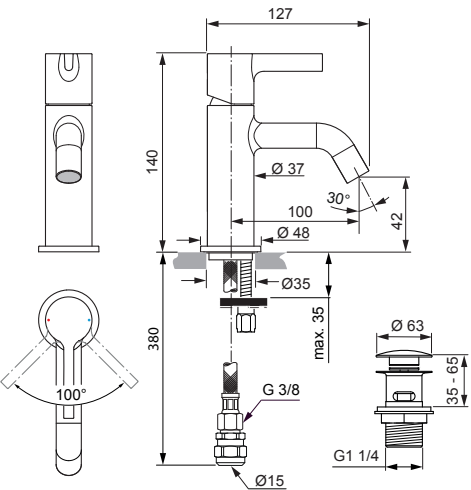


BC 801 ..

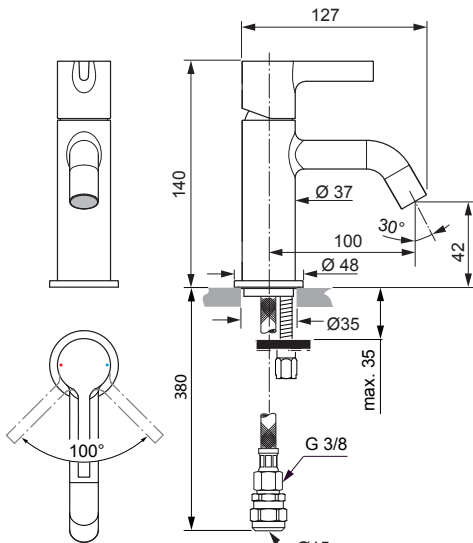

BC 802 ..

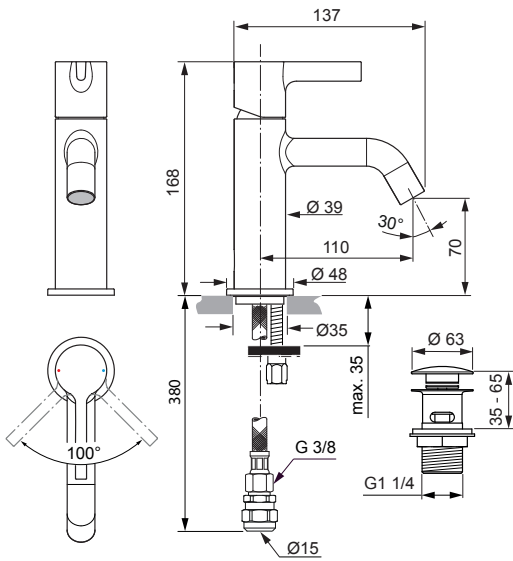

BC 799 ..

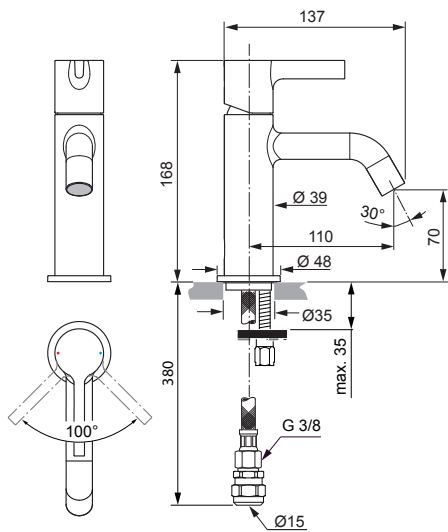









BC 800 ..



Ideal Standard International NV
Corporate Village - Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

www.idealstandardinternational.com

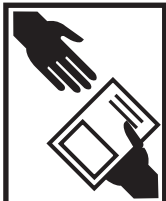

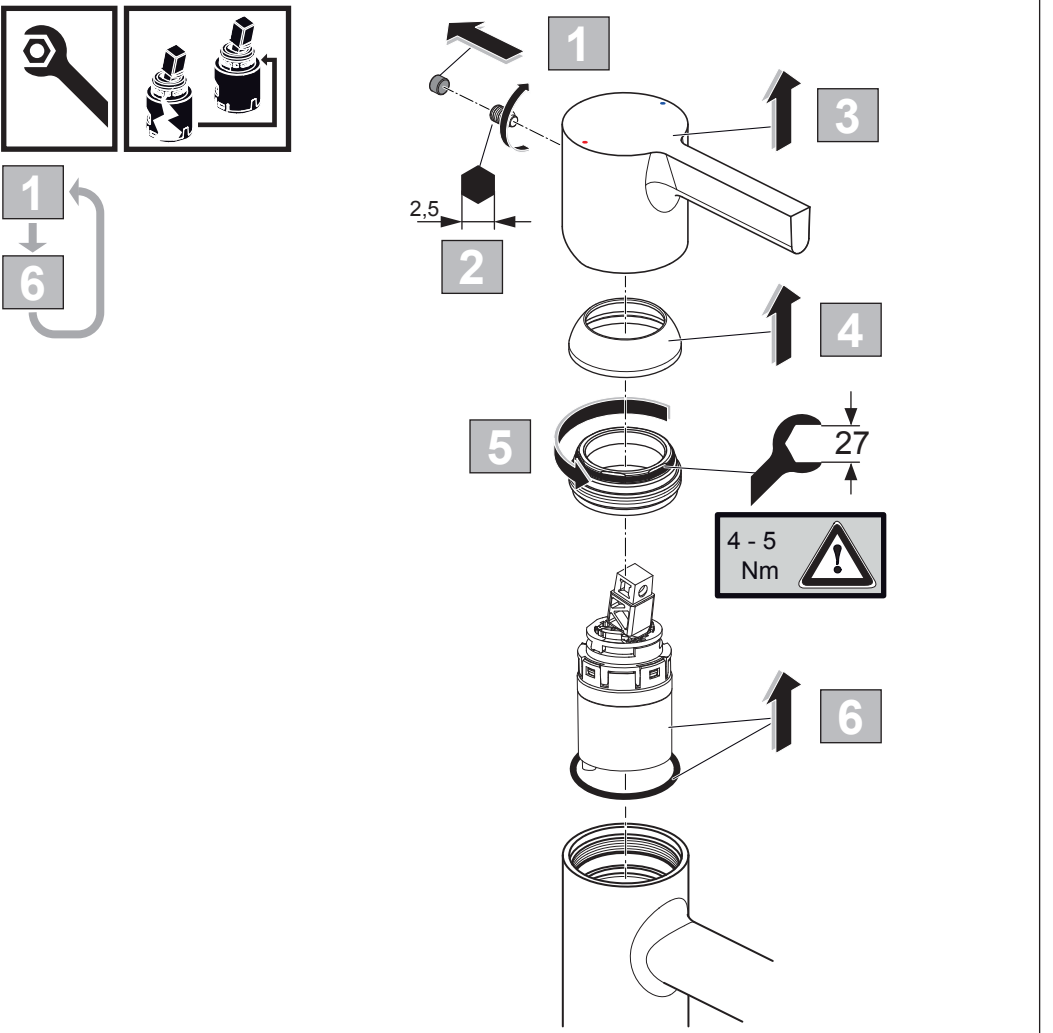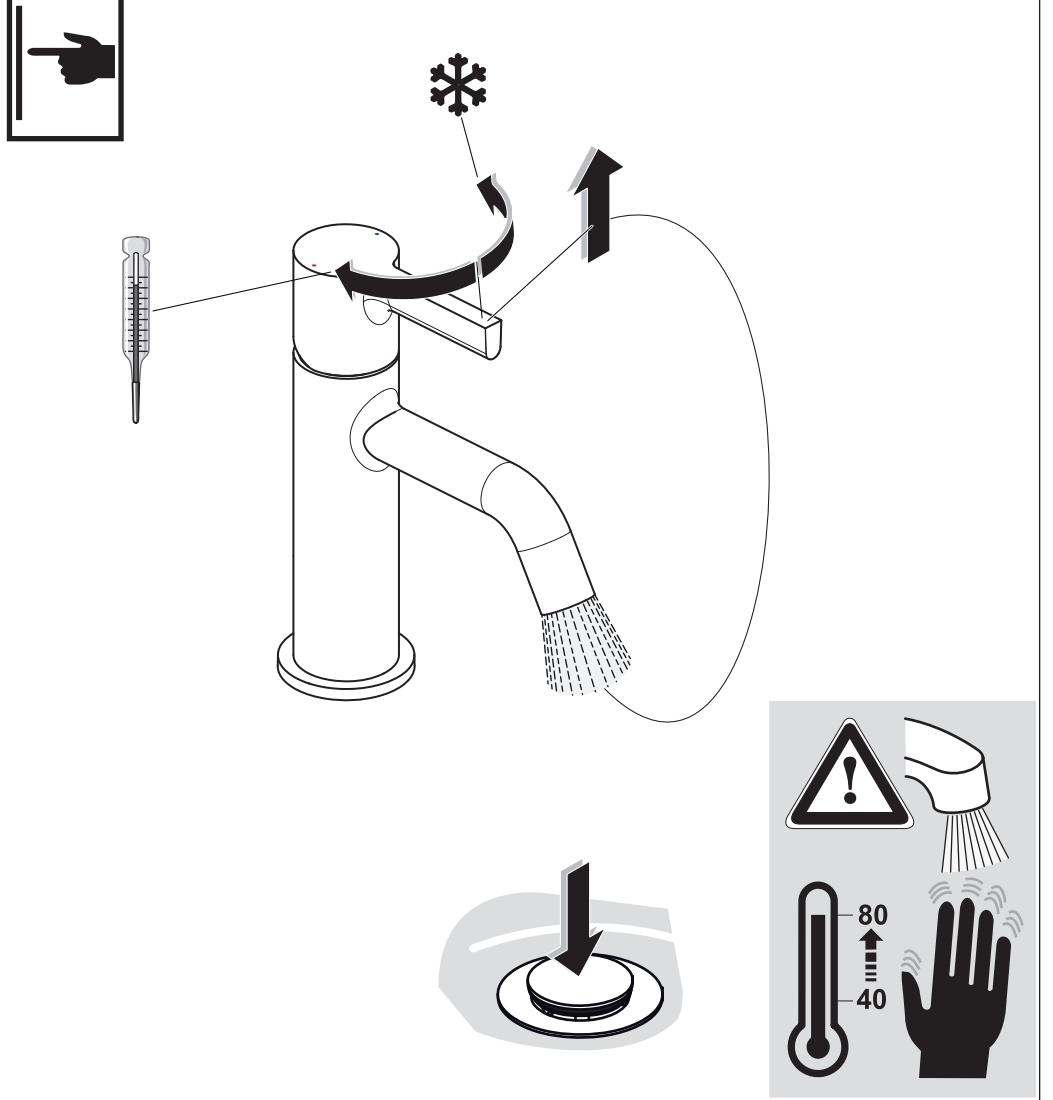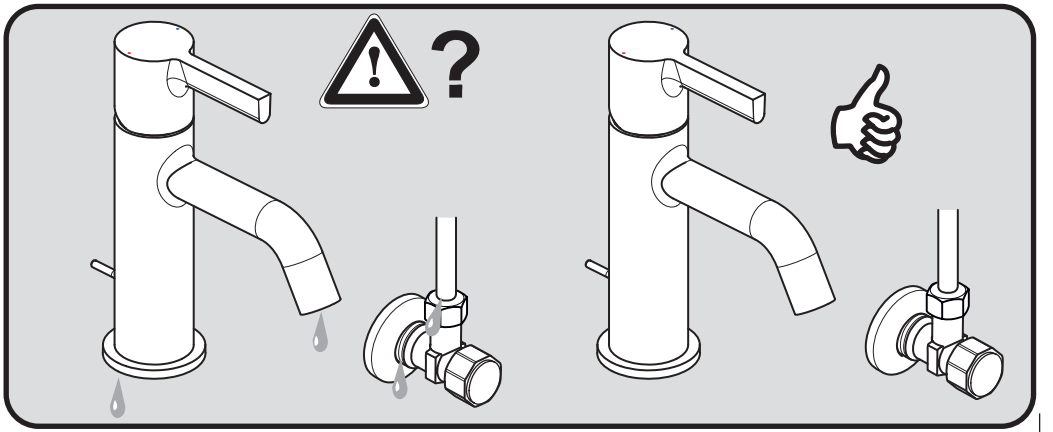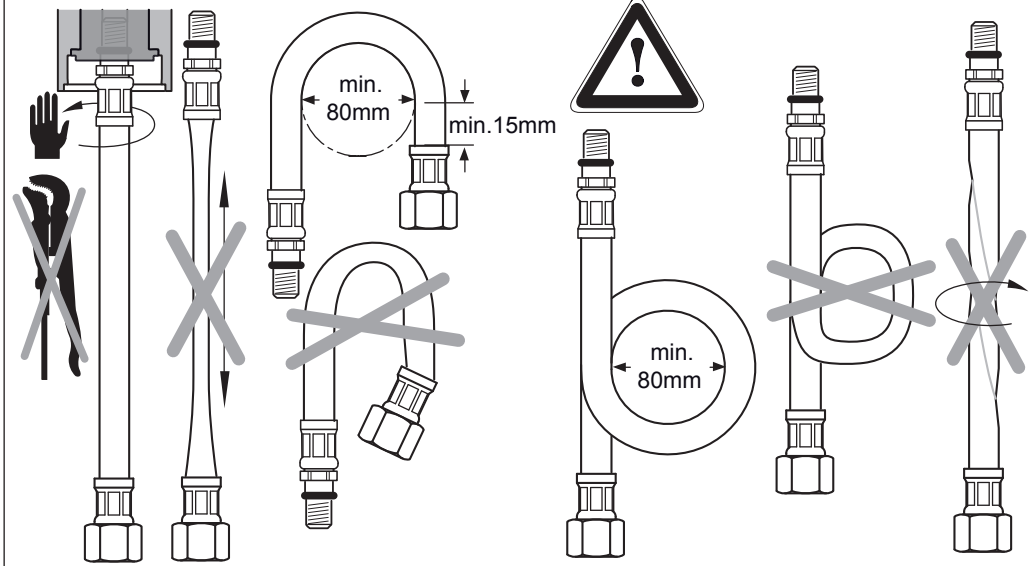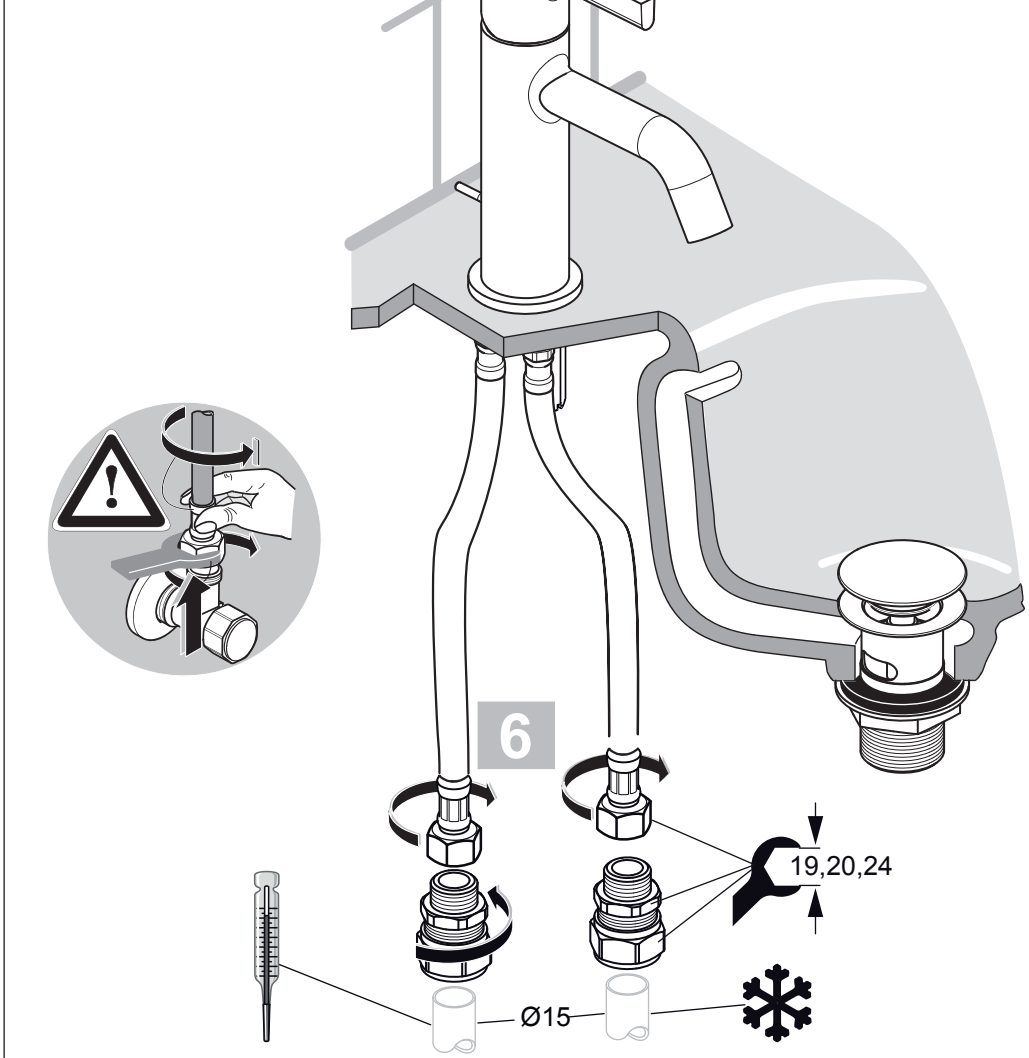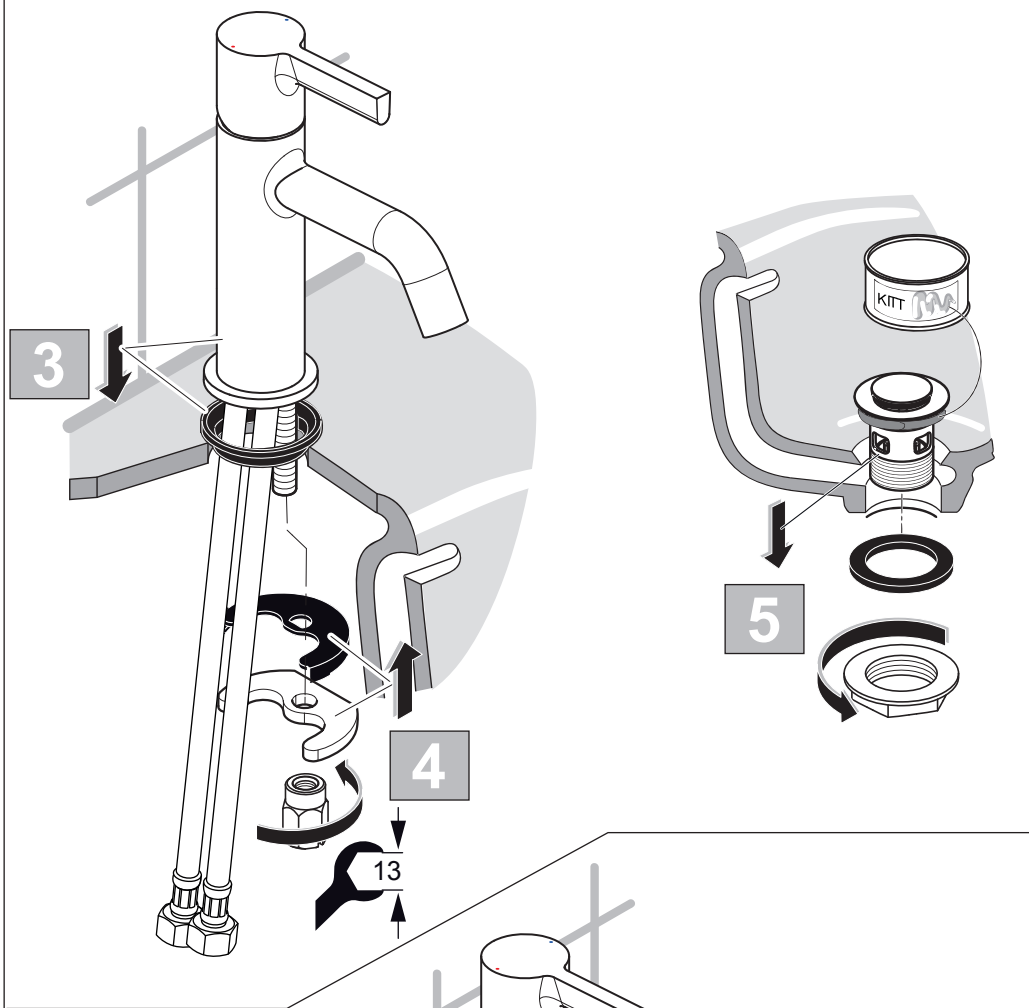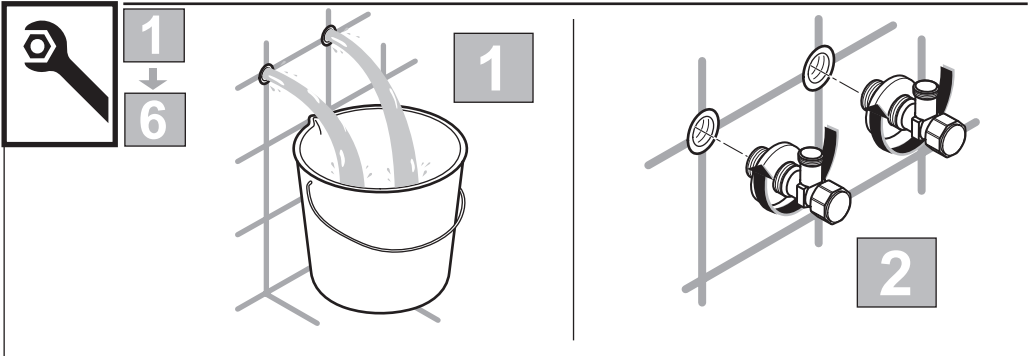

	P	bar					Q (3 bar)
	T	°C					l/min
							??