

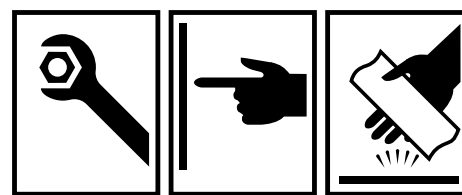
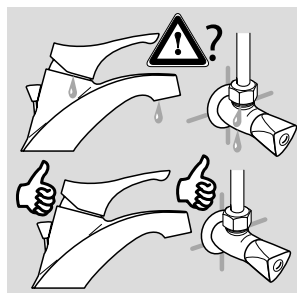
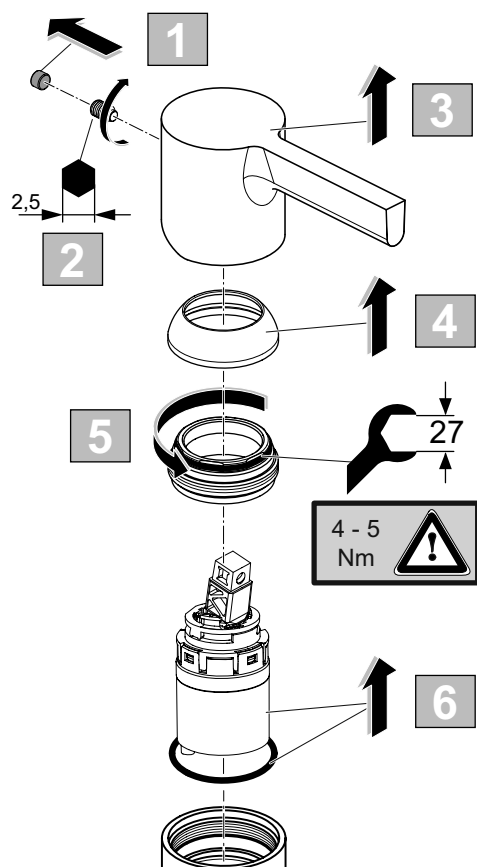


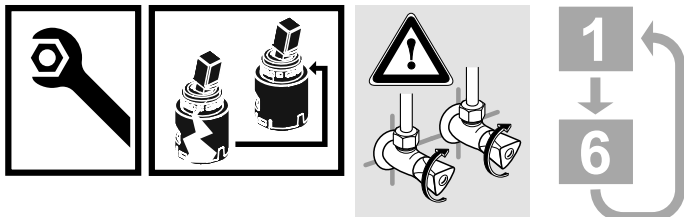

Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD,

- 1 - A 861451 XX
- 2 - A 963751 NU
- 3 - A 861417 XX
- 4 - A 861397 NU
- 5 - B 960583 NU
- 6 - B 961662 XX
- 7 - A 962708 NU - 5L/m
- 7a - B 960500 NU
- 8 - B 961253 NU
- 9 - A 861227 XX
- 10 - A 964520 NU
- 11 - A 962370 NU
- 12 - B 960845 NU

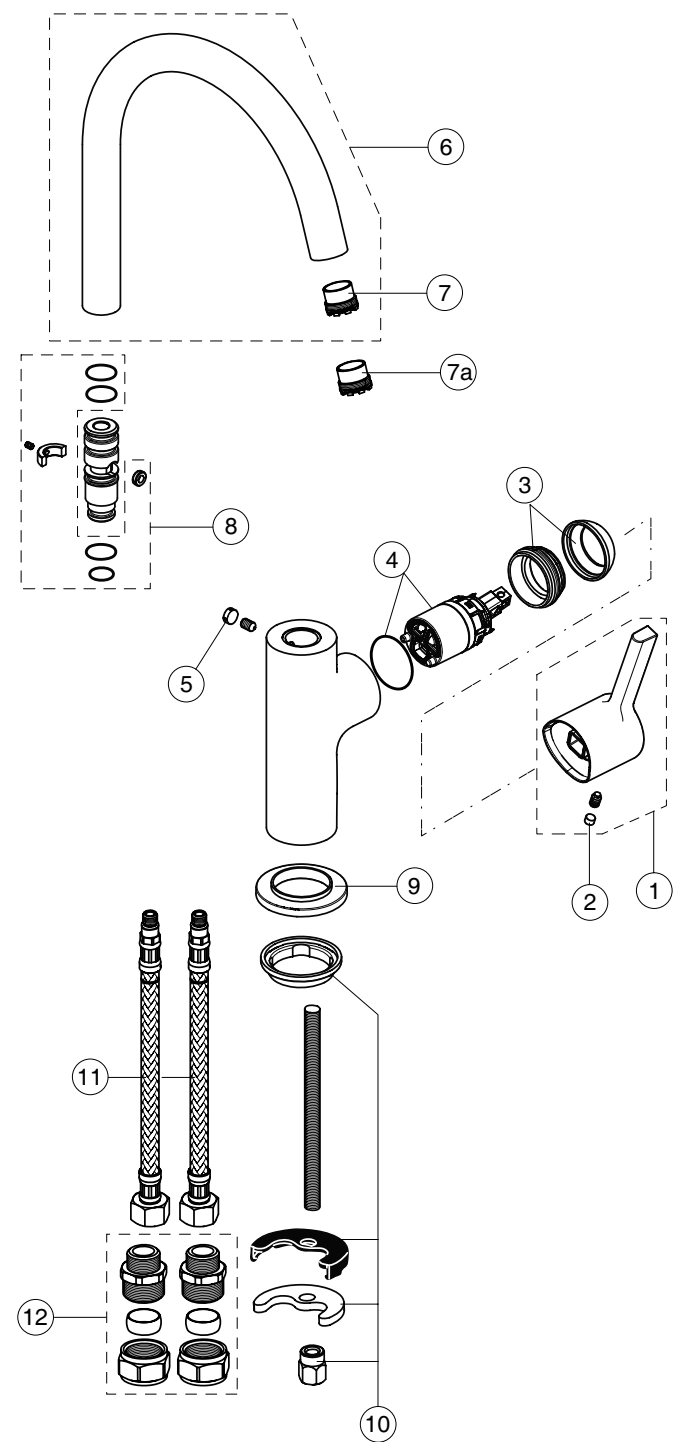


Joy



Ideal Standard




12.2020 / B565002

B C981 ..

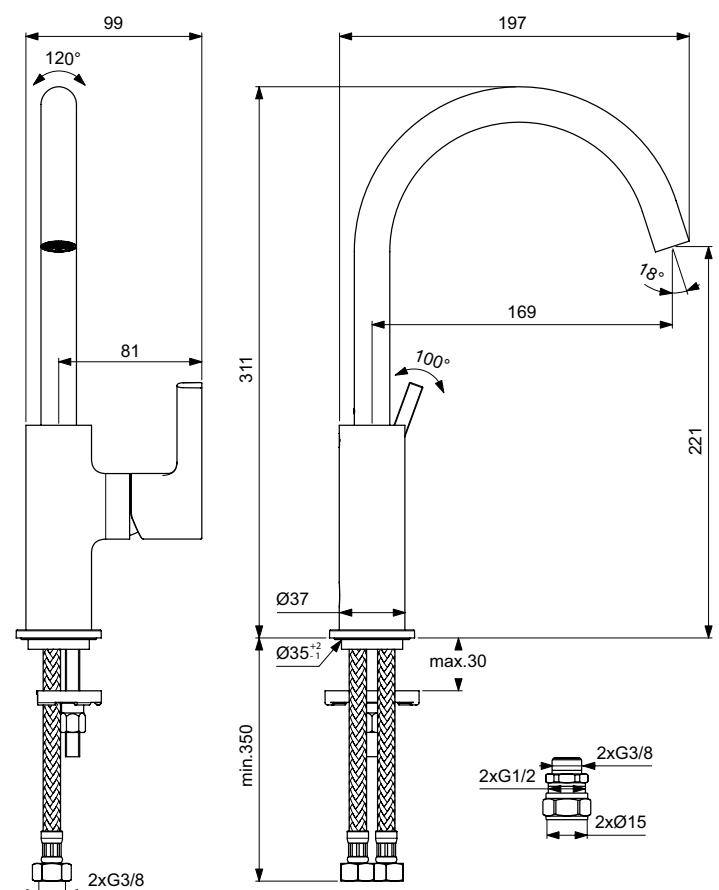


Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium
<http://www.idealstandardinternational.com>




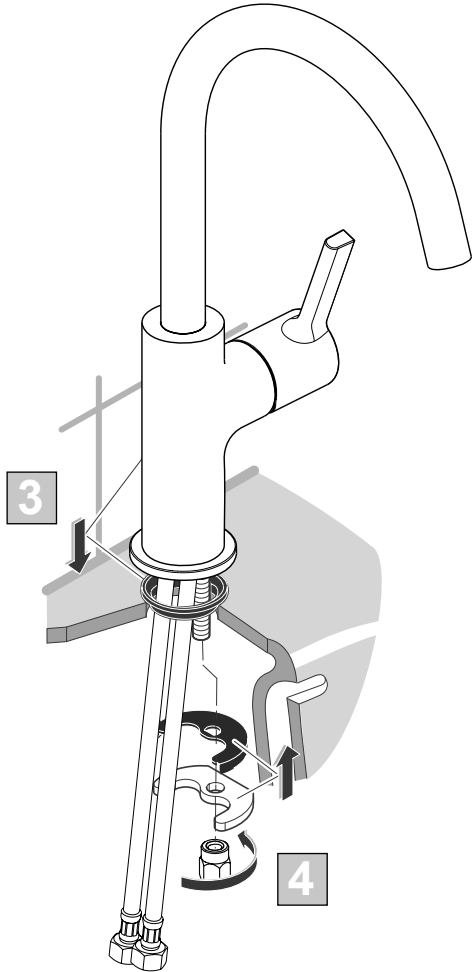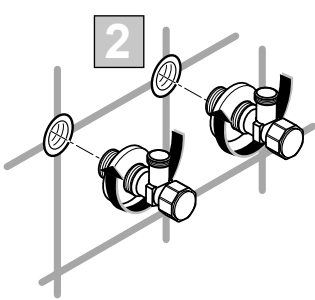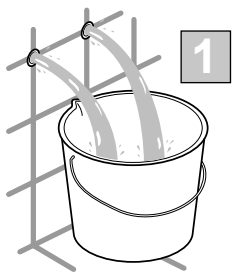













4

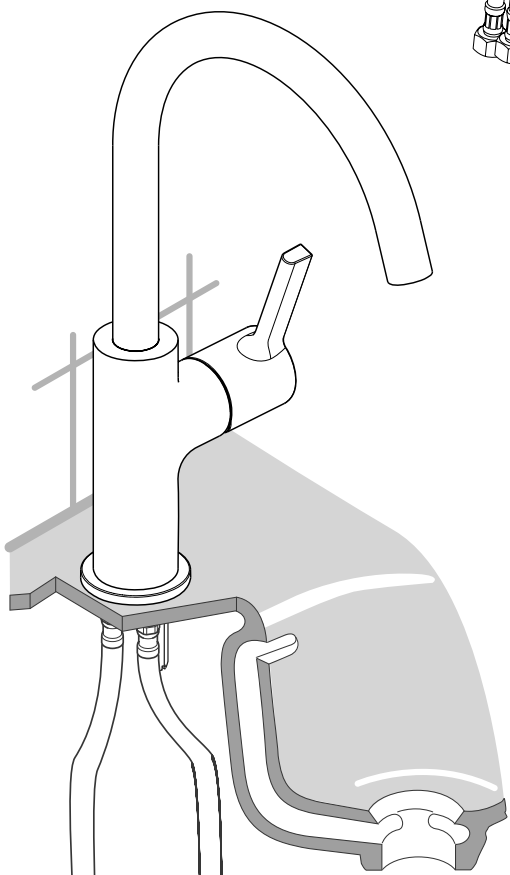


7

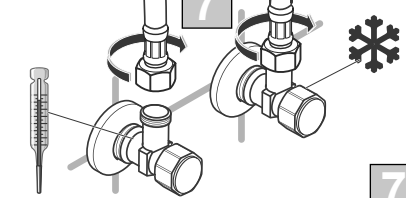

7

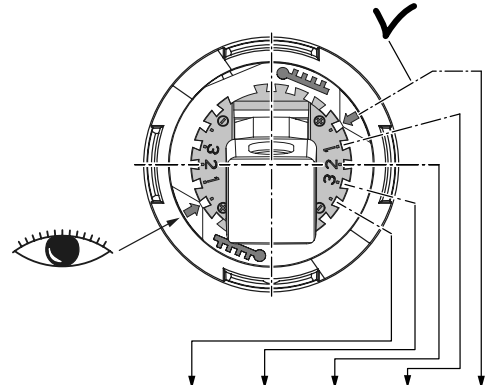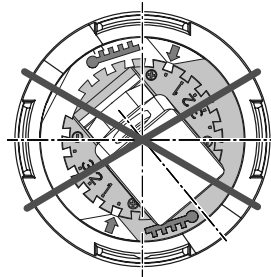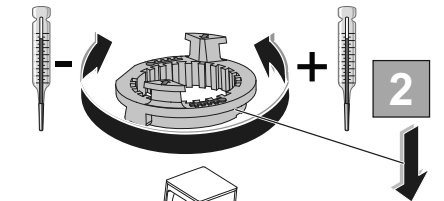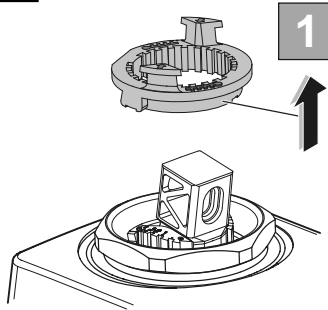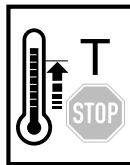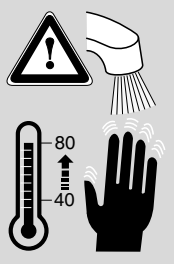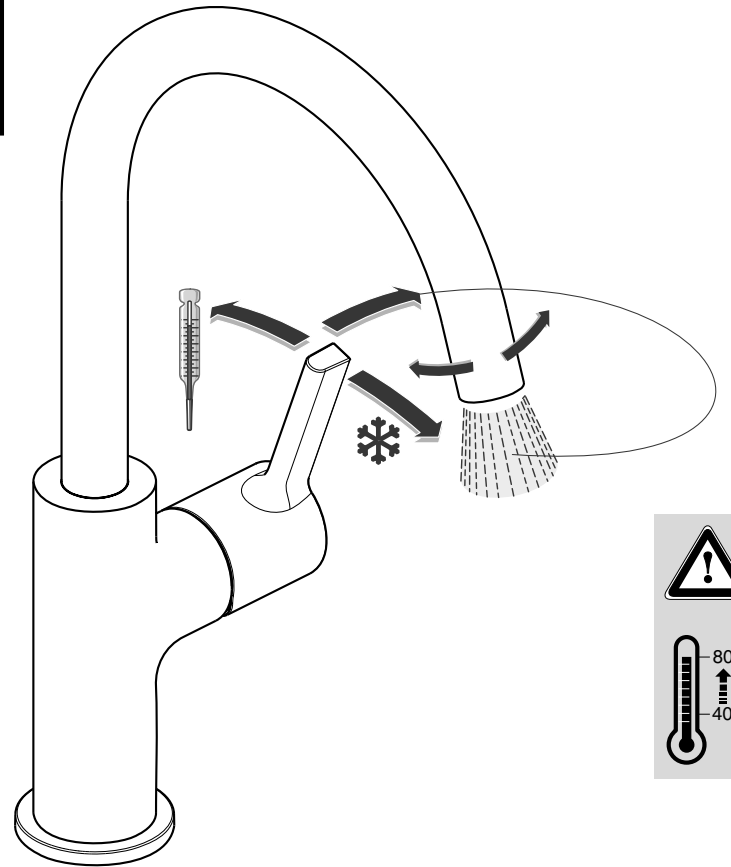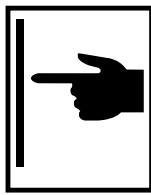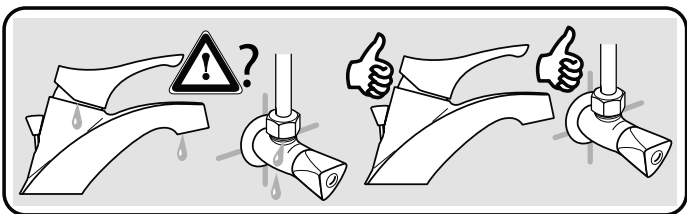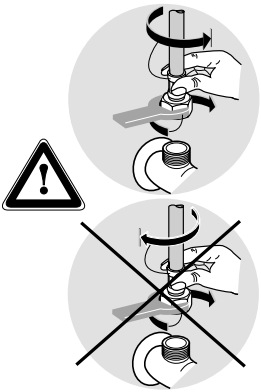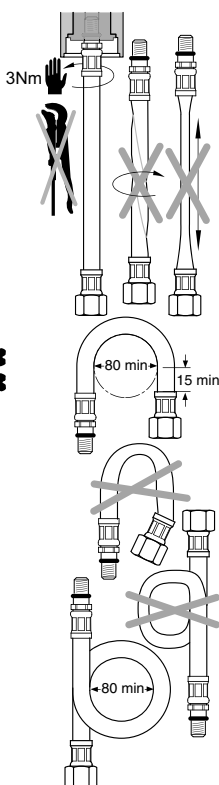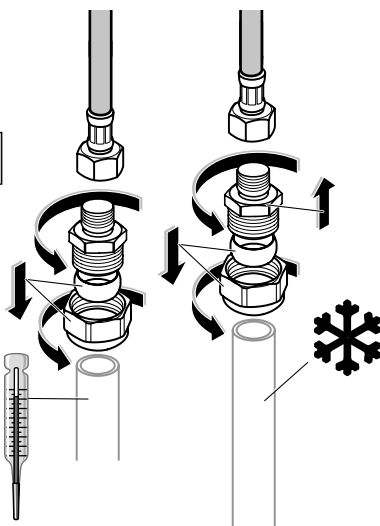

P	°C	°C	°C	°C	°C
	50°C	65°C	85°C	15°C	15°C
0,3 MPa 3 bar	27	33	41	48	50
	33	42	53	63	65
	41	53	68	83	85

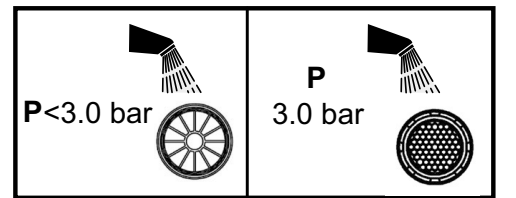

P	bar	MAX. 10	5	Q (3 bar)
T	°C	MAX. 80	65	l/min
			40	5