

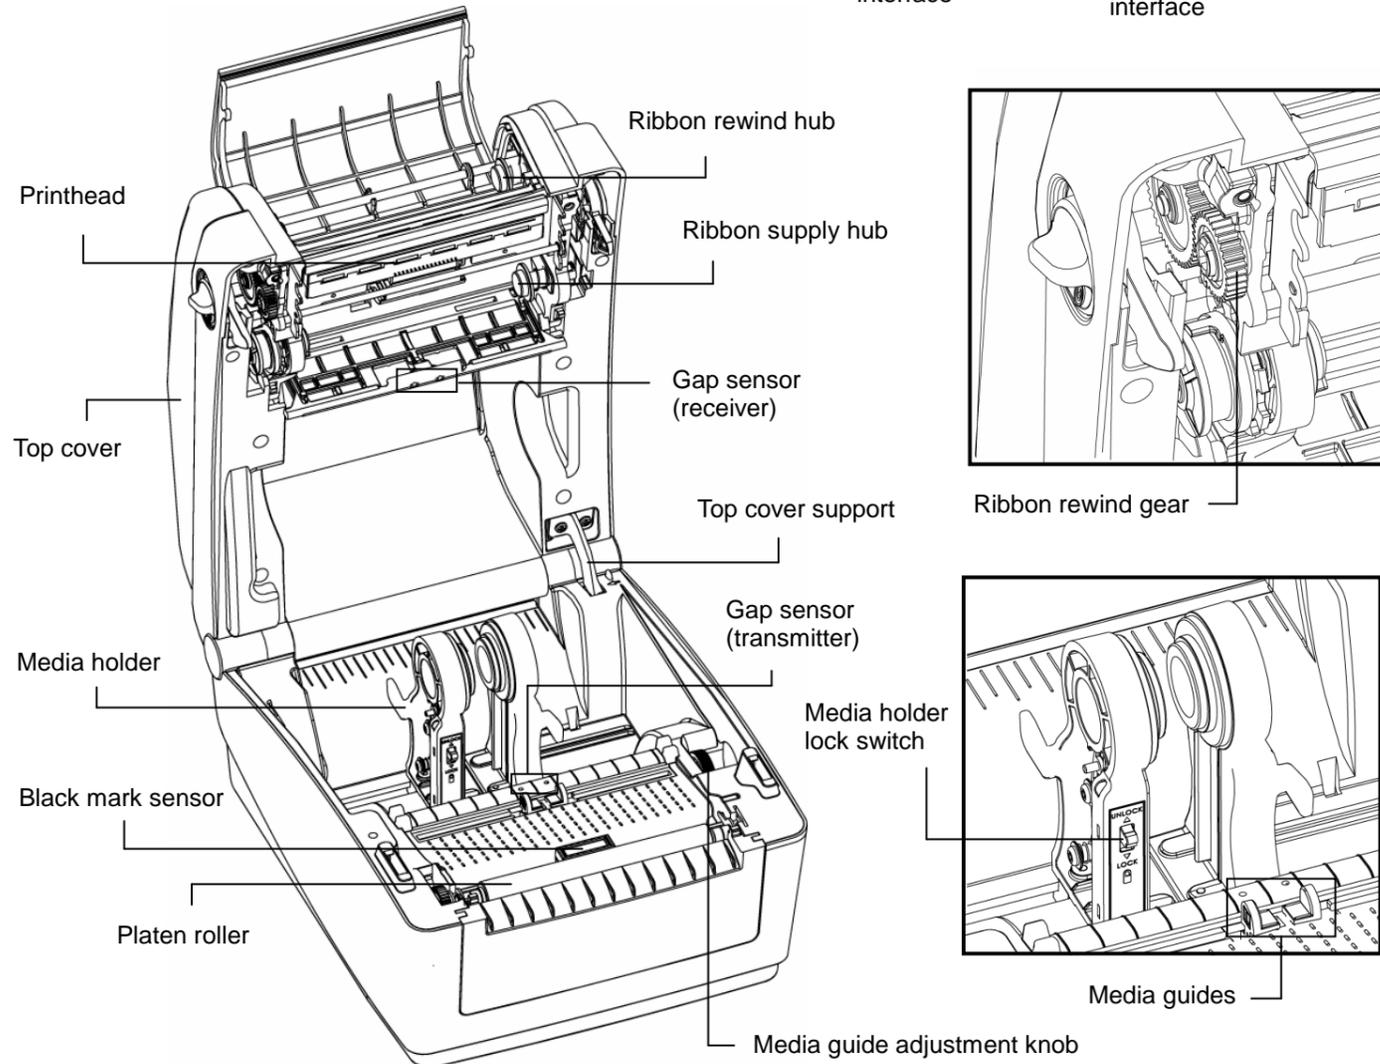


Quick Installation Guide


Printer Overview

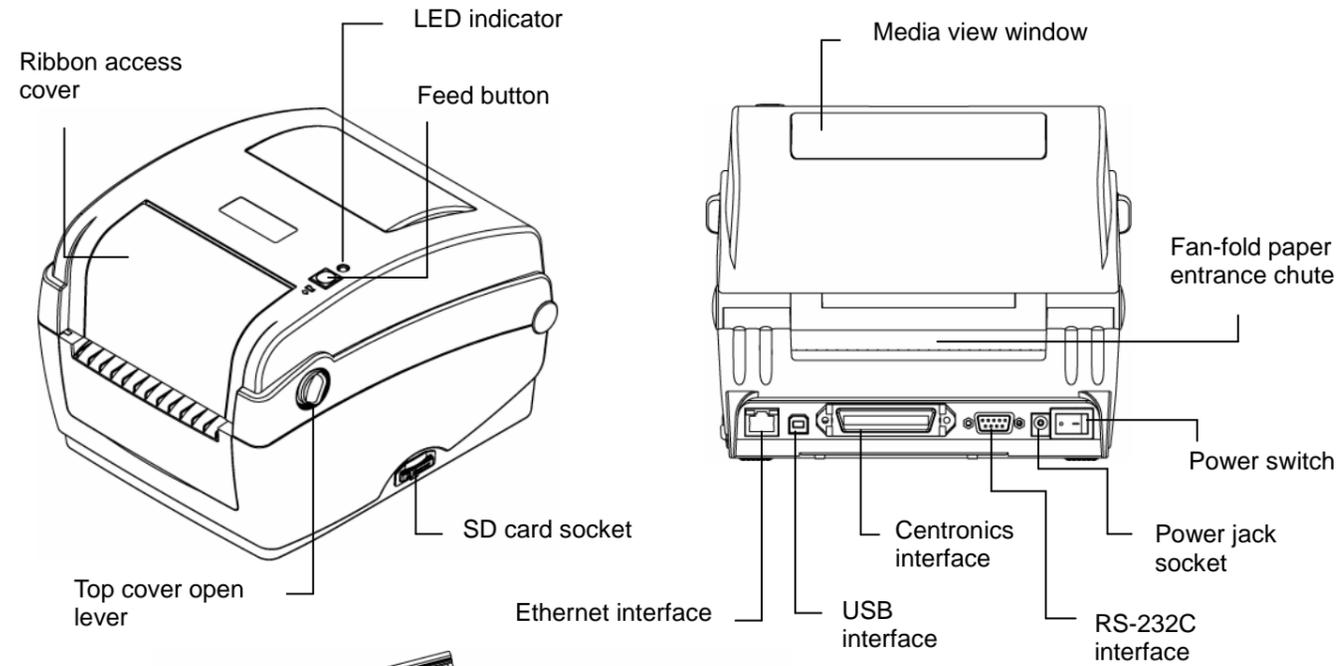


Open / Close the Top Cover

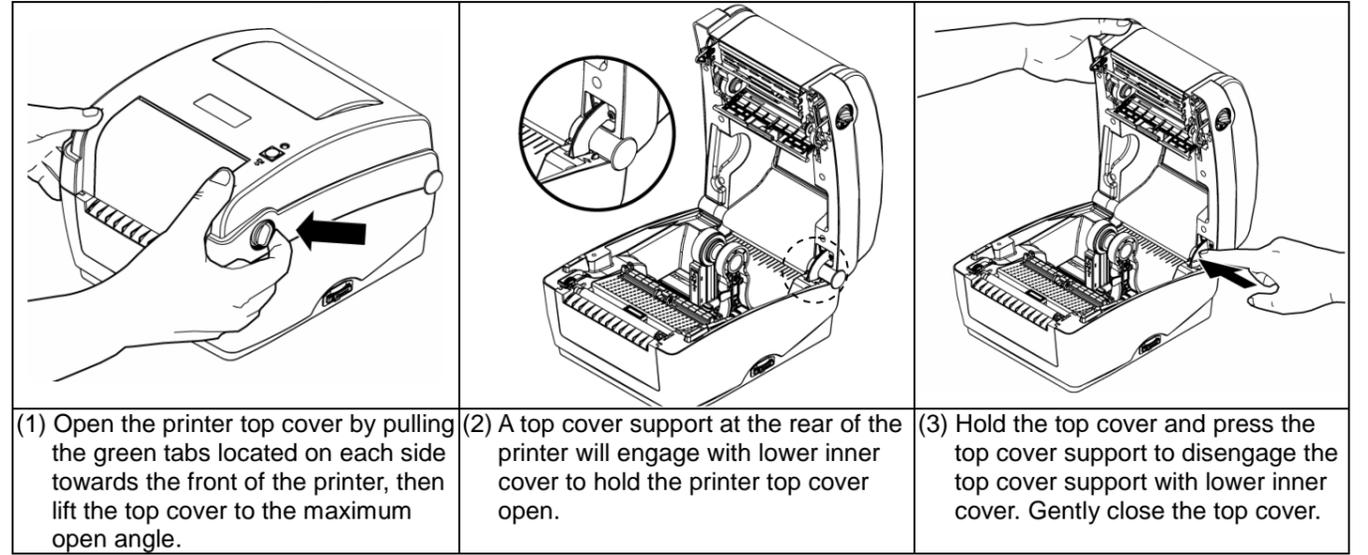

Loading the Ribbon

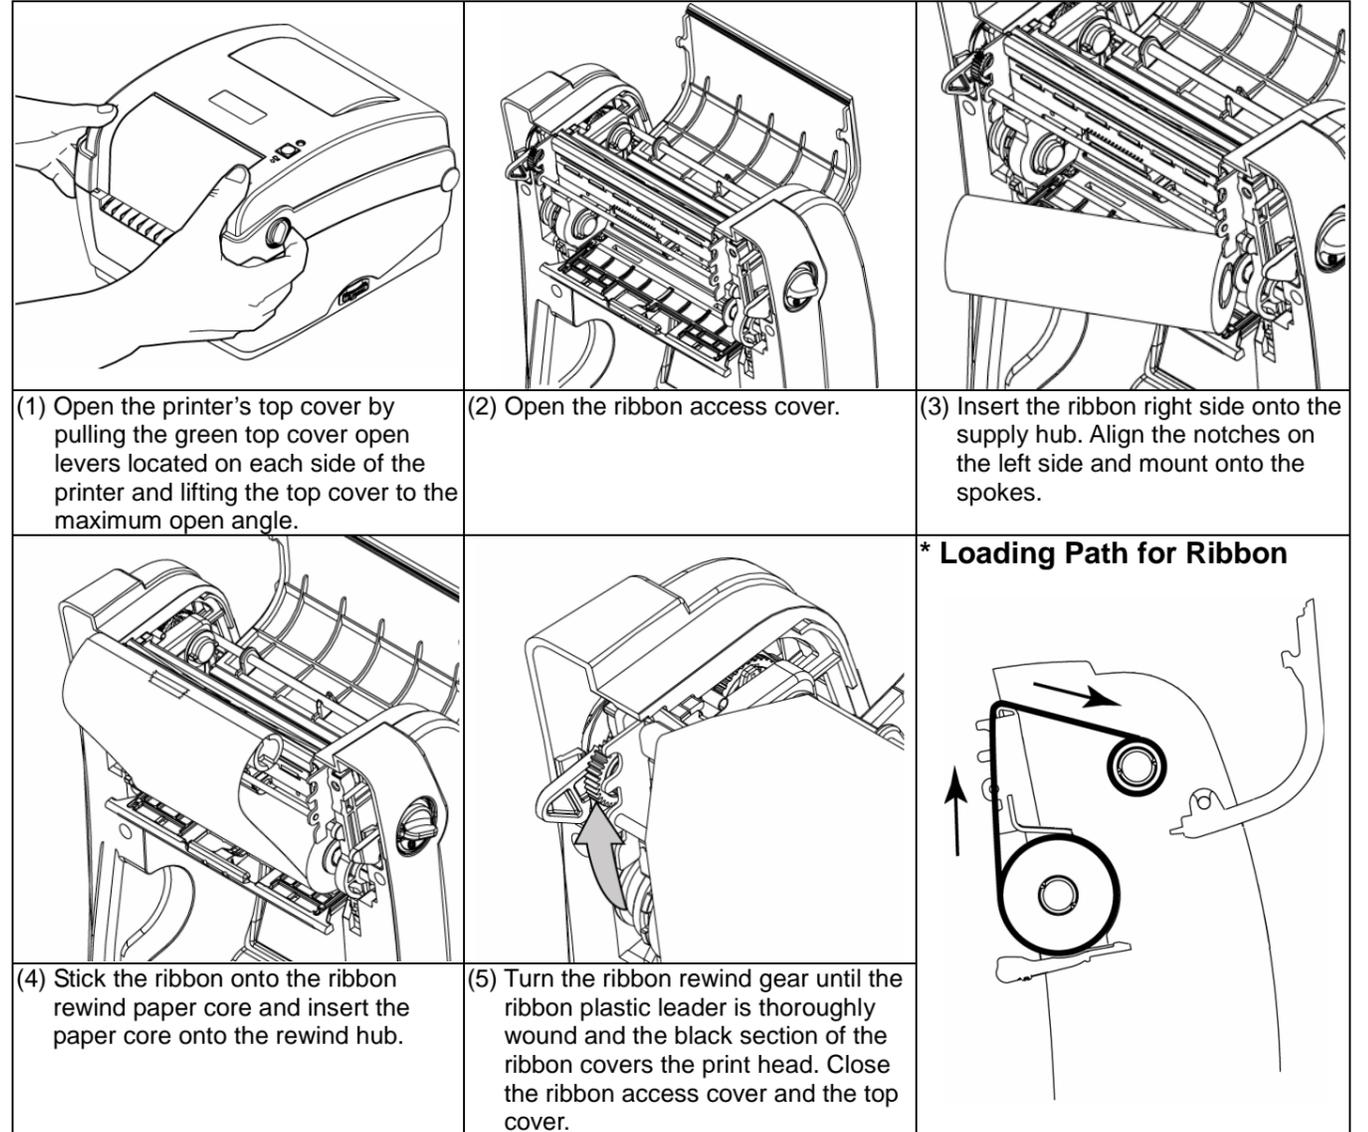


Loading the Media

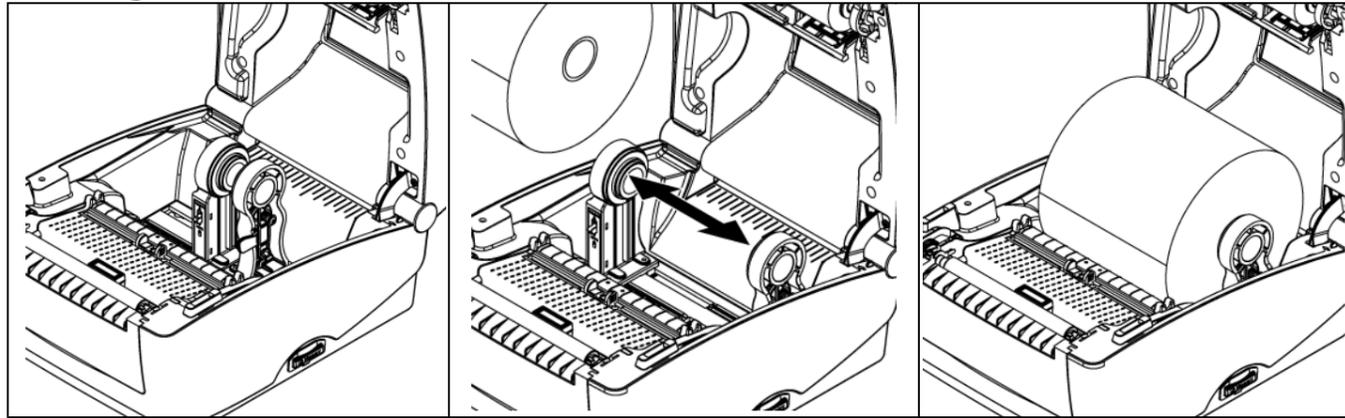

(1) Open the printer top cover by pulling the green tabs located on each side towards the front of the printer, then lift the top cover to the maximum open angle.

(2) Separate and hold open the media holders.

(3) Place the roll between the holders and close them onto the core. Press down the media holder lock switch to hold the label roll firmly.

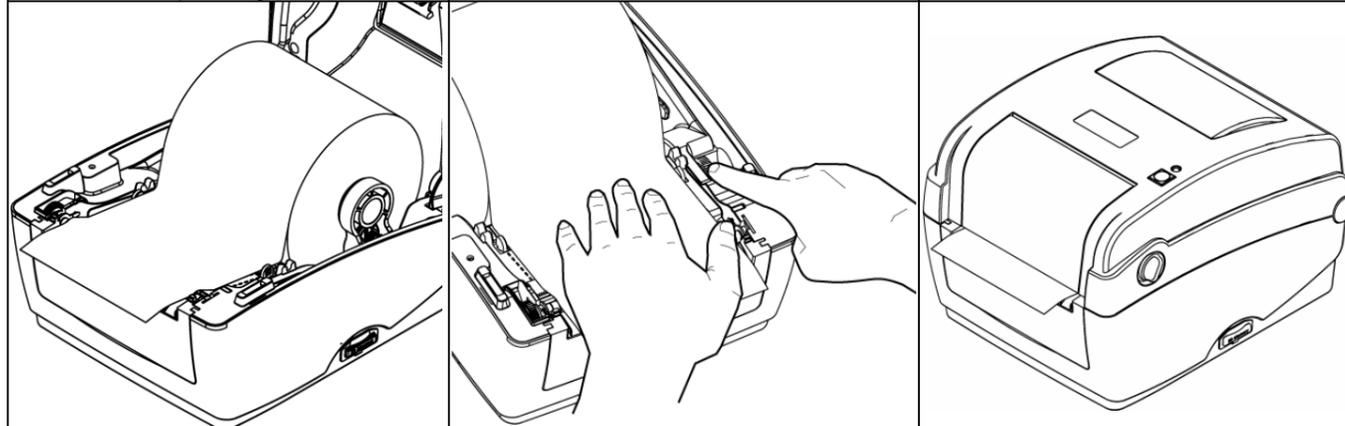


(4) Place the paper, printing side face up, through the media sensor and place the label leading edge onto the platen roller.

(5) Move the media guides to fit the label width by turning the guide adjuster knob.

(6) Disengage the top cover support and close the top cover gently.

* Loading Path for Media

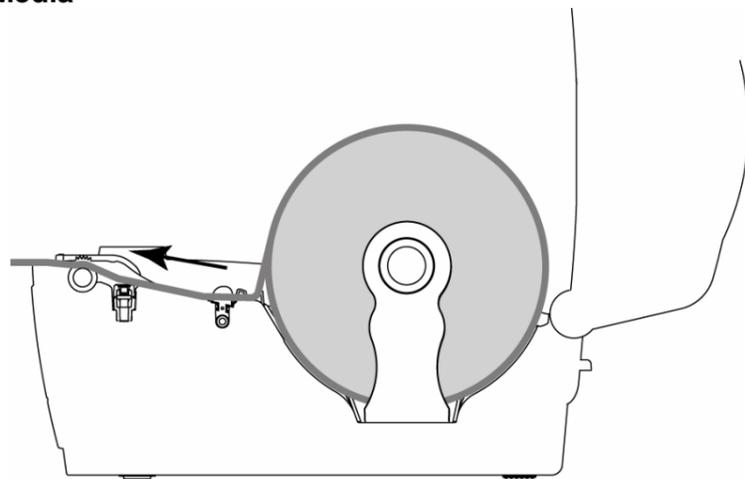

(7) Use "Diagnostic Tool" to set the media sensor type and calibrate the selected sensor. (Start the "Diagnostic tool" → Select the "Printer Configuration" tab → Click the "Calibrate Sensor" button) Please refer to the diagnostic utility quick start guide for more information.

Note:

Please calibrate the gap/black mark sensor when changing the media.

Button Functions

(1) Feed labels

When the printer is ready, press the button to feed one label to the beginning of next label.

(2) Pause the printing job

When the printer is printing, press the button to pause a print job. When the printer is paused the LED will blink green. Press the button again to continue the printing job.


Diagnostic Tool

The Diagnostic Utility is a toolbox that allows users to explore the printer's settings and status; change printer settings; download graphics, fonts, and firmware; create printer bitmap fonts; and to send additional commands to the printer. Using this convenient tool, you can explore the printer status and settings and troubleshoot the printer.

Note: This utility works with printer firmware V6.00 and later versions.

Start the Diagnostic Tool:

- Double click on the Diagnostic tool icon   to start the software.
- There are four features (Printer Configuration, File Manager, Bitmap Font Manager, Command Tool) included in the Diagnostic utility.

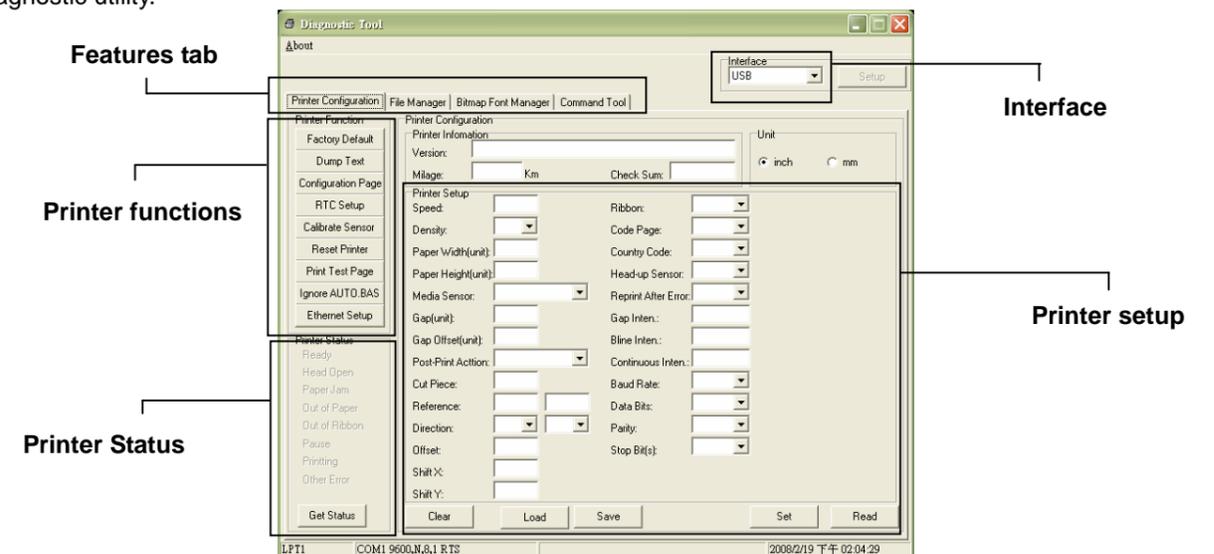

(3) The detail functions in the Printer Function Group are listed as below.

| Printer Function | Function | Description |
|--------------------|--------------------|---|
| Factory Default | Factory Default | Initialize the printer and restore the settings to factory default. |
| Dump Text | Dump Text | To activate the printer dump mode. |
| Configuration Page | Configuration Page | Print printer configuration. |
| RTC Setup | RTC Setup | Synchronize printer Real Time Clock with PC. |
| Calibrate Sensor | Calibrate Sensor | Calibrate the sensor specified in the Printer Setup group media sensor field. |
| Reset Printer | Reset Printer | Reboot the printer. |
| Print Test Page | Print Test Page | Print a test page. |
| Ignore AUTO.BAS | Ignore AUTO.BAS | Ignore the downloaded AUTO.BAS program. |
| Ethernet Setup | Ethernet Setup | Setup the IP address, subnet mask, gateway for the on board Ethernet. |

* For more information and features about this printer, please refer to the User's Manual inside the CD disk.