




Installation method

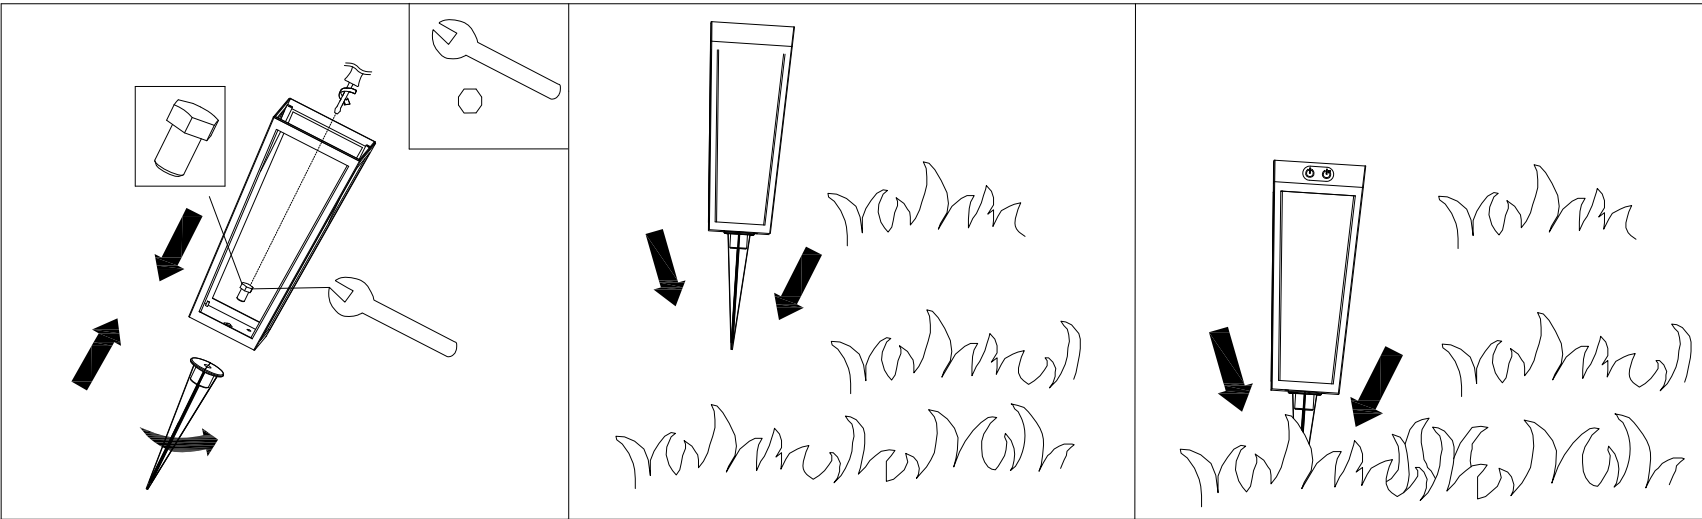

Basic functions

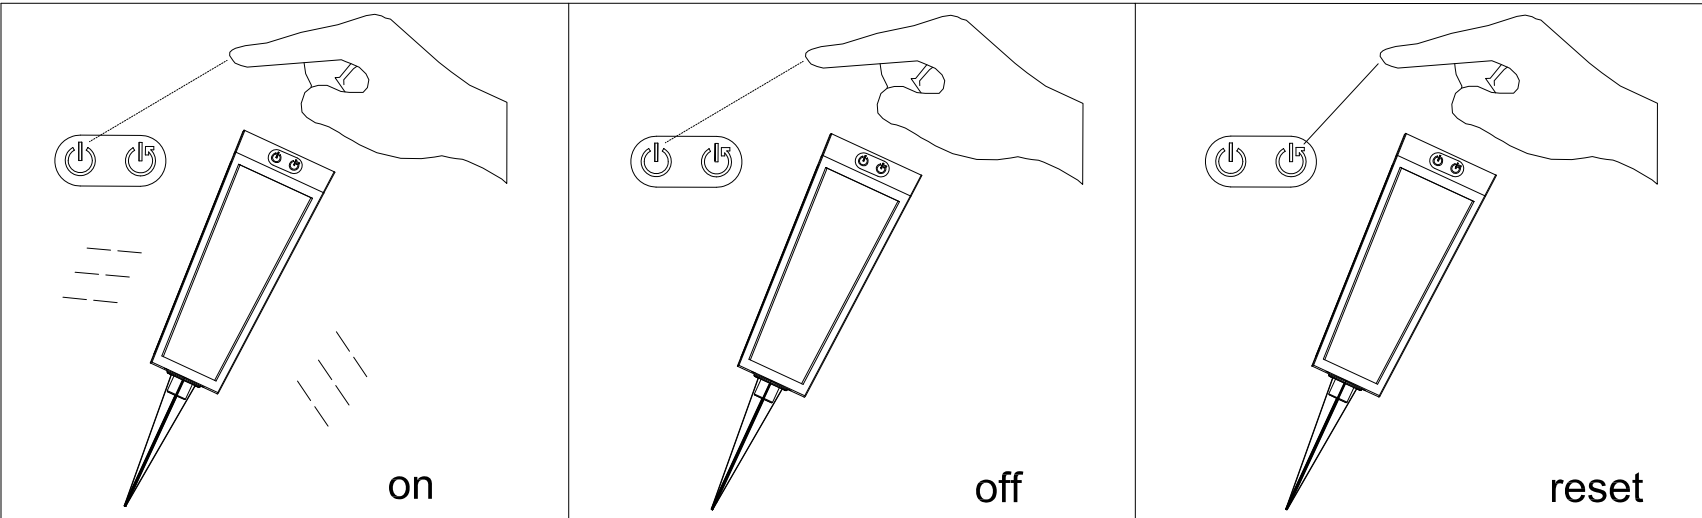

Sensing range and distance

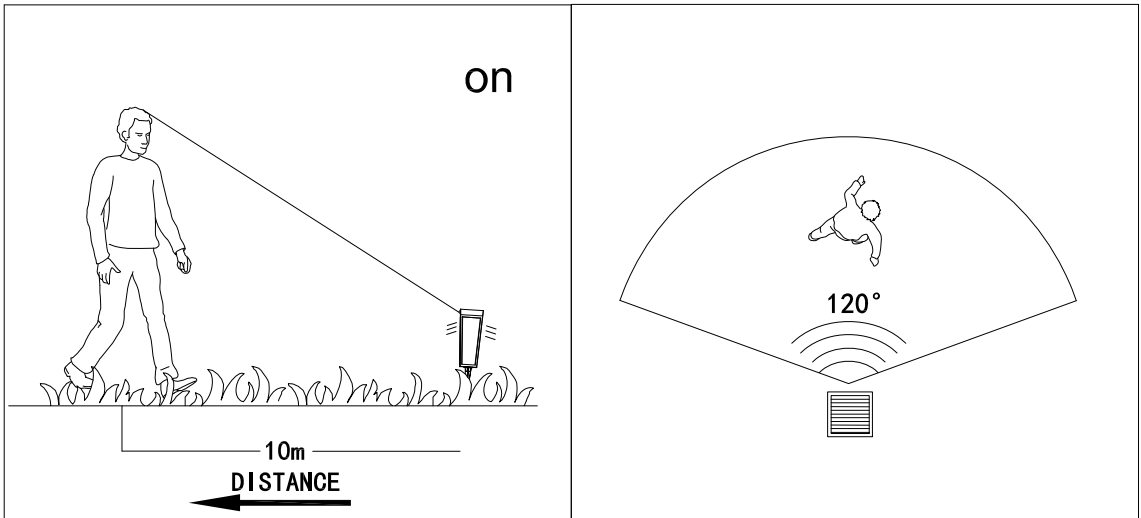

Replace the battery

