

nicky clarke



Nicky Clarke Frizz Control Dryer
Model No: NHD177 / NHD177-C / NHD177AG

INSTRUCTION BOOKLET

HOUSEHOLD USE ONLY

Please **READ** and **RETAIN** for future reference

PLEASE RETAIN **FOR FUTURE REFERENCE**

Thank you for purchasing your Nicky Clarke Frizz Control Dryer.
To get the best from your new dryer, take a few moments to read these instructions and keep them in a safe place for future reference.
Should you require any further assistance, our friendly Customer Service team will be happy to help.

Aftersales Service

This appliance is built to the very highest of standards. There are no user serviceable parts. If the unit fails to operate correctly, please follow these steps:


- 1) Check the instructions within this booklet have been followed correctly.
- 2) Check the socket is powered and working using another appliance.
- 3) Check the fuse in the plug has not blown.
- 4) Check the mains supply is functional.
- 5) Check filters on the rear of the appliance are clean and free of dust by removing the rear cover, and gently blowing through them. **DO NOT** insert anything into the dryer to clean the motor or elements.
- 6) Leave the product to cool for 30 minutes and check whether it works again.

If the appliance still fails to operate then please contact us at the below **BEFORE** returning to place of purchase:

For Customer Services please call **0345 209 7461**
Or visit us at **www.nickyclarke.com**

Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

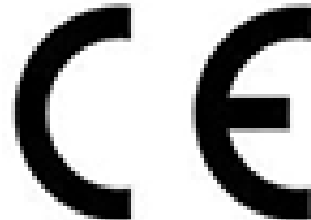

WARNING:


- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- This product is intended for household use only. **DO NOT** use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- **DO NOT** wrap the cord around the appliance.
- **DO NOT** immerse in water or other liquids for cleaning.

- **EU ONLY:** If this appliance is used in a bathroom you **MUST** install a residual current device (RCD) with a rated operating current not exceeding 30mA in the electrical circuit supplying the bathroom. An electrician will advise you of this.*
- If the hairdryer is used in a bathroom, unplug it immediately after as the proximity of water presents a hazard even when the hairdryer is switched off
- **DO NOT** store or use the unit outdoors or on wet surfaces.
- **DO NOT** handle the plug or appliance with wet hands.
- Use only as described in this manual.
- **DO NOT** abuse the power cord; never carry the appliance by the cord or pull cord to disconnect from an outlet; grasp the plug and pull to disconnect from an outlet.
- Keep hair, clothing, fingers, and all parts of the body clear of moving parts.
- **NEVER** leave the appliance unattended when switched on.
- **NEVER** remove parts from the appliance such as the case, screws and so on.
- Only use the accessories supplied by the manufacturer.
- **NEVER** put any objects into the openings on the outer case.

***The fitting of an electrical socket for, or capable of, operating the appliance, is not permitted in the UK. Nevertheless, European standards require us to include this warning in these instructions**

 - This appliance is authorized for household/residential use only **DO NOT** operate this appliance for anything other than its intended use.
- **DO NOT** allow to be used as a toy. Close attention is necessary when used by or near children.
- Children should be supervised to ensure they don't play with the appliance.
- Use only as described and for the uses described in this manual.
- **DO NOT** use the appliance if the power cord or plug has been damaged.
- **DO NOT** use appliance if it has been dropped, damaged, left outdoors, or dropped in water. Contact customer services for advice.
- Keep power cord away from heated surfaces(e.g., cooking surfaces).
- **NEVER** use the appliance near showers, bathtubs, basins, or other vessels containing water.
- **DO NOT** put any objects into openings. Do not use with any opening blocked, keep free of dust, lint, hair and anything that may reduce particle flow into the appliance.
- Turn off and allow to cool the hair dryer before clearing the rear filter grille.
- Always allow the appliance to cool on a heat resistant surface before cleaning and storing it.

Feature Diagram

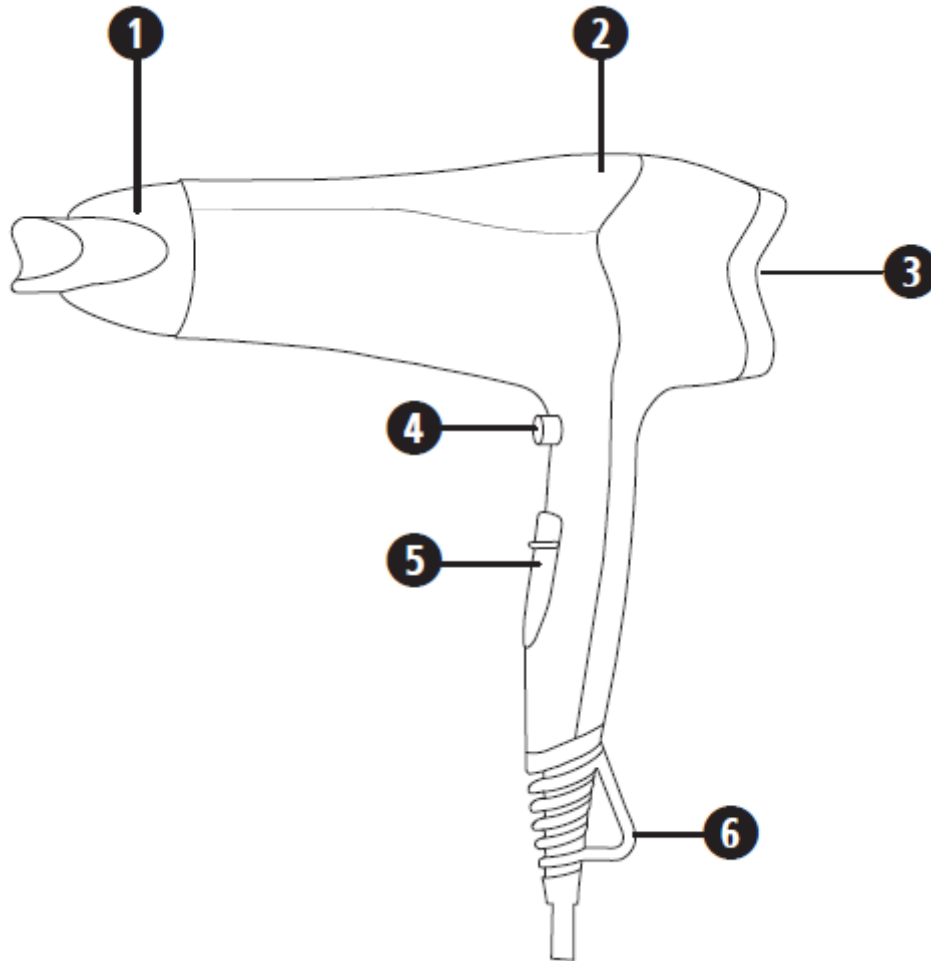

The illustrations in these instructions may differ slightly from the actual unit supplied.

- 1) Salon Slim Concentrator Nozzle
- 2) Long life Salon Professional DC Motor
- 3) Mesh Grille
- 4) Cool Shot Button
- 5) On/Off Switch with 2 Speed Settings
- 6) Hanging Loop

For Customer Services please call **0345 209 7461**
Or visit us at **www.nickyclarke.com**

Preparing for Use

- 1) Remove all packaging and keep it safe until you are satisfied with your product
- 2) DO NOT plug in the hair dryer until you are ready to use it
- 3) Check the unit for any visual damage such as:
 - a. Misaligned or damaged parts
 - b. Damage to the body, plug or power cord
- 4) If you can see any damage do not use the dryer and contact customer services.
- 5) Wash and condition your hair as you would normally
- 6) Ensure your hands are dry and hair is not dripping wet.
- 7) Ensure there is no moisture on the appliance, or on the plug
- 8) Always blot your hair dry with a towel to remove excess moisture

Ionic Technology

Your hair dryer features ionic technology which produces a flow of negative ions which may help to enhance and condition your hair, neutralising natural positive ions, which create electrostatic electricity (which causes frizz). The ionic feature may help to rejuvenate your hair leaving it soft and shiny.

Using Your Hair Dryer

Take care not to cover the air inlet grille when using the dryer. Take care when handling hot surfaces.

- 1) Ensure your hands are dry and hair is not dripping wet
- 2) Ensure there is no moisture on the appliance, or on the plug
- 3) Plug the unit into a suitable mains supply and switch on. Select the desired heat/speed setting.
- 4) Dry and style your hair as desired.
- 5) Set your style by pressing the Cool Shot button. Press and hold the button to operate Cool Shot. The Cool Shot button will deactivate once it is released.
- 6) Switch off by setting the on/off and speed switch to the off position and unplug your dryer from the mains supply socket. Allow your dryer to cool fully on a heat resistant surface before storing.
- 7) As a general guide use higher heat / speed settings for initial drying, rough drying and thicker hair. Use lower settings for finer hair, to complete your style and for more precise control. Use the concentrator to help direct the airflow.

Cleaning and Maintenance

To ensure your hair dryer remains at its optimal performance, it will require regular cleaning and maintenance.

- 1) Switch the hair dryer off, unplug from the mains, allow to cool fully, and discharge any residual charge by pressing the On switch to the On position, before returning to Off.
- 2) Wipe over the casing using a soft damp cloth (if necessary a very small amount of washing up liquid may be used on the outer case only). **DO NOT** immerse the unit in water or any liquid.
- 3) **DO NOT** use any harsh abrasives or cleaners as these will damage the appliance.
- 4) Your hair dryer is fitted with a grille filter to prevent hair, dust or fluff from getting inside your hair dryer. It **MUST** be kept clean or your hair dryer is at risk of overheating. If your hair dryer overheats, it will stop working until the safety device has cooled and reset itself.

To open the mesh grille, press the top of the grille and pull away from the body of the hair dryer. Regularly clean the mesh with a soft brush.

NEVER ATTEMPT TO CLEAN THE GRILLE BY INSERTING AN IMPLEMENT

- 5) After cleaning, close the grill. Do not operate the hair dryer unless the grille is fitted.

If you have long hair or use large amounts of styling products, clean the grille regularly i.e. once a month

Troubleshooting

Your hair dryer will stop working if it has overheated. This may be due to hair, dust or fluff blocking the grille.

- 1) Unplug the hair dryer.
- 2) Allow it to cool completely.
- 3) Clean the grille.
- 4) Plug your hair dryer in and use normally.

In the unlikely event that your hair dryer continues to overheat, unplug it and contact customer services.

Storage

Ensure your hair dryer is completely cool and dry. Do not wrap the supply cord around your dryer. Store your dryer in a cool, dry, safe place out of the reach of children.

Connecting to the Mains Supply

This appliance has been designed for BS Plug outlets only. It can be used with a suitable adapter, but under no circumstances should the plug ever be removed and changed for a different type. Any action to physically change the plug outside of changing the fuse will void the warranty on this appliance.

If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.



This symbol indicates that this unit is a Class II appliance and therefore an earth connection is not required.

Guarantee

PLEASE RETAIN YOUR RECEIPT AS PROOF OF PURCHASE

At Nicky Clarke, we take all our customer feedback seriously.

Contact our Customer Service Team, on 0345 209 7461 who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase with original proof of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse, use with incorrect voltage, acts of nature or consumable parts.

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS

Notes

Notes


Notes

For Customer Services please call
0345 209 7461

Or visit us at www.nickyclarke.com

Revision 2.7

 Model: **NHD177 / NHD177-C / NHD177AG**

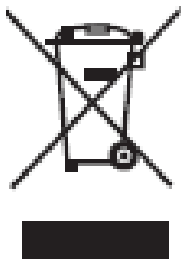

This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

All rights reserved. Imported and distributed by G2S Ltd on behalf of Nicky Clarke©, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY

This product may differ slightly from the one illustrated.