 


Hisense

USER MANUAL

Read the manual carefully and ensure you have fully understood its contents before operating this device for the first time.

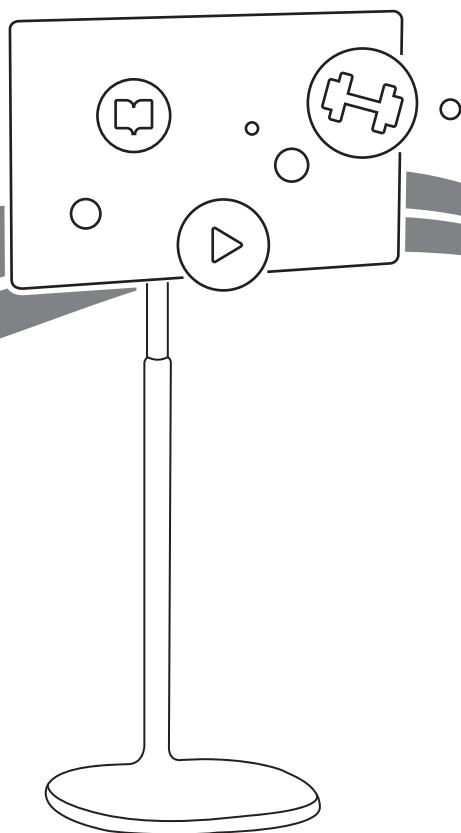

English
Deutsch
Español
Italiano
Português
Français
Nederlands



20203875

Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance.

Parts of the software function changes with the system upgrade.

Contents

Accessories List.....	A
Important Information	B
Installation and Use	1
Appearance and Connection	8
Remote Control	10
Specifications	12
Other Information.....	13

 
Accessories List



User Manual × 1



Power adapter × 1




Screwdriver × 1




Screw × 4
(M4×16)



 
Display × 1

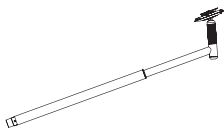


Column × 1

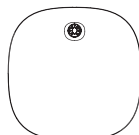 

Base × 1

 

 Ring Cover Plate×1
(inside the column packaging)

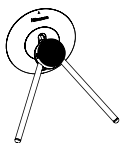


Desktop stand × 1



Remote control × 1



 Battery × 2



AC adapter cable × 1



Warranty card × 1

NOTE

- The accessories may be different from the list above due to different models, countries / regions. Please refer to the actual accessory bag.

Important Information

Important Notice

Paragraphs beginning with the symbol  indicate important instructions, tips or conditions for the following settings.



For your own safety and the optimal performance of your device, ensure to read the safety instructions before performing any installation.

Compatibility with 3rd party products, software and services are not guaranteed. We cannot be held liable for any damage or loss suffered whilst operating, using or connecting to incompatible devices or apps.

The recording and playback of content on this or any other device may require permission from the owner of the copyright or other such rights in that content. It is your responsibility to ensure that your use of this or any other device complies with applicable copyright legislation in your country. Please refer to that legislation for more information on the relevant laws and regulations involved or contact the owner of the rights of the content you wish to record or playback.

Safety Instructions

To ensure safe and correct use of this product, always comply with the following precautions to avoid dangerous situations and damage to your unit:

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The intended use and ambient conditions for this device

This device is intended for the rendering of video and audio signals, on a table-top or base-mounted, in a home or office environment. It must not be used in rooms with a high level of humidity or dust concentration. The warranty is only valid if used as intended by the manufacturer.



WARNING

High humidity and dust concentration may lead

**Read these instructions
Follow all instructions
Heed all warnings
Keep these instructions**



All rights reserved.

Hereby, Hisense Visual Technology Co., Ltd. declares that the radio equipment type is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017 of UK. Please enter the model name at the following internet address to read the full text of the declaration of conformity: <https://global.hisense.com/support/certificate-download/>.

Please refer to the rating label for model name and find Bluetooth remote control model name on the remote control or inside the remote control cover.

Authorized EU Representative

Name: Gorenje gospodinjiski aparati, d.o.o.

Address: Partizanska cesta 12, 3320 Velenje, Slovenija

Email: info@gorenje.com

to current leaks in the device. To reduce the risk of fire or electrical shock:

- **Do not expose this unit to rain, moisture, dripping or splashing water, and do not place objects filled with liquids, such as vases, cups, etc. on or over the unit.**
- **Do not touch the device with wet hands.**
- **Do not expose to direct air-conditioning and keep candles or other naked flames away from the device at all times.**

If the device is moved from a cold environment to a hot environment, leave it switched off for at least an hour to avoid condensation. If used outside, make sure it is protected from moisture.

If you notice anything unusual, immediately remove the power adapter plug, press and hold the power button for 5 seconds to force a shutdown.

In case of fire, use preferably a CO₂ gas or powder fire extinguisher. If such extinguishers are not accessible, try to isolate the electrical supply before using a water fire extinguisher.

WARNING

Stability Hazard

The device may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands methods recommended by the manufacturer of the device.
- ALWAYS use furniture that can safely support the device.
- ALWAYS ensure the device is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the device or its

controls.

- ALWAYS route cords and cables connected to your device so they cannot be tripped over, pulled or grabbed.
- NEVER place the device in an unstable location.
- NEVER place the device on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the device to a suitable support.
- NEVER place the device on cloth or other materials that may be located between the device and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the device or furniture on which the device is placed.

If your existing device is being retained and relocated, the same considerations as above should be applied.

■ Moving/Transportation

Before moving this device, disconnect all cables and move in the vertical position only. Grasp the device on the upper and lower edges of the frame.

- Do not press or put stress on the front panel of the device.

If you have to briefly lay down the device, place the unit with its entire front surface lying flat on soft material.

The LED screen is made of glass and can break if is not handled properly. Always wear rubber gloves to carry the unit. If the LED screen is damaged, liquid crystal might leak out. In case of skin contact, immediately rinse thoroughly with water.

■ Power Supply

Incorrect voltages can damage the device. Only connect this unit to a power supply with the correct voltage and frequency noted on the type plate, using the supplied power cable.

The power adapter plug must be easily accessible so that the device can be disconnected at all time. The unit is live, even if in standby mode, as long as the unit is connected to a power outlet.

It is recommended that this unit is placed on a dedicated circuit.

- Do not overload the power outlets by connect too many appliances to the same outlet. Overloaded wall outlets, extension cords, etc. are dangerous and can result in electric shock and fire.
- Switch off the device after use and unplug it if it is not going to be used for.

After power off, don't turn it on again in 5 seconds. Frequent switching power supply in a short period of time can cause abnormal operation.

■ Power adapter plug and power cable

- Do not touch the power adapter plug with wet hands.
- Do not place heavy objects on the power cable. Route the cable so that it is not kinked or laid over sharp edges, walked on or exposed to chemicals. A power cable with damaged insulation can cause electric shock and fire.

- Pull the power adapter plug, NOT on the cable when disconnecting. The cable can become damaged and cause a short circuit if pulled on.
- Do not place the power cable near a high temperature object.
- Do not move the device with the power cable plugged into a socket.
- Do not use a damaged or loose power cable, or a damaged socket outlet.
- Do not use any power cords other than the one supplied with this unit.
- MAIN plug on the power cord is used as the disconnect device, the disconnect device and socket-outlet shall be easily accessible.

 
■ Set-up

Check that the location is suitable to bear the load of the device. Place on a level, sturdy and horizontal base. Ensure that the unit does not hang over the edge of the base when placed in or on furniture. If placed on a cart, use caution when moving to avoid the unit from tipping over.

- Choose a good location for the device, in a clean place, away from sources of heat (sun, radiators, fireplaces), plants (pollen, dust, water) and the ground (risk of knocks, dust).
- Place the unit in a normal upright horizontal position. It must never be operated vertically, lying flat or hanging overhead from the ceiling.

■ Air ventilation and high temperatures

Install your device only where there is proper ventilation, and ensure that there is at least 10 cm free space on the sides and above the unit for air circulation. Excessive heat and obstruction of ventilation could lead to fire or early failure of some electric components.

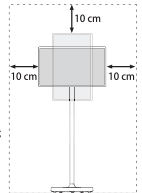

- Do not place cloth, paper or other materials over the openings on the top, sides or bottom of the appliance.
- Take care not to touch the ventilation openings since they may become hot.
- Do not insert foreign objects into the device through the vents.
- Prevent small items from getting into the interior of the device through the ventilation slots. Such objects may cause short circuits, which may cause fire.
- If something should get inside the unit, immediately unplug the power adapter plug, press and hold the power button for 5 seconds to force a shutdown (power off) and contact service support.

■ The Stand

- Do not use any stand other than the one supplied with this unit.
- Do not modify or use the stand if it becomes warped or physically damaged.
- During setup, make sure that all the screws are securely tightened.

- Ensure that the device does not suffer any impact during the attachment of the stand.
- Ensure that children do not climb onto the stand.

■ The LED screen

Despite thorough care when manufacturing this display, it cannot be 100% guaranteed that no sub-pixel defects will occur due to technical reasons. These cannot be considered as a device defect in terms of the guarantee. They will not affect the performance and reliability of the device.

To prevent "image burn", avoid displaying still images for long periods of time, there is a possibility that a copy of the image may remain. If the aspect ratio is set to 4:3 for a long period of time, image burn may occur on the black areas. Image burn is not covered by the warranty.

- Do not apply strong force or impact on the display panel.

Avoid touching the LED screen or touching it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

■ Radio waves

- Do not use the device in any medical institutions or locations with medical equipment. Radio waves may interfere with medical equipment and cause malfunction.
- Do not use the device near any automatic control equipment such as automatic doors or fire alarms. Radio waves may interfere with automatic control equipment and cause malfunction.

If you have a cardiac pacemaker, keep a distance of at least 22 cm from the device. Radio waves may interfere with the operation of a pacemaker.

■ Built-in wireless LAN

- Do not connect to wireless networks that you do not have the usage rights for. Data transmitted and received over radio waves may be intercepted and monitored.

The built-in wireless LAN uses 2.4 GHz and 5 GHz frequency band. To avoid malfunctions or slow response caused by radio wave interference, keep the product away from devices such as other wireless LAN devices, microwaves, mobile phones, and other devices that use 2.4 GHz and 5 GHz signal.

■ Warning about off-gassing

New furniture, carpet, paint, building materials and electronics can release chemicals into the air through evaporation. After you set your device up and turn it on for the first time, you may notice a slight smell within a couple of hours. This is because some components of the device are heating up for the first time. The materials that we use fully meet the environmental requirements and regulations. Your device is working just fine and the fumes from the off-gassing will diminish eventually.

■ Supervision

- Do not let children play unsupervised close to the device. It could tip over, be pushed off or pulled down from the stand surface and injure someone.

- Do not allow a switched-on device to run unattended.

■ Volume

Loud music and noises can lead to irreversible damage to your ears. Avoid extreme volume, especially over long periods and when using headphones.

If you hear a drumming noise in your ears, turn down the volume or temporarily stop using headphones.

■ Thunder Storms

Pull out the power adapter plug and all connected cables from the device during a thunderstorm. Overvoltage caused by lightning strikes can damage the device via the wall socket.

■ Long periods of absence

As long as the power adapter plug is connected to a live socket outlet, the device will consume power even in standby mode. The power adapter plug and all connected cables should be disconnected out during long periods of absence.

■ Cleaning and care

CAUTION:

Unplug the power cord prior to cleaning the device.

Clean the screen with a soft, dry cloth after switching off and unplugging the device. And avoid glass sprays and other household cleaning agents. Do not use any chemicals.

- Do not subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade the surface quality.
- Do not spray water or other liquids directly on the device. Liquid inside the device could lead to product failure.
- The surface of the display panel is treated and may be easily damaged. Take care not to scratch it with fingernails or other hard objects.
- Also wipe the power adapter plug with a dry cloth at regular intervals.

■ Service/Repair

Never remove the cover/back of the device; there are no user serviceable parts inside. Refer all service to qualified service personnel.

■ Packaging

Keep the anti-moisture materials and plastic bags out of reach of children.

Plastic bags can cause suffocation and the anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital.

■ Modification

Do not attempt to modify this product in any way. Unauthorised modification could void the warranty of this unit, cause electric shock and fires.

■ Remote Control batteries

- Store the remote control carefully, do not expose it to liquids and check the condition of the remote control batteries regularly to prevent corrosion of the contacts.
- Incorrect installation may cause battery leakage,

corrosion and explosion.

- Replace only with the same or equivalent type.
- Do not mix old and new batteries.
- Do not mix different battery types.
- Do not use rechargeable batteries.
- Do not burn or break up batteries.
- Be sure to dispose of batteries correctly.
- Do not expose batteries to excessive heat such as sunshine, fire or the like.

■ Lithium Battery

- This device contains a rechargeable lithium battery. Do not use or store the entire unit near heat sources or in high-temperature environments, such as near open flames and heaters, in direct sunlight, or inside a car on a hot day. Otherwise, the battery's lifespan and performance may be affected, and in severe cases the lithium battery may overheat and cause a fire (ignite).
- Do not charge this device with anything other than the dedicated power adapter included in the product packaging.
- Do not pierce the base with nails or other sharp objects, as this may puncture the lithium battery casing. Do not strike, throw, step on, or apply heavy pressure to the base.
- Do not disassemble or take apart the lithium battery in any way. Do not place a removed lithium battery in a microwave oven or pressure vessel.
- Store the battery carefully, do not expose it to liquids and check the condition of the battery regularly to prevent corrosion of the contacts.
- Incorrect installation may cause battery leakage, corrosion and explosion.
- Prevent it from falling down.
- Be sure to dispose of battery correctly.

■ Disposal

Refer to the recycling section of this manual.

■ Placement

- Ensure the unit is placed in a location where it is not likely to be knocked down. Any damage due to the unit being knocked down is not covered. This includes accidental knocks from daily activities like people walking by or objects being moved nearby.
- Keep the device away from areas where it may be affected by external abnormal operating forces. Damage resulting from impacts by animals, actions of children, or collisions with moving objects that cause the unit to be knocked down is not covered under warranty.
- When moving or re-positioning the screen, always follow the instructions in the user manual. Any damage that occurs from non-compliant movement or re-positioning is excluded from the warranty coverage.
- Place the unit in a location that meets the installation requirements. Do not place it in an inappropriate or unstable location.



Placement warning

Do not use this product on soft wooden floors, otherwise it will cause indentations.



AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.



DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Installation and Use

CAUTION

Installation

- Please protect the screen during installation. Do not apply pressure to the screen surface or rub/poke it with sharp objects to avoid damaging the screen.
- The stand of this unit is relatively heavy. Before taking it out of the packaging after you have finished installing the stand, make sure there are no other people within the operating area. Then remove it slowly and steadily and place it upright on a level surface to avoid injury.
- When you need to remove the display, first raise it to the highest position, then proceed with the removal to prevent the lift mechanism from springing up and causing injury.
- Use this unit together with the stand supplied with the unit and its accessories. Using a non-designated stand may cause instability and result in injury. Product defects caused by unauthorized installers who do not follow this unit's installation instructions are not covered by the warranty.
- If you do not follow this unit's installation instructions or use unauthorized installation services or accessories, there may be safety hazards (including but not limited to product falling, detachment, electrical faults, etc.) that could cause personal injury or property damage. Such damage or loss is not caused by our company and should be borne by the responsible party at fault.
- For safety reasons, the device is shipped with a low battery charge, which may result in the battery being depleted when the user powers it on for the first time. When powering on for the first time, please connect the device to the power adapter and charge the battery.

 
CAUTION

Battery

- Risk of fire or explosion if the battery is replaced by an incorrect type. Replacement of a battery with an incorrect type can defeat a safeguard.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Remember to use the battery pack in the following environments. Operating temperature 41 °F - 95 °F (5 °C - 35 °C), operating humidity 20%RH ~ 80%RH, atmospheric pressure 86kPa ~ 106kPa.
- Please use the original batteries provided by the manufacturer. Otherwise, it may pose risks such as battery explosion and fire.
- The operating temperature of the product can affect the battery charging time, which is caused by the characteristics of lithium batteries. The battery will be charged at the maximum designed current when the operating temperature is between 15°C and 45°C. When the operating temperature is between 0°C and 15°C, the charging current of the battery will be reduced to protect the battery. When the temperature is 0°C or below, the battery will stop charging to ensure safety during use.

► Base Stand Installation

- 1 Follow the unpacking instructions on the carton to open the package, remove the top foam panel, and check whether all components are intact and complete.

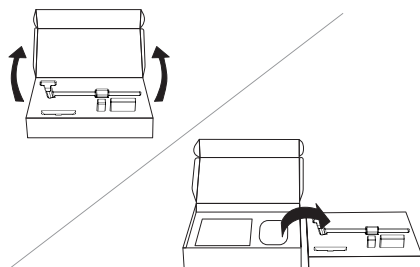

- 2 Take out and inspect the following items from the accessory bag in the package, and prepare for installation.

 


Screwdriver




Screw × 4

- 3 Position the base with the socket end facing up as shown, stand it vertically in the mounting slot of the upper foam panel, and secure it.

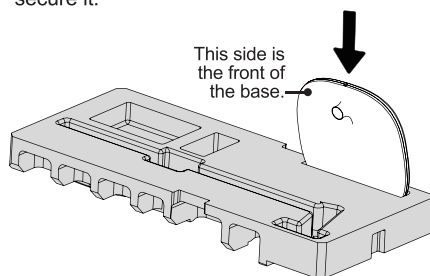


- 4 Take out the column and take off the silicone protective cover at the bottom; with support from the floor, insert it into the base socket in the direction shown.

 
To avoid damaging the top of the column or floor, it is recommended to keep the protective bag on the top of the column when assembling the base.

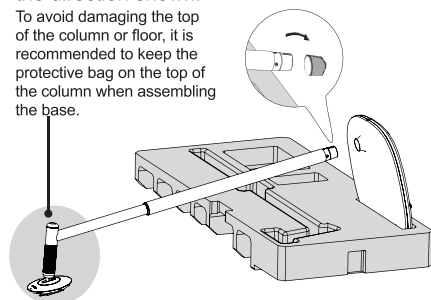

 - 5 Use a screwdriver to fasten the 4 screws into the holes on the bottom of the base, and make sure they are securely tightened.

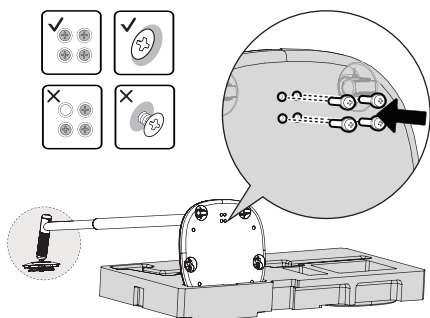

 
- 6 Using both hands, grasp the column at the positions shown in the diagram. With the foam board and the floor as support points, lift the column and then set the base upright on a horizontal floor.

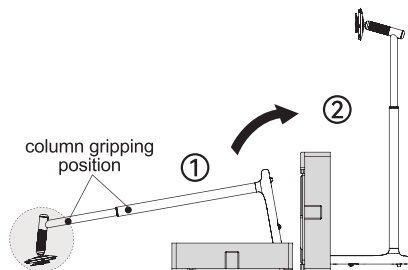


- 7** Take out the display, securely hang its back onto the metal plate at the top of the column, and lock it in place.

① Tilt the screen slightly so that the back of the display faces the metal plate at the top of the column.

 
② Align the recessed slots on the back of the display with the two raised locking posts at the top of the column and hang it securely. Press the back against the metal plate until you hear a "click," confirming the latch is firmly engaged.

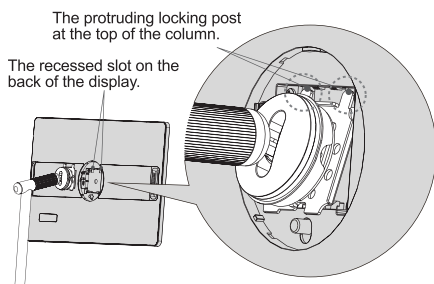

 
- 8** Route the wiring harness counterclockwise, and tuck the end of the harness into the retaining slot. Firmly insert the Type-C plug into the corresponding port on the back of the display, and keep the harness free to move.

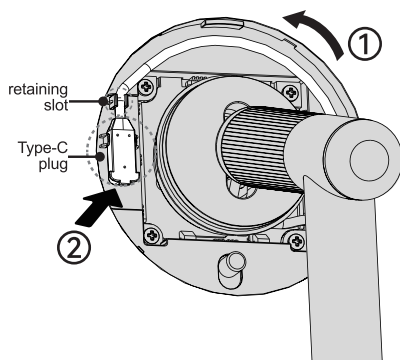

 
- 9** After properly connecting the power adapter to the power input port on the back of the base, press and hold the power button on the side of the unit for 1 second, then release to check that it powers on normally. After that, install the ring cover with the logo facing up onto the rear shell.

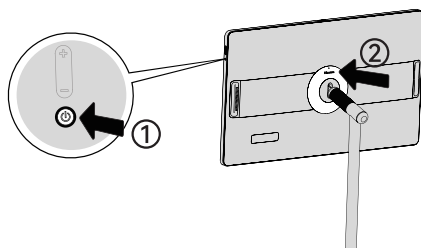

 - 10** Installation complete. Start your journey of exploration.

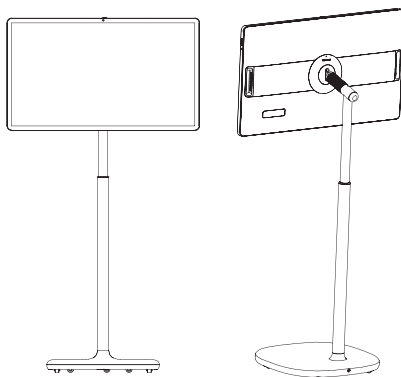


! Precautions

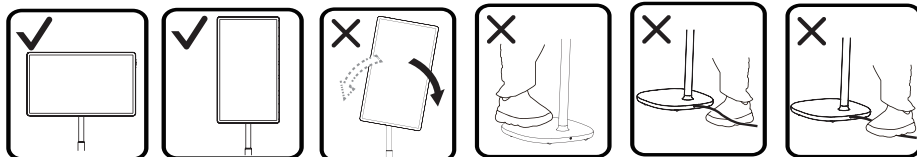 


► Desktop Stand Installation

 
- 1 Place the display face down on a level tabletop. Make sure to lay a soft material on the table to avoid scratching the screen.

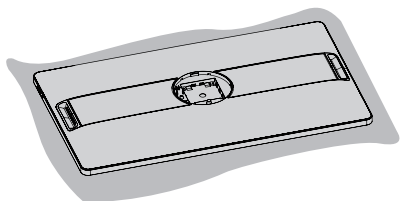

 
- 2 Remove the desktop stand from the packaging. Insert the raised locking post at the top of the stand into the corresponding slot on the back of the display.

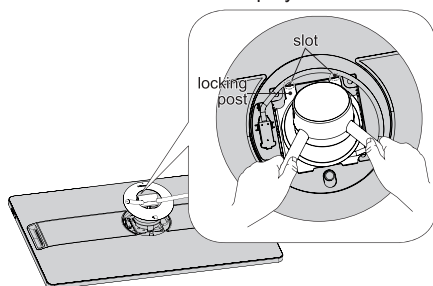

 
- 3 Then press the desktop stand downward so that the metal plate fits flush against the back of the display until you hear a "click." Confirm that the locking tabs are securely fastened.

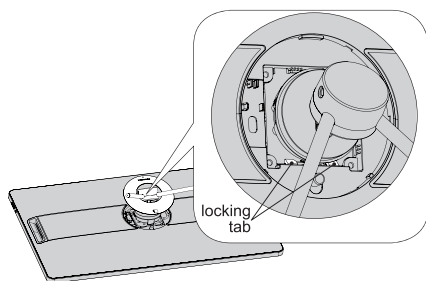

 
- 4 Route the wire harness counterclockwise, insert the end of the harness into the retaining slot, then firmly plug the Type-C connector into the corresponding port on the back of the display, and keep the harness free to move.

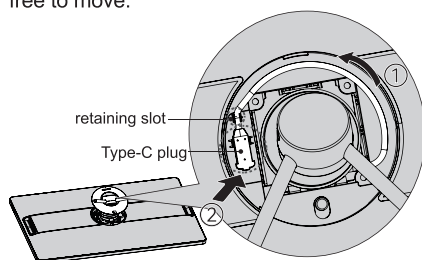

 - 5 Install the ring cover with the logo facing up onto the back shell, then use both hands to hold the support leg and adjust it up and down to a suitable angle.

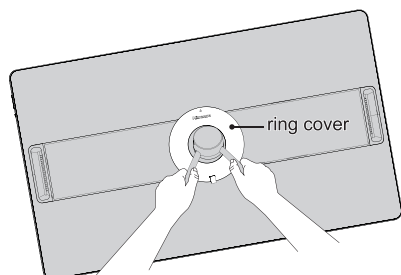

 - 6 After installation, place the unit upright on a level desktop, connect the standard power adapter of the display to the power input port correctly, and press the power button on the side of the unit to turn it on.

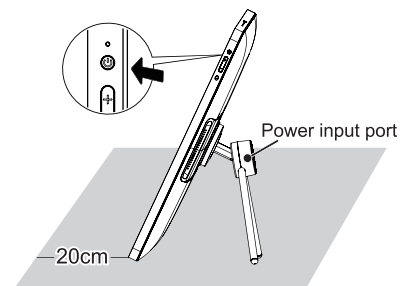

NOTE: To prevent slipping, keep the display's bottom edge at least 20 cm from the desk's edge.

⚠ When using desktop stand, the device must be connected to a power adapter to work.

 
 
► **Disassembly**

If you need to remove the display, please follow the steps below and take proper protective measures to avoid damaging the screen.

- 1

Raise the display to its highest position in landscape orientation, pull the handle, and remove the circular cover plate.
- 2



Use your fingers or a screwdriver to hook the raised area on the underside of the Type-C plug and pry the plug outward. Then remove the Type-C cable from the retaining slot.

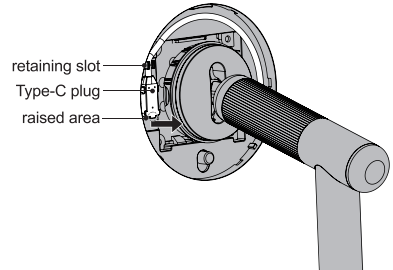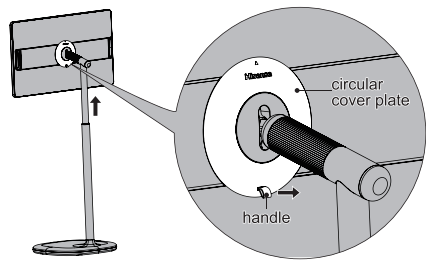




- 3

On the back of the unit, use one hand to push the quick-release switch downward. With your other hand, gently support the middle of the bottom of the display and push it forward to disengage it from the latch.
- 4

  Then hold both sides of the display and lift it forward and upward to remove the unit, placing it in a safe location.

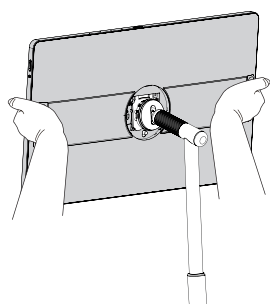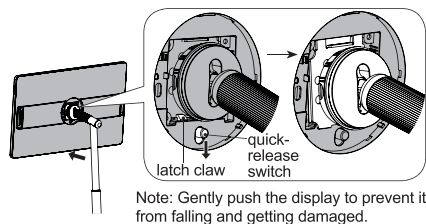


! Precautions

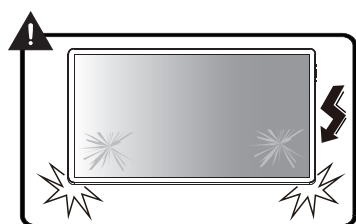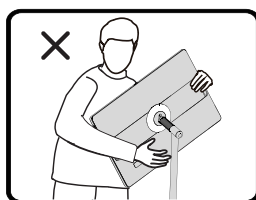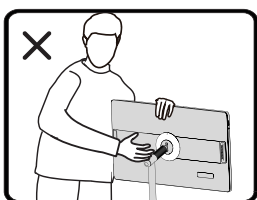   



CAUTION: Risk of dropping.

► Orientation Adjustment

 
This product allows the display to rotate clockwise and counterclockwise, adjust tilt angle and height, and can be moved on a level surface (when moving, please operate at the positions shown in the diagram).



Supports height adjustment of 30 cm.

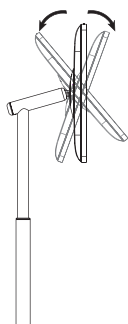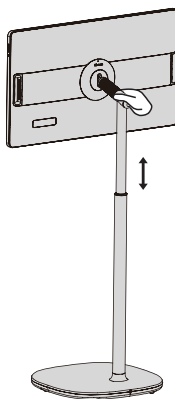  

 Supports 60° tilt adjustment.
(40° upward tilt and 20° downward tilt)

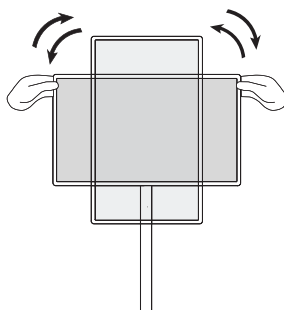

Supports 180° rotation adjustment.
(rotate 90° to the left or 90° to the right when in landscape orientation)

 
📌 NOTE:

- When adjusting the display, hold it by the edges. Do not apply pressure to the screen surface to avoid damaging the screen.
- Please be careful not to use excessive force during operation to avoid damaging the mechanical components.
- Some apps do not support both portrait and landscape orientations; please refer to each app's own properties for details.
- Actual adjustable height and angle may vary due to external factors.


► Battery Replacement

Remove the Battery


- 1 Remove the screws on the battery cover.

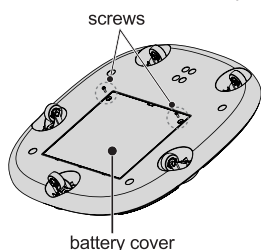

 
- 2 Remove the battery cover from the indicated removal point in the diagram.

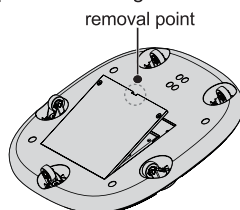

 - 3 Press the rear of the switch and pull out the connector. And unscrew the four battery screws.

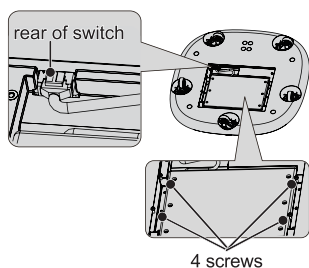


- 4 Remove the battery.

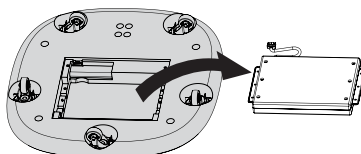 


Reinstall the Battery

 
- 1 Put the battery into the battery compartment.

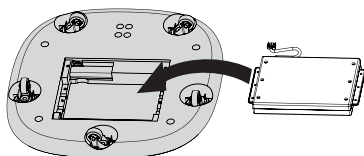

 
- 2 Secure the four screws, and then insert the plug.

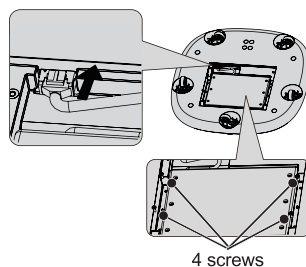

 - 3 Put the battery cover back on the battery compartment.

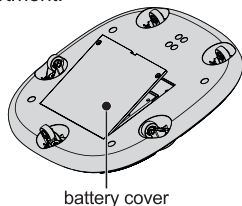

 - 4 Secure the two screws of the battery cover.

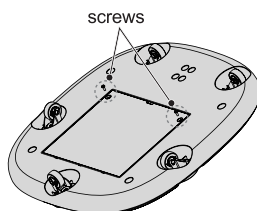


CAUTION:

Please make sure to use the specified original lithium-ion rechargeable battery. If you use a lithium-ion rechargeable battery that is not the specified one, it may lead to serious accidents such as fires.

Appearance and Connection

⚠ CAUTION

 - In special circumstances, you can force a power-off by pressing and holding the power button on the side of the device for 5 seconds.
- Please use the standard power adapter; otherwise, the device may sustain unforeseeable damage.

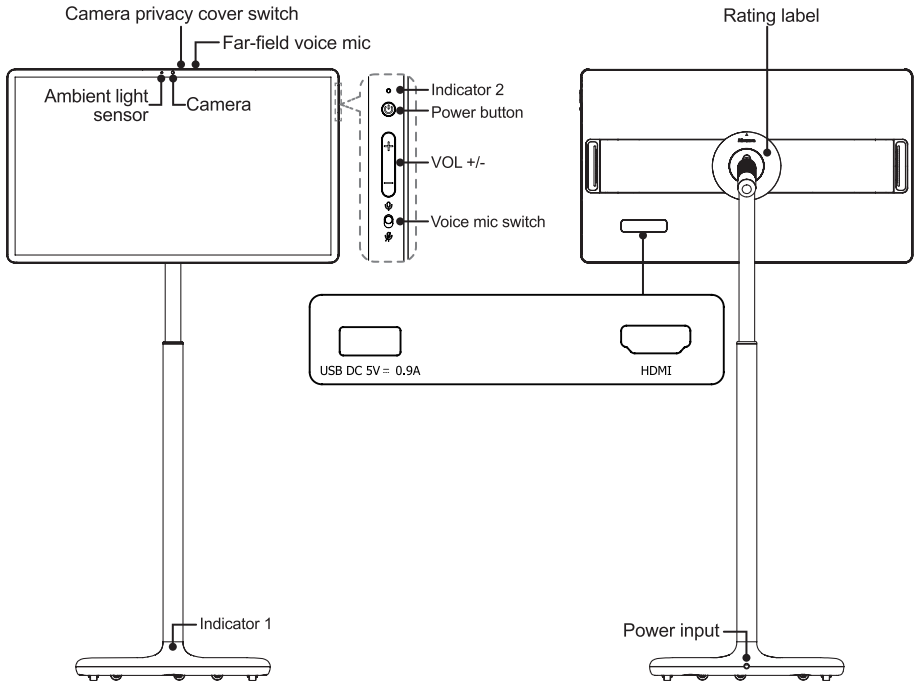

📌 NOTE:

- Some external devices may fail to connect to this unit due to individual differences. If this occurs, please replace the cable with a suitable one or add an adapter that matches the port.
- Keep the camera area clean to prevent blurriness and halos that could affect your experience. If smudges occur from touching, wipe them off with a lens cloth.
- This device supports far-field voice functionality, to use this function, connect your device to the network first. This function and some of its features are available on limited country/region/ language.
- Powering on the device requires several seconds to load contents. Do not rapidly turn it off as it may cause the device work abnormally.
- The Picture is Only for Reference.


Item	Description
Indicator	- Power on: Indicator is on. - Power off / Standby: Indicator is off. - Charging(not full): Breathing pulse.(only indicator 1)
Power button	- Power on: Press and hold the power button on the side of the device for more than 1 second, then release it to power on. On first startup, follow the on-screen guidance to complete the setup wizard. - Screen off: When the device is powered on, press the power button on the side of the device to enter screen-off mode; press the power button again to exit screen-off mode. - Power off: When the device is powered on, press and hold the power button for about 3 seconds to bring up the power options menu and select the power off option.
VOL +/-	Press to increase/decrease the volume.
Voice mic switch	Switch on the far-field voice mic to use the built-in microphone.
HDMI	Connect an HDMI cable from an external equipment.
USB	Connect a USB device for browsing photos, listening to music and watching movies.

NOTE

- Check the jacks for position and type before making any connections. Loose connections can result in image or colour problems. Make sure that all connections are tight and secure.
- Not all devices have the ability to connect to the display, please refer to the user's manual of your device for compatibility and connections procedure.
- Before connecting external equipment, remove the mains plug from the wall socket. Otherwise, it may cause electric shock.

Remote Control

 ► Buttons

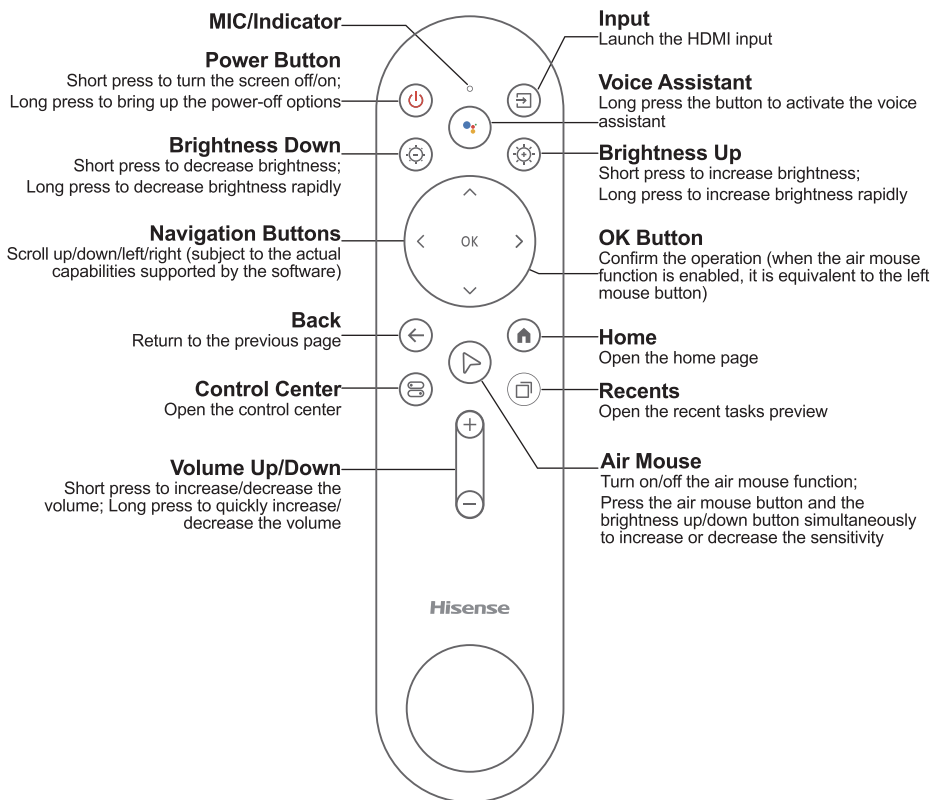

NOTE

- The appearance and functions of the remote control may change due to product upgrades. Please refer to the actual product.

► Pairing the Remote Control

 
Pair the remote to the display after you power it on. Keep the remote control within 3 metres from the display and point the remote control at the screen. Press any button (except power button) to pair.

NOTE


- In special cases, press and hold the [←] and [🏠] button at the same time for at least 3 seconds to start manual pairing or clear remote pairing information.
- If an unknown error occurred with the remote, then it could have been caused by interference. Try to remove what's causing the interference and pair it again.
- If an unknown error occurred in the remote control while the battery power is normal, you can take out the batteries, press any key for 1~2 seconds, and insert them back. Then the remote control will work normally.
- The remote cannot be paired to the display while the display is in standby mode.

► Installing Batteries


1. Slide down to open the cover.

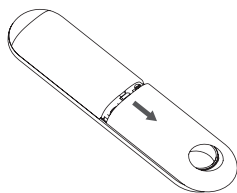

 2. Install the batteries.

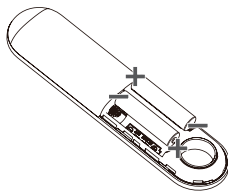

 3. Slide to latch it closed.

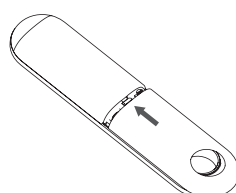


NOTE

- Dispose of your batteries in a designated disposal area.
- Do not mix battery types or combine used batteries with new ones.
- Remove depleted batteries immediately to prevent battery acid from leaking into the battery compartment.
- If you do not intend to use the remote control for a long time, remove the batteries.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Risk of fire or explosion if the battery is replaced by an incorrect type.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

► Remote Control Operation Range

 1. The remote control can work at a distance of up to 5 metres in front of the display.
2. The remote control angle: taking the remote sensor as an apex, 3 metres away, its controlled horizontal angle is within $\pm 30^\circ$, while the vertical angle is within $\pm 15^\circ$.
3. The operating distance may vary depending on the brightness of the room.

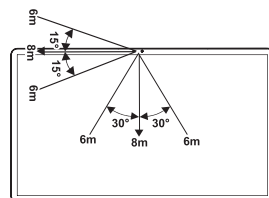

Disposal of this unit

Product should not be damaged, dismantled or thrown in municipal waste. It should be packed and handed over to authorised re-cycler.

Specifications

☒ Features, appearance and specifications are subject to change without notice.

Model		32"
Dimension (W × H × D)	Display	28.9 × 16.9 × 1.5 inches (735 × 430 × 39 mm)
	With base column	28.9 × 53.9 × 16.9 inches (735 × 1368 × 430 mm)
	With desktop stand	28.9 × 15.9 × 8.5 inches (735 × 404 × 217 mm)
Weight	Display	17.0 lbs (7.7 kg)
	With base column	54.7 lbs (24.8 kg)
	With desktop stand	18.1 lbs (8.2 kg)
Active Screen Size (Diagonal)		80 cm
Screen Resolution		3840×2160
Audio Power		8W+8W
Operating mode power density		0.0658 Watts/cm²
Network standby power consumption		≤ 1.7 W
Power consumption in standby mode		1.5 W
Power consumption		180 W
Power supply		19V---9.47A
Power adapter	Input	AC100~240V,50Hz/60Hz
	Output	19V---9.47A
Lithium battery pack	Rated capacity	216.81Wh
	Nominal voltage	14.6V
	Charge cutoff voltage	16.8V
Wireless LAN Module specifications	Frequency Range	2.4-2.4835GHz 5.15-5.85GHz
	Output Power (Max.)	2.4-2.4835GHz 17dBm 5.15-5.25GHz 14dBm 5.25-5.35GHz(DFS Band) 14dBm 5.49-5.71GHz(DFS/TPC Band) 14dBm 5.725-5.85GHz(for Non EU) 14dBm
	Standards	IEEE 802.11a/b/g/n/ac
Bluetooth Module specifications	Frequency Range	2.4-2.4835GHz
	Output Power (Max.)	2.4-2.4835GHz,Class1,6dBm
Environmental conditions		Operating Temperature: 41°F - 95°F(5°C - 35°C) Operating Humidity: 20% - 80% RH Atmospheric Pressure: 86kPa - 106kPa Storage Temperature: 5°F to 113°F(-15°C to 45°C) Storage Humidity: ≤80%RH

HDMI Input	RGB/60Hz (640×480, 800×600, 1024×768) YUV/50Hz (576p, 720p, 1080p, 2160P) YUV/60Hz (480p, 720p, 1080p, 2160P) YUV/24Hz 25Hz 30Hz (3840×2160) YUV420/50Hz 60Hz (3840×2160) YUV444/50Hz 60Hz (3840×2160) RGB444/50Hz 60Hz (3840×2160)
-------------------	---

Other Information

Recycling/Licenses
WEEE (Waste Electronic Electric Equipment)
European Directive 2012/19/EU



This symbol on the product or on its packaging indicates that this product must not be disposed of with your household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Batteries



In accordance with the Battery Directive, used batteries should not be disposed of in the domestic waste. Dispose your batteries in the collection containers specific for this purpose in retail stores.

ROHS (Restriction of Hazardous Substance)
European Directive 2011/65/EU



This European directive limits the use of dangerous and hazardous substances which are difficult to recycle. This allows recycling easily the EEE and contributes to the safeguard of the environment. Substances included in this product match to the RoHS directive.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

EPREL Registration Information

32S6S (2618317)