



**INSIDE EVERY GREAT HOME**



## **USER GUIDE**

**BELLING 100/110cm ELECTRIC INDUCTION (ALL MODELS)**



## **Table Of Contents**

|   |           |
|---|-----------|
| <b>INTRODUCTION .....</b>                     | <b>1</b>  |
| <b>SAFETY &amp; WARNING INFORMATION .....</b> | <b>3</b>  |
| <b>GETTING TO KNOW YOUR PRODUCT .....</b>     | <b>8</b>  |
| <b>OVENS &amp; GRILLS .....</b>               | <b>15</b> |
| <b>USING THE GRILL .....</b>                  | <b>16</b> |
| <b>USING THE MAIN OVEN .....</b>              | <b>18</b> |
| <b>CLOCK/PROGRAMMER .....</b>                 | <b>23</b> |
| <b>CLEANING YOUR APPLIANCE .....</b>          | <b>26</b> |
| <b>APPLIANCE MAINTENANCE .....</b>            | <b>27</b> |
| <b>FAQ's .....</b>                            | <b>29</b> |
| <b>TECHNICAL DATA .....</b>                   | <b>31</b> |
| <b>ENERGY DATA TABLE .....</b>                | <b>32</b> |

# INTRODUCTION

This user guide book is designed to help you through each step of owning your new product.

Please read it carefully before you start using your appliance, as we have endeavored to answer as many questions as possible and provide you with as much support as we can.

General information, spares and service information is available from our website.

If you should find something missing from your product or have any questions that are not covered in this user guide, please contact us (see contact information inside the front cover).

For a more detailed explanation of how to use this product, please refer to [www.belling.co.uk](http://www.belling.co.uk) for the full user manual.

## CONTACT INFORMATION:

### Customer Care Helpline:

**0344 815 3746**

**Alternatively, use the contact form on our website**

**[www.belling.co.uk](http://www.belling.co.uk)**

**Details about warranty registration and spares & service information are also available on our website.**

Calls are charged at the basic rate, please check with your telephone service provider for exact charges.

Your new appliance comes with our FREE 3 year guarantee (UK only), protecting you against electrical and mechanical breakdown.

To register your new appliance for its warranty (UK only) please visit our website [www.belling.co.uk](http://www.belling.co.uk). For full terms & conditions of the manufacturer's guarantee, please refer to the website above.

In addition, you may wish to purchase an extended warranty. Details of how to do this are also on our website [www.belling.co.uk](http://www.belling.co.uk).

Our policy is one of constant development and improvement, therefore we cannot guarantee the strict accuracy of all of our illustrations and specifications. Changes may have been made subsequent to publishing.

Glen Dimplex Home Appliances, Stoney Lane, Prescot, Merseyside, L35 2XW

## COUNTRIES OF DESTINATION:

|                          |   |
|--------------------------|---|
| <b>GB- Great Britain</b> |  |
| <b>IE - Ireland</b>      |  |
| <b>DE - Germany</b>      |   |
| <b>FR - France</b>       |   |
| <b>PL - Poland</b>       |   |
| <b>NL - Netherlands</b>  |   |
| <b>SE - Sweden</b>       |   |
| <b>NZ - New Zealand</b>  |   |
| <b>AU - Australia</b>    |   |

## EUROPEAN DIRECTIVES

As a producer and a supplier of cooking appliances we are committed to the protection of the environment and are in the compliance with the WEEE directive.

All our electric products are labelled accordingly with the crossed out wheeled bin symbol. This indicates, for disposal purposes at end of life, that these products must be taken to a recognized collection points, such as local authority sites/local recycling centres.

This appliance Complies with European Community Directives (CE) for household and similar electrical appliances and Gas appliances where applicable.

This appliance conforms to European Directive regarding Eco design requirements for energy-related products. Our policy is one of constant development and improvement, therefore we cannot guarantee the strict accuracy of all of our illustrations and specifications - changes may have been made subsequent to publishing.

| <b>DISPOSAL OF PACKAGING MATERIAL</b>   |  |
|---|--|
|  | <p>The packaging materials used with this appliance can be recycled. Please dispose of the packaging materials in the appropriate container at your local waste disposal facilities.</p> |

# SAFETY & WARNING INFORMATION



## Warning

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



## Warning

If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.



## Warning

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.



## Warning

The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less

than 8 years of age shall be kept away unless continuously supervised.



## Warning

The oven must be switched off before removing the guard and that, after cleaning, the guard must be replaced in accordance with the instructions.



## Warning

A steam cleaner is not to be used on this appliance.



## Warning

Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

Any spillage should be removed from the lid before opening and the hob surface should be allowed to cool before closing the lid.



## Warning

Ensure the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

**Warning**

Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. **NEVER** try to extinguish a fire with water, but switch off the appliance and the cover the flame e.g. with a lid or a fire blanket.

**Warning**

Danger of fire: do not store items on the cooking surfaces.

**Warning**

Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporate into the appliance. The use of inappropriate guards can cause accidents.

**Warning**

Never place food, or dishes on the base of the main oven, the element is here, and it will cause overheating.

**Warning**

The appliance must never be disconnected from the mains supply during use, as this will seriously affect the safety and performance, particularly in relation

to surface temperatures becoming hot and gas operated parts not working effectively. The cooling fan (if fitted) is designed to run on after the control knob has been switched off.

**Warning**

Do not store flammable liquids or items in the vicinity of this appliance.

**Warning**

Do not modify this appliance.

**Warning**

Do not operate the appliance without the glass panel correctly fitted.

**Warning**

Accessible parts may become hot when the grill is in use. Children should be kept away.

**Warning**

If a lid is fitted to your appliance any spillage should be removed from the lid before opening and the hob surface should be allowed to cool before closing the lid.

**Warning**

This appliance must be earthed.

**Caution**

After use, switch off the hob element by its control and do not rely on the pan detector.

**CAUTION INFORMATION****Caution**

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

**Caution**

This appliance is not intended to be operated by means of an external timer or separate remote control system.

**Caution**

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass/ the glass of hinged lids of the hob (as appropriate), since they can scratch the surface, which may result in the shattering of the glass.

**Caution**

The cooking process must be supervised, A short-term cooking process has to be supervised continuously.

**Caution**

Only use the temperature probe recommended for this oven.

**Caution**

Accessible parts may be hot when the grill and/or the oven are in use. Young children shall be kept away.

**Caution**

Do not stare at the hob elements.

**Caution**

Our policy is one of constant development and improvement, therefore we cannot guarantee the strict accuracy of all our illustrations and specifications. Changes may have been made subsequent to publishing.



### **Caution**

**Make sure that you have removed all packaging and wrapping. Some of the items inside this appliance may have additional wrapping. It is advised that you turn the ovens and/or grill on for a short while. This will burn off any residues left from manufacturing. There may be a smell which accompanies this process- but this is nothing to worry about and is harmless. It is recommended that you wash the oven shelves, baking tray, grill pan and grill pan trivet before their first use in hot soapy water. This will remove the protective oil coating.**



### **Caution**

**We recommend that the appliance is connected by a competent person who is a member of a 'Competent Person Scheme' who will comply with the required regulations.**



### **Caution**

**The space of air circulation, located underneath and at the back of the hob improves its reliability by ensuring that it will cool down, efficiently.**



### **Caution**

**This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.**



### **Caution**

**Connection should be made with a suitable flexible cable with a minimum temperature of 70°C. Ensure that you route all mains cables well clear of any adjacent heat source.**

- Please read the following most carefully:

## **ELECTROMAGNETIC INTERFERENCE**

The functions of the hob comply with the applicable standard on electromagnetic interference.

Your induction cooking hob thus complies fully with the statutory requirements (Directive 2004/108/EC). It is designed to not interfere with the functioning of other electrical equipment as long as these also comply with the same regulations.

Your induction hob generates magnetic fields in its immediate vicinity.

So that there is no interference between your cooking hob and a pacemaker, the pacemaker must be designed in compliance with the appropriate regulations.

In this respect we can only guarantee the compliance of our own product. You can ask the manufacturer or your doctor about the compliance or any incompatibilities of your pacemaker.

## FIRE SAFETY ADVICE

- If you do have a fire in the kitchen, don't take any risks- get everyone out of your home and call the Fire Brigade.
- **If a pan catches fire:**
  - Do not move it- it is likely to be extremely hot.
  - Turn off the heat if it's safe to do so- but never lean over the pan to reach the controls.
  - If you have a fire blanket, put it out over the pan. If you have put the fire out, leave the pan to cool completely.
- **Deep-fat frying presents more dangers in your kitchen.**
  - Never fill a chip pan ( or other deep fat fryer) more than one-third full of oil.
  - Do not use a fire extinguisher on a pan of oil- the force of the extinguisher can spread the fire and create a fireball.
- **If you have an electrical fire in the kitchen:**
  - Pull the plug out, or switch off the power at the fuse box - this may be enough to stop the fire immediately
  - Smother the fire with a fire blanket, or use a dry powder or carbon dioxide extinguisher
  - **Remember:** never use water on an electrical or cooking oil fire.

## OTHER SAFETY ADVICE

- **DO**
  - Always take care removing food from the oven as the area around the cavity may be hot.
  - Always use oven gloves when handling any utensils that have been in the oven as they will be hot.
  - Always make sure that the oven shelves are resting in the correct position between two runners.
  - Always use the Minute Minder (if fitted) if you are leaving the oven unattended- this reduces the risk of food burning.

- **DO NOT**

- Never place items on the door while it is open.
- Never wrap foil around the oven shelves or allow foil to block the flue.
- Never drape tea towels near the oven while it is on; this will cause a fire hazard.
- Never pull heavy items, such as turkeys or large joints of meat, out from the oven shelf, as they may overbalance and fall.
- Never use this appliance to heat anything other than food items and do not use it for heating the room.

# GETTING TO KNOW YOUR PRODUCT




## Important

If the clock/ programmer is locked, it must be unlocked before the appliance can be used.

To lock/ unlock the clock/ programmer press and hold the '+' key for 5 seconds.


Your appliance layout may differ depending on the model.

## CONTROL PANEL

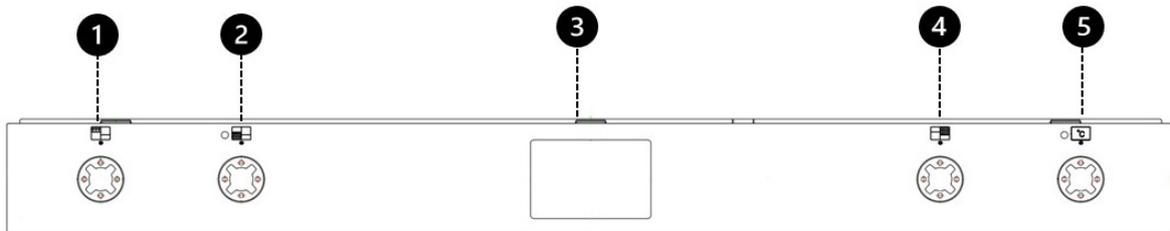


|   |                     |
|---|---------------------|
| 1 | Top Oven/ Grill     |
| 2 | Conventional Oven   |
| 3 | Clock/ Programmer   |
| 4 | Main oven           |
| 5 | Temperature control |

## HOB

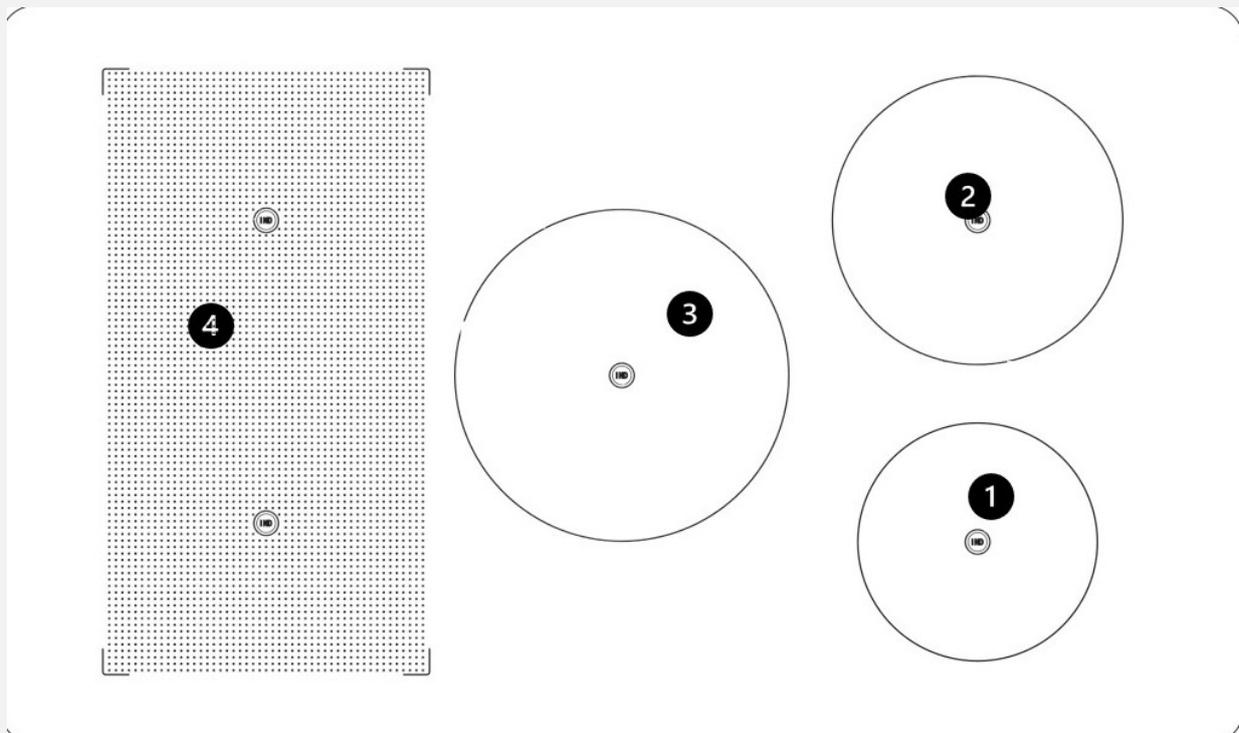

| <b>HOB FUNCTIONS</b> |                               |                         |
|----------------------|-------------------------------|-------------------------|
| <b>1</b>             | <b>Small</b>                  | <b>Right hand front</b> |
| <b>2</b>             | <b>Medium</b>                 | <b>Right hand rear</b>  |
| <b>3</b>             | <b>Large</b>                  | <b>Centre</b>           |
| <b>4</b>             | <b>Bridged Induction Zone</b> | <b>Left hand side</b>   |

## CAVITY OVERVIEW

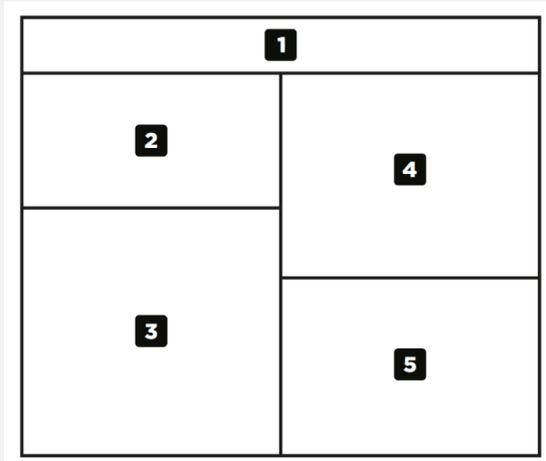


| CAVITY OVERVIEW |                     |
|-----------------|---------------------|
| 1               | Fascia              |
| 2               | Top Grill           |
| 3               | Conventional Oven   |
| 4               | Fanned Oven         |
| 5               | Storage Compartment |

## INDUCTION HOB CONTROLS (Touch Models)

### INDUCTION CONTROLS ON HOB

(Layout may vary dependent upon model)

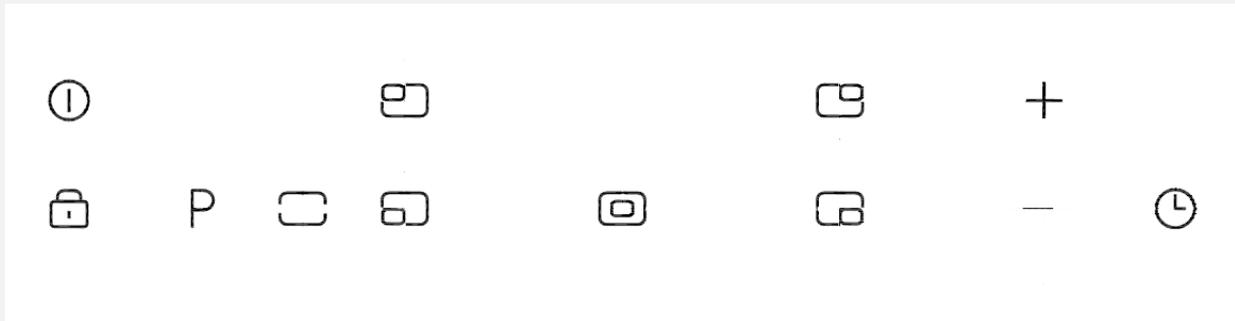

| INDUCTION CONTROLS (Touch models) |        |   |
|-----------------------------------|--------|---|
| Feature                           | Symbol | Description   |
| Central Power On/ Off             |        | Power On/Off for the Induction hob.   |
| Power Boost                       | P      | Temporarily boost the power to a cook zone by a massive 60%.                            |
| Adjustment key (Heat & Timer)     | - +    | Adjust the heat level or timer by using the plus and minus icons to the correct amount. |

| INDUCTION CONTROLS (Touch models) |   |  |
|-----------------------------------|---|--|
| Feature                           | Symbol  | Description  |
| Key Lock                          |  | To prevent accidentally changing settings, press the key graphic to lock the controls. |
| Timer On/Off                      |  | Operates the timer function.   |
| Cook Zones                        |  | Select the desired cook zone before setting the heat level or the timer function.      |

## ABOUT THE INDUCTION HOB (TOUCH CONTROLS)

The induction hob provides the most energy efficient hob technology available.

The induction system provides superior heat up and cool down times for pans- you get fast, precise, repeatable power control.

As induction only heats up the pan, there is no lost heat from the cooking process, which in turn, limits the heat generated in the kitchen.

### TOUCH CONTROLS

The touch controls for your induction have been designed to provide you with finger touch control of your hob, providing accurate and repeatable power settings for cooking and an easy clean surface that can be easily wiped over.

Each cook zone displays it's individual power setting.

### USING THE TOUCH CONTROLS

To select a cook zone or the timer, simply touch the specific zone control button using the flat of your finger, not the tip. The controls respond to touch, so you don't need to apply any pressure.

Once you have powered on the induction hob, you have seconds to set the power or use the timer.

If the red displays disappear, simply press the power button again.

Always ensure the control area is clean, dry and free from any objects (e.g. utensils, tea towels and cloths). Spillages and water may make the controls difficult to operate.

### POWER BOOST

The power boost is a function that can be used to temporarily boost the normal maximum power for a cook zone by borrowing the available power from a 'paired zone'.

All the cook zones have this function.

The Power Boost is activated by touching the P button.



### Note

The Power Boost function will only operate for a limited time and is also under thermal control. This means that Power Boost will deactivate automatically if the product is hot, to protect the internal electronic components of the hob and to prevent the cookware from overheating.

## BASIC HOB FUNCTION

### TURNING ON THE HOB

- Use the on/off button.

Once you have powered on the induction hob, you have a limited time to set the power or use the timer, before the induction hob is automatically switched off.

### ACTIVATING A COOK ZONE

Select the desired cook zone by pressing the cook zone button. Then set the power/ heat level by pressing the plus and minus keys.

### TURNING OFF INDIVIDUAL COOKING ZONES

Decrease the power setting by using the minus key until the display shows 0.

### ON/OFF SWITCH

The central on/off switch enables all the cooking zones to be switched on/off simultaneously at a touch of a button, so when you have finished cooking or are called away from the kitchen for any reason you can be safe in the knowledge that everything is under control and safe.

### TO OPERATE

Select the on/off key. The key needs to be pressed for at least 1 second to activate, this is to ensure that the hob cannot be activated unintentionally.



### Warning

Don't leave pans on the hob when you're not around- take them off the heat if you have to leave the kitchen (even if you think it will only be for a moment, while you answer the door or phone) or you can use the Pause Key.

## USING THE TIMER

Before activating a timer the control has to be switched on. Switching the control off deactivates cooking zone related timers.

A symbol next to the zone will be lit when a timer is set to that zone.

### ACTIVATING COOKING ZONE TIMERS

To activate the timer, press the timer button, then either the plus (+) or minus (-) key.

A timer can be activated for each active cook zone. After selecting the timer the cooking zone related luminous symbol is fully lit and the timer display shows 0.00.

### SETTING A TIMER VALUE

By pressing the timer keys, a timer value can be set. If the timer-plus-key is pressed first the display starts with 1 minute and can be increased in 1 minute steps.

If a timer has expired the timer alarm is activated and the assigned cooking zone is immediately switched off.

The cooking zone display shows 0.



### Note

If no user input stops the alarm signal it will be on for maximum 2 minutes.

**Note**

The alarm can be deactivated by switching off the control using the main switch or by pressing the two timer keys or it will be deactivated automatically after 2 minutes.



**Note**

The safety temperature control of the pans is only possible with quality flat bottomed pans suitable for induction cooking. Poor quality pans can create air gaps between the glass and the pan, which affects the accuracy of the temperature control.


**Warning**

Never leave the hob unattended when in use, even when you have set the timer to turn off the cook zone.

| Approximate Glass Surface Temperature (°C) | Intelligent hob safety system                 |
|--|---|
| 200  | Reduces Power Boost setting to Power Level 9. |
| 250  | Reduces power to 60% of power level setting.  |
| 270  | Switches cook zone off.                       |
| 300  | Switches whole appliance off.                 |

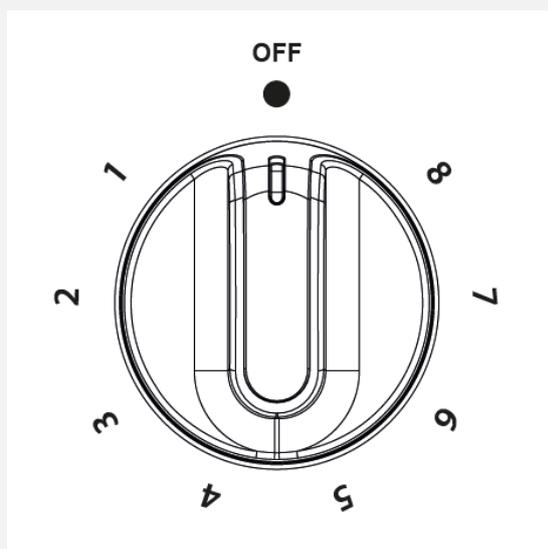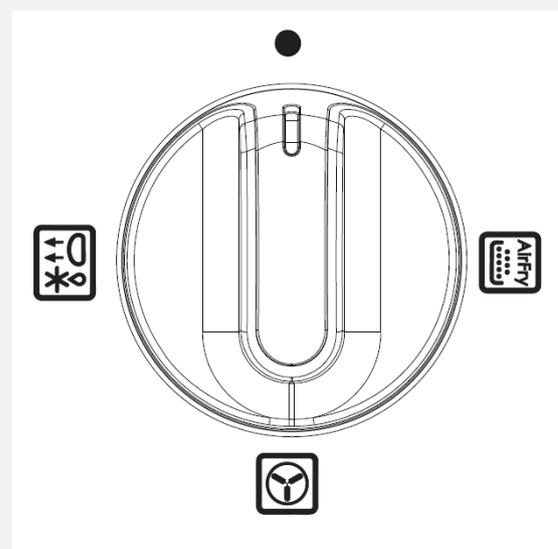**GRILL POWER SETTING DIAL****MAIN OVEN DIAL**


## TEMPERATURE CONTROL DIAL

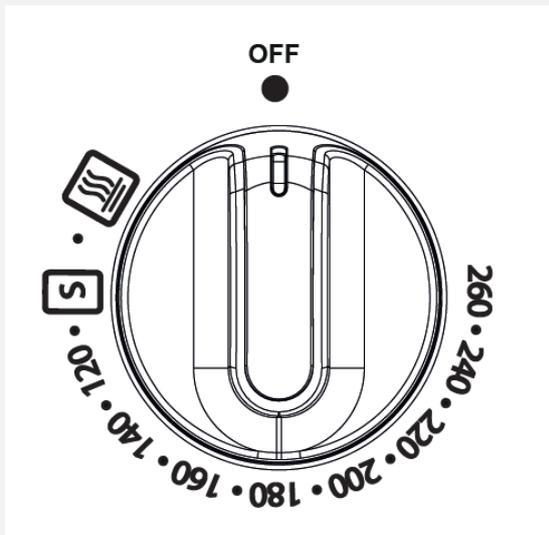

## MAIN OVEN FUNCTIONS

|                               |      |  |
|-------------------------------|------|--|
| <b>Fanned Oven</b>            | MAIN |  |
| <b>Air Fryer</b>              | MAIN |  |
| <b>Defrost/ Dough proving</b> | MAIN |  |
| <b>Keep Warm</b>              | MAIN |  |
| <b>Slow Cook</b>              | MAIN |  |

## BOTTOM OVEN DIAL

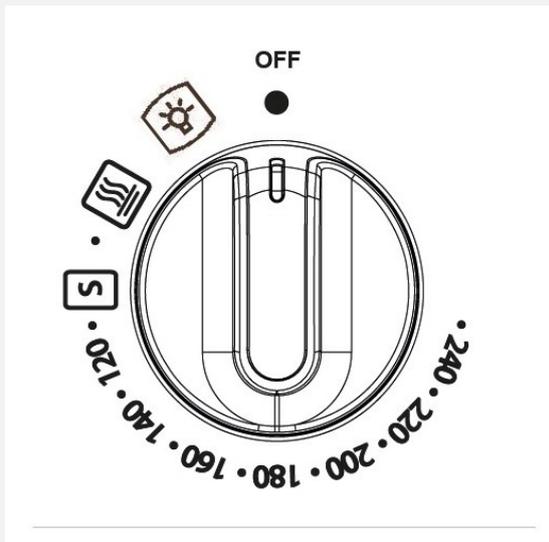

# OVENS & GRILLS

## OVENS

When using the top oven or main oven, the white thermostat indicator light will come on until the selected temperature is reached.

When the Top oven/grill or grill is switched on, the cooling fans come on to keep the fascia and control knobs cool during cooking/grilling. The cooling fans may operate when the main ovens are in use depending on the temperature setting. The fans may continue to operate for a period after the oven/grill has been switched off. During use the fan may cycle on and off, this is normal.



### Important

**Never put items directly on top of the base of the oven, or cover the oven base with foil, as this may cause the element to overheat. Always position items on the shelf.**



### Note


**The main oven will not operate if the programmer is set to Auto, see Clock/Programmer section for more information.**



### Note

**The cooling fan may run for around 1 hour after use. This is normal to ensure the exterior parts of the cooker fully cool down and because the oven cavity is very well-insulated to prevent heat escaping during the cooking process. Please do not switch the cooker off at the wall before the cooling fan has stopped completely.**

# USING THE GRILL

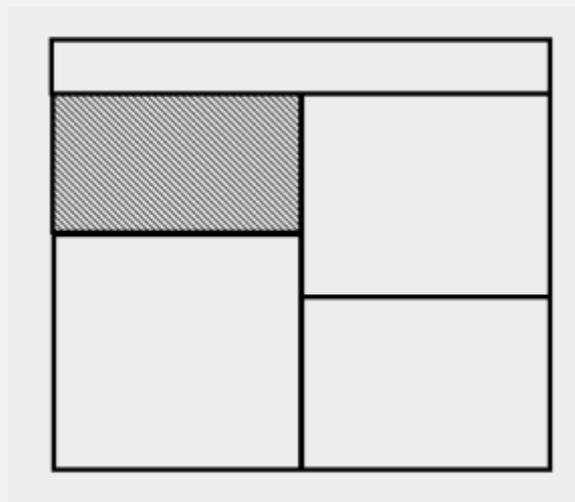

## Warning

Never cover the grill pan or grill trivet with aluminium foil, or allow fat to build up in the grill pan, as this creates a fire hazard.



## Note

The cooling fan may run for around 1 hour after use. This is normal to ensure the exterior parts of the cooker fully cool down and because the oven cavity is very well-insulated to prevent heat escaping during the cooking process. Please do not switch the cooker off at the wall before the cooling fan has stopped completely.



## Tip

For best grilling results use shelf position 2 and a 6 minute pre-heat.

## THE COOLING FAN

During use the fan may cycle on and off, this is normal.

When the grill is switched on, the cooking fan comes on to keep the fascia and control knobs cool during grilling. The fan may continue to operate for a period after the grill has been switched off.

## USING THE GRILL



## Caution

Accessible parts may be hot when the grill is used- young children should be kept away.



### **Important**

**The grill door must be fully open when the grill is used.**



### **Warning**

**The door must be open when the grill is used for conventional grilling.**




### **Tip**


**For grilling small quantities of food, the centre (economy) grill can be used with the grill trivet inverted. For large quantities of food, the full grill can be used.**

1. Open the grill door. Turn the control knob to the required setting. For best cooking results, we recommend that you preheat the dual grill for 3 minutes and the single grill for 5 minutes.
2. Push the grill pan towards the back of the shelf to position it under the grill.
3. To switch off return the control knob to the off position.

## **GRILL PAN AND TRIVET**

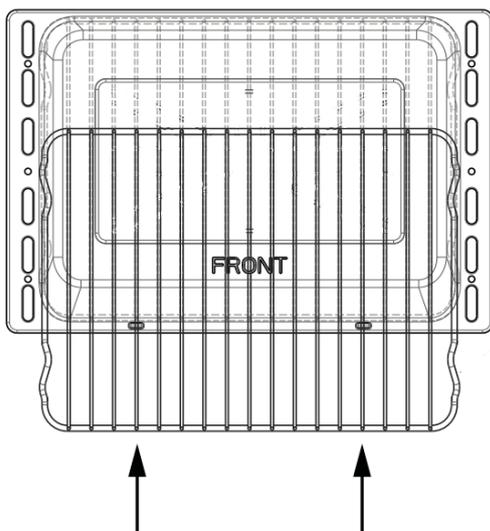

# USING THE MAIN OVEN

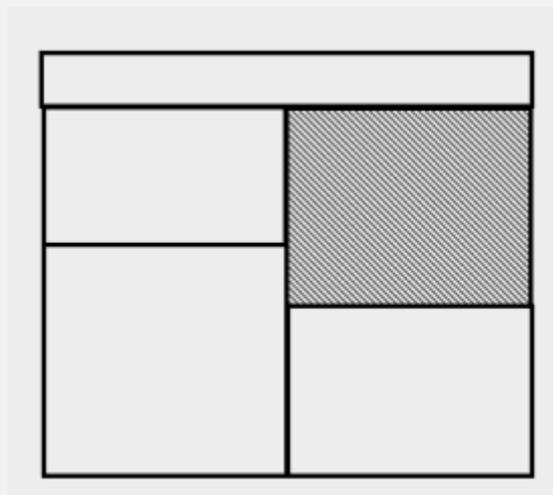

## Warning

Accessible parts may be hot when the oven is used. Young children should be kept away.

To modify or cancel the heating temperature:

- Rotate the temperature control to select another heating temperature.
- Rotate the temperature control to 0 to cancel the heating temperature.

## COOKING WITH A FANNED OVEN

### SETTING A HEATING OPERATION

To start a heating operation, a heating function and a heating temperature must be selected.

Setting a heating function

- Rotate the function control to select the desired heating function.

To modify or cancel the heating function:

- Rotate the function control to select another heating function.
- Rotate the function control to 0 to cancel the heating function.

Setting a heating temperature:

- Rotate the temperature control to select the desired heating temperature. The selected temperature shows in the display.



## Caution

As this is a high efficiency oven, you may notice the emission of steam from the oven when the door is opened. Please take care when opening the door.

If you are used to cooking with a conventional oven you will find a number of differences to cooking with a fan oven which will require a different approach.

**Tip**

Foods are cooked at a lower temperature than a conventional oven, so conventional recipe temperatures may have to be reduced. Please refer to the conversion chart below.

**Tip**

Preheating is generally not necessary as a fan oven warms up quickly.

**Tip**

There is no flavour transference in a fan oven, which means you can cook strong smelling foods such as fish at the same time as mild foods- e.g. milk puddings.

**Tip**

When batch baking foods that will rise during cooking- e.g. bread, always ensure that enough space has been left between the shelves to allow for the rise.

- There are no zones of heat in a fan oven as the convention fan at the back of the oven ensures an even temperature throughout the oven. This makes it ideal for batch baking - e.g. when planning a party as all the items will be cooked within the same length of time.

**Note**

When 2 or more shelves are being used, it may be necessary to increase the cooking time slightly.

**Note**

Because the 2 oven shelves are wider than in many ovens, it is possible to cook 2 items per shelf.

**Note**

When roasting meats, you will notice that fat splashing is reduced, which is due in part to the lower oven temperatures, and will help keep cleaning of the oven to a minimum.

**Note**

There is no need to interchange dishes onto different shelves part way through cooking, as with a conventional oven.

#### DEFROSTING AND COOLING IN THE MAIN OVEN

To defrost frozen foods, turn the oven control to the defrost position, place the food in the centre of the oven and close the door.

To cool foods after cooking prior to refridgerating or freezing, turn the main oven control to the defrost position and open the door.

#### DEFROSTING TIMES

**Note**

**Small or thin pieces of frozen fish or meat- e.g. fish fillets, prawns or mince will take approximately 1-2 hours.**

**Note**

**Placing food in a single layer will reduce the thawing time.**

**Note**

**A medium sized casserole or stew will take approximately 3-4 hours.**

**Note**

**A 1½kg/ 3lb oven ready chicken will take approximately 5 hours, remove the giblets as soon as possible.**

**Caution**

**BE SAFE:**

**Do not defrost stuffed poultry using this method.**

**Do not defrost larger joints of meat and poultry over 2kg/ 4lb using this method.**

The tray allows more air to circulate speeding up cooking time, reducing the need for any extra oils making cooking healthier.

AirFry is great for cooking chips, meat and to prepare meals that you would normally grill.

There's a few things which don't AirFry well including cakes, pastries and breads as they can become dry or tough. Foods in a wet batter also can not be cooked by AirFrying.

1. Select the AirFry function on the main oven and set the temperature to 220°C.
2. Position the metal Airfry tray on the 3rd (centre) shelf position from the bottom. Food should be evenly spaced on the airfry tray in a single layer to allow for even cooking.
3. Place a baking tray on the shelf position below the AirFry tray to catch any crumbs or drips.

**Warning**

**For recipes with 30 minutes or longer cooking time a 5-10 minute pre-heat time is recommended.**

**Frozen or dense foods may require additional cook time.**

**Note**

**If you're using a non-air fryer recipe, make sure you shorten the cooking time as food will cook faster than a conventional oven.**

## USING THE AIRFRY FUNCTION

Simply choose the AirFry setting on the main oven, then place your chips, vegetables or chicken on the specially designed air fryer tray.

**Important**

**Air Frying in a large oven cavity allows for more food to be airfried at one time, longer cooking times are to be expected. Please adjust cooking times accordingly.**

**Important**

**Greasy foods may cause smoke during the airfry cycle, maintaining a clean oven and using a baking tray below to catch debris is recommended.**

**Note**

**It may be necessary to lightly spray the airfry tray with oil to avoid food sticking to it.**

**MAIN OVEN FUNCTIONS: RECOMMENDED USES**

|                              |  |   |
|------------------------------|--|---|
| <b>Fanned Oven</b>           |  | The even temperature in the oven makes this function suitable for batch baking or batch cooking foods.  |
| <b>Air Fryer</b>             |  | The rapidly distributed air makes it suitable for oil-free frying.  |
| <b>Defrost/Dough proving</b> |  | Defrost foods with the oven door closed, or cool dishes prior to refrigeration leave the oven door open. Using with the door closed also makes it suitable for proving bread prior to baking. |
| <b>Slow Cook</b>             |  | The slow cook function will cook gently at 100°C. Perfect for tender meats & nutrition-rich stews.  |
| <b>Keep Warm</b>             |  | Uses gentle heat from the lower element to provide a consistent low temperature. It can be used to keep hot food warm or to warm plates & serving dishes.                                     |

## **OVEN FURNITURE**

- **Extra shelves may be ordered from your local supplier.**

### **Baking trays and roasting tins:**

**For best cooked results and even browning, the recommended size baking trays and roasting tins that should be used are as follows;**

- **Baking tray 350 mm x 250 mm This size of baking tray will hold up to 12 small cakes.**
- **Roasting tin 370 mm x 320 mm**

**Position baking trays and roasting tins on the middle of the shelves, and leave one clear shelf-position between shelves, to allow for circulation of heat.**

# CLOCK/PROGRAMMER



## Important

If the clock/programmer is locked, it must be unlocked before the appliance can be used.


To lock/ unlock the clock/ programmer press and hold the '+' key for 5 seconds.

Please be aware that only the main oven is controlled by the programmer.



## Note

Your clock/programmer may not have all of these functions.

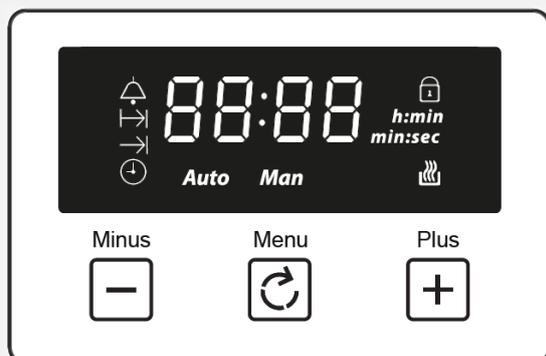


|              |   |
|--------------|---|
|              | Alarm   |
|              | Cooking time                                  |
|              | End of Cooking time                           |
|              | Time Key                                      |
| <b>Auto</b>  | Automatic Mode                                |
| <b>Man</b>   | Manual Mode                                   |
|              | Adjustment Keys<br>Volume Level & Baking Time |
| <b>h:min</b> | Units of time (hours: minutes)                |
| <b>88:88</b> | Time Display                                  |

## USING THE TOUCH CONTROLS

- Left button: minus/decrease
- Middle button: menu to select a function
- Right button: plus/ increase
  - When a function is selected and the time or volume is set, the chosen function will automatically start seven seconds after setting.

## SETTING THE VOLUME

- Press the menu button until "LX" (X=1,2 or 3) flashes on the display. Use the plus or minus buttons to select a volume level.

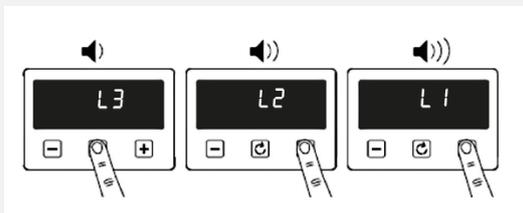

## SETTING TIMERS



### Note

Timers and alarms can only be set when the main oven control knob is switched to a function mode.

### MINUTE MINDER

- Touch the clock icon once and use the plus or minus buttons to set a timer.
  - When the alarm time is reached the alarm icon will flash and the alarm will sound. Touch any key to silence the alarm. The alarm will stop automatically after 5 minutes.
  - If you want to adjust the timer you have set, you can go to the alarm settings again and press the plus or minus keys to adjust it.
  - If you want to cancel the alarm, you can go to the alarm settings again and set the timer to 00:00 (h:min)

## SETTING THE COOKING DURATION

- Touch the clock icon twice to activate the cooking time setting
  - Adjust the time display using the plus/minus icons to set the required time for cooking.
  - If you want to adjust the cooking time that you have set, you can go to the cooking time setting again and press the plus and minus keys to adjust
  - To cancel the cooking time, you can go to the cooking time settings again and set the cooking time to 00:00 (h:min).

## SETTING THE COOKING END TIME

- Touch the clock icon three times to set a specific end cooking time.
  - Adjust the time display using the plus/minus icons to show the desired end time for cooking.
  - When the end cooking time is reached, the oven will automatically turn off, the end cooking time icon will go off, and the alarm will sound automatically stopping after 5 minutes. To stop the alarm press any key.
  - If you don't set an end time of cooking, the oven will only run automatically for 5 hours.

For all the above settings, wait for 5 seconds to automatically save the settings.

When one setting is adjusted and switched to another, the original settings are saved. For example, if the alarm is set and you touch the time button to switch to the clock setting, the alarm setting will still be saved

## SETTING THE TIME



### Note

The time can only be set when the main oven control knob is in the 0 position or on the light setting.



Double touch the  clock icon, then use the plus and minus buttons to adjust.

The clock uses a 24-hour system, that is,  
00:00-23:59 (h: min)

The time setting will be automatically saved  
after 5 seconds of no buttons being touched,



**Note**


**The oven functions will  
not work until the clock  
time is set.**

## MANUAL MODE

If the programmer is not in semi-automatic  
or full- automatic mode you can use oven  
functions manually. The manual icon is also on  
the display.

# CLEANING YOUR APPLIANCE

## Cleaning: Do's
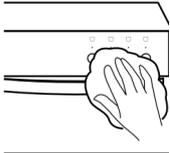
|   |   |
|---|---|
|  | <p>Use warm, soapy water</p>  |
|  | <p>Wipe the appliance with a damp cloth</p> <ul style="list-style-type: none"> <li>• Clean the cloth regularly</li> </ul> |
|  | <p>Dry with a soft dry cloth</p>  |

## Cleaning: Don'ts

|   |   |
|---|---|
|  | <p>Don't use undiluted bleaches or Chloride products</p>                    |
|  | <p>Don't use Wire Wool, Abrasive cleaners, Nylon pads or Steam Cleaners</p> |
|  | <p>Do not wash the cast iron griddle or pan supports in the dishwasher</p>  |



### Note

Always switch off your appliance and allow it to cool down before you clean any part of it.



### Note

Please take extra care when cleaning over the symbols on the control panel, as this can lead to them fading.



### Note

**Tips:** Some foods can mark or damage the metal or paint work e.g; Vinegar, fruit juices and salt. Always clean food spillages as soon as possible.



### Caution

It is important to clean your appliance regularly as a build up of fat can affect its performance or damage it and may invalidate your guarantee.




### Caution

In addition to the above, do not use metal scrapers to clean the oven door glass.

# APPLIANCE MAINTENANCE

## CHANGING THE LIGHTBULB

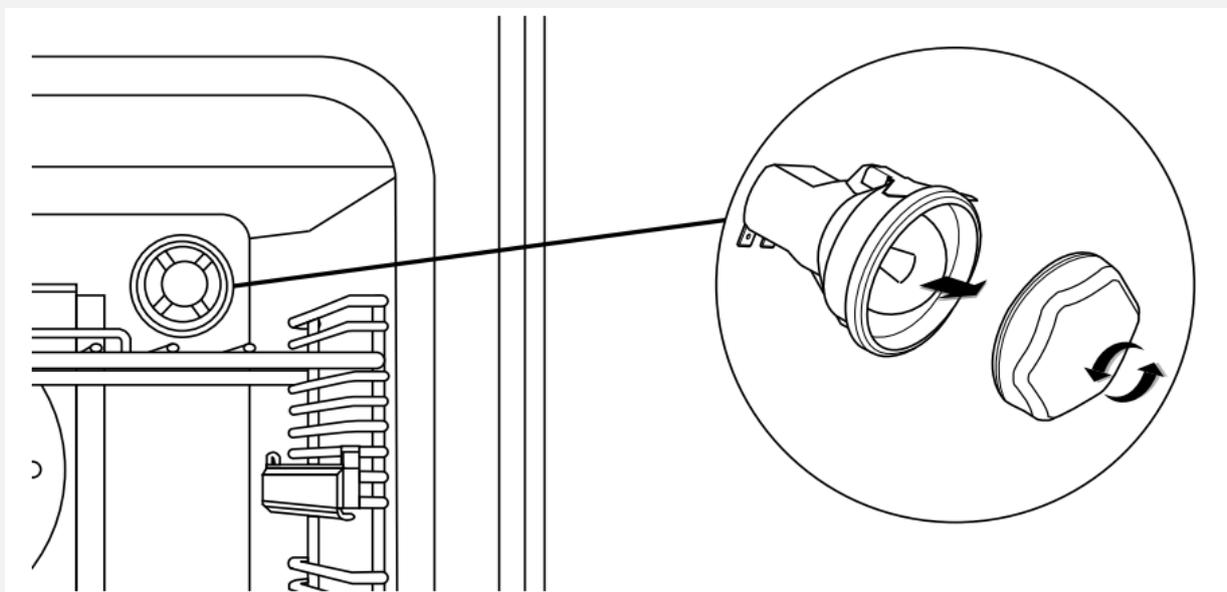

1. Remove the oven shelves.
2. Unscrew the lens cover by turning anticlockwise.
3. Remove the bulb and replace.
4. Replace the lens cover and put the oven shelves back.



### Warning

Switch off the power before you change the light bulb.




### Note

Not all appliances have the same number and type of bulbs. Before you replace your bulb, check to see what type you have. Please remember that bulbs are not covered by your warranty.

## STANDARD SHELVES

1. Before removing the shelves completely, please make sure that the shelf is unclipped from the retaining tabs. Slightly raise the shelf and insert in the chosen shelf position
2. Ensure the shelf is fully pushed back towards the back of the oven, until the shelf stopper is reached.

## REMOVING SHELF RUNNERS

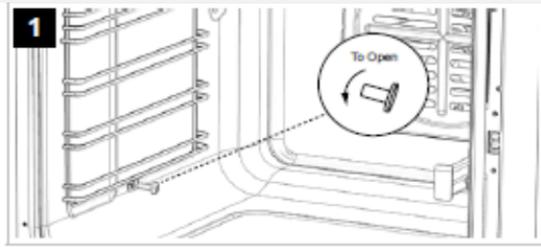

Remove holding screws as per diagrams

# FAQ's

Here are some frequently asked questions about your new appliance:

**Q:** Can I remove the inner glass on the doors for cleaning?

**A:** The inner glass panels are removable for cleaning, however this does involve removing the door from the cooker and the screws from the retaining strip along the top of the door first. For routine cleaning we recommend leaving the glass panels in situ.

**Q:** When cleaning, I found a small hole in the top of the main oven cavity, is this meant to be there?

**A:** This is normal. This is a vent which allows excess steam and pressure to vent out of the rear of the appliance during cooking.

**Q:** What parts of the appliance can be washed in the dishwasher?

**A:** Any enamel parts such as the grill pan can be cleaned in a dishwasher, as can oven shelves and shelf guides.

Cast iron items, burner skirts, caps and control knobs must NOT be cleaned in the dishwasher. Instead they should be cleaned with hot soapy water and a nylon brush once they are cool enough.

**Q:** There's been a power failure and the product won't work- what should I do?

**A:** Switch off the electricity supply.

When the power returns switch the electricity supply back on and re-set the programmer/ clock to the correct time of day.

**Q:** Why is there some warm air coming out of the sides of the doors?

**A:** This is normal. Excess heat, steam and pressure from the oven cavities is released via a new flue system into the cooling fan chamber. The doors have some side vents which allows a small amount of this heat to be expelled at the door sides to ensure that the door surfaces keep cool. The majority of the excess heat, steam and pressure rises upwards into the cooling fan chamber.

**Q:** Why does the cooling fan not come on immediately when I turn the grill or oven on?

**A:** The cooling fan is controlled by a thermal switch and so will only come on once a certain temperature is reached. This is normal. It is also normal for the cooling fan to cycle on and off during use, and for it to stay on a while after cooking.

**Q:** The cooling fan seems to run for a long time after I have finished cooking, is this normal?

**A:** This is normal, the ovens are very well insulated to keep more heat in during cooking for better cooking results with less wasted energy. After cooking, the cooling fan helps the appliance cool down to a low temperature of around 35°C, this helps to keep the exterior parts of the cooker cooler for additional safety. The cooling fan may run for around 1 hour after cooking has finished, and this is normal. Don't worry, the cooling fan does not use much electricity (approx. one-third of a unit of electricity per hour). Please do not switch the cooker off at the wall before the cooling fan has stopped completely

**Q:** How do I attach the grill pan handle to the grill pan?

**A:** Please ensure that the grill pan is the right way around, with the sloping lip at the front. Attach the grill pan handle making sure the prongs are at the top and the wider support piece sits underneath the grill pan.

- Q:** Why can I not remove the shelves completely for cleaning?
- A:** The shelves have 'anti-tip notches' which prevent the shelves being accidentally pulled out completely while cooking, to help prevent accidents. To remove the shelves fully for cleaning, pull the shelf out, then lift upwards at the front.

- Q:** Why is the main oven not working?
- A:** Please ensure that the time of day has been set on the timer, and that the word 'Man' (manual mode) is displayed underneath the time of day.

Some models have more than one function in the main oven, on these appliances you must select a temperature with the temperature control knob and a function with the function selector knob for the main oven to work.

- Q:** The timer touch controls are not responding, why is this?
- A:** The child-lock may have been activated; this is indicated by a padlock symbol in the top-right hand corner of the screen. Press and hold the plus key for a good 5 to 10 seconds- the padlock symbol will flash initially and then go out completely. The child-lock is then de-activated and the timer can be used as normal.

- Q:** How do I re-set the timer volume?
- A:** Please press the middle menu key on the programmer/ timer until 'L1', 'L2' or 'L3' appears on the display. Use the plus and/or minus keys to adjust the volume level, with 'L3' being the loudest level.

# TECHNICAL DATA



**Warning**  
**This cooker must be earthed.**

|                            |                                |
|----------------------------|--------------------------------|
| <b>Data badge</b>          | Lower part of the front frame  |
| <b>Appliance class</b>     | Class 1 - freestanding cooker  |
| <b>Electrical supply</b>   | 230 - 400V ~3N ~ 50 Hz         |
| <b>Load</b>                | 17220W (Induction Unit 10200W) |
| <b>Standard Oven Light</b> | 25W                            |

| <b>Hob Top Hotplate</b> | <b>Electrical Supply</b> | <b>Zone Load (W)</b>                 |
|-------------------------|--------------------------|--------------------------------------|
| Induction               | 230V                     | Left hand front 1800W (2100W Boost)  |
|                         |                          | Left hand rear 1800W (2100W Boost)   |
|                         |                          | Right hand front 1200W (1500W Boost) |
|                         |                          | Right hand rear 1800W (2100W Boost)  |
|                         |                          | Centre 2300W (3000W Boost)           |
|                         |                          |                                      |

| <b>Appliance Electrical Supply</b> | <b>Oven Cavity &amp; Function Load (W)</b>         |
|------------------------------------|--|
| 230V                               | Left-hand main oven: Conventional Oven 2229W       |
|                                    | Right hand main cavity: Fanned Oven- Air Fry 3166W |
|                                    | Top cavity: Single grill 1561W                     |

# ENERGY DATA TABLE

Regulation (EU) 65/2014:

| <b>Product Name: Belling 100/110cm Electric Induction : All Models</b> |                       |
|--|-----------------------|
| <b>Brand:</b>  | <b>Belling</b>        |
| <b>Size:</b>   | <b>100cm or 110cm</b> |
| <b>Number of cavities</b>  | <b>2</b>              |

## Energy Efficiency

| <b>Hob</b>                             |   |
|--|---|
| <b>Fuel Type</b>                       | <b>Induction</b>                            |
| <b>Number of cook zones</b>            | <b>7 Electric Zones</b>                     |
|  | <b>Symbol</b>                               |
|  | <b>Value</b>                                |
| <b>Energy Efficiency per cook zone</b> | <b>Cook zone</b>                            |
|  | <b>Electric Zone</b>                        |
|  | <b>Zone 1: 215*390cm/180cm 191.3Wh/kg</b>   |
|  | <b>Zone 2: 215*390cm/150cm 194.2Wh/kg</b>   |
|  | <b>Zone 3: 215*390cm/210cm 195.6Wh/kg</b>   |
|  | <b>Zone 4: 230cm/240cm 189.6Wh/kg</b>       |
|  | <b>Zone 5: 200cm/210cm 190.7Wh/kg</b>       |
|  | <b>Zone 6: 165cm/180cm 194Wh/kg</b>         |
| <b>Electric Zone</b>                   | <b>All Induction cook zones 192.6 Wh/kg</b> |

## Energy Efficiency

| <b>Cavity</b>   | <b>Cavity 1</b> | <b>Cavity 2</b> | <b>Cavity 3 (if applicable)</b> |
|---|-----------------|-----------------|---------------------------------|
| Energy efficiency index   | 91,5            | 92,5            |                                 |
| Energy efficiency class   | A               | A               |                                 |
| Energy Consumption per cycle (conventional mode)                    | 0,75 kWh        | 0,01 kWh        |                                 |
| Energy Consumption per cycle (fan-forced convection mode)           | 0,01 kWh        | 0,74 kWh        |                                 |
| Heat Source   | Electric        | Electric        |                                 |
| Volume  | 64 Litres       | 60 Litres       |                                 |
| <i>Energy consumption measured in accordance with BS EN 60350-1</i> |                 |                 |                                 |



**Glen Dimplex Home Appliances, Stoney Lane, Prescott,  
Merseyside, L35 2XW**

**0344 815 3746**

**[www.belling.co.uk](http://www.belling.co.uk)**

**GDHA Part Number: 094114100**