





THANK YOU FOR BUYING A HOTPOINT PRODUCT
 In order to receive a more complete assistance, please register your product on register10.eu

PLEASE SCAN THE QR CODE ON YOUR APPLIANCE IN ORDER TO REACH MORE INFORMATION

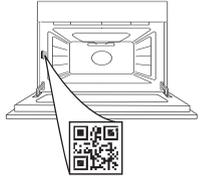


Before using the appliance carefully read the Safety Instruction.

PRODUCT DESCRIPTION

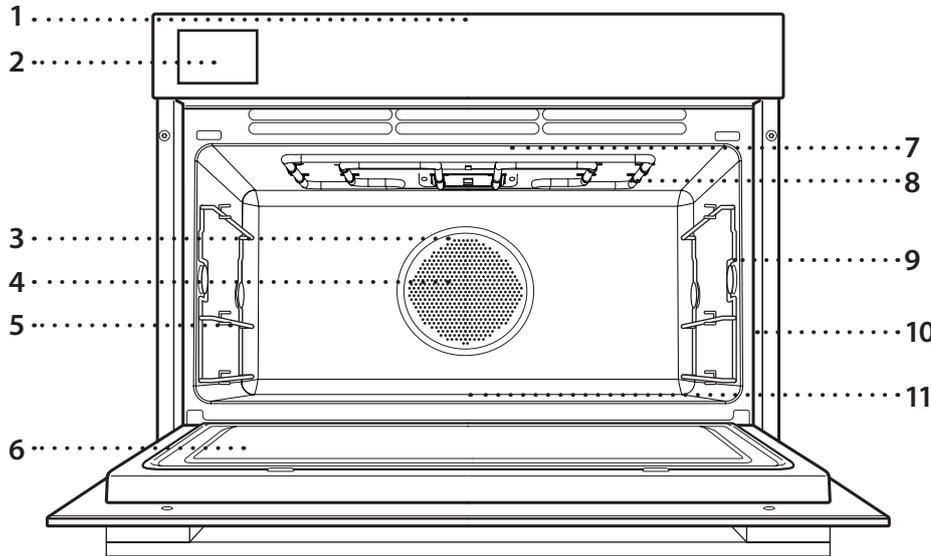

1. Control panel
2. Extractable drawer
3. Fan
4. Circular heating element (not visible)
5. Shelf guides
6. Door
7. Lamp
8. Grill
9. Food probe insert point
10. Identification plate (do not remove)
11. Lower heating element (not visible)

CONTROL PANEL DESCRIPTION

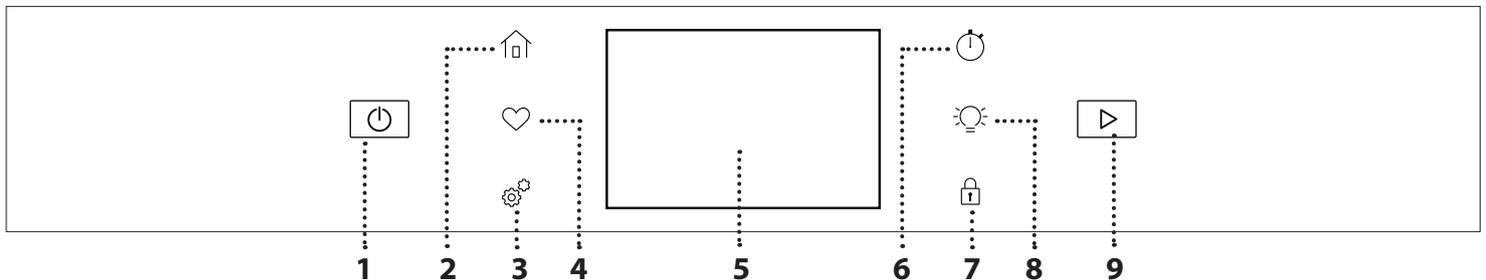

1. ON / OFF

For switching the oven on and off

2. HOME

For quick access to the main menu.

3. TOOLS

To choose from several options and also change the oven settings and preferences.

4. FAVORITES

For retrieving up the list of your favorite functions.

5. DISPLAY

6. TIMER

This function can be activated either when using a cooking function or alone for keeping time.

7. LOCK

Enables you to lock the buttons on the touch pad so they cannot be pressed accidentally.

8. LIGHT

To switch on or off the oven lamp and save energy.


9. START

For starting a function.

ACCESSORIES

Before purchasing other accessories that are available on the market, make sure that they are heat-resistant and suitable for steaming.

Make sure that there is a gap of at least 30 mm between the top of any container and the walls of the cooking compartment in order to allow steam to flow sufficiently.

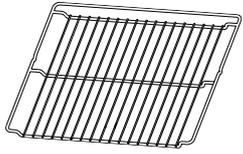


WIRE SHELF

The wire shelf is suitable for all cooking modes. You can place food directly on the wire shelf or use it to support baking trays and tins or other oven-ware resistant to heat.




BAKING TRAY

The baking tray is suitable for all cooking modes and functions. Can be used to cook all kind of foods without container. Use it to collect the cooking juices, placing it below the wire shelf.

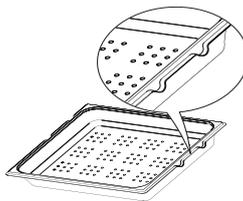

STEAM TRAY

 This special perforated tray makes it easier for steam to circulate, which helps cook the food evenly. Place the drip tray on the level below to collect the cooking juices with the stopping features towards the back of the product.



FOOD PROBE

To accurately measure the core temperature of food during cooking. It can be used for meat and fish.

The number of accessories may vary depending on which model is purchased.


*Other accessories can be purchased separately from the After-sales Service.

INSERTING THE WIRE SHELF AND OTHER ACCESSORIES

Insert the wire shelf onto the level you require by holding it tilted slightly upwards and resting the raised rear side (pointing upwards) down first. Then slide it horizontally along the runners as far as possible. Other accessories, like the baking tray, are to be inserted horizontally, letting them slide on the runners

INSERTING THE STEAM TRAY

The steam tray must be inserted with the reference lateral embosses towards the back of the cavity as illustrated in the picture:

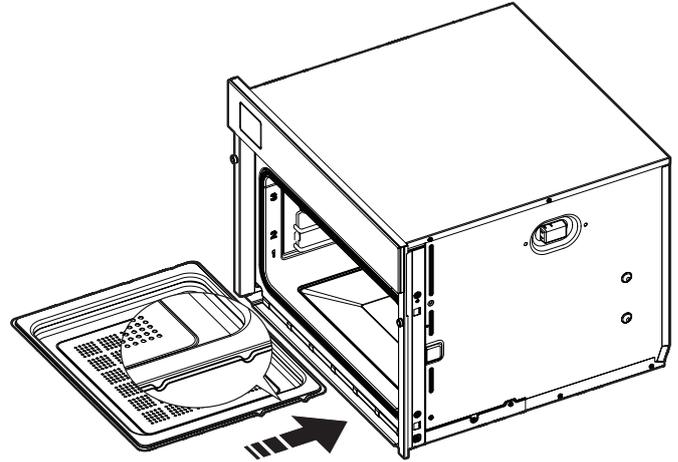


REMOVING AND REFITTING THE LADDER RACKS

There is a ladder rack on both sides of the oven cavity, anchored on two button-shaped supports. The ladder racks are removable to make cleaning more convenient.

1. To remove the ladder racks, firmly grip the external part of the guide, and pull it upwards to extract it from the frontal support while rotating on the rear support, then slide out the whole part from the cavity.

2. To reposition the ladder racks, slide the back part on the back support. Then, once slipped, by pivoting the rear support, pull the assy down until the ladder rack hooks on the frontal support.

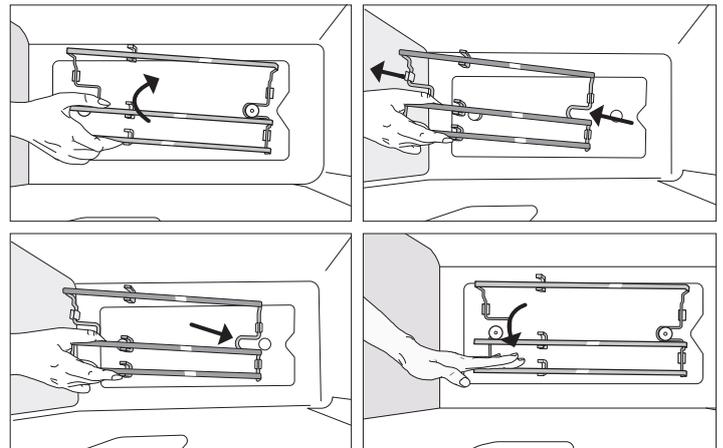

FUNCTIONS

MANUAL MODES



FAST PREHEAT

For quickly preheating the oven before a cooking cycle. Wait for the function to finish before placing food inside the oven. Once preheating has finished, the oven will select the "Forced Air" function automatically.

Required accessories: wire shelf with pan or baking tray



GRILL

For browning, grilling and gratins. We recommend turning the food during cooking.

Recommended accessories: wire shelf

FOOD	GRILL LEVEL	DURATION (min)
Toast	High	5 - 6



TURBO GRILL

For perfect results, combining the grill and oven air convection. We recommend turning the food during cooking.

Recommended accessories: wire shelf



CONVENTIONAL

For perfectly cooking and browning both on the top and bottom any kind of dish on one shelf only. To achieve best results this function have the preheating phase: wait the end of preheat to insert the food.

Required accessories: baking tray or wire shelf and heatproof container.

FOOD	TEMP. (°C)	DURATION (min)
Cupcake / Smallcake	160	30 - 35
Cookies	145	35 - 40



FORCED AIR

For cooking sweets and meats with hot air circulation. To achieve best results this function have the preheating phase: wait the end of preheat to insert the food. Is possible to use it for cooking different foods that require the same cooking temperature on several shelves at the same time. This function can be used to cook different foods without odours being transferred from one food to another.

Required accessories: baking tray or wire shelf and heatproof container.



CONVECTION BAKE

For cooking meat, baking cakes and pies with fillings on one shelf only. To achieve best results this function have the preheating phase: wait the end of preheat to insert the food.

Required accessories: wire shelf with pan or baking tray



STEAM



PURE STEAM

For cooking natural and healthy dishes using steam to preserve the food's natural nutritional value. This function is particularly suited to cooking vegetables, fish and fruit, and also for blanching. Unless otherwise indicated, remove all packaging and protective film before placing the food in the oven.

Recommended accessories: Steam tray at level 2 and Baking tray at level 1

DRYING AFTER STEAM OPERATIONS

Cooking with steam generates a lot of humidity inside the oven. This is a completely normal phenomenon that does not compromise the correct functioning of the appliance. At the end of each cooking period we recommend to use Fast Dry cycle to help to remove the moisture from the oven (available from software update). Click on to select this cycle.

Alternatively we suggest to:

1. let the appliance cool down;
2. carefully dry the cooking compartment and the accessories including drip tray placed behind the door just below the door gasket with a soft cloth or absorbent paper;
3. leave the door open for the time necessary for the cooking compartment to dry completely.



STEAM + AIR

Combining the properties of steam with those of the forced air, this function allows you to cook dishes pleasantly crispy and browned outside, but at the same time tender and succulent inside. To achieve the best cooking results, we recommend to select a HIGH steam level for fish cooking, MEDIUM for meat and LOW for bread and desserts.

Recommended accessories: Baking tray / Wire rack



SOUS VIDE

Sous vide is a professional cooking technique that requires the use of vacuumized food grade plastic pouches, cooking at precisely controlled temperatures using steam. The gradual and accurate cooking process contributes to the development of exceptional tenderness, flavor, and also ensures cooking uniformity within the whole food. This function allows you to cook meat, fish, vegetables and fruits, achieving chef's results.

Check the Sous Vide cooking table to properly use the function.

MW Sous Vide Recipes	How to	Accessories
Beef Sous Vide	Distribute evenly the packs around the center of the steam tray. Make sure that the pack is under vacuum. For good results is suggested not to open the door.	2
Pork Sous Vide		+
Fish Sous Vide		
Vegetables Sous Vide		1
Fruit Sous Vide		

S SPECIAL FUNCTIONS



KEEP WARM

For keeping just-cooked food hot and crisp, including meat, fried foods or cakes.



RISING

For optimal proving of sweet or savoury dough. To maintain the quality of proving, do not activate the function if the oven is still hot following a cooking cycle.

Required accessories: wire shelf and heatproof container.



YOGURT

For making yogurt.

Required accessories: wire shelf and heatproof container.



DEHYDRATION

To dehydrate fruits and vegetables. Cut in thin slices and place directly on wire shelf.

Required accessories: wire shelf



MAXI-COOKING

For cooking large joints of meat (above 2.5 kg). It is advisable to turn the meat over during cooking, to obtain even browning on both sides. It is best to baste the meat every now and again to prevent it from drying out.

Required accessories: baking tray at level 2.



DISINFECTION

For disinfecting baby bottles or jars using steam. Insert the baking tray on level 1 and the steam tray on level 2, place the items on it, with sufficient space in between to allow steam to reach all parts.



DEFROSTING

For defrosting any kind of food. Place foods such as meat and fish without package or wrappings, on the steam tray on level 2. Place the baking tray on the level 1 to collect the thawing water. For best results, do not defrost the food completely but allow the process to finish during standing time. We recommend keeping bread wrapped up to prevent it from becoming too soft.



REHEAT

For reheating ready-made food that is either frozen, chilled or at room temperature. This function uses steam to gently reheat food without drying it out, thus enabling it to retain its original flavour. Standing time improves the result. We recommend placing smaller or thinner pieces of food in the middle and larger or thicker pieces around the outside. If using the steamer tray, place the baking tray below it to collect any liquid running out of the food



ECO CYCLE

For cooking stuffed roasting joints and fillets of meat on a single shelf. When this ECO function is in use, the light will remain switched off during cooking. To use the ECO cycle and therefore optimise power consumption, the oven door should not be opened until the food is completely cooked.

Required accessories: wire shelf with pan or baking tray.

* Function used as reference for the energy efficiency declaration in accordance with Regulation (EU) No. 65/2014



COOK 3

For cooking different foods that require the same cooking temperature on three levels at the same time without mixing flavors and smells.

This function can be used to cook cookies, tarts, frozen pizzas and to prepare a complete meals. The oven does have to be preheated.



COOKIES

Use this function to cook three trays of similar shortbread biscuits to maximize results. The function includes a preheat. Take the three trays out of the oven at the same time.



TART

Use this function to cook three trays of similar tarts to maximize results. The function includes a preheat. Take the three trays out of the oven at the same time.



PIZZA (FROZEN)

Use this function to cook three trays of similar frozen pizzas to maximize results. The function includes a preheat. Take the three trays out of the oven at the same time.



MENU 1

This cycle is designed to cook a complete meat-based meal and a dessert. The oven requires preheating.

Example of complete meal

Prepare a fruit tart according to your preferences in a round pan to be placed on the wire shelf at level 3. Prepare a lasagna according to your preferences (1.5 - 2 kg) in a pan to be placed on the wire shelf at level two. Prepare 6-10 chicken drumsticks with diced potatoes (500 - 800 g) directly in the baking tray to be placed on level 1. After preheating, bake all the dishes at the same time. After 50-60 minutes take out the tart, after 60-70 minutes take out the lasagna, after 80-90 minutes take out the chicken with potatoes.



MENU 2

This cycle is designed to cook a complete fish or vegetarian meal and a dessert. The oven requires preheating.

Example of complete meal

Prepare a fruit tart according to your preferences in a round pan to be placed on the wire shelf at level 3. Prepare pesto lasagna or cannelloni according to your preference (1.5 - 2 kg) in a metal or pyrex tray to be placed on the wire shelf at level two. Prepare fish fillets in foil (700 - 900 g) with sliced vegetables (600 - 900 g) directly in the baking tray to be placed on level 1. After preheating, bake all the dishes at the same time. After 45-55 minutes take out the tart, after 55-65 minutes take out the lasagna, after 60-70 minutes take out the fish with vegetables.











AUTO MODES

With these automatic functions, simply select the type and weight or the quantity of the food items to obtain the best results. The oven will automatically calculate the optimum settings and continue to change them as cooking progresses. To use at best this function, follow the indications on the relative cooking table. Due to food variability, the cooking duration is set on an average grade. We always recommend to check the internal doneness of food and in case prolong the cooking time to achieve proper doneness. Some automatic cycles give the possibility of previously setting a cooking level lower or higher than the default (see the Doneness paragraph in the Daily Use section).

AUTO MODE COOKING TABLE

For cooking several kind of dishes and foods and achieving optimal results in the easiest and quickest way. To get the best from this function, follow the indications on the relative cooking table.

Category	Food	Weight/thickness/ portions/pieces	Note	Accessory
PASTA & CEREALS	Lasagna	600 g - 2.0 Kg	Prepare according to your favorite recipe. Pour bechamel sauce on top and sprinkle with cheese to get perfect browning	2  + 
	Rice	100 - 500 g	Add water and rice into a heat proof container. Use one and half cups of water for each cup of rice. For good results is suggested not to open the door	2  1 
	Spelt	100 - 500 g	Add water and spelt into a heat proof container. Use one and half cups of water for each cup of spelt. For good results is suggested not to open the door	2  1 
	Barley	100 - 500 g	Add water and barley into a heat proof container. Use one and half cups of water for each cup of barley. For good results is suggested not to open the door	2  1 
	Dumpling	1 batch	Distribute evenly in the steam tray, for good results is suggested not to open the door	2 1 

        MEAT	Roast Beef	-	Brush with oil and rub with salt and pepper. Season with garlic and herbs as you prefer. At the end of cooking let it rest for at least 15 minutes before carving.	2 
	Burger Patties	1 - 3 cm	Brush with oil and sprinkle with salt before cooking. Use wire shelf on level 2 and baking tray with one cup of water on level 1 to collect foods essudates. To get perfect results, during cooking you will be asked to turn food.	3 2  + 
	Roast Beef - Slow cooking	-	Brush with oil and rub with salt and pepper. Season with garlic and herbs as you prefer. At the end of cooking let it rest for at least 15 minutes before carving.	2 
	Roast Pork	-	Brush with oil and rub with salt and pepper. Season with garlic and herbs as you prefer. At the end of cooking let rest for at least 15 minutes before carving.	2 
	Pork Shank	-	Brush with oil and rub with salt and pepper. Season with garlic and herbs as you prefer. At the end of cooking let rest for at least 15 minutes before carving.	2 
	Sausages & Wurstel	400 g - 1.5 kg	Distribute evenly on the wire shelf. Pierce the sausages with a fork to prevent bursting. Use wire shelf on level 2 and baking tray with one cup of water on level 1 to collect foods essudates.	2 1  + 
	Pork Ribs	400 g - 1.5 kg	Brush with oil and season as you prefer. Rub with salt and pepper. Distribute evenly on the wire shelf. Use wire shelf on level 2 and baking tray with one cup of water on level 1 to collect foods essudates.	2 1  + 
	Roast Chicken	800 g - 2,5 kg	Brush with oil and season as you prefer. Rub with salt and pepper. Insert into the oven with the breast side up.	2 
	Poultry Fillet/ Breast	1 - 4 cm	Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Poultry Pieces	1 batch	Brush with oil and season as you prefer. Distribute evenly on the wire shelf. Use wire shelf on level 2 and baking tray with one cup of water on level 1 to collect foods essudates.	2 1  + 
FISH	Roasted Whole Fish	-	Brush with oil and season as you prefer.	2 
	Steamed Whole Fish	-	Season as you prefer, for good results is suggested not to open the door.	2 1  +  + 
	Roasted Fish Steak	200 - 800 g	Brush with oil and season as you prefer.	2 
	Fish Fillets	0.5 - 3 cm	Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Fish Fillets [frozen]	0.5 - 3 cm	Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Mussels	500 g - 2.0 kg	Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Shrimps	500 g - 1.5 kg	Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Ocopus	-	Place in the center of steam tray, for good results is suggested not to open the door.	2 1  + 

ACCESSORIES						
	Wire shelf	Heathproof tray on wire shelf	Drip tray / Baking tray	Heath-proof container	Food Probe	Steam tray

Hotpoint

VEGETABLES	Roasted Potatoes	400 g - 1.5 kg	Cut in pieces, season with oil, salt and flavor with herbs before placing into the oven.	2 
	Stuffed Vegetables	600 g - 2,0 kg	Scoop out the vegetable and fill with a mixture of the vegetable flesh itself, minced meat and shredded cheese. Season with garlic, salt and flavor with herbs as you prefer.	2 
	Potatoes Gratin	400 g - 1.5 kg	Slice and place into a large container. Season with salt, pepper and pour over cream. Sprinkle cheese on top.	1 
	Whole Potatoes	50 - 200 g	The weight refers to the single potato. To have uniform cooking in each potato, it is advisable to choose them all of similar size. Distribute the potatoes in their skins evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Potatoes Pieces	400 g - 1.0 kg	Cut in pieces. Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Roots Vegetables	200 g - 1.0 kg	Cut in pieces. Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Soft Vegetables	400 g - 1.0 kg	Cut in pieces. Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Fruit Pieces	400 g - 1.5 kg	Cut in pieces. Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
	Vegetables [frozen]	400 g - 1.5 kg	Distribute evenly in the steam tray, for good results is suggested not to open the door.	2 1  + 
SALTY BAKERY	Bread Rolls	1 batch	Prepare dough according to your favorite recipe for a light bread. Form to rolls before rise. Use the oven's dedicated rise function.	2 
	Sandwich Loaf	400 g - 1 Kg	Prepare dough according to your favorite recipe for a light bread. Form into a loaf container before rise. Use the oven's dedicated rise function.	2  + 
	Pizza	400 g - 1.2 kg	Prepare pizza dough according to your favorite recipe. Leave it to rise using the oven's dedicated function. Roll out the dough into a lightly greased baking tray. Add topping as you prefer.	2 
	Pizza [frozen]	250 g - 1.2 kg	Take out from packaging and distribute evenly on the wire shelf.	2 
	Salty Cake	800 g - 1.5 kg	Line a pie dish for 8-10 portions with a pastry and pierce it with a fork, Fill the pastry according to your favorite recipe.	1  + 

ACCESSORIES						
	Wire shelf	Heathproof tray on wire shelf	Drip tray / Baking tray	Heath-proof container	Food Probe	Steam tray

Hotpoint

SWEET BAKERY	Sponge Cake	400 g - 1.2 kg	Prepare a fatless sponge cake batter. Pour into lined and greased baking pan.	1 ~...~ + 
	Marble Cake	400 g - 1.2 kg	Prepare a marble cake batter according to your favorite recipe. Pour into lined and greased baking pan.	1 ~...~ + 
	Muffins	1 batch	Prepare a batter for 16-18 pieces according to your favorite recipe and fill in paper moulds. Distribute evenly on the baking tray.	2 ~...~
	Cookies	1 batch	Prepare the biscuit cookies as you prefer and let cool down. Stretch evenly the dough and shape as you prefer. Lay the cookies on a baking tray.	2 ~...~
	Brownies	800 g - 1.5 kg	Prepare according to your favorite recipe. Spread batter on the baking pan covered with baking paper.	1 ~...~ + 
	Strudel	1 batch	Prepare a mix of diced apple, pine nuts, cinnamon and nutmeg. Put some butter in a pan, sprinkle with sugar and cook for 10-15 minutes. Roll it into a pastry and fold the external part.	2 ~...~
	Apple Pie	800 g - 1.5 kg	Line a pie dish with the pastry and sprinkle the bottom with bread crumbs to absorb the juice from the fruit. Fill with chopped fresh fruit mixed with sugar and cinnamon. Roll out the pastry scraps to make a lid, seal the edges and brush with egg.	1 ~...~ + 
DESSERTS	Baked Apples	1 batch	Remove the core and fill with marzipan or cinnamon, sugar and butter.	2 ~...~
	Caramel Flan	1 batch	Distribute cups with flan evenly in the steam tray, for good results is suggested not to open the door.	2 1 ~...~ + ~...~
EGGS	Chicken Eggs	50 - 80 g	The weight refers to the single egg. To have uniform cooking in each egg, it is advisable to choose them all of similar size. Distribute evenly in the steam tray, for good results is suggested not to open the door. If the eggs will be eaten cold, rinse them immediately in cold water.	2 1 ~...~ + ~...~
	Quail Eggs	1 batch	Distribute evenly in the steam tray, for good results is suggested not to open the door. If the eggs will be eaten cold, rinse them immediately in cold water.	2 1 ~...~ + ~...~

HOW TO COOK BY COOKING METHOD

To increase the ease of use of the product, following menus groups together all the functions sharing the same cooking method which are already present in the menus divided by food.

Steam Recipes

Steam cooking method allow you to cook natural and healthy dishes, preserving the food's natural nutritional value. To get the best results from this function, follow the indications on the relative cooking table. Steam tray and baking tray are always needed.

Steam + Air Recipes

Steam + Air cooking method, Combining the properties of steam with those of the forced air, allow you to cook dishes pleasantly crispy and browned outside, but at the same time tender and succulent inside. To get the best results from this function, follow the indications on the relative cooking table.

OTHER FUNCTIONS MENU



FAVORITES

For retrieving the list of favorite functions.



SETTINGS

For adjusting the oven settings.

When "DEMO" is "On" all commands are active and menus available but the oven doesn't heat up. To deactivate this mode, access "DEMO" from "SETTINGS" menu and select "Off". By selecting "FACTORY RESET", the product switches off and

then it returns to first switch on. All settings will be deleted.



KITCHEN TIMER

This function can be activated either when using a cooking function or alone for keeping time. Once started, the timer will continue to count down independently without interfering with the function itself. Once the timer has been activated, you can also select and activate a function.

The timer will continue counting down at the top-right corner of the screen.

To retrieve or change the kitchen timer:

- Press kitchen timer option.

An audible signal will sound and the display will indicate once the timer has finished counting down the selected time.

- Tap "PAUSE" if you want to pause the timer. You can then tap "RESUME" to restart the timer.
- Tap "CANCEL" to cancel the timer or set a new timer duration.
- Tap "+1 min" to increase the duration of 1 minute.



LIGHT

To switch on or off the oven lamp.



CONTROL LOCK

The "Control Lock" enables you to lock the buttons on the touch pad so they cannot be pressed accidentally.

To unlock the appliance, long press the lock key on the touch pad.

HOW TO USE THE TOUCH DISPLAY



To select or confirm:

Tap the screen to select the value or menu item you require.



To scroll through a menu or a list:

Simply swipe your finger across the display to scroll through the items or values.

To confirm settings or access the next screen:

Tap "SET" or "NEXT".

To go back to the previous screen:

Tap ← .


FIRST TIME USE

You will need to configure the product when you switch on the appliance for the first time.

The settings can be changed subsequently by pressing  to access the "Tools" menu.

1. SELECT THE LANGUAGE PREFERENCES

You will need to set the language and the time when you switch on the appliance for the first time.

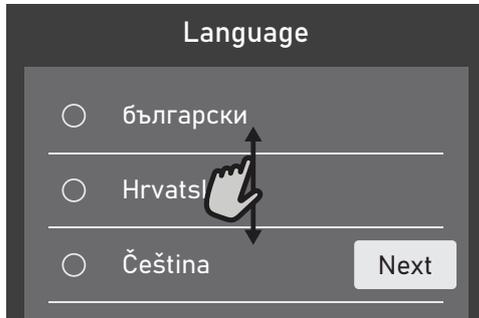

- Swipe across the screen to scroll through the list of available languages.
- Tap the language you require.

You can change the language later by opening the settings menu.

2. SETTING UP WIFI

The **Hotpoint Home Net App** feature allows you to operate the oven remotely from a mobile device. To enable the appliance to be controlled remotely, you will need to complete the connection process successfully first. This process is necessary to register your appliance and connect it to your home network.

Otherwise, tap "SKIP" to connect your product later.

HOW TO SET UP THE CONNECTION

To use this feature you will need: A smartphone or tablet with *bluetooth* and a wireless router connected to the Internet. Please use your smart device to check that your home wireless network's signal is strong close to the appliance. The WiFi connection can be set up only through the mobile App.

Minimum requirements:

Smart device: Android with a 1280x720 (or higher) screen or iOS.

See on App store the app compatibility with Android or iOS versions.

Wireless router: 2.4Ghz WiFi b/g/n.

1. Download the Hotpoint Home Net App

The first step to connecting your appliance is to download the App on your mobile device. The **Hotpoint Home Net App** will guide you through all the steps listed here. You can download the App from the App Store or the Google Play Store.

Once downloaded, tap **Add appliance** through the App to proceed with the setup connection.

2. Create an account

If you haven't done so already, you'll need to create an account. This will enable you to network your appliances and also view and control them remotely.

3. Register your appliance

Follow the instructions in the App to register your appliance. The App will ask you to insert the *product number* to complete the registration process. You can find its unique code number on the identification plate attached to the product, inside the door (it is a 12-digit numerical code only). During this phase, please remember to keep *bluetooth* on.

You will need to confirm the Smart Appliance Identifier (SAID).

Lastly, the App will ask you to pair the appliances showing a code, to be confirmed on both devices.

4. Connect to WiFi

Going on with the setup procedure, as the last step the App will guide you through the process of connecting the device to your home wireless network.

Please note: The connection procedure will only need to be carried out again if you change your router settings (e.g. network name or password or data provider).

3. SETTING THE TIME AND DATE

Connecting the oven to your home network will set the time and date automatically. Otherwise you will need to set them manually.

- Tap the relevant numbers to set the time.
- Tap "SET" to confirm.

Once you have set the time, you will need to set the date

- Tap the relevant numbers to set the date.
- Tap "SET" to confirm.

After a long power loss, you need to set the time and date again.

4. SET THE POWER CONSUMPTION

The oven is programmed to consume a level of electrical power that is compatible with a domestic network that has a rating of more than 3 kW (16 Ampere): If your household uses a lower power, you will need to decrease this value (13 Ampere).

- Tap the value on the right to select the power.
- Tap "OKAY" to complete initial setup.

5. SET THE WATER HARDNESS LEVEL

In order to allow the oven to work efficiently, and to guarantee that it regularly prompts the user to perform Descale cycle when needed, it is important to set the correct water hardness level. To set it, switch on the oven by pressing , press . Open the Preferences and select "WATER HARDNESS". Tap "SET" to confirm. Select the correct level for the water of your area, based on the following table:

Level	°dH	°fH	°Clark	
	German degrees	French degrees	English degrees	
1	very soft	0-6	0-10	0-7
2	soft	7-11	11-20	8-14
3	mid	12-16	21-29	15-20
4	hard	17-34	30-60	21-42
5	very hard	35-50	61-90	43-62

Tap "SET" to confirm.

For Water Hardness level, "Hard" is preset.

6. HEAT THE OVEN

A new oven may release odours that have been left behind during manufacturing: this is completely normal. Before starting to cook food, we therefore recommend heating the oven with it empty in order to remove any possible odours.

Remove any protective cardboard or transparent film from the oven and remove any accessories from inside it. Heat the oven to 200 °C for around one hour, using the "Fast Preheat" function. Follow the instructions for setting the function correctly.


Please note: It is advisable to air the room after using the appliance for the first time.

DAILY USE

1. SELECT A FUNCTION

To switch on the oven, press  or touch anywhere on the screen.

The display allows you to choose between Manual Modes and Auto Modes.

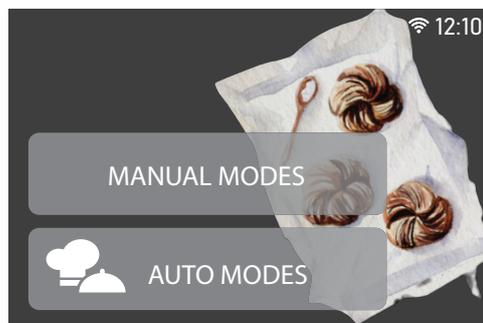

- Tap the main function you require to access the corresponding menu.
- Scroll up or down to explore the list.
- Select the function you require by tapping it.

2. SET MANUAL FUNCTIONS

After having selected the function you require, you can change its settings. The display will show the settings that can be changed.

The  icon in the upper right corner of the display gives you more informations about the selected function.

POWER / TEMPERATURE / GRILL LEVEL

- Tap the main function you require to access the corresponding menu.

According to the selected function, you can activate or deactivate the preheat with a specific toggle.

DURATION

You do not have to set the cooking time if you want to manage cooking manually. In timed mode, the oven cooks for the length of time you select. At the end of the cooking time, the cooking is stopped automatically.

- To set the duration, tap the Time section or the "Set Cook Time" after pressing START.
- You can select the duration by scrolling the numbers, or pressing  you can tap the relevant numbers to set the cooking time you require.
- Tap  to confirm.

To cancel a set duration during cooking and so manage manually the end of cooking, you can tap the duration value and set "0" or you can open the three dots  menu and edit the cooking time.

If you want to stop the cycle, open the three dots menu and select "Stop Cooking".

3. SET AUTO MODES

The Auto Modes enable you to prepare a wide variety of dishes, choosing from those shown in the list. Most cooking settings are automatically selected by the appliance in order to achieve the best results.

Furthermore, thanks to a special sensor able to recognize the moisture content of the food, some of the AUTO MODES functions allow you to achieve optimal cooking for any kind of food without any setting: the sensor will stop the cooking at the perfect time. During the last few minutes of cooking only, a countdown will appear on the display, indicating the remaining cooking time.

- Choose a recipe from the list.

Functions are displayed by food categories in the "Auto Modes" menu (see relative tables).


- Once you have selected a function, simply indicate the characteristic of the food (quantity, weight, etc.) you want to cook to achieve the perfect result.

COOKING WITH STEAM

By selecting the "Pure Steam" or "Steam + Air" inside the Manual Functions or one of the several Auto Modes dedicated recipes, it is possible to cook any kind of food, thanks to the use of the steam. Steam spreads more quickly and more evenly through food compared to just the hot air typical of Conventional Functions: this reduces cooking times, locking in food's precious nutrients and ensuring you obtain excellent, truly delicious results with all your recipes. Through the complete duration of the steam cooking the door must be kept closed.

To proceed with steam cooking, it will be necessary to provide water to the boiler located inside the oven using the extractable drawer on the control panel.

When requested on the display with "FILL THE DRAWER" indications, extract the drawer, open drawer's lid and fill it with drinking water until the level requested on the display. Close the drawer by pushing it carefully towards the panel until completely closed. After the drawer insertion, press START to proceed with the cooking cycle. The drawer must always remain closed, except for water filling.

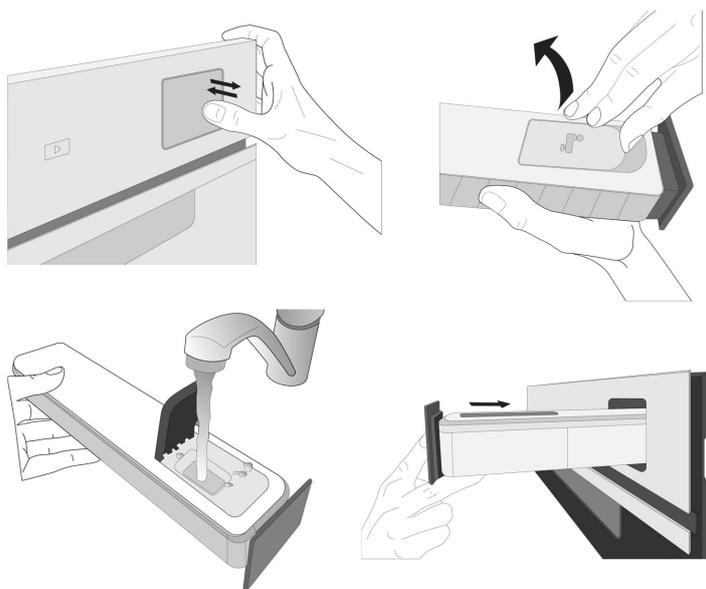

After the first filling, in case of longer cooking cycles, once water will have ran out, it could be necessary to add it again, in order to complete the cycle: the oven will prompt it in case it will be needed.

4. SET START TIME DELAY

You can delay cooking before starting a function: The function will start at the time you select in advance.

- Tap "DELAY" to set the start time you require. You can either select the start time or the time at which you would like the food to be ready according to the selected functions.
- Once you have set the required delay, tap **Set** to start the waiting time.
- Place the food in the oven and close the door: The function will start automatically after the period of time that has been calculated.

Programming a delayed cooking start time will disable the oven preheating phase: The oven will reach the temperature your require gradually, meaning that cooking times will be slightly longer than those listed in the cooking table.


- To activate the function immediately and cancel the programmed delay time, tap "SKIP DELAY".

5. START THE FUNCTION

- Once you have configured the settings, tap "START" to activate the function.

If the oven is hot and the function requires a specific maximum temperature, a message will be shown on the display. You can change the values that have been set at any time during cooking by tapping the value you want to amend.

All the options available to be modified can be explored by opening the three dots (⋮) menu in the bottom left part of the display.

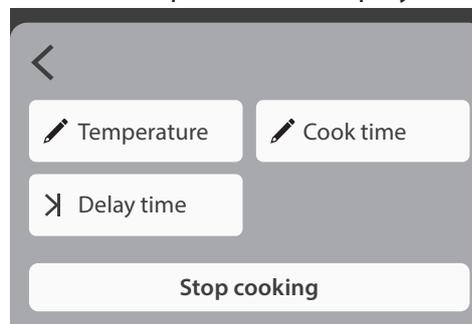

At any time you can stop the function that has been activated by pressing .

6. PREHEATING

If previously activated, once the function has been started the display indicates the status of preheating phase. Once this phase has been finished, an audible signal will sound and the display will indicate "OVEN READY."

- Open the door.
- Place the food in the oven.
- Close the door and tap the "Start now" or the "START" button to start cooking.

Placing the food in the oven before preheating has finished may have an adverse effect on the final cooking result. Opening the door during the preheating phase will pause it. The cooking time does not include a preheating phase.

You can change the default setting of the preheating

option for cooking functions that allow you to do that manually.

- Select a function that allows you to select the preheating function manually.
- Use the *Preheating* dedicated toggle in the bottom right of the display to activate or deactivate preheating. It will be set as a default option.

7. TURN OR CHECK FOOD

Some Auto Modes will require the food to be turned during cooking. An audible signal will sound and the display shows the action to be done.

- Open the door.
- Carry out the action prompted by the display.
- Close the door, then tap "START" to resume cooking.

In the same way, in the last 5% of the cook time, before the end of cooking, the oven prompts you to check the food.

An audible signal will sound and the display shows the action to be done.

- Check the food
- Close the door, then tap "START" to resume cooking.


8. END OF COOKING

An audible signal will sound and the display will indicate that cooking is complete. With some functions, once cooking has finished you can extend the cooking time or save the function as a favorite.

- Tap "+ 5 min" to prolong the cooking
- Tap "ADD TO FAV" to save it as a favorite.

Please note: At the end of a steam cycle, open the door carefully in order to avoid water leakage.

WHEN THE APPLIANCE HAS COOLED DOWN:

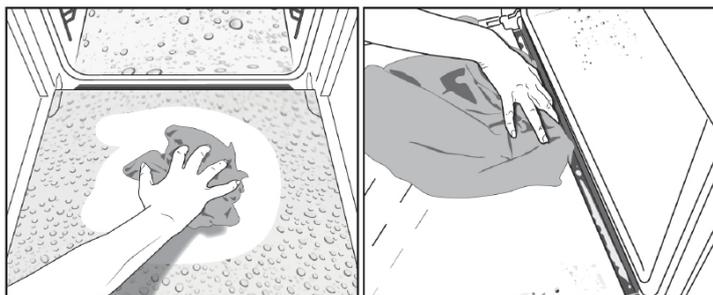

1. Wipe the inner glass door and the condensation trim with a cloth or a sponge.
2. Wipe the cavity surfaces paying particular attention not to leave water deposits.

9. FAVORITES

The Favorites feature stores the oven settings for your favorite recipe.

The oven automatically recognizes the most used functions. After a certain number of uses, you will be prompted to add the function to your favorites.

HOW TO SAVE A FUNCTION

Once a function has finished, tap "ADD TO FAV" to save it as a favourite. This will enable you to use it

quickly in the future, keeping the same settings.

ONCE SAVED

To view the favorite menu, press : All the saved functions will be listed in this Menu. Tap "START" to activate the selected cooking function.

CHANGING THE SETTINGS

In the favorite screen, you can add an image or name to the favorite to customize it to your preferences.

- Select the function you want to change.
- Tap the three dots icon on the top right corner.
- Select the attribute you want to change.
- Tap "SAVE" to confirm your changes.

If you want to remove a specific function you will find in this Menu the "DELETE FAVORITE" option.

10. TOOLS

Press to open the "Tools" menu at any time. This menu enables you to choose from several options and also change the settings or preferences for your product or the display.

REMOTE ENABLE

To enable use of the App.

MUTE

To quickly turn your device's sounds on or off.

Other specific sound volume settings can be managed in the Preferences menu, under Sound & Volume.

STEAM CLEAN

The action of water vapor released during this special cycle of cleaning by means of a low temperature, facilitates removal of grime. Activate the function when the oven is cold.

Press to activate the function: the display will prompt you to carry out all actions needed to obtain the best cleaning results.

Please note: It is recommended to do not open the oven door during the cleaning cycle to avoid a loss of water vapor that could get an adverse effect on the final cleaning result.

An appropriate message will start flashing on the display once the cycle has finished. Leave the oven to cool down and then wipe and dry the interior surfaces with a cloth or a sponge.

PREFERENCES

For changing several oven settings, selecting Sabbath Mode and switching off "Demo Mode".

CONNECTIVITY

For changing settings or configuring a new home network.

INFO

For obtaining further information about the product.

FOOD PROBE

Using the probe enables you to measure the core temperature of different food types during cooking to ensure that it reaches the optimum temperature. The temperature of the oven varies according to the function that you have selected, but cooking is always programmed to finish once the specified temperature has been reached. Place food in the oven and connect the food probe to the socket. Keep the probe as far away from the heat source as possible. Close the oven door. You can choose between the manual (by cooking method) and AUTO MODES (by food type) functions if use of the probe is allowed or required.

Once a cooking function has been started, it will be cancelled if the probe is removed.

Always unplug and remove the probe from the oven when taking the food out.


USING THE FOOD PROBE

Place the food in the oven and connect the plug by inserting it into the connection provided on the righthand side of the oven's cooking compartment.

Make sure that the cable does not touch the top heating element during cooking.

MEAT: Insert the probe deep into the meat, avoiding bones or fatty areas. For poultry, insert the probe lengthways into the centre of the breast, avoiding hollow areas.

FISH (whole): Position the tip in the thickest part, avoiding the thorns.

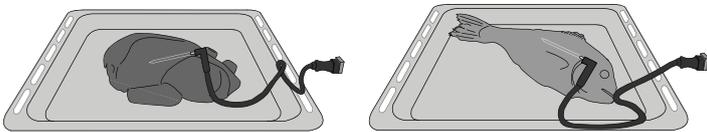

If you use the probe when cooking with the AUTO MODES functions, cooking will be stopped automatically when the selected recipe reaches the ideal core temperature, without the need to set the oven temperature.

DESCALE

This special function, activated at regular intervals, allows you to keep the steam system in the best condition. Once the function is started, follow all the steps indicated on the display. The duration of the full function may take up to 120 minutes and cannot be stopped. Descale can be started anytime by the user from the Cleaning Menu.

The display will show you when it is time to run a Descale cycle (see the table below).

DESCALE MESSAGE	MEANING
<DESCALE RECOMMENDED> It appears after around 15 hours of steam cycles*	It is recommended to run a Descale cycle.

DESCALE MESSAGE	MEANING
<DESCALE NEEDED> It appears after around 20 hours of steam cycles*	Descale is mandatory. It is not possible to run a Steam cycle until a Descale cycle will be carried out.

*considering the default value (4 - Hard) of water hardness level. The number of hours of steam cycles that must pass before the Descale messages are shown depends on the water hardness level set on the appliance.

The descaling procedure can also be performed whenever the user desires a deeper cleaning of the internal steam circuit.


Before to run the descaling phase, the appliance will check if some residual water is contained into the boiler, and a Drain cycle could be performed, if needed. In this case, you will have to empty the drawer after the Drain cycle, before continuing with the Descale Phase.

Please note: to ensure that the water is cold, it is not possible to perform this activity before 30 minutes have elapsed from the last cycle (or the last time the product was powered). During this waiting time, the display will show the following feedback "WATER IS HOT".

» PHASE 1/2: DESCALING (70 MIN)

When display will show <ADD 0.25 L OF SOLUTION>, please pour the descaling solution in the drawer. For best results in descaling, we recommend filling the tank with a solution composed of 75 g of the specific WPRO product and 250 ml of drinking water. WPRO descaler is the suggested professional product for the maintenance of the best performance of your steam function in the oven. For orders and information contact the after sales service.

Beko Europe will not be held responsible for any damage caused by the use of other cleaning products available on the market.

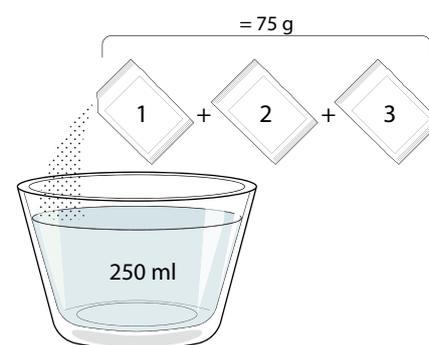

Once the descaling solution is poured inside the drawer, press to start the main descaling process. The descaling phases do not need you to stay in front of the appliance. After each phase is

completed, an acoustical feedback will be played and the display will show instructions to proceed with the next phase.

Once the descaling phase has been completed, the boiler will be drained: the descaling solution used during this phase will be poured into the extractable drawer.

» PHASE 2/2: RINSING (30 MIN.)

To remove descale residuals from the drawer and the steam circuit, rinse cycle has to be done. When

display shows <ADD 0.25 L OF WATER> fill the tank with 0,25 L of drinking water, then press  to start the rinsing. Do not turn off the oven until all the steps required by the function have been completed.

Please note: if needed from the system, it could be requested to empty the drawer and to repeat this operation.

When Descal procedure is completed, it is suggested to dry the cavity from potential water residuals. It will be then possible to use all the steam functions.

Please note: during the Descal cycle, some noise could potentially be heard since the oven pumps are activated in order to guarantee the optimal descale efficiency.

Once the maintenance cycle has started, do not remove the drawer unless requested by the appliance.

Please note: After the boiler gets filled by the descaling solution and the display shows "DESCALING PHASE 1/2", the cycle should not be interrupted, otherwise the entire descaling cycle must be repeated before being able to run any steam function.

CLEANING AND MAINTENANCE

Make sure that the oven has cooled down before carrying out any maintenance or cleaning.

Do not use steam cleaners.

Wear protective gloves.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

The oven must be disconnected from the mains before carrying out any kind of maintenance work.

EXTERIOR SURFACES

- Clean the surfaces with a damp microfibre cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Do not use corrosive or abrasive detergents. If any of these products inadvertently comes into contact with the surfaces of the appliance, clean immediately with a damp microfibre cloth.

INTERIOR SURFACES

- After every use, leave the oven to cool and then clean it, preferably while it is still warm, to remove any deposits or stains caused by food residues. To dry any condensation that has formed as a result of cooking foods with a high water content, let the oven to cool completely and then wipe it with a cloth or sponge.
- Activate the "Steam Clean" function for optimum cleaning of the internal surfaces.
- Clean the glass in the door with a suitable liquid detergent.

ACCESSORIES

- Soak the accessories in a washing-up liquid solution after use, handling them with oven gloves if they are still hot. Food residues can be removed using a washing-up brush or a sponge.
- The steamer can be washed either by hand or in a dishwasher.
- Never clean Food Probe and Crisp plate in the dishwasher.
- The Crisp plate should be cleaned using water and a mild detergent. For stubborn dirt, rub gently with a cloth. Always leave the Crisp plate to cool down before cleaning.


WATER DRAWER MAINTENANCE

Caution: The water drawer is not suitable for dishwasher use: risk of damage!

At the end of each cooking cycle with steam, after about 30 min the oven automatically performs a drain cycle lasting about one minute, thus transferring all the water in the system to the extractable drawer.

Note: Avoid to leave the water in the system more than 2 days.

In order to completely remove the water inside or clean the internal surfaces, you can open the water drawer:

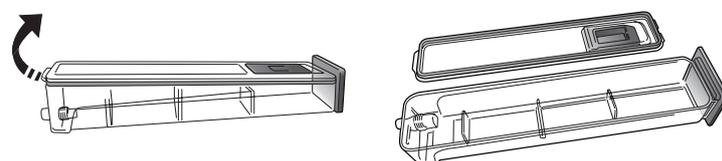

1. Push towards the top the back flap to remove the water drawer top cover.

2. Once the cleaning is done, you can close the drawer by inserting the two front flaps inside the front openings and pushing down the back side.


Use only room temperature water when filling the water drawer: hot water may affect the operation of the steam system. Use only drinking water.

BOILER

To ensure that the oven always works at optimum performance and to help prevent the build-up of limescale deposits over time, we recommend using the "Descal" function regularly. After a long period of non-use of the "Steam" functions, it is highly suggested to activate a cooking cycle with the empty oven by filling completely the tank.


CLEAN THE INTERNAL GLASS OF THE DOOR

1. Open the oven door completely and activate hinge stopper on both sides.
2. Then close the door until it stops in a safe position.
3. Simultaneously press the two retaining clips.
4. Remove the upper edge of the door by pulling it towards you.
5. Lift and firmly hold the inner glass with both hands and remove it.
6. Place it on a soft surface before cleaning it. Do not remove intermediate glass from the door assembly.

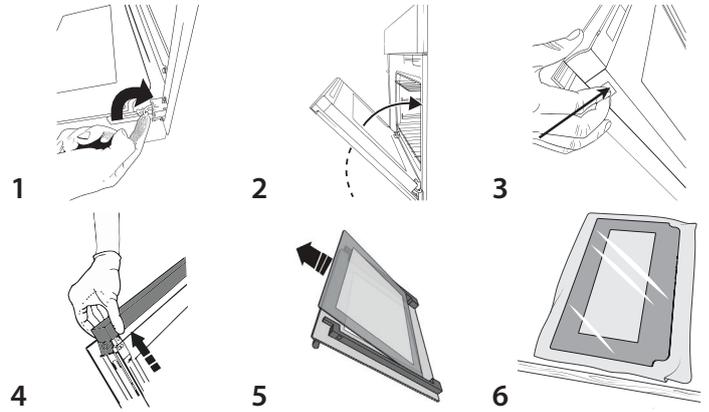

HOW TO REPOSITION THE DOOR GLASS

1. Insert inner glass after cleaning into the door assembly with glossy side towards the oven cavity.
2. Insert the upper edge of the door and gently press until it snaps in place.
3. Remove hinge stopper on both sides and then close the door.

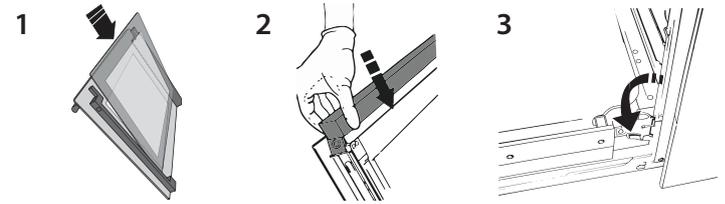

WIFI FAQs

Which WiFi protocols are supported?

The WiFi adapter installed supports WiFi b/g/n for European countries.

Which settings need to be configured in the router software?

The following router settings are required: 2.4 GHz enabled, WiFi b/g/n, DHCP and NAT activated.

Which Version of WPS is supported?

The appliance does not support WPS.

Are there any differences between using a smartphone (or tablet) with Android or iOS?

You can use whichever operating system you prefer, it makes no difference.

Can I use mobile 3G tethering instead of a router?

Yes, but cloud services are designed for permanently connected devices. It must be a different device than the one you are using the App with (e.g., a third-party smartphone).

How can I check whether my home Internet connection is working and wireless functionality is enabled?

You can search for your network on your smart device. Disable any other data connections before trying.

How can I check whether the appliance is connected to my home wireless network?

Access your router configuration (see router manual) and check whether the appliance's MAC address is listed on wireless connected devices page.

Where can I find the appliance's MAC address?

Press  then tap  "Connectivity" then look "Mac address". The MAC address consists of a combination of 6 pairs of numbers and letters separated by colon.

How can I check whether the appliance's wireless functionality is enabled?

Use your smart device and the App to check whether the appliance network is visible and connected to the cloud.

Is there anything that can prevent the signal reaching the appliance?

Check that the devices you have connected are not using up all the available bandwidth.

Make sure that your WiFi-enabled devices do not exceed the maximum number permitted by the router.

How far should the router be from the oven?

Normally the WiFi signal is strong enough to cover a couple of rooms, but this very much depends on the material the walls are made of. You can check the signal strength by placing your smart device next to the appliance.

What can I do if my wireless connection does not reach the appliance?

You can use specific devices to extend your home WiFi coverage, such as access points, WiFi repeaters and power line bridges (not provided with appliance).

How can I find out the name of and password for my wireless network?

See the router documentation. There is usually a sticker on the router showing the information you need to reach the device setup page using a connected device.

What can I do if appears on the display or the oven is unable to establish a stable connection to my home router?

The appliance might have successfully connected to the router, but it is not able to access the Internet. To connect the appliance to the Internet, you will need to check the router and/or carrier settings.

Router settings: NAT must be on, firewall and DHCP must be properly configured. Password encryption supported: WEP, WPA, WPA2. To try a different encryption type, please refer to the router manual.

Carrier settings: If your Internet service provider has fixed the number of MAC addresses able to connect to the Internet, you may not be able to connect your appliance to the cloud. The MAC address of a device is its unique identifier. Please ask your Internet service provider how to connect devices other than computers to the Internet.

How can I check whether data is being transmitted?

After setting up the network, switch the power off, wait 20 seconds and then switch on the oven: Check that the app is showing the UI status of the appliance.

Some settings take several seconds to appear in the app.

How can I change my account but keep my appliances connected?

You can create a new account, but remember to remove your appliances from your old account before moving them to your new one.

I changed my router – what do I need to do?


You can either keep the same settings (network name and password) or delete the previous settings from the appliance and configure the settings again.

TROUBLESHOOTING

Problem	Possible cause	Solution
The oven is not switching on.	Power cut. Disconnection from the mains.	Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists.
The oven makes noises, even when it is switched off.	Cooling fan active.	Open the door or hold or wait until the cooling process has finished.
The display shows the letter "F" followed by a number or letter.	Software fault.	Contact our Call Center and state the number following the letter "F". Press  , tap "Info" and then select "Factory Reset". All settings saved will be deleted.
The display shows F3E3.	The probe is not well connected or may not be making contact properly.	First of all check the probe; if it is entered correctly but the error persists, please call the Call Center. Notify the error that appears on the display.
The oven does not heat up.	When "DEMO" is "On" all commands are active and menus available but the oven doesn't heat up. The word DEMO appears on display every 60 seconds.	Access "DEMO" from "SETTINGS" and select "Off".
The icon  is shown on display.	The WiFi router is off. The router settings have changed. The wireless connection does not reach the appliance. The oven is unable to establish a stable connection to the home network. The connectivity is not supported.	Check that the WiFi router is connected to the Internet. Check that the WiFi signal close to the appliance is strong. Try to restart the router. See the "WiFi FAQs" section. If your home wireless network settings have changed, connect to the network: Press  , tap  "WiFi" and then select "Connect to Network".
The product resets every 10 seconds.	Oven failure.	Contact the Call Center.
The oven display shows F8E8 (or inability to use the Steam function because of failure F8E8)	Excessive pollution of the water and steam system.	Fill the drawer with clean water and then run the cleaning/descale function. After the process is completed, restart the descaling process using the target solution with the descaler and then carry out the process again. If error F8E8 still appears, contact the nearest service center.

Policies, standard documentation and additional product information can be found by:

- Visiting our website docs.hotpoint.eu
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

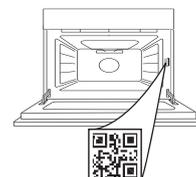

Hotpoint



400020012127