

**THANK YOU FOR BUYING A HOTPOINT PRODUCT**

In order to receive a more complete assistance, please register your product on [www.hotpoint.eu/register](http://www.hotpoint.eu/register)

 


**Before using the appliance carefully read the Safety Instruction.**

**FIRST TIME USE**

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

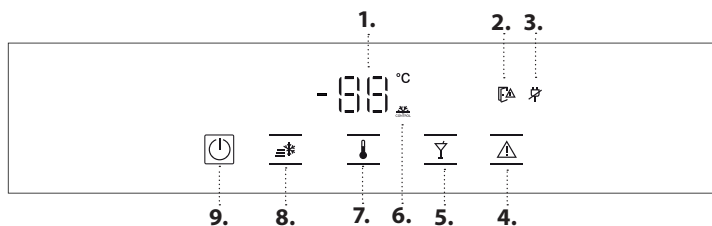**CONTROL PANEL**

1. Temperature Display
2. Door open indicator
3. Black out alarm indicator
4. Turning off the sound alarm
5. Party mode indicator
6. Freezer control indicator
7. Temperature button
8. Fast freeze
9. On/stand-by


**ON/STAND-BY**

To put the product in Stand-by, press and hold the On/Stand By button for 3 seconds. All the indicators turn off except On/Standby indicator. In Stand-by mode the light in the refrigerator compartment does not turn on. Press again to reactivate the appliance.



**TEMPERATURE DISPLAY**

The display shows the temperature of the freezer. To avoid an increase of food waste, refer to recommended setting and Storage Time in User manual online.

**TURNING OFF THE SOUND ALARM**

To turn off the sound alarm, briefly press the  button.

**BLACK OUT ALARM**

This alarm is triggered in the event of a prolonged power outage that has caused the temperature inside the freezer compartment to rise. The red indicator light flashes  and an acoustic signal is triggered, which will remain active until the door is closed. The freezer compartment temperature indicators may flash. To turn the sound signal off, press the "Turn off alarm" button . If the freezer compartment has not yet reached the temperature for the optimal preservation of the food items, the temperature alarm may be triggered (see temperature alarm). Check the food before consuming it.

**FREEZER COMPARTMENT TEMPERATURE**

To adjust the Freezer Temperature, press the Freezer °C button. The Freezer Temperature can be adjusted between -16°C and -24°C, as shown by the Freezer Temperature display.

*Recommended setting:*

*Freezer compartment: -18°C*

**FAST FREEZE**

The use of this function is recommended for the optimum freezing of fresh food.

24 hours before freezing fresh food, press the Fast Freeze button to activate the function. When activated, the Fast Freeze indicator turns on. After 24 hours place the fresh food to be frozen in the 3rd shelf from the top

NOTE: DRAWING TO BE UPDATED

The function is automatically disabled after 48 hours, or can be manually disabled by pressing Fast Freeze button again.

 
**FREEZER CONTROL INDICATOR**

This is an advanced technology that reduces temperature fluctuations in the product. Freezer burns are reduced and food preserves its original quality and color.

This function is automatically engaged when the freezer temperature set-point is between -22°C and -24°C.


If the function is engaged and the user modifies the freezer temperature out of the working range, the function is automatically switched off.

**PARTY MODE**


Press the Party Mode button  to activate the Party Mode function. The Party Mode icon turns ON. Use this function to chill drinks inside the product.

Important: do not leave the bottle inside the product longer than the function is active (30 minutes).

 The function can be manually disabled by pressing again the Party Mode button before the acoustical alarm turns ON.

After 30 min since it has been engaged, the acoustical alarm is activated, the party mode icon and the alarm indicator blink. Press the Stop Alarm button  to exit party mode.

## HOW TO STORE FRESH FOOD

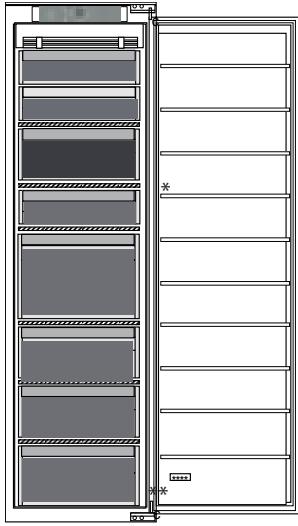 

### Legend



**FREEZER DRAWERS**



**FREEZING ZONE DRAWER**

(Max cool zone)

Suggested to freeze fresh/cooked food

### FREEZER COMPARTMENT

#### Ice cubes\*

Fill 2/3 of the ice tray with water and put it back in the freezer compartment. Do not, under any circumstances, use sharp or pointed objects to remove the ice.

 
The quantity of fresh food that can be frozen in a specific time period is indicated on the rating plate.

Load limits are determined by baskets, flaps, drawers, shelves etc. Make sure that these components can still close easily after loading.


### Light system (depending on model)




This product contains a light source of energy efficiency class G

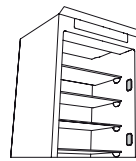

 This product contains 4 lateral light sources of energy efficiency class A



 This product contains a light source of energy efficiency class G

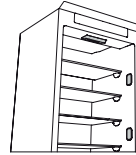

This product contains 4 lateral light sources of energy efficiency class A and a top light source of energy efficiency class G



This product contains a top light source of energy efficiency class G





### GENERAL INFORMATION

The drawers, baskets and shelves should be kept in their current position unless otherwise specified in this quick guide. The light system inside the refrigerator compartment uses LED lights, allowing for better lighting than with traditional light bulbs, as well as for very low energy consumption.

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.

\* Available only on certain models

## TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on pressing the On/Stand-by button. Check that: <ul style="list-style-type: none"> <li>• there is not a power outage;</li> <li>• the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered);</li> <li>• the household electrical system protection devices are efficient;</li> <li>• the power cable is not damaged.</li> </ul>
The inside light does not work.	The light may need to be replaced.	Models with LED lights: contact the authorised Technical Assistance Service.
	The appliance may be in On/Stand-by mode.	Turn the appliance on pressing the On/Stand-by button.
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No solution is necessary.
Door open alarm  indicator and Alarm indicators blink, the acoustical alarm is activated.	<b>Door open alarm</b> The door remained open for more than 2 minutes	Close the door or press the Stop Alarm to mute the acoustical alarm.
The Black Out Alarm icon  blinks, the Alarm indicator  blinks, the display shows the maximum temperature reached blinking	<b>Blackout alarm</b> Prolonged power failure, able to cause the temperature inside the product to increase	Press the Stop Alarm button; the acoustical alarm stops. the long black-out alarm is canceled.
The temperature display blinks, the acoustical alarm is activated and the Alarm Indicator  blinks	<b>Freezer compartment temperature alarm</b> The temperature inside the product is not adequate i.e it is too warm	Press the Stop Alarm button to stop the acoustical alarm; the temperature display continues blinking and the Alarm Indicator remains on until the adequate temperature is restored

\* Available only on certain models



Policies, standard documentation, ordering of spare parts and additional product information can be found by:

- Visiting our website [docs.hotpoint.eu](https://docs.hotpoint.eu) and [parts-selfservice.whirlpool.com](https://parts-selfservice.whirlpool.com)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.



**Hotpoint**



400020000574