




User Manual

3.1.2 Channel Dolby Atmos Sound Bar with Wireless Subwoofer

A65K

For United States

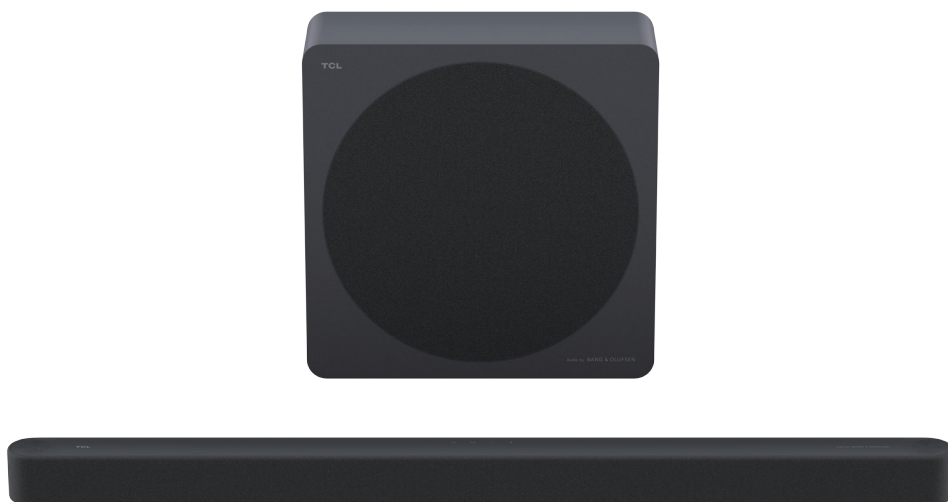

Illustrations in this guide are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Contents

Before You Begin	3
Important Safety Instructions	4
Welcome	8
What's in the Box	8
Overview of the Sound Bar	9
Overview of the Wireless Subwoofer.....	10
Set Up Your Sound Bar System	11
Position Your Sound Bar and Subwoofer	11
Mount Your Sound Bar on the Wall	12
Movable Stand Mounting	15
Install/Replace the Remote Control Batteries	16
Overview of the Remote Control	17
Connect Your Sound Bar System	20
Connect with the HDMI Cable	20
Connect Your Sound Bar to Power Supply	21
Connect the Sound Bar to Your Bluetooth Device	21
Use Your Sound Bar System	23
Use Your Sound Bar with the Top Panel or Remote Control.....	23
Listen to Music from Your Bluetooth Device	23
USB Music Playback.....	24
Software Update	25
Online Update.....	25
USB Update	26
Specifications	27
Notice	28
Disposal of Your Old Product and Battery	28
Trademarks.....	29
FAQ	30

Before You Begin

- Carefully read and observe all safety instructions in the safety leaflet.
- This Sound Bar is intended for indoor use only. In case it accidentally gets in contact with small amounts of water, unplug immediately and use a dry cloth to remove the water.
- Unplug the Sound Bar if it is not used for long periods of time or during lightning storms.
- Make sure the Sound Bar is installed on a solid surface or solidly wall-mounted below your TV for the best experience.
- Only use AAA 1,5V non-rechargeable batteries for the Remote Control.
- In case any of the cables are visibly damaged or pinched, unplug the Sound Bar and replace the cable.
- Be careful not to bend the HDMI cable excessively to avoid affecting performance.
- Protect your hearing by adjusting to a proper volume. Predefined and customizable sound settings are available for your listening comfort.

Important Safety Instructions

Make sure you read all the safety information before you use this product.

TCL North America bears no responsibility for accidents or damages caused by unauthorized changes, modifications or improper use of the product.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

 


This symbol indicates that this product incorporates double insulation between hazardous main voltage and user accessible parts. When servicing, use only identical replacement parts.



This symbol indicates that the fuse may be in the neutral, and that the mains shall be disconnected to deenergize the phase conductors.

Warnings



DOUBLE POLE/NEUTRAL FUSING !

- Touching dangerous live parts on the power board may result in electric shock.
- During maintenance, it is necessary to disconnect from mains (such as unplugging the power plug) and confirm that there is no dangerous voltage on the power supply board.

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. This product should not be exposed to dripping or splashing. No objects filled with liquids, such as vases, should be placed on or near the product.

The product is unstable if it is not properly placed or mounted to the wall. Be sure to follow the wall mounting instructions provided in the user manual to ensure your safety.

Do not expose batteries to excessive heat such as sunshine, fire, and so forth.

To avoid danger of suffocation, keep this plastic bag away from babies and children. Do not use this bag in cribs, beds, carriages or playpens. This bag is not a toy.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Safety

Read these instructions - Read all the safety and operating instructions before operating the product.

Retain these instructions - Retain the safety and operating instructions for future reference.

Heed all warnings - Adhere to all warnings on the product and in the operating instructions.

Follow all instructions - Follow all operating and use instructions.

Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool and the like.

Clean only with a dry cloth.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits from the product. If the cord set is damaged, it must be replaced by a special cord set available from the manufacturer or its service agent.

Use only attachments/accessories specified by the manufacturer.

Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

The user must maintain a minimum distance of 20CM from the device at all time.

This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

Cautions

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Do not place any sources of danger on the product (for example: liquid filled objects, lighted candles).

Disconnect the power cord to shut off when find trouble or not in use. The power cord shall be readily operable.

Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.

The power cord/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.

The rating label is located at the bottom or back of the product.

The use of apparatus in tropical and moderate climates. Operating temperature: 0-40 °C

Only suitable for altitude not higher than 2000 m.

Battery CAUTION and Disposal Information

Only use the battery types specified.

Risk of fire or explosion if the battery is replaced by an incorrect type.

Make sure you use the correct polarity.

Do not mix new and used batteries.

Do not use rechargeable batteries.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure can result in an explosion or the leakage of flammable liquid or gas.

Remove the batteries from the remote control if you are not using it for a long period of time.

Attention should be drawn to the environmental aspects of battery disposal.

Disposal of Your Old Product

Recycle Your Device Properly. In accordance with state and local laws, this product may be classified as a covered electronic device and must not be disposed of with household trash. TCL encourages consumers to always look for a recycling or reuse alternative to discarding electronic products through drop-off and mail-back options. Visit tcl.com/us/en/sustainability/electronics-recycling for instructions and authorized collection sites. Click on our convenient interactive map to quickly locate a solution in your community. For the US ONLY, for mail-back option, visit www.mrmrecycling.com/recycle-now.php and follow the instructions.

Compliance notice

Notice for US

FCC Information

Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Notice for Canada

Class B Clause

This Class B digital apparatus complies with Canadian ICES-003

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

 
This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Warning: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Welcome

What's in the Box

Congratulations on the purchase of your new TCL Sound Bar! After it is set up and connected, you can experience a superb sound quality and state-of-the-art design to best fit your home entertainment system. You are recommended to read through this user manual which helps you set up, connect and operate the product easily and properly.




Sound Bar

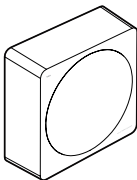


Subwoofer



 HDMI Cable



Wall Mount Template

 

Remote Control



Quick Start Guide



Power Cord x 2



Wall Mount Kit
(for Sound Bar)




Power Adapter



Warranty Card

Overview of the Sound Bar

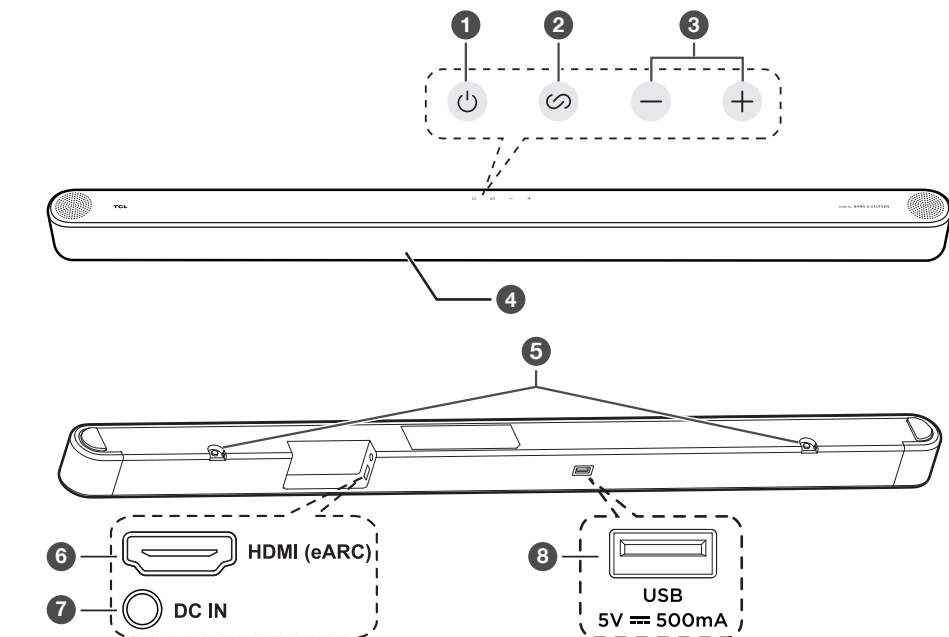

1

Short press: Power on/power off
Long press: Power off

2

Short Press: Switch input sources
(HDMI eARC/USB/Bluetooth)

3

Press to increase or decrease the volume

4 LED display:

Display the status of the sound bar
Receive signal from the remote control

5 Wall-mounted bracket slot

6 HDMI eARC connector


7 DC input power connector

8 USB Type A connector

Note:

- Factory reset: Press and hold , , and on the sound bar panel simultaneously for 10 seconds until the LED display shows "FACTORY RESET", then the device will automatically restart.
- View version: While the device is powered on or in standby mode, press and hold and on the sound bar panel for 10 seconds, or press , , and on the remote control (please follow the sequence and keep the interval within 2 seconds).
- Automatic standby switch: In the powered-on state, press and hold the and on the remote control simultaneously for 10 seconds. If this function is enabled, the sound bar will enter an automatic standby state after 20 minutes without signal input.

Overview of the Wireless Subwoofer

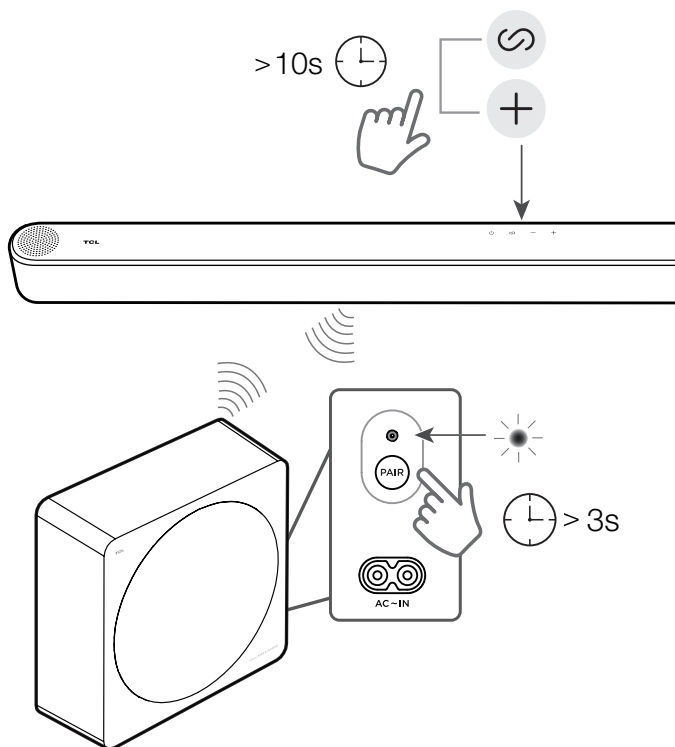

Wireless Subwoofer

Short press  to enter standby mode or turn on the device.

THE SUBWOOFER HAS BEEN PAIRED WITH THE SOUND BAR UPON FIRST USE.

In case of a problem, take the following steps to manually pair:

1. Press and hold  on the subwoofer for 3 seconds until the indicator light above it flashes rapidly to enter pairing mode.
2. Long press  and  on the sound bar panel together for 10 seconds until the LED display shows "SUB PAIRING" on the sound bar.
3. When pairing is successful, the indicator light on the subwoofer turns solid, and the sound bar LED display will show 'SUB CONNECTED'.

Set Up Your Sound Bar System


Notes

- Make sure you read all the safety information before you mount the Sound Bar on the wall.
- Make sure you use screws provided or specified by the authorized manufacturer.
- TCL bears no responsibility for accidents or damage caused by improper wall mounting and screws installation or insufficient wall strength, etc.
- Additional tools (not supplied) are required for installation.
- You can choose to place your Sound Bar below the center of your TV or mount it on the wall.

Position Your Sound Bar and Subwoofer

It is recommended to place the sound bar directly below the TV. Please refer to the figure below for the positioning of the sound bar and subwoofer.

Top View

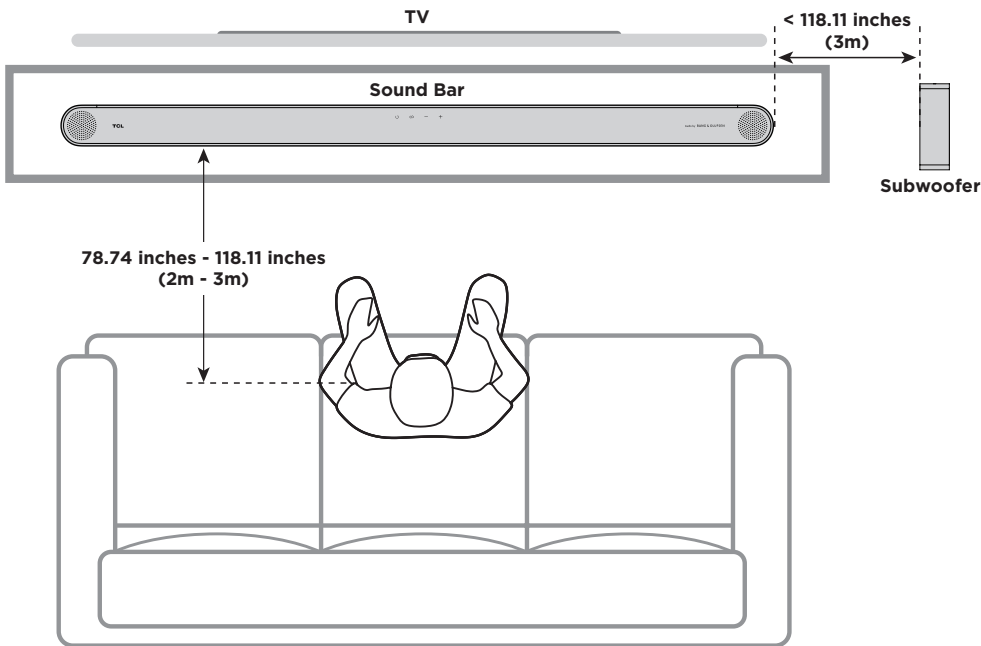

Mount Your Sound Bar on the Wall







Note

- Do not place the sound bar in direct sunlight, high temperatures, open flames, or humid environments. Suitable mounting height: < 78.74 inches/2 meters.

Method A: Flush Wall Mounting


For flush wall mounting, it is recommended to use a suitable USB extension cable (not included) for USB playback (the exposed length of the plug after insertion must be ≤ 0.236 inches/6mm).

1. Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches/5cm below the center of the TV.
2. Use a level to check if the wall mount template is positioned correctly.
3. Securely tape the wall mount template to the wall.
4. Mark the installation holes on the wall through the template.
5. Remove the wall mount template.
6. Drill a screw hole at each marking on the wall with a depth of 1.22-1.3 inches/31-33mm.
7. Insert the wall anchors into the holes on the wall.
8. Insert the supplied screws into the drilled holes.
9. Tighten the screws, leaving a gap of about 0.12 inches/3mm between the screw head and the wall.
10. Attach the wall mount brackets to the back of the sound bar. Then insert the supplied screws into the brackets and tighten them.
11. Lift the sound bar and hang it onto the screws on the wall, similar to hanging a picture. Ensure all parts are securely seated.

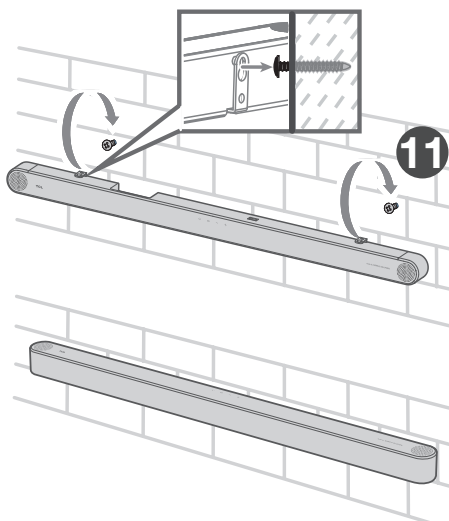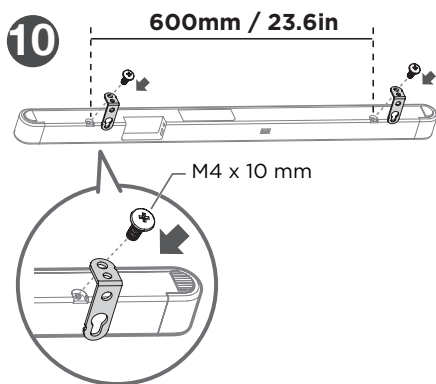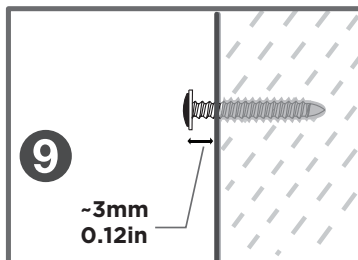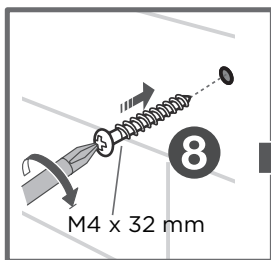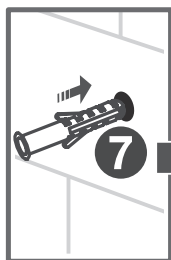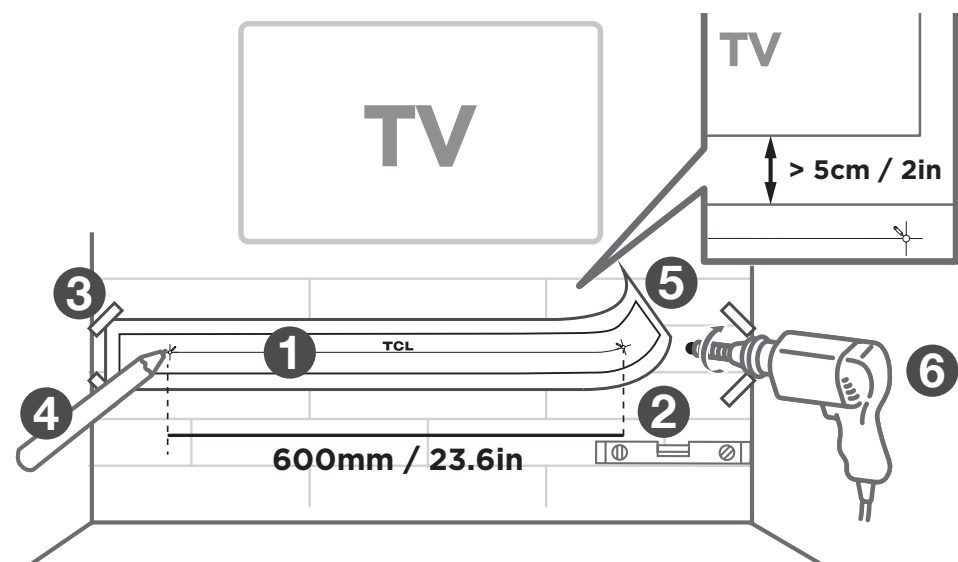

Method B: USB Connection (The inserted USB drive must not protrude more than 1.06 inches/27mm from the back of the sound bar to prevent it from pressing against the wall).


1. Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches/5cm below the center of the TV.
2. Use a level to check if the wall mount template is positioned correctly.
3. Securely tape the wall mount template to the wall.
4. Mark the installation holes on the wall through the template.
5. Remove the wall mount template.
6. Drill a screw hole at each marking on the wall with a depth of 1.22-1.3 inches/31-33mm.
7. Insert the wall anchors into the holes on the wall.
8. Insert the supplied screws through the wall mount brackets into the drilled holes, then tighten the screws to secure them.
9. Lift the sound bar and hang it onto the wall mount brackets.
10. Insert the supplied screws into the wall mount brackets and tighten them.

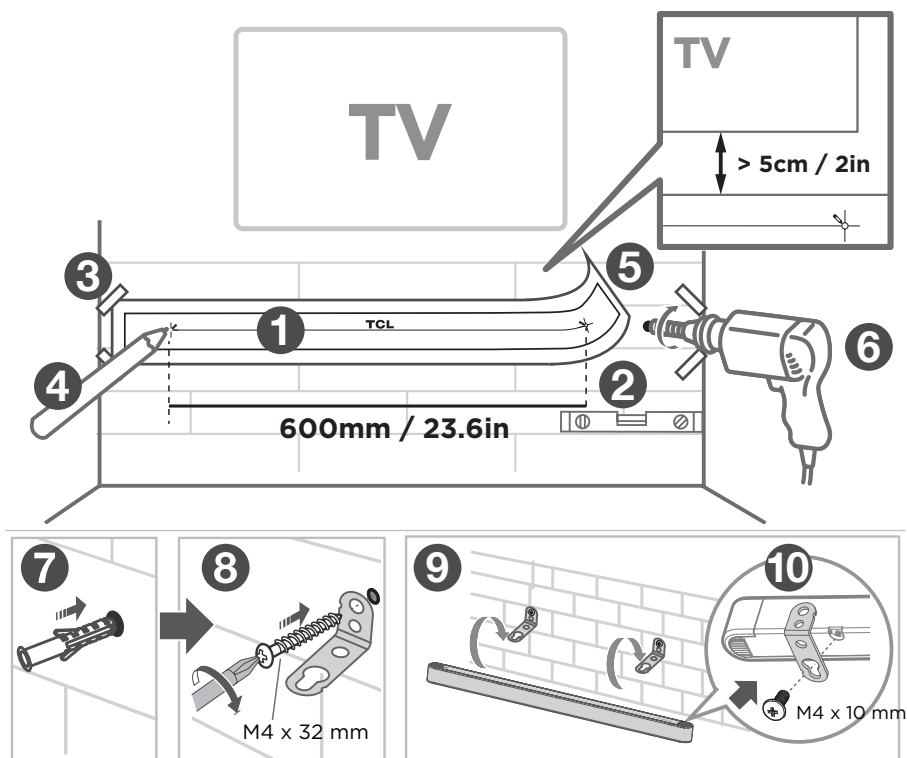

Movable Stand Mounting

1. Slot a screw through the holes on the bracket (x2) and tighten the screws (x2) into the sound bar.
2. Hang the sound bar on the moveable floor stand. Slot a screw through the holes on the bracket (x2) and tighten the screws (x2) into the moveable floor stand.

Note: The stand is sold separately.

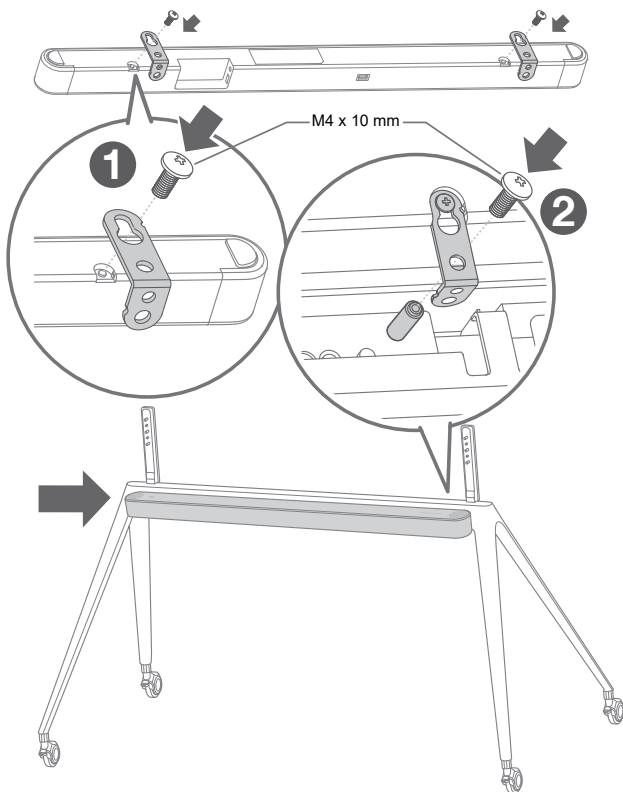


Install/Replace the Remote Control Batteries

Warnings

- *Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.*


Caution

- The battery contains perchlorate material, handle it with care. For information, refer to www.dtsc.ca.gov/hazardouswaste/perchlorate
- 1 Open the battery compartment, remove the old batteries if necessary.
 - 2 Place two new AAA batteries into the battery compartment with the correct polarity (+/-).
 - 3 Close the battery compartment.

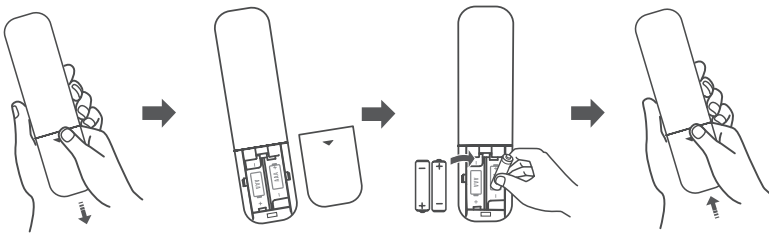

Setup is complete. Your Sound Bar is ready to use. For more information about how to access different connection options on your Sound Bar, see the following chapter.

Overview of the Remote Control

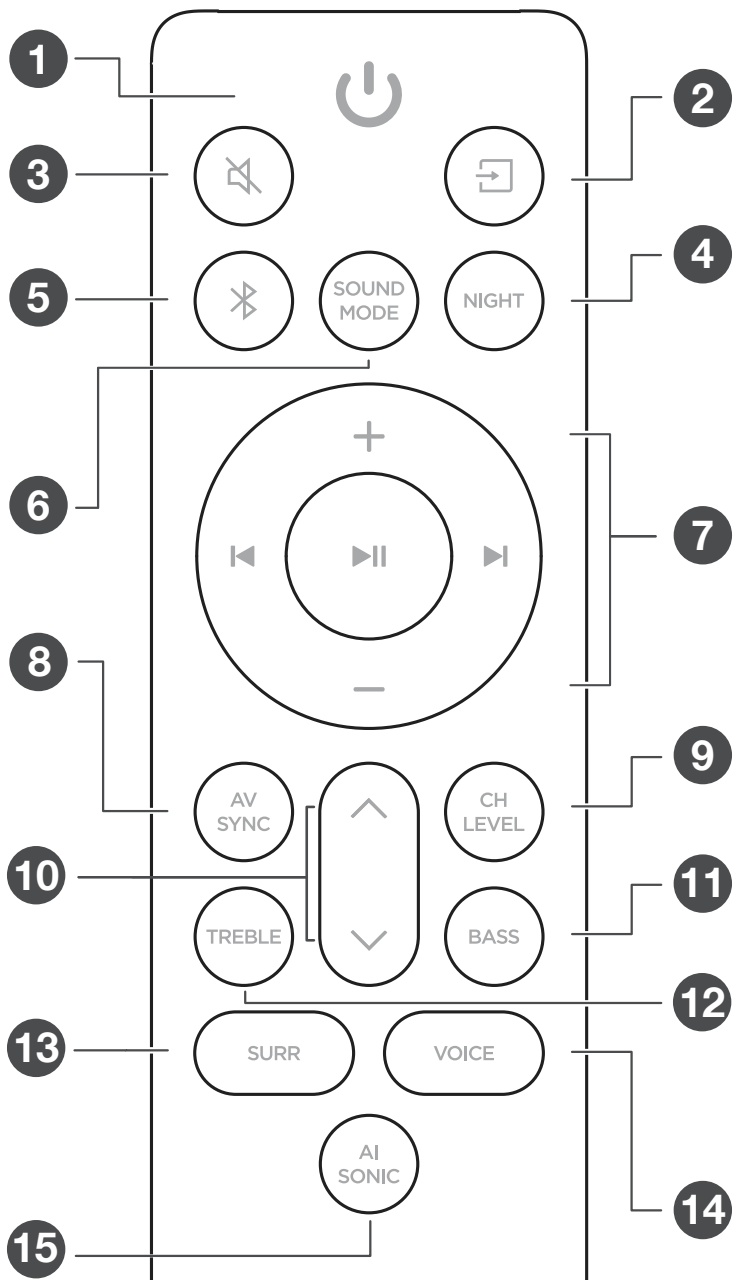

- ① Short press: Power on/power off
Long press: Power off
- ② Short press: Switch input sources (HDMI eARC/USB/Bluetooth)
- ③ Short press: Mute/unmute the sound
- ④ Short press to switch the sound mode to Night Mode. Long press for more than 3 seconds to cycle through the LED display brightness: Level 1 (100%) / Level 2 (70%) / Level 3 (40%). Default: Level 1.
- ⑤ Short press: Select bluetooth mode
Long press: Bluetooth pairing
- ⑥ Short press: Switch sound mode Standard/Movie/Music/Voice/Game/Night/Sports/Custom (Custom mode includes adjustments for Voice Enhancement and Surround Enhancement)
- ⑦ + Increase volume
- Decrease volume
⏮ Play previous music
⏭ Play next music
⏸ Short Press: Play/pause music.
Long press ▶▶ to wake up the LED Display and scroll to display "Source®+Audio Format®" info twice.
Press and hold this button when paused or stopped, and "Source®" will be displayed for two cycles only.
- ⑧ Short press to wake up the LED display, then use the Up/Down buttons to adjust the Audio Delay within a range of 0 to 300ms.
- ⑨ Short press to switch between Center Level, Front Top Level, and Subwoofer Level. Then short press the Up/Down buttons to adjust the volume.
- ⑩ The Up/Down buttons can adjust: Sound Mode (and Custom), AV Sync, Channel Level, Treble, Bass, and AI SONIC.
- ⑪ Short press to enter Bass adjustment mode, then short press the Up/Down buttons to increase or decrease the bass.
- ⑫ Short press to enter Treble adjustment mode, then short press the Up/Down buttons to increase or decrease the treble.
- ⑬ Press  to switch to Custom. Press  to select, then use the Up/Down buttons to adjust the effect (High, Mid, Low, or Off).
If the sound mode is not set to Custom, pressing  will display 'ONLY FOR CUSTOM SOUND MODE' on the LED Display.
- ⑭ Press  to switch to Custom. Press  to select, then use the Up/Down buttons to adjust the effect (High, Mid, Low, or Off).
If the sound mode is not set to Custom, pressing  will display 'ONLY FOR CUSTOM SOUND MODE' on the LED Display.
- ⑮ Short press to enter AI Sonic-Adaptation. Then short press the Up/Down buttons to switch between user-defined AI Sonic-Adaptation: Position 1/Position 2/Position 3/Off (Must be configured in the APP to take effect).

Note:

- ① Source: HDMI eARC/USB/Bluetooth
- ② Audio Format: PCM AUDIO/DOLBY SURROUND/DOLBY ATMOS/DTS/DTS HD/DTS:X, etc.

Control this sound bar using the TCL Home App. Functions include power control, volume adjustment, source switching, sound modes, AI Sonic-Adaptation, Beosonic, etc. Explore more smart features within the TCL Home App.

Please download the latest version from the app stores.



TCL Home App
Your TCL Smart Hub.
Download Now!

AI Sonic-Adaptation is a Room Calibration Technology developed by TCL Audio Lab. To use this function, you need to download TCL Home App and follow the instructions.

Before AI Sonic-Adaptation

Speaker distance, sound pressure level, and frequency response may be uneven based on your seating position and environment.

After AI Sonic-Adaptation

Speaker distance, sound pressure level, and frequency response are all optimized based on your seating position and environment.

How It Works?



Connect Your Sound Bar System

After you have fixed the position of the Sound Bar, you can start connecting it to your TV or other devices and listen to the audio through your Sound Bar. Make sure you have muted the audio of your TV or device. For information, check the user manual of your TV or device.

Connect with the HDMI Cable

Note


- Make sure your TV or device supports the HDMI (eARC/ARC) feature. For information, check the user manual of your TV or device.

Connect one end of the HDMI cable to the HDMI (eARC) input port on the soundbar, and the other end to the HDMI (eARC/ARC) output port on the TV or other device.

To get the best possible audio experience using the HDMI cable, follow below given steps:

For TCL TV:

- 1 Connect the HDMI cable from the HDMI (eARC) port on the soundbar to the HDMI (eARC/ARC) port on the TV.
- 2 Enable the CEC function in the settings of the TCL TV. (See TV User Manual for instructions)

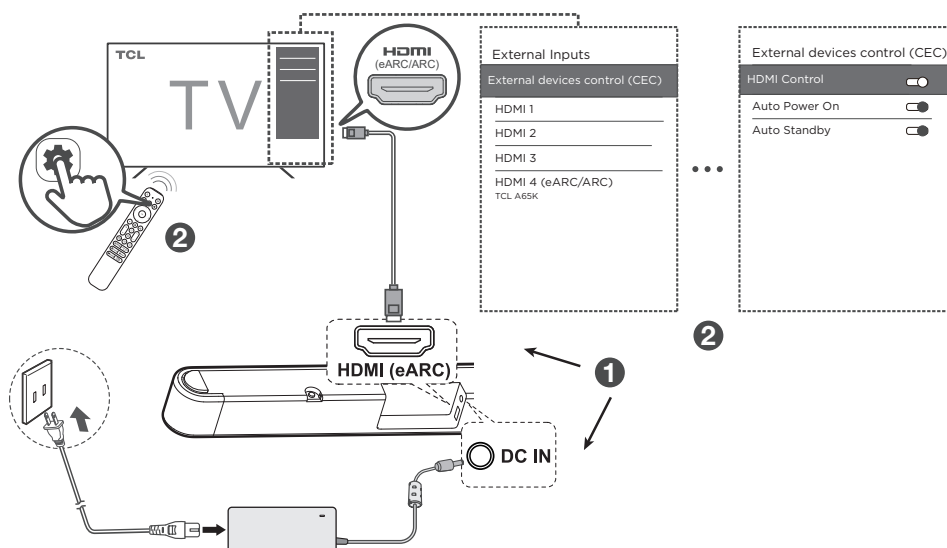


- ★ The name of the CEC (Consumer Electronics Control) feature may vary by TV brand. This feature may be known as CEC, Anynet+, SIMPLINK, BRAVIA Sync, EasyLink, or VIERA Link. For more information, please refer to your TV user manual.

The method for enabling this feature varies by TV brand.

Connect Your Sound Bar to Power Supply

- 1 Make sure that you have completed all other connections before connecting the Sound Bar to power supply.
- 2 Make sure the power supply voltage complies with your country's safety standards (see 'Specifications' on page 27)
- 3 Connect one end of the provided power cord to the DC input power connector on the sound bar, and the other end to a wall outlet.

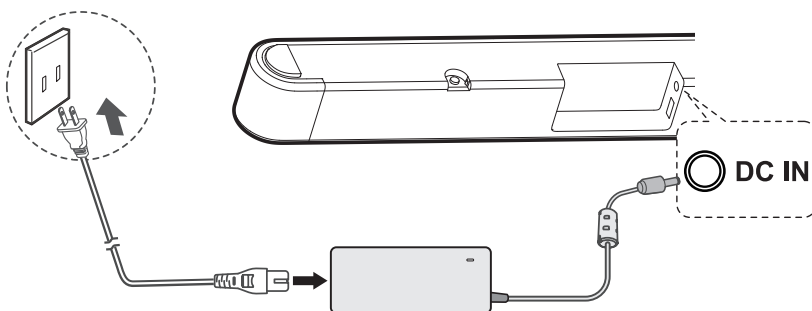

Connect the Sound Bar to Your Bluetooth Device

Notes

- Make sure your wireless device supports the Bluetooth function.
- The operational range between the Sound Bar and your Bluetooth device is approximately 10 meters (without any obstacle between the Bluetooth device and the Sound Bar).

1. Press the .

2. Method A: Long press  on the remote control.

Method B: Short press the  button on the sound bar to switch to the Bluetooth source, then long press  for 3 seconds to enter Bluetooth pairing mode. The LED display will show "PAIRING". The sound bar is ready to pair.


3. Turn on your Bluetooth device and ensure it is in pairing mode.

4. Select "TCL A65K". The LED display will show "BT CONNECTED". Pairing is successful.


5. Repeat step 3 to pair other Bluetooth devices.

Tip

- If you cannot find the model name **TCL A65K** on your Bluetooth device, press and hold  on the Remote Control. The LED display will show "PAIRING". Now the Sound Bar is coming into the pairing mode.

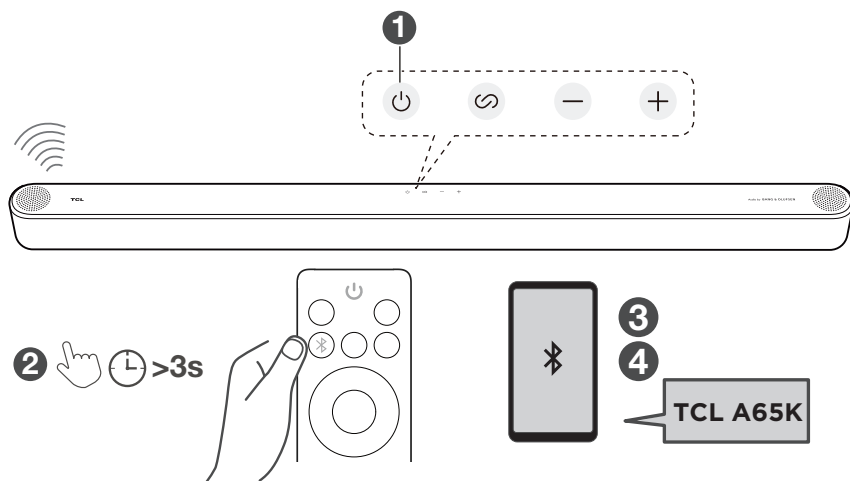

Method A

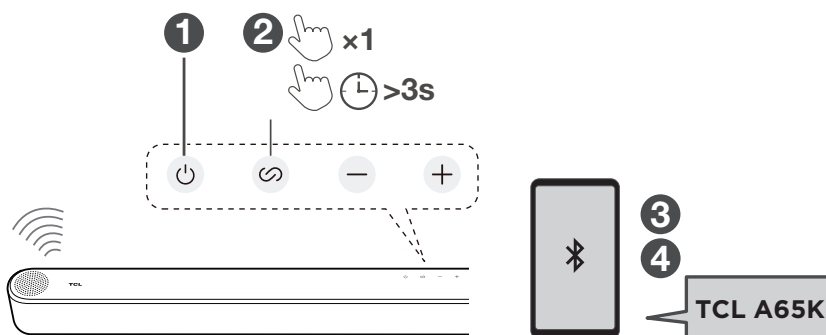

Method B

Use Your Sound Bar System

Use Your Sound Bar with the Top Panel or Remote Control

The Sound Bar LED display indicates various Sound Bar functions.

	Sound Bar Status	LED Display Status
Power	Power on	HELLO
	Power off	STDBY / SLEEP
Source	HDMI eARC	HDMI EARC / HDMI ARC
	USB	USB
	Bluetooth	BT
Bluetooth	Bluetooth mode	BT
	Pairing mode	PAIRING
Volume control	Volume level	V30
	Mute	MUTE
Audio setting	Bass (+/-)	BAS-6~+6
	Treble (+/-)	TRE-6~+6
	AI SONIC	POSITION 1 / POSITION 2 / POSITION 3 / OFF
	Surround Enhance (When the sound mode is set to custom)	SURR OFF / SURR LOW / SURR MEDIUM / SURR HIGH
	Voice Enhance (When the sound mode is set to custom)	VOICE OFF / VOICE LOW / VOICE MEDIUM / VOICE HIGH
Sound modes	Standard/Movie/Music/ Voice/Game/Night/Sports/Custom	STANDARD / MOVIE / MUSIC / VOICE / GAME / NIGHT / SPORTS / CUSTOM

Note: After powering on your Sound Bar, if there is no operation performed on either the Sound Bar or Remote Control within 10 seconds, all LED indicators on the Sound Bar will turn off and light up again when the operation is resumed.

Tip: You can use more advanced functions on the Remote Control (see ‘Overview of the Remote Control’ on page 17).

Listen to Music from Your Bluetooth Device

- 1 Make sure that your device supports A2DP and/or AVRCP. For information, check the specification of your device.


- 2 Pair your Bluetooth device with the Sound Bar (see 'Connect the Sound Bar to Your Bluetooth Device' on page 21).
- 3 Start listening to music stored in your Bluetooth device through the Sound Bar.
 - If your Bluetooth device supports A2DP, you can listen to music, but you cannot control the playback.
 - If your Bluetooth device supports AVRCP, you can listen to music and control music playback with the Remote Control. Short press play/pause button to pause or resume music playback. Short press left/right button to skip to the previous/next track.

Note

- The operational range between the Sound Bar and your Bluetooth device is approximately 10 meters (without any obstacle between the Bluetooth device and Sound Bar).

USB Music Playback

- Press play/pause button on the Remote Control to listen to/pause/resume the music.
- Press left/right button on the Remote Control to skip to the previous or next track.
- Press the Volume +/- buttons to increase or decrease the volume.

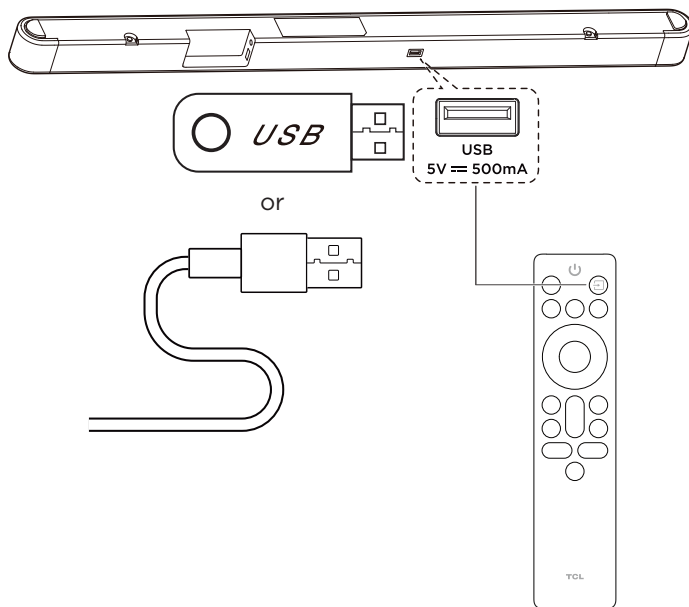

Tip

- This sound bar supports USB drives up to 128GB (FAT/FAT 32). Supported file formats: MP3, WAV, FLAC.
- Music files should be stored within 5 folder levels. Otherwise, the sound bar cannot detect the music.

Software Update

TCL may offer updates for the Sound Bar's system firmware in the future.


When an update is available, you can upgrade the Sound Bar by connecting the USB drive or using TCL HOME app to update the firmware online.

Online Update

Follow the instructions in the image below to update the firmware on TCL HOME app.

Note

- Information displayed on the App may vary depending on the mobile device.
- Ensure the subwoofer is connected to the sound bar before updating.
- Do not operate the sound bar or subwoofer, or exit the TCL HOME app during the update process.
- Update duration may vary depending on the firmware version. The LED display will show "SUCCESS" if the update is successful, and "FAILED" if it fails.
- If the App update is too slow, please contact TCL customer support or use the USB update method.

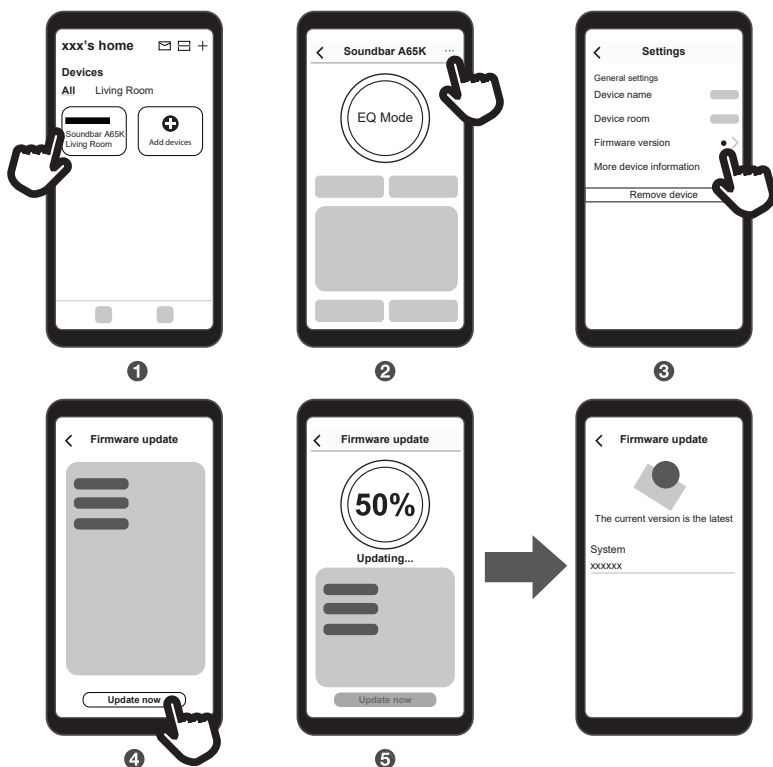

USB Update

Requirements:

- TCL Sound Bar
- A computer connected to the Internet
- A USB storage device in FAT/FAT32 format with at least 100MB of available space.

Note: Please remove all files and folders from the USB storage device (it should be empty).

Update Procedure:

- A. Find your device model on the TCL support website and download the latest update file for the TCL sound bar.
- B. Move or copy the file with the ".fw" extension to your USB storage device.
- C. Update the TCL sound bar by following these steps:
 - Step 1: Unplug and reconnect the power cord, then restart the sound bar.
 - Step 2: Switch the sound bar to USB mode and insert the USB storage device.
 - Step 3: The system will update automatically; you can monitor the update status via the sound bar LED.
 - Step 4: The sound bar will restart automatically once the update is complete. The entire process takes about 5 minutes. After the update is finished, please remove the USB storage device from the sound bar.

Important:

1. During the update process, do not remove the USB storage device, unplug the power cord, or turn off the sound bar.
2. If the update fails, the LED display will show "FAILED". Please unplug the power cord and the USB device, then repeat the above steps to retry the update.
3. Before upgrading, please make sure that all sources are not physically connected.
4. Before updating, please ensure the subwoofer is connected.

Specifications

Product Name

3.1.2 Channel Dolby Atmos Sound Bar with Wireless Subwoofer

Sound Bar

- Power Supply
Adapter: KA65E-2402500P
Input: 100-240 V $\sim$ 50/60 Hz, 1.5 A (Max)
Output: 24 V $\rightleftharpoons$ 2.5 A, 60 W 
- USB: 5 V $\rightleftharpoons$ 500 mA (Max)
- Power Consumption: 40 W
- Standby Power Consumption (after pressing and holding the power button for 3 s): $\leq$ 0.5 W
- Standby Power with TCL Home app enabled (when there is no signal input or audio output for 20 minutes): $\leq$ 2 W
- Impedance: Left/Right/Center Tweeter: 4 Ω ; Left/Right/Center Woofer: 8 Ω ; Upfiring: 6 Ω
- Frequency Response: 150 Hz - 20 kHz
- Dimensions (W x H x D): 880 x 52 x 50 mm
- Weight: 1.15 kg
- Operating Temperature: 0 $^{\circ}$ C - 40 $^{\circ}$ C
- Frequency Range: 2.402 - 2.480 GHz
- Maximum Transmit Power: $\leq$ 10 dBm
- **FTC Power Output Rating: 38.3 W**

Wireless Subwoofer

- Power Supply: AC 100-240 V $\sim$ 50/60 Hz
- Power Consumption: 40 W
- Standby Power Consumption: $\leq$ 0.5 W
- Standby Power with TCL Home App enabled (when there is no signal input or audio output for 20 minutes): $\leq$ 2 W
- Impedance: 4 Ω
- Frequency Response: 40 Hz - 150 Hz
- Frequency Range: 2.402 - 2.480 GHz
- Maximum Transmit Power: $\leq$ 10 dBm
- Dimensions (W x H x D): 350 x 354.5 x 120 mm
- Weight: 5.35 kg
- Operating Temperature: 0 $^{\circ}$ C - 40 $^{\circ}$ C
- **FTC Power Output Rating: 53.3 W**

Bluetooth

- Bluetooth Version: 5.3, Bluetooth Profiles: Supports Bluetooth stereo (Advanced Audio Distribution Profile - A2DP; Audio/Video Remote Control Profile - AVRCP)
- Frequency Range: 2.4G: 2.402 - 2.480 GHz
- Maximum Transmit Power: $\leq$ 10 dBm

Remote Control

- Distance/Angle: 6 m / 30 $^{\circ}$
- Battery Type: 1.5 V AAA battery x 2, user replaceable.

Notice

Disposal of Your Old Product and Battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Remove the disposable battery

To remove the disposable batteries, see the section 'Install/Replace the Remote Control Battery'.

Environmental protection and sustainability

We have omitted all unnecessary packaging and make sure it is eco-friendly and sustainable.

Trademarks



Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TTE Corporation is under license. Other trademarks and trade names are those of their respective owners.



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

FAQ

No Power

- Ensure the power cord is properly connected.
- Ensure there is power supply.
- Ensure the sound bar is turned on.

No Sound

- Ensure the audio cable is connected to the sound bar and your device.
- Ensure you have selected the correct source.
- Press the "Volume +" button to increase the volume.
- Ensure the sound bar is not muted.

Low Volume

- Use the remote control to adjust the volume.

Remote Control Does Not Work

- Ensure you have selected the correct source.
- Ensure the distance between the remote control and the sound bar is within the operational range.
- Ensure the batteries are inserted correctly and working properly.
- Ensure the remote control is close to the remote sensor of the sound bar.

I Hear Buzzing or Humming

- Ensure all cables are connected correctly.
- Ensure you have selected the correct source.
- If playing TV audio, ensure the TV is muted.

TCL support:

US: support.tcl.com

1-877-300-9223

WE ARE READY TO HELP

Contact us first with any questions



**TAKE CARE WHEN
REMOVING THE SOUND BAR**