



HOBS

USER INSTRUCTIONS _____

GB - IE

PIANI COTTURA

ISTRUZIONI D'USO E DI INSTALLAZIONE _____

IT

TABLE DE CUISSON

NOTICE D'EMPLOI ET D'INSTALLATION _____

FR

KOCHMULDE

GEBRAUCHS - UND INSTALLATIONSANWEISUNGEN _____

DE

PLACAS

MANUAL DE INSTRUCCIONES _____

ES

PLACAS

MANUAL DE INSTRUÇÕES _____

PT

VARNÉ DESKY

NAVOD POUŽITÍ _____

CZ

NAVODILA ZA UPORABO

VGRADNJO IN PRIKLJUČITEV _____

SL

ВСТРАИВАЕМЫЕ ВАРОЧНЫЕ ПОВЕРХНОСТИ

ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ И УСТАНОВКЕ _____

RU

PLYTY

INSTUKCJE DLA UŻYTKOWNIKA _____

PL

KOOKPLAATS

INSTALLATIE-EN GEBRUIKSINSTRUCTIES _____

NL

HOBS

INSTRUKTIONER FÖR ANVÄNDNING OCH INSTALLATION _____

SE

HOBS

KÄYTTÖ - JA ASENNUSOHJEET _____

FI

HOBS

BRUGSANVISNING OG INSTALLATION _____

DK

HOBS

BRUKS - OG MONTERINGSVEILEDNING _____

NO

ҚОСА ОРНАТЫЛАТЫН ПІСІРЕТІН БЕТТЕР

ІСКЕ ПАЙДАЛАНУ ЖӘНЕ ОРНАТУ ЖӨНІНДЕГІ НҰСҚАУЛЫҚТАР _____

KAZ

КОТЛОНИ

ИНСТРУКЦИИ ЗА ПОТРЕБИТЕЛЯ _____

BG



CONTENT	GB - IE
SAFETY INSTRUCTIONS	06
1. General Warnings	07
2. Installation	07
3. Built-in	07
4. Electrical connexion	07-08
5. Presentation	08
6. Hob cookware advice	08
7. Use	09-10
8. Cleaning and maintenance	10
9. Problem solving	11
10. Aftercare	11
11. Protection of the environment	11

INDICE	IT
PRESCRIZIONI DI SICUREZZA	12
1. Avvertenze generali	13
2. Installazione	13
3. Inserimento nel mobile	13
4. Collegamento elettrico	13-14
5. Presentazione	14
6. Consigli d'utilizzo	14
7. Utilizzo del piano	14-15
8. Manutenzione	16
9. Problemi e soluzioni	17
10. Assistenza Post-vendita	17
11. Rispetto dell'ambiente	17

CONTENU	FR
CONSIGNES DE SECURITE	18
1. Instructions générales	19
2. Installation	19
3. Encastrement	19
4. Raccordement électrique	19-20
5. Présentation	20
6. Le choix des ustensiles	20
7. Utilisation	20-21
8. Entretien	22
9. Problèmes et solutions	23
10. Assistance technique	23
11. Protection de l'environnement	23

INHALT	DE
SICHERHEITSHINWEISE	24
1. Konformitätserklärung	25
2. Installation	25
3. Einbau	25
4. Elektrischer Anschluß	25-26
5. Darstellung	26
6. Wahl des richtigen Kochgeschirrs	26
7. Nutzungsanweisungen	26-27
8. Pflege und Reinigung	28
9. Problemlösungen	29
10. Technischer Kundendienst	29
11. Umweltschutz	29

CONTENIDO	ES
INSTRUCCIONES DE SEGURIDAD	30
1.1. Instrucciones generales	31
2.1. Instalación	31
3. Empotramiento	31
4. Conexión eléctrica	31-32
5. Presentación	32
6. La elección de los utensilios	32
7. Utilización	32-33
8. Mantenimiento	34
9. Resolución de problemas	35
10. Asistencia técnica	35
11. Protección del medioambiente	35


INDICE	PT
INSTRUÇÕES E RECOMENDAÇÕES DE SEGURANÇA	36
1. Instruções gerais	37
2. Instalação	37
3. Encastre	37
4. Ligação eléctrica	37-38
5. Descrição das placas	38
6. A selecção dos recipientes	38
7. Como utilizar a placa	39-40
8. Limpeza da placa vitrocerâmica	40
9. Detecção e resolução de problemas	41
10. Assistência Técnica	41
11. Protecção do meio ambiente	41

OBSAH	CZ
VŠEOBECNÁ UPOZORNĚNÍ	42
1. PROHLÁŠENÍ O SHODĚ	43
1.1. INSTALACE	43
2. ELEKTRICKÉ ZAPOJENÍ	43
3. VESTAVBA	43
4. PŘIPOJENÍ K ELEKTRICKÉ SÍTI	43-44
5. POPIS SPOTŘEBIČE	44
6. DOPORUČENÍ K NÁVODÍ	44
7. POUŽITÍ	44-45
8. ÚDRŽBA A ČISTĚNÍ	46
9. ODSTRÁNĚNÍ MOŽNÝCH PROBLÉMŮ	47
10. SERVIS	47
11. PROHLÁŠENÍ O SHODĚ	47

VSEBINA	SL
SPLOŠNI VARNOSTNI NAPOTKI	48
1. Splošni Napotki	49
2. Namestitve In Priključitev	49
3. VGRADNJA	49
4. Priključitev Na Električno Omrežje	49-50
5. Opis Kuhalne Plošče	50
6. Ustrezna Posoda	50
7. Uporaba	51-52
8. Vzdrževanje In Čiščenje	52
9. Odpravljanje Nepravilnosti V Delovanju	53
10. Servisiranje	53
11. Varstvo Okolja	53

СОДЕРЖАНИЕ	RU
МЕРЫ ПРЕДОСТОРОЖНОСТИ	54
1. ДЕКЛАРАЦИЯ СООТВЕТСТВИЯ	55
2. ИНСТРУКЦИИ ПО ВЫПОЛНЕНИЮ УСТАНОВКИ	55
3. ВСТРАИВАЕМАЯ БЫТОВАЯ ТЕХНИКА	55
4. ЭЛЕКТРИЧЕСКИЕ ПОДКЛЮЧЕНИЯ	55-56
5. ОПИСАНИЕ	56
6. СОВЕТЫ ОТНОСИТЕЛЬНО ВЫБОРА КУХОННОЙ ПОСУДЫ ДЛЯ ИСПОЛЬЗОВАНИЯ С ВАРОЧНОЙ ПОВЕРХНОСТЬЮ	56
7. ЭКСПЛУАТАЦИЯ ПОВЕРХНОСТИ	57-58
8. ЧИСТКА И ОБСЛУЖИВАНИЕ	58
9. ВОЗМОЖНЫЕ ПРОБЛЕМЫ И ИХ УСТРАНЕНИЕ	59
10. ПОСЛЕПРОДАЖНОЕ ОБСЛУЖИВАНИЕ	59
11. ЗАЩИТА ОКРУЖАЮЩЕЙ СРЕДЫ	59

SPIS TREŚCI	PL
INSTRUKCJE BEZPIECZEŃSTWA	60
1. Uwagi Ogólne	61
2. Instalacja	61
3. Zabudowa	61
4. Podłączanie Do Instalacji Elektrycznej	61-62
5. Opis	62
6. Wskazówki Odnośnie Naczyni	62
7. Użytkowanie	62-63
8. Użytkowanie	64
9. Rozwiązywanie Problemów	65
10. Serwis Techniczny	65
11. Ochrona Środowiska	65

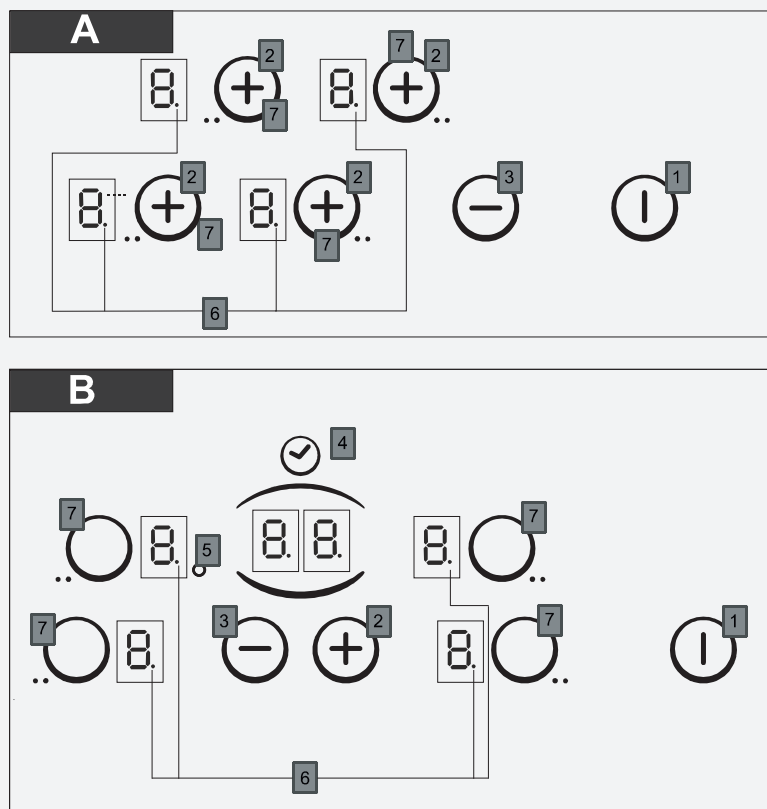

According to model - Secondo modello - Selon modèle - Je nach Modell - Según el modelo - Dependendo do modelo - v závislosti na modelu - v skladu z vzorcem - в зависимости от модели - Zależnie od modelu - Volgens model - Beroende på modell - Mallikohtainen - Afhænger af modellen - I samsvar med modell - Модельге байланысты - В зависимость от модели

1. ON / OFF

2. "+"

3. "-"

4. TIMER - MINUTENZÄHLER - RELOJ - CONTA-MINUTOS - ČASOVÝ SPÍNAČ - ČASOVNÍK - REGULATOR CZASOWY - TIMER - AJASTIN - TIMER - TIDTAKER - ТАЙМЕР-ТАЙМЕР

5. Additional cooking zone led - Spia della zona di cottura estesa - Diode de fonctionnement du foyer complémentaire - LED für die zusätzliche Kochzone - Piloto de funcionamiento de la zona complementaria - Indicador luminoso da zona de cozedura adicional - Další varné zóny vedlo - Dodatna kuhalno polje pod vodstvom- дополнительная площадь приготовления пищи привело - Dodatkowa strefa gotowania doprowadziła - Symbool van uitgebreide kookzone - Lampa för extra tillagningszon - Kuumennusalueen led-merkkivalo - LED-Indikator for udvidet kogezone - Lampe for tilleggssone - Тамақ пісіретін қосымша ауданның жарықдиод индикаторы - Светодиодная лампочка за допълнителната зона на готвене

6. Cooking zone programming indicator - Spia programmazione zona di cottura - Repère de programmation du foyer - Anzeiger der Kochzonenprogrammierung - Piloto de la zona programada - Indicador luminoso de programação - Varná zóna programování ukazatel - kuhalno polje programiranje kazalnik - приготовление области программирования индикатор - Strefa wskaźnik gotowania programowania - Programmatie-icoon van kookzone - Indikator för programmering av tillagningszoner - Kuumennusalueen ohjelmoinnin merkkivalo - Indikator for programmering af kogezone - Programmeringsindikator for kokesone - Тамақ пісіретін ауданды бағдарламалау индикаторы - Програмируем индикатор на зоната за готвене

7. Selection of the zone - Selezione della zona - Sélection de la zone - Auswahl des Bereichs - Selección de la zona - Selecção da área - Výběr zóny - Izbor območja - Выбор области - Wybór strefy - Selectie van de zone- val av zonen - valinta vyöhykkeen- Udvælgelse af zonen - Utvalg av sonen - Ауданды таңдау - Избор на зона

SAFETY INSTRUCTIONS

READ THE INSTRUCTIONS BOOKLET CAREFULLY TO MAKE THE MOST OF YOUR HOB.

We recommend you keep the instructions for installation and use for later reference, and before installing the hob, note its serial number in case you need to get help from the after sales service.

Warning : the appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.

- Children under 8 Year of age must be kept away from the appliance unless they are continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

Warning : unattended cooking on a hob with fat or oil can be dangerous and may result in fire.

- Never try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- Warning : danger of fire: do not store items on the cooking surfaces.
- Warning : if the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- Never use a steam or high pressure spray to clean the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- If present do not to stare into halogen lamp hob elements.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- The instructions state the type of cord to be used, taking into account the temperature of the rear surface of the appliance.
- If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- It is strongly recommended to keep children away from the cooking zones while they are in operation or when they are switched off, so long as the residual heat indicator is on, in order to prevent the risks of serious burns.
- Aluminium foil and plastic pans must not be placed on heating zones.
- After every use, some cleaning of the hob is necessary to prevent the build up of dirt and grease. If left, this is recooked when the hob is used and burns giving off smoke and unpleasant smells, not to mention the risks of fire propagation.
- Do not touch the heat zones during operation or for a while after use.
- Never cook food directly on the glass ceramic hob. Always use the appropriate cookware.
- Always place the pan in the centre of the unit that you are cooking on.
- Do not use the surface as a cutting board.
- Do not slide cookware across the hob.
- Do not store heavy items above the hob. If they drop onto the hob, they may cause damage.
- Do not use the hob as a working surface.
- Do not use the hob for storage of any items.

1. GENERAL WARNINGS

We are constantly striving to improve product quality and as such may modify appliances to incorporate the latest technical improvements.

This equipment, in the parts intended to come into contact with food, complies with the regulations laid down in EEC directives 89/109.

By placing the **CE** mark on this product, we are confirming compliance to all relevant European safety, health and environmental requirements which are applicable in legislation for this product.

2. INSTALLATION

Installing a domestic appliance can be a complicated operation which if not carried out correctly, can seriously affect consumer safety. It is for this reason that the task should be undertaken by a professionally qualified person who will carry it out in accordance with the technical regulations in force. In the event that this advice is ignored and the installation is carried out by an unqualified person, the manufacturer declines all responsibility for any technical failure of the product whether or not it results in damage to goods or injury to individuals.

3. BUILT-IN

The furniture in which your hob will be installed and all adjacent furniture, should be made from materials that can withstand high temperatures. In addition, all decorative laminates should be fixed with heat-resistant glue.

Installation (Fig. B/D):

- . A watertight seal is supplied with the hob.

Before fitting:

- turn the hob upside down, with the glass surface facing downwards.

Make sure the glass is protected.

- fit the seal round the hob.
- make sure that it is correctly fitted to avoid any leakage into the supporting cabinet.

- . Leave a gap of at least 5 cm between the appliance and the vertical sides of the adjacent furniture.

- . If, when installing the hob, the lower hob face is adjacent to an area normally accessible when handling or cleaning, fit a partition 1 cm below the base of the hob to avoid any risk of scorching or damage.

When installing the hood above a cooker top, please consult the installation instructions advising on the correct distance required from the cooker top.

If it is installed on a cabinet above a cooker top, the minimum distance required is 70 cm.

4. ELECTRICAL CONNECTION

"The installation must conform to the standard directives."
The manufacturer declines all responsibility for any damage that may be caused by unsuitable or unreasonable use.

Warning:

we cannot be held responsible for any incident or its consequences that may arise during the use of an appliance not linked to the earth, or linked to an earth whose continuity is defective.

- . Always check before any electrical operation, the supply tension shown on the electricity meter, the adjustment of the circuit-breaker, the continuity of the connection to earth to the installation and that the fuse is suitable.

- . The electrical connection to the installation should be made via a socket with a plug with earth, or via an omnipole cut-out switch.

If the appliance has a socket outlet, it must be installed so that the socket outlet is accessible.

- . The yellow/green wire of the power supply cable must be connected to the earth of both power supply and appliance terminals.

- . Any queries regarding the power supply cord should be referred to After Sales Service or a qualified technician.

The hob is fitted with a power supply cord which allows it to be connected only to a power supply of 220-240 V between phases or between phase and neutral.

. Connect to a socket.

It is however possible to connect the hob to :

- . Three phase 220-240 V3~
- . Three phase 380-415 V2N~

To proceed to the new connection, you must adhere the following instructions.

- Before making the connection, make sure that the installation is protected by a suitable fuse, and that it is fitted with wires of a large enough section to supply the appliance normally.

- Turn over the hob, glass side against the work top, taking care to protect the glass.

Open the cover in the following sequence:




- . unscrew the cable clamp "1",
- . find the two tabs located on the sides,
- . put the blade of a flat screw-driver in front of each tab "2" e "3", push in and press,
- . remove the cover.

To release the power supplying cord.

- . remove the screws retaining the terminal block which contains the shunt bars and the conductors of the supply cord,
- . Pull out the supply cord.

Operations to be carried out to make a new connection :

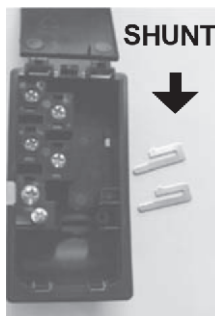

- Choose the power supply cable in accordance with the recommendations in the table.
- Pass the power supply cable into the clamp.
- Strip the end of each conductor of the supply cord on a 10 mm length, by taking in account the requested length of the cord for the connection to the terminal block.
- According to the installation and with the help of shunt bars which you should have recovered in the first operation, fix the conductor as shown on the chart.
- Fix the cover.

- Screw the cable clamp.

Note: make sure the terminal board screws are tight.


ATTENTION:

should it be necessary to replace the supply cord, connect the wire in accordance with the following colours/codes:

BLUE	- NEUTRAL (N)
BROWN	- LIVE (L)
YELLOW-GREEN	- EARTH (⊕)

Connection to the terminals on the terminal block

	LAY OUT "1"	LAY OUT "2"	LAY OUT "3"
MONOPHASE or TWO PHASES 220-240 V~			
Cable HO5V2V2F	3x2,5 mm ²	3x2,5 mm ²	3x2,5 mm ²
THREE PHASES 220-240 V3~			
Cable HO5V2V2F	4x1,5 mm ²	4x1,5 mm ²	4x1,5 mm ²
THREE PHASES 380-415 V2N~			
Cable HO5V2V2F	4x1,5 mm ²	4x1,5 mm ²	4x1,5 mm ²

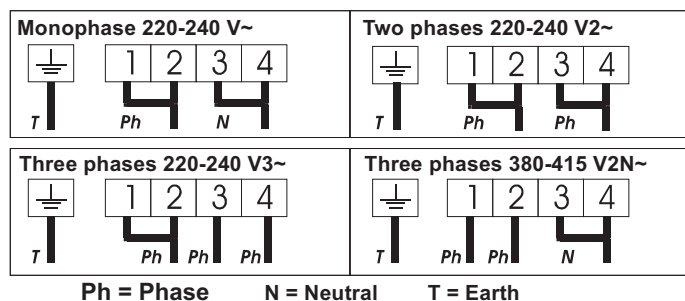

5. PRESENTATION

• highlight zone :

a metallic conductor strip is spread uniformly over the whole surface unit. It is effective within 3 seconds and is suitable for steady, homogeneous and also sustained cooking.

The glass-ceramic hob benefits from greater heat output which is generated by the highlight cooking zones thereby accelerating the cooking process. Modifications to the design of the hob have not affected the capacity of the glass to withstand high temperatures, but they have improved controllability.

With the "Sprinter" facility, reduced cooking times of up to 15% can be achieved, depending upon the method of cooking and the type of saucepans being used.

6. HOB COOKWARE ADVICE

Using good quality cookware is critical for setting the best performance from your hob.



Always use good quality cookware with perfectly flat and thick bases :

using this type of cookware will prevent hot spots that cause food to stick. Thick metal pots and pans will provide an even distribution of heat.

Ensure that the base of the pot or pan is dry : when filling pans with liquid or using one that has been stored in the refrigerator, ensure that the base of the pan is completely dry before placing it on the hob. This will help to avoid staining the hob.

Use pans whose diameter is wide enough to completely cover the surface unit : the size of the pan should be no smaller than the heating area.

If it is slightly wider the energy will be used at its maximum efficiency.

THE CHOICE OF COOKWARE - The following information will help you to choose cookware which will give good performance.

Stainless Steel : *highly recommended*. Especially good with a sandwich clad base. The sandwich base combines the benefits of stainless steel (appearance, durability and stability) with the advantages of aluminium or copper (heat conduction, even heat distribution).

Aluminium : *heavy weight recommended*. Good conductivity. Aluminium residues sometimes appear as scratches on the hob, but can be removed if cleaned immediately. Because of its low melting point, thin aluminium should not be used.

Cast Iron : *usable, but not recommended*. Poor performance. May scratch the surface.

Copper Bottom / stoneware: *heavy weight recommended*. Good performance, but copper may leave residues which can appear as scratches. The residues can be removed, as long as the hob is cleaned immediately. However, do not let these pots boil dry. Overheated metal can bond to glass hobs. An overheated copper pot will leave a residue that will permanently stain the hob.

Porcelain/enamel : Good performance only with a thin smooth, flat base.

Glass-ceramic : *not recommended*. Poor performance. May scratch the surface.

7. USE


• After powering up the hob, wait some seconds to activate the electronic controls.

- Press the button ① . *The corresponding indicator lights. Electronic control of the hob is activated : in each display zone, the heat level shows 0.*

- After 20 seconds without use, the electronic control goes off and the starting operation has to be repeated.

. STARTING A COOKING ZONE

- Press the selection button of the required cooking zone. The "0" of the corresponding zone stays lighted when the light of the others "0" is reduced.

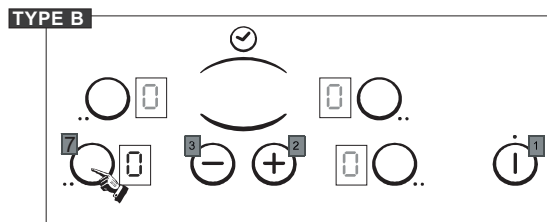

- Press the - or + button to select a heat level between 1 and 9. Hold down the + or - button and the heat level increases or decreases gradually.

The following examples are for information only. Personal experience should then let you adapt these settings to your taste and habits.

0	: Off
U-1	: Dissolving
2	: Melting
3	: Keeping hot
4	: Heating up
5	: Thawing, stewing, full cooking, low temperature cooking
6	: Cooking without lid
7	: Frying, meat browning and roasting
8	: High temperature cooking and roasting, seizing
9	: Frying, boiling large quantities of water.....

STOPPING A COOKING ZONE

- Press the selection button of the required cooking zone.
 - Press the "-" button to display heat level 1. Now the zone goes off, the indicator 1 goes off after 10 seconds.
 - To stop rapidly, press simultaneously the "-" and the respective cooking zone selection.
- The heat level automatically goes down to 1. The cooking zone goes off.

GENERAL STOP

The cooking zones and the timer can be stopped at any moment by pressing the On-Off button.



RESIDUAL HEAT INDICATOR H


The control panel tells the user when the surface temperature of the cooking zones exceeds about 60°C, by the following displaying: H. When the temperature goes back below 60°C, the display goes off.

For ending the cooking, we advise switching off the cooking zone and using the residual heat of the zone to finish cooking gently.


N.B. After a cut in the current, the residual heat indicator disappears completely, even if the surface temperature exceeds 60°C.

OPERATING THE ADDITIONAL COOKING ZONE (TWO ZONES)

The cooking zone with two zones is fitted certain models

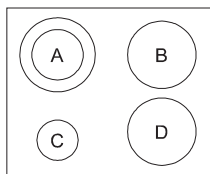

It is active in totality when the cooking zone is in function ; the control led of the additional cooking is displayed.

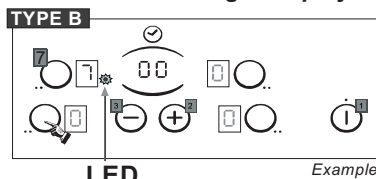

To deactivate the additional cooking zone :

- Press again on the additional cooking zone touch. The Led goes off when it is deactivated.


To re-activate the additional cooking zone :

- Press on the cooking zone button. The Led is active again.

PROGRAMMING A COOKING ZONE (according to the model)

Every cooking zone can be programmed for a maximum time of 99 minutes.

- Start the required zone by following the previous instructions.
- Press on simultaneously the touch "-" and "+" to activate the timer, "00" is displayed.

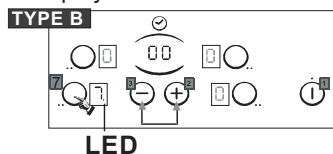

- Press again on the "+" button to select a time in minutes between 0 and 99 minutes or press on the "-" button to decrease the time between 30 minutes and 0. The timer control led near the level is displayed.

--> the programmed time can be modified at any moment.

When the time is run, the cooking zone goes off automatically and an audible beep sounds for 1 minute, press a button to stop it.


--> If any zone is activated, the timer can be used alone, as reminder, it will ring at the end of the programmed time.

LOCKING BUTTON OPERATION L


The locking function prevents the accidental activation of the hob by children, and it is also useful during the cleaning of the hob.

TO LOCK THE HOB. (Example for hob with 4 zones)

Press the ON/OFF button and then (only after this operation the child lock can be activated)

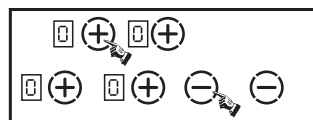


Press simultaneously the minus key and the top left selection key, until you hear the beep sound; if you do not feel a beep sound, switch OFF the hob and repeat all the operation of setting.

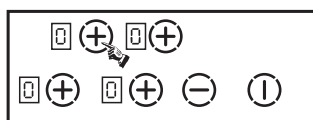

After press again the top left selection key.

This operation procedure must take place within 10 sec, and no other key than the one described above may pressed; otherwise the

input will be cancelled for not being completed.

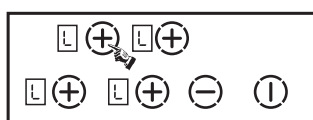


All displays show an "L" for LOCKED (=child lock against unintentional activation) – if a cooking zone is at stage "hot, "L" and "H" appear alternately.

TO UNLOCK THE HOB




For unlock the control unit, it is necessary that the minus key and the top left selection key (cooking zone back left) are pressed simultaneously and subsequently pressing the minus key again.


The looking is now removed and the Touch Control returns to STAND BY mode.

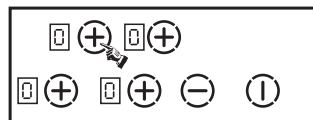

Every cooking zone on the hob is equipped with a fast heater for raising the cooking zone's temperature faster.

Starting the fast heater

- Press the on/off button .
- Start the required zone, press the "+" button to obtain position "9", release the button briefly and press again the "+" button ; the display alternates showing "A" "fast heater" and "9" heat level.
- If necessary reduce to the required heat position, the display alternates showing "A" "fast heater" and the new heat position.

Cooking position	Power released (%)	Time of fast heater (minutes)	Maximum operating time before automatic cut off*
0	0 %	0	0 H
	2.5 %	0	2 H
1	3 %	1	6 H
2	6 %	3	6 H
3	11 %	5	5 H
4	16 %	6,5	5 H
5	19 %	8,5	4 H
6	32 %	2,5	1,5 H
7	45 %	3,5	1,5 H
8	65 %	4,5	1,5 H
9	100 %	0	1,5 H

E.g. 1800 W zone at position 6 = 32% of 1800 W power released
When the "Fast heater" is on, the zone supplies 1800 W power for 2.5 minutes, and adjusts to 576 W after this time.

* For increased safety, the cooking zones cut off automatically if they are left on too long. The cut off depends on the heat level used.

To deactivate the fast heater

- Switch on the cooking zone, press the "-" button to come back to a normal heat level, decrease to the heat level required or to "0" to stop the cooking zone.

8. CLEANING AND MAINTENANCE

- . Before carrying out any maintenance work on the hob, allow it to cool down.
- . Only products, (creams and scrapers) specifically designed for glass ceramic surfaces should be used. They are obtainable from hardware stores.
- . Avoid spillages, as anything which falls on to the hob surface will quickly burn and will make cleaning more difficult.
- . It is advisable to keep away from the hob all substances which are liable to melt, such as plastic items, sugar, or sugar-based products.

MAINTENANCE:

- Place a few drops of the specialised cleaning product on the hob surface.
- Rub any stubborn stains with a soft cloth or with slightly damp kitchen paper.
- Wipe with a soft cloth or dry kitchen paper until the surface is clean.


If there are still some stubborn stains:

- Place a few more drops of specialised cleaning fluid on the surface.
- Scrape with a scraper, holding it at an angle of 30° to the hob, until the stains disappear.
- Wipe with a soft cloth or dry kitchen paper until the surface is clean.
- Repeat the operation if necessary.

A FEW HINTS:

Frequent cleaning leaves a protective layer which is essential to prevent scratches and wear. Make sure that the surface is clean before using the hob again. To remove marks left by water, use a few drops of white vinegar or lemon juice. Then wipe with absorbent paper and a few drops of specialised cleaning fluid. The glass ceramic surface will withstand scraping from flat-bottomed cooking vessels, however, it is always better to lift them when moving them from one zone to another.

NB:

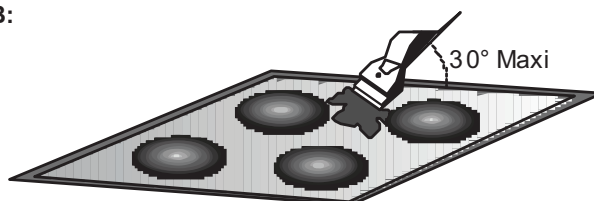

- Do not use a sponge which is too wet.
- Never use a knife or a screwdriver.
- A scraper with a razor blade will not damage the surface, as long as it is kept at an angle of 30°.
- Never leave a scraper with a razor blade within the reach of children.
- Never use abrasive products or scouring powders.

- . The metal surround : to safely clean the metal surround wash with soap and water, rinse, then dry with a soft cloth.

Any change in the colour of the glass-ceramic surface does not affect its operation or the stability of the surface. Such discolorations are mostly a result of burnt food residues or use of cookware made of materials such as aluminium or copper; these stains are difficult to remove.

9. PROBLEM SOLVING

The cooking zones do not simmer or only fry gently

Only use flat-bottomed pans. If light is visible between the pan and the hob, the zone is not transmitting heat correctly. The pan bottom should fully cover the diameter of the selected zone.

The cooking is too slow

Unsuitable pans are being used. Only use flatbottomed utensils, that are heavy and have a diameter at least the same as the cooking zone.

Small scratches or abrasions on the hob's glass surface

Incorrect cleaning or rough-bottomed pans are used; particles like grains of sand or salt get between the hob and the bottom of the pan. Refer to the "CLEANING" section; make sure that pan bottoms are clean before use and only use smooth bottomed pans. Scratches can be lessened only the cleaning is done correctly.

Metal marks

Do not slide aluminium pans on the hob. Refer to the cleaning recommendations.

You use the correct materials, but the stains persist.

Use a razor blade and follow the "CLEANING" section.

Dark stains

Use a razor blade and follow the "CLEANING" section.

Light surfaces on the hob

Marks from an aluminium or copper pan, but also mineral, water or food deposits; they can be removed using the cream cleaner.

Caramelisation or melted plastic on the hob.

Refer to the "CLEANING" section.

The hob does not operate or certain zones don't work

The shunts are not positioned correctly on the terminal board.

Have a check made that the connection is done he control panel is locked. Unlock the hob.

The hob does not cut off.

The control panel is locked. Unlock the hob.

The hob stops automatically

A spill covers at least two buttons for more than 10 seconds; the hob switches to safety, and an audible beep sounds. Clean up the spill or remove the object.

The cooking zones stop automatically if they are left on for too long. Refer to the section, "operating time".

Frequency of on/off operations for cooking zones

The on-off cycles vary according to the required heat level:

- low level: short operating time,
- high level: long operating time.

"H" display, residual heat indicator, blinking.

The electronic temperature is too high. A technician should verify the fitting in compliance with the recommendations.


10. AFTERCARE

Before calling out a Service Engineer please check the following:

— that the plug is correctly inserted and fused;

If the fault cannot be identified switch off the appliance — do not tamper with it — call the Aftercare Service Centre. The appliance is supplied with a guarantee certificate that ensures that it will be repaired free of charge at the Service Centre.

11. PROTECTION OF THE ENVIRONMENT

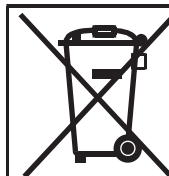

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). WEEE contains both polluting substances (which can cause negative consequences for the environment) and basic components (which can be re-used). It is important to have WEEE subjected to specific treatments, in order to remove and dispose properly all pollutants, and recover and recycle all materials.

Individuals can play an important role in ensuring that WEEE does not become an environmental issue; it is essential to follow some basic rules:

- WEEE shall not be treated as household waste.
- WEEE shall be handed over to the relevant collection points managed by the municipality or by registered companies. In many countries, for large WEEE, home collection could be present.
- When you buy a new appliance, the old one may be returned to the retailer who has to collect it free of charge on a one-to-one basis, as long as the equipment is of equivalent type and has the same functions as the supplied equipment.