


Operating and installation instructions

Food warming drawer

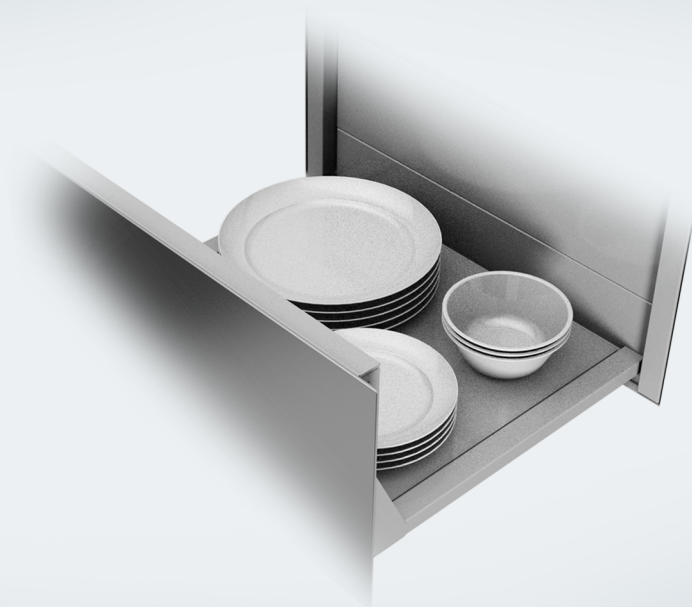


To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Guide to the appliance	3
ESW 6114 / ESW 6214.....	3
ESW 6129 / ESW 6229.....	4
Control panel	5
Accessories supplied	6
Warning and Safety instructions	7
Caring for the environment	14
Before using for the first time	15
Operation	17
Functions	17
Temperature settings.....	18
Duration	18
Keeping food warm	20
Warming crockery	23
Capacity.....	24
ESW 6114 / ESW 6214	24
ESW 6129 / ESW 6229	25
Low temperature cooking	26
Cooking table.....	28
Other uses	31
Combination with CVA	32
Cleaning and care	33
Appliance front and interior	33
Anti-slip mat	34
Problem solving guide	35
Optional accessories	37
Safety instructions for installation	38
Building-in dimensions	39
ESW 6114 / ESW 6214.....	39
ESW 6129 / ESW 6229.....	42
Installing the appliance	45
Electrical connection	46
After sales service, data plate, guarantee	48

ESW 6114 / ESW 6214

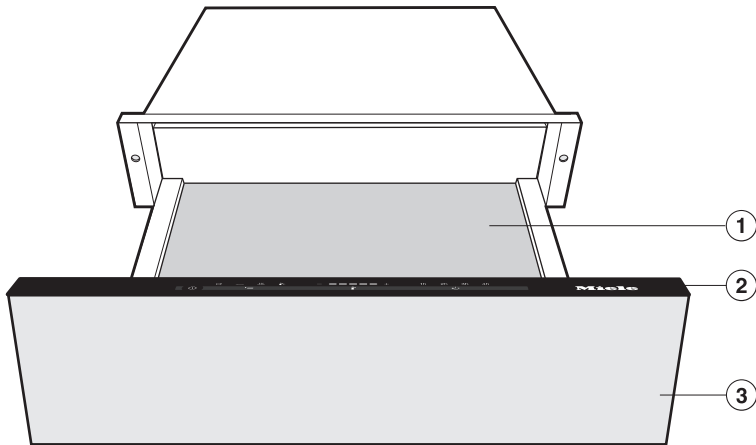

① Anti-slip mat


② Control panel

③ Drawer with push to open and close mechanism

The drawer can be opened and closed by pressing lightly in the middle of the drawer front.


Guide to the appliance

ESW 6129 / ESW 6229

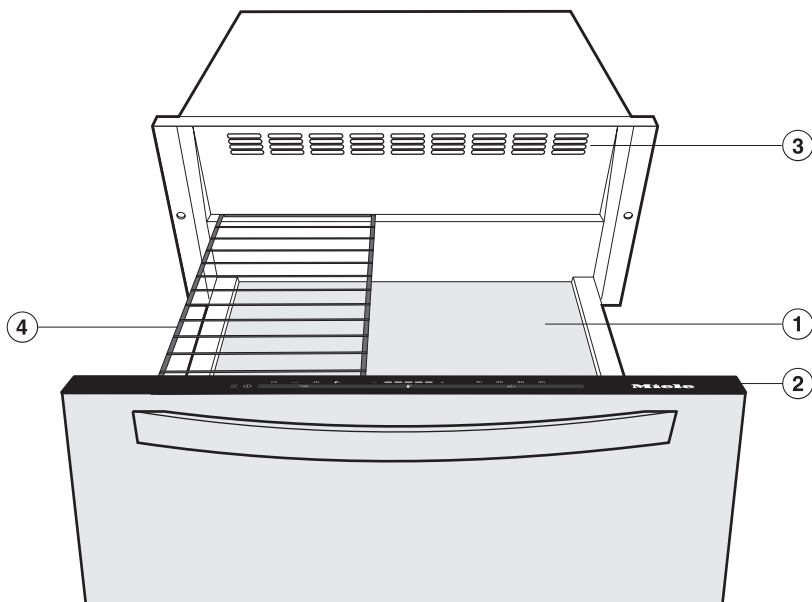

- ① Anti-slip mat
- ② Control panel
- ③ Air vents
- ④ Rack

 Control panel



Sensors

- ① On/Off sensor for the appliance
- ☰ For selecting the function
- 🌡 For setting the temperature
- 🕒 For setting the duration

Displays

Functions:

- ☐ For warming cups and glasses
- ☐ For warming plates and dishes
- ☐ For keeping food warm
- 🌡 For low temperature cooking

Temperature:



Duration:

- 1h 1 hour
- 2h 2 hours
- 3h 3 hours
- 4h 4 hours


Guide to the appliance

Accessories supplied

The accessories supplied with your appliance as well as a range of optional ones are available to order from Miele (see "Optional accessories").


Rack

For increasing the loading area (ESW 6*29)

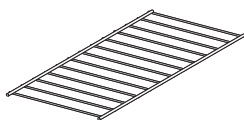

Anti-slip mat

 For keeping crockery secure



Warning and Safety instructions

This appliance complies with all statutory safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Warning and Safety instructions

Correct application

- ▶ The appliance is not designed for commercial use. It is intended for use in domestic households and similar working and residential environments.
- ▶ The appliance is not intended for outdoor use.
- ▶ It is intended for domestic use only as described in these operating instructions.
Any other usage is not supported by the manufacturer and could be dangerous.
- ▶ The appliance can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are supervised whilst using it, or have been shown how to use it in a safe way and understand the hazards involved.

Safety with children

- ▶ Children under 8 years of age must be kept away from the appliance unless they are constantly supervised.
- ▶ Children 8 years and older may only use the appliance unsupervised if they have been shown how to use it in a safe way and recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean the appliance unsupervised.
- ▶ Please supervise children in the vicinity of the appliance and do not let them play with it.
- ▶ The appliance gets hot when in use and remains hot for quite a while after it has been switched off. Keep children well away from the appliance until it has cooled down and there is no danger of burning.
- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.

Warning and Safety instructions

Technical safety

► Installation, maintenance and repairs may only be carried out by a Miele authorised service technician. Installation, maintenance and repairs by unqualified persons could be dangerous.

► A damaged appliance can be dangerous. Check the appliance for visible signs of damage. Do not use a damaged appliance.

► The electrical safety of this appliance can only be guaranteed when correctly earthed. It is most important that this basic safety requirement is observed and regularly tested, and where there is any doubt, the household wiring system should be inspected by a qualified electrician.

► To avoid the risk of damage to the appliance, make sure that the connection data (frequency and voltage) on the data plate corresponds to the household supply, before connecting the appliance to the mains supply.
Consult a qualified electrician if in any doubt.

► Do not connect the appliance to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.

► For safety reasons, this appliance may only be used after it has been built in.

► This appliance must not be used in a non-stationary location (e.g. on a ship).

Warning and Safety instructions

- ▶ Do not open the casing of the appliance.
Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.
- ▶ While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by Miele. Otherwise the guarantee is invalidated.
- ▶ Miele can only guarantee the safety of the appliance when original Miele replacement parts are used. Faulty components must only be replaced by genuine Miele original spare parts.
- ▶ If the plug is removed from the connection cable or if the appliance is supplied without a plug, the appliance must be connected to the electrical supply by a suitably qualified electrician.
- ▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a specialist connection cable of type H 05 VV-F (pvc insulated), available from Miele.
- ▶ The appliance must be disconnected from the mains electricity supply during installation, maintenance and repair work. Ensure that power is not supplied to the appliance until after it has been installed or until any maintenance or repair work has been carried out.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings clean at all times. Any damage caused by cockroaches or other vermin will not be covered by the guarantee.

Warning and Safety instructions

Correct use

- ▶ You could burn yourself on the hot drawer or crockery. Protect your hands with heat-resistant pot holders or gloves when handling hot dishes. Do not let them get wet or damp, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.
- ▶ Do not store any plastic containers or inflammable objects in the warming drawer. They could melt or catch fire when the appliance is switched on, causing a fire hazard.
- ▶ Due to the high temperatures radiated, objects left near the appliance when it is in use could catch fire. Do not use the appliance to heat up the room.
- ▶ Never replace the anti-slip mat supplied with the appliance with paper kitchen towel or similar.
- ▶ If you overload the drawer, or sit or lean on it, the telescopic runners will be damaged. The telescopic runners can support a maximum load of 25 kg.
- ▶ If the appliance is installed behind a kitchen furniture door, it may only be used with the furniture door open.
Only close the door if the appliance is switched off.
- ▶ Do not heat up unopened tins or jars of food in the drawer, as pressure will build up in the tin or jar, causing it to explode. This could result in injury and scalding or damage.
- ▶ The underside of the drawer gets hot when switched on. Be careful not to touch it when the drawer is open.

Warning and Safety instructions

- ▶ Plastic and aluminium foil containers melt at high temperatures. Use only heat-resistant crockery made of glass, porcelain, etc.
- ▶ Take care when opening and closing the loaded drawer, that liquids do not spill over and get through the vents. This can cause the appliance to short circuit.
- ▶ The "Keep food warm" function is designed to keep hot food warm and not to warm up cold food. Ensure food is really hot when placed inside the warming drawer.
- ▶ Bacteria can develop on the food if the temperature is too low. Make sure that you set a high enough temperature to keep food warm.

Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

Caring for the environment

Disposal of the packing material


The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Disposing of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

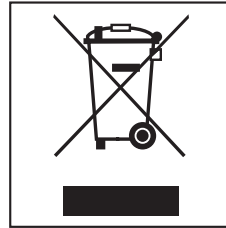

Please dispose of it at your local community waste collection / recycling centre or contact your dealer for advice. Please ensure that it presents no danger for children while being stored for disposal.






Before using for the first time

Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service, data plate, guarantee" section of this booklet.

Cleaning and heating up for the first time

- Remove any protective foil.
- Remove the anti-slip mat and, if applicable, the rack from the drawer, and wipe both with a sponge and a solution of hot water and a little washing-up liquid. Dry using a soft cloth.
- Wipe the appliance inside and out with a damp cloth only, and then dry with a soft cloth.
- Replace the anti-slip mat and the rack (if applicable) in the drawer.

Then heat the empty drawer for at least two hours.

- Switch the appliance on by touching the On/Off  sensor.
- Touch the  sensor repeatedly until the  symbol lights up in the display.
- Touch the  sensor repeatedly until the LED on the far right lights up.
- Touch the  sensor repeatedly until 2h lights up.
- Close the drawer.

The drawer is fitted with a contact switch, which ensures that the heating element and fan in the appliance only work when the drawer is closed.

Before using for the first time

The appliance will switch itself off automatically after 2 hours.





The metal components have a protective coating which may give off a slight smell when heated up for the first time.

The smell and any vapours will dissipate after a short time, and do not indicate a faulty connection or appliance.

Ensure that the kitchen is well ventilated.

Functions

Use the '≡ sensor to select the function you want. The applicable symbol lights up as follows:

-  For warming cups and glasses
-  For warming plates and dishes
-  For keeping food warm
-  For low temperature cooking

The last function selected is automatically activated the next time the drawer is switched on and this is shown in the display.

The appliance has a fan which distributes the warm air evenly through the drawer. The fan runs continuously when the drawer is operating on the cups/glasses or plates/dishes function. It runs at intervals on the "Keep food warm" and "Low temperature cooking" functions.


The appliance can be used to keep food warm at the same time as warming plates and dishes.

Use the "Keep food warm" function for this.










Take care. The plates and dishes will take longer to warm up, but can get very hot on this function.

Operation

Temperature settings


Each function has its own temperature range. The factory-set recommended temperatures are printed in bold. The temperature can be altered in 5° steps by touching the  sensor.

The last temperature selected is automatically activated the next time the drawer is switched on, and this is shown in the display. (Exception: Low temperature cooking).

Temperature display	Temperature °C *			
				
	40	60	65	65
	45	65	70	70
	50	70	75	75
	55	75	80	80
	60	80	85	85

* Approximate temperature values, measured in the middle of the drawer when empty

Duration

The appliance is set for continuous operation mode. (Exception: Low temperature cooking).
A limited duration can be selected by touching the  sensor. One touch for 1 hour (1h), two touches for 2 hours (2h) etc, up to a maximum of 4 hours. Continuous operation is restored by touching the sensor a fifth time.

Do not leave the drawer unattended for too long in continuous operation mode. Keeping food warm for a long time can result in it drying out or even self-igniting.


Your appliance is fitted with a safety switch-off mechanism which switches the appliance off after a maximum of 12 hours' continuous operation.

How to operate the drawer

- Open the drawer.
- Switch the appliance on by touching the On/Off ① sensor.
- Touch the '≡ sensor repeatedly until the function required lights up in the display.
- If you wish to alter the temperature, touch the ℹ sensor until the LED for the temperature required lights up.
- Touch the ⌚ sensor repeatedly until the duration (in hours) required lights up.
- Close the drawer.


The On/Off sensor ① must be kept clean. Soiling or liquid on the sensor could cause it to fail to react or to switch on the appliance unintentionally.

Keeping food warm

In order to ensure that the temperature does not drop below the minimum required for keeping food warm (65 °C), select the  function only.

This function is for keeping food which has just been cooked warm, i.e. food that is still hot. It is not for reheating food that has gone cold.

Procedure

- Select the  function.
- Select the duration required.
- Pre-heat the drawer for 15 minutes to ensure that it has reached the required temperature. Whilst the appliance is heating up, place the empty dishes in the drawer.
- Remove the pre-heated dishes from the drawer and fill them with the hot food. Use oven gloves to remove the dishes from the drawer.
- Then place the dishes carefully in the drawer ensuring that any liquid does not spill over the sides.

Tips

































































































- Place hot food in pre-heated dishes. To pre-heat the dishes, place them in the drawer whilst it is heating up.
- Do not cover roast or fried food which you want to keep crisp. These types of food need to be kept warm at a higher temperature.
- Cover food with a high moisture content and liquid and food which can develop a skin, with aluminium foil or a plate.
- To avoid spillages, do not overfill dishes.

Keeping food warm

- Freshly cooked food is hotter than food which is being kept warm. Serve food which is being kept warm on pre-heated plates.
- Nutrients are lost when food is cooked and continue to diminish when food is kept warm. The longer food is kept warm for, the greater the loss of nutrients.
- We do not recommend that food is kept warm for a long period of time, as it will continue to cook.
- Do not slam the drawer open or shut. Liquids could spill over and get into the vents.
- Food may cool down if the drawer is opened and shut too often.

Keeping food warm

Settings

Food	Container	Cover the container?	Temperature for the  setting	Position in drawer	
				Floor	Rack*
Steak (rare)	Plate	no	    	x	x
Bake / gratin	Shallow dish	yes	    	x	
Roast meat	Plate	yes	    	x	
Casserole	Dish	yes	    	x	
Fish fingers	Pan	no	    	x	
Meat in a sauce	Dish	yes	    	x	
Vegetables in a sauce	Dish	yes	    	x	
Goulash	Dish	yes	    	x	
Mashed potato	Dish	yes	    	x	
Plated meal	Plate	yes	    	x	
Baked potatoes / New potatoes	Plate / dish	yes	    	x	
Breaded escalope	Pan	no	    	x	
Pancakes/ potato pancakes	Plate	no	    	x	x
Pizza	Plate	no	    	x	
Boiled potatoes	Dish	yes	    	x	
Gravy	Dish	yes	    	x	
Strudel	Plate	no	    	x	
To warm bread	-	no	    	x	x
To warm rolls	-	no	    	x	x

* Depending on model

- Distribute the crockery over the whole area of the drawer. Stacks of plates heat up more slowly than individual pieces of crockery. If large stacks of plates are unavoidable, place them at the front of the drawer. Use the rack (depending on model).
- Do not place large serving dishes right up against the vents. They will cover the warm air outlets, and the crockery will not heat up evenly.
- For cups and glasses, only select the ☐ function to ensure that the maximum temperature (60°C) is not exceeded.
- Heated crockery cools down very quickly. Do not remove it from the drawer until just before you need it.

Heating up times

Various factors will affect the heating up times:

- The material and thickness of the crockery
- The amount of crockery
- How the crockery is arranged
- The temperature setting.

It is therefore not possible to state precise times.

However, the following information can be used as a guide:


On the ☐ setting, it takes approx.

- 30– 35 minutes for 6 place settings to heat up evenly.
- 40– 45 minutes for 12 place settings to heat up evenly.
- As you use the drawer, you will get to know which setting suits your own needs best.

Warming crockery

Capacity

The quantity that can be loaded will depend to a great extent on the size and weight of your crockery. Do not overload the drawer. The maximum load bearing capacity of the drawer is **25 kg**.

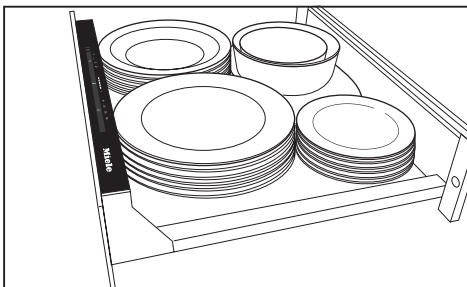

ESW 6114 / ESW 6214


The loading examples shown here are suggestions only.

- 6 place settings:
 - 6 dinner plates Ø 26 cm
 - 6 soup bowls Ø 23 cm
 - 6 dessert plates Ø 19 cm
 - 1 oval serving dish 32 cm
 - 1 serving dish Ø 16 cm
 - 1 serving dish Ø 13 cm

or alternatively:

- 12 dinner plates Ø 26 cm
- 18 soup bowls Ø 23 cm
- 16 soup cups Ø 10 cm
- 6 dinner plates Ø 26 cm
- 6 soup bowls Ø 23 cm
- 6 pizza plates Ø 36 cm
- 72 espresso cups Ø 5.9 cm
- 30 cappuccino cups Ø 8.8 cm
- 30 punch glasses Ø 6.7 cm / 8 cm high

ESW 6129 / ESW 6229

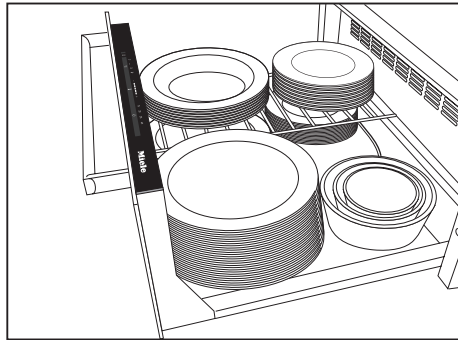

The loading examples shown here are suggestions only.

- 12 place settings:
 - 12 dinner plates Ø 26 cm
 - 12 soup bowls Ø 23 cm
 - 12 dessert plates Ø 19 cm
 - 1 oval serving dish 32 cm
 - 1 serving dish Ø 19 cm
 - 1 serving dish Ø 16 cm
 - 1 serving dish Ø 13 cm

or alternatively:

- 40 dinner plates Ø 26 cm
- 60 soup bowls Ø 23 cm
- 45 soup cups Ø 10 cm
- 20 dinner plates Ø 26 cm
- 20 soup bowls Ø 23 cm
- 20 pizza plates Ø 36 cm
- 142 espresso cups Ø 5.9 cm
- 90 cappuccino cups Ø 8.8 cm
- 30 punch glasses Ø 6.7 cm / 8 cm high

You can increase the load area by using the rack supplied with the appliance. Position the rack to suit. With two racks you can increase the load area even more by placing one rack on the left and the other on the right. Another rack can be obtained from Miele or from your Miele dealer (see "Optional accessories").

Low temperature cooking

With low temperature cooking meat is cooked at a low temperature over a long period of time. Using this method, meat loses less liquid as it is cooked gently and so remains succulent and tender.

This cooking method is particularly suitable for large and tender pieces of meat. The quality of the meat is of vital importance for a good result.

For precision we recommend using a proprietary food thermometer to monitor the core temperature.

Do not use the food probe from a Miele steam combi oven or a Miele oven in the food warming drawer.

Core temperature

Food can be cooked to a core temperature of up to 70 °C in the food warming drawer. Meat which needs to be cooked to a core temperature higher than 70 °C is not suitable for cooking in the food warming drawer.

The core temperature reading gives information about the degree of cooking in the middle of a piece of meat. The lower the core temperature, the less cooked the meat is in the middle:

45-50 °C = rare

55-60 °C = medium

65 °C = well done

Cooking duration

The cooking duration depends on the size of the individual pieces of meat, and can be between 1 and 6 hours.

Add 15 minutes heating-up time to the temperature selected.
Example: selected duration 1h, actual operating time 1 hour 15 minutes.

Notes on low temperature cooking

- The meat should have been hung for best flavour.
- The quality of the meat is of vital importance for a good result.

Low temperature cooking

- The meat must be at room temperature. Remove it from the refrigerator approx. 1 hour before preparation.
- Sear the meat on all sides over a high heat on the hob.

Procedure


- Select the  low temperature cooking function.

The appliance will pre-heat automatically for 15 minutes and then operate at the pre-set temperature and duration, e.g. at 85° C and 4h (Medium sirloin joint setting, 1 kg, approx. 3 cm thick).

- While the appliance is heating up, sear the meat on all sides over a high heat on the hob.
- Put it in a heat-proof dish.
- Push the food thermometer into the meat so that the tip is in the centre. Make sure that it does not come into contact with bones or layers of fat as these can cause a false reading.

- Place the dish in the drawer.

If you wish to cook on a different setting, please see the table on the following pages.


- Select the  low temperature cooking function.
- Select the temperature required.
- Select the duration required.

Tips

- Meat can be carved straight from the oven. It does not need to rest.
- Due to the low cooking and core temperatures, meat can be kept warm quite safely in the appliance until it is served. This will not affect results in any way.
- Serve the meat on pre-heated plates to stop it cooling too quickly.


Low temperature cooking

Cooking table

Type of meat	Searing time	Core temperature* °C	Cooking time in minutes	Temperature for the  setting															
Beef																			
Fillet approx. 1200 g	4–6 mins 6–8 mins 8 mins	45–50 55–60 65	105–135 160–190 195–225	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Fillet approx. 600 g	4–6 mins 6–8 mins 8 mins	45–50 55–60 65	90–120 130–155 160–190	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Medallions 3–4 cm thick	1 min per side 1–2 mins per side 2 mins per side	45–50 55–60 65	40–50 60–80 90–110	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Sirloin joint approx. 400 g	4–6 mins 6 mins 8 mins	45–50 55–60 65	90–120 120–145 145–175	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Sirloin joint approx. 600 g	4 mins 6–8 mins 8 mins	45–50 55–60 65	115–135 150–180 225–255	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Sirloin joint approx. 1.5 kg	8 mins 8–10 mins 10–12 mins	45–50 55–60 65	120–150 250–280 300–330	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Rump steak approx. 180 g	1 min per side 1–2 mins per side 2 mins per side	45–50 55–60 65	50–60 80–90 120–140	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Veal																			
Fillet approx. 1200 g	5 mins 6 mins 6–7 mins	45–50 55–60 65	115–145 150–180 155–185	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Fillet approx. 600 g	4–6 mins 6 mins 6–8 mins	45–50 55–60 65	75–95 90–120 125–155	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Medallions 3–4 cm thick	1 min per side 1–2 mins per side 2 mins per side	45–50 55–60 65	40–50 60–80 90–110	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															
Steak approx. 160 g 2 cm thick	1 min per side 1–2 mins per side 2 mins per side	45–50 55–60 65	35–50 60–80 75–90	<table><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr></table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>															


* 45–50 °C rare / 55–60 °C medium / 65 °C well-done

Low temperature cooking

Type of meat	Searing time	Core temperature* °C	Cooking time in minutes	Temperature for the  setting
Pork				
Fillet approx. 350 g	5–6 mins	60 65	90–110 120–140	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>
Boned gammon approx. 700 g	6–8 mins	65	180–200	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Boned gammon approx. 1.5 kg	8 mins	65	195–225	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Pork loin approx. 1.5 kg	8–10 mins	65	210–240	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Pork loin approx. 700 g	6–8 mins	65	180–210	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Medallions approx. 4 cm thick	2 mins per side 2–3 mins per side	60 65	75–95 100–120	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>
Roulades approx. 150 g ½ cm thick	4–6 mins	65	150–180	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Spare ribs	4–6 mins per side	65	165–195	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Poultry				
Duck breast approx. 350 g	5–6 mins	65 70	45–65 80–95	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Chicken breast approx. 160 g	2–3 mins per side	70	45–60	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Pouarde breast approx. 250 g	2–3 mins per side	70	60–80	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Turkey breast approx. 800 g	6–8 mins	70	150–180	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
























* Pork = 60 °C medium / 65 °C well done
Duck breast = 65 °C medium / 70 °C well done

Low temperature cooking

Type of meat	Searing time	Core temperature * °C	Cooking time in minutes	Temperature for the  setting
Lamb				
Rack of lamb approx. 170 g	3 mins	60	90–100	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>
	4 mins	65	110–130	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Rack of lamb approx. 400 g	3–4 mins	60	100–130	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>
	4–6 mins	65	120–150	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Saddle of lamb off the bone (approx. 600 g)	4 mins	60	90–120	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>
	6 mins	65	130–160	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Boned leg of lamb approx. 1.2 kg	8–10 mins	65	330–360	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>
Game				
Venison medallions 3–4 cm thick	1–2 mins per side	60	80–100	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
	2 mins per side	65	110–140	
Saddle of venison off the bone approx. 800 g	4–5 mins	60	135–150	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
	6–8 mins	65	165–180	
Saddle of roebuck off the bone approx. 800 g	4 mins	60	120–135	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
	6 mins	65	150–165	
Haunch of hare approx. 250 g	5–7 mins	65	210–230	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Roast wild boar approx. 600 g	6–8 mins	70	190–220	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>

* Lamb = 60 °C medium / 65 °C well done
 Game = 60 °C medium / 65 °C well done / 70 °C well done

Other uses

Type of food	Container	Cover the container?	Temperature for the  setting	Temperature for the  setting	Position in drawer		Duration in hours: min
					Floor	Rack*	
Defrosting berries	Bowl / dish	no	    		x		0:50
Dissolving gelatine	Bowl	no	    		x	x	0:15
Proving dough	Bowl	Yes, with plate		    	x		0:30
Making yoghurt	Yoghurt jars with lids	-		    	x		5:00
Rice pudding (to finish off the cooking process)	Dish	Yes, with lid	    		x	x	0:40
Melt chocolate	Bowl	no	    		x	x	0:20
Defrosting frozen vegetables	Bowl	no	    		x		1:00

* Depending on model

Combination with CVA

The warming drawer can be set to come on automatically before your Miele coffee machine to ensure your cups are the perfect temperature for your first cup of the day.

Please note that in coffee mode:

- The Cups/Glasses function cannot be altered
- The duration cannot be altered.
- The safety switch-off mechanism is deactivated.

Activating coffee mode

Coffee mode can only be activated when the warming drawer is switched off.

- Touch the ☕ sensor.
- Then touch the On/Off ⓪ sensor.
- Continue to touch both sensors until both the 1h and 4h symbols in the time display and the ☐ symbol light up simultaneously.



Deactivating CVA mode

- Touch the ☕ sensor.
- Then touch the On/Off ⓪ sensor at the same time.
- Continue to touch both sensors until all symbols have gone out.



Danger of injury.

Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

Danger of damage.

Unsuitable cleaning agents can damage the surfaces of the appliance. Only use domestic washing-up liquid to clean the appliance.

Clean and dry the entire appliance after each use. Allow the appliance to cool down to a safe temperature before cleaning.

Appliance front and interior

Remove any soiling immediately.

If this is not done, it might become impossible to remove and could cause the surfaces to alter or discolour.

Clean all surfaces with a clean sponge and a solution of hot water and washing-up liquid. Then dry with a soft cloth. A clean, damp microfibre E-cloth without cleaning agent can also be used.

All surfaces are susceptible to scratching. Scratches on glass surfaces could even cause a breakage.

Contact with unsuitable cleaning agents can alter or discolour the surfaces.

The On/Off sensor ① must be kept clean. Soiling or liquid on the sensor could cause it to fail to react or to switch on the appliance unintentionally.

Cleaning and care

To avoid damaging the surfaces of your appliance, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- stainless steel cleaning agents,
- dishwasher cleaner,
- oven sprays,
- glass cleaning agents,
- hard, abrasive sponges and brushes, e.g. pot scourers,
- sharp metal scrapers.

Anti-slip mat

Remove the anti-slip mat from the drawer before cleaning it.

- Clean the anti-slip mat by hand only, using a solution of hot water and a little washing-up liquid, and then dry with a cloth.


Do not put the anti-slip mat back into the drawer until it is completely dry.




Do not wash the anti-slip mat in a dishwasher or washing machine.

Never place the anti-slip mat in the oven to dry.



Problem solving guide

With the help of the following guide, minor faults in the performance of the appliance, some of which may result from incorrect operation, can be put right without contacting the Service Department.

 Installation work and repairs to electrical appliances must only be carried out by a suitably qualified person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous.

Problem	Possible cause	Remedy
The appliance does not heat up.	The appliance is not correctly plugged in and switched on at the mains socket.	Insert the plug and switch on at the socket.
	The mains fuse has tripped.	Reset the trip switch in the mains fuse box (minimum fuse rating - see data plate). If, after resetting the trip switch in the mains fuse box and switching the appliance back on, the appliance will still not heat up, contact a qualified electrician or the Miele Service Department.
The food is not hot enough.	The function for keeping food warm  is not selected.	Select the correct function.
	The temperature setting is too low.	Select a higher temperature.
	The vents are covered.	Ensure that the air can circulate freely.
The food is too hot.	The function for keeping food warm  is not selected.	Select the correct function.
	The temperature setting is too high.	Select a lower temperature.
The crockery is not warm enough.	The function for warming plates and dishes  is not selected.	Select the correct function.
	The temperature setting is too low.	Select a higher temperature.
	The vents are covered.	Ensure that the air can circulate freely.
	The crockery has not been allowed to heat up for a sufficiently long time.	Various factors will affect how long the crockery will take to heat up (see "Warming crockery").

 Problem solving guide

Problem	Possible cause	Remedy
The crockery is too hot.	The function for warming plates and dishes  or warming cups and glasses  is not selected.	Select the correct function.
	The temperature setting is too high.	Select a lower temperature.
A noise can be heard when the drawer is being used.	The noise is caused by the fan which distributes the heat evenly through the drawer. The fan operates at intervals when the functions for keeping food warm and low temperature cooking are being used.	This is not a fault.

Optional accessories

 
Miele offer a range of useful accessories as well as cleaning and conditioning products for your Miele appliances.

These can be ordered online at:




or from Miele (see back of manual for contact details)

Rack




For increasing the loading area.

 Anti-slip mat



The anti-slip mat keeps crockery securely in place.

 E-cloth (microfibre cloth)



Removes finger marks and light soiling.

Safety instructions for installation

► Before connecting the appliance to the mains electricity supply make sure that the connection data on the data plate (voltage and frequency) correspond with the mains electricity supply.

This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.

► The socket and On/Off switch should be easily accessible after the appliance has been built in.

► The food warming drawer may only be built in in combination with those appliances quoted by Miele as being suitable. Miele cannot guarantee trouble-free operation if the appliance is operated in combination with appliances other than those quoted by Miele as being suitable.

► When building in the food warming drawer in combination with another suitable appliance, the food warming drawer must be fitted above a fixed interim shelf in the housing unit which can support the weight of both the food warming drawer and that of the other appliance.

► As the combination appliance is placed directly on top of the food warming drawer once it is built in, an interim shelf is not necessary between the two appliances.

► The appliance must be built in so that

- the contents of the drawer can be seen. This is to avoid scalding from hot food spilling over.
- there is enough space for the drawer to be pulled out fully.

► The food warming drawer is available in two models which differ in height. The building-in dimensions for the food warming drawer must be added to the building-in dimensions for the combination appliance to establish the **niche size** required.


When building in the combination appliance, it is essential to follow the instructions given in the operating and installation instructions supplied with the combination appliance.

All dimensions in this instruction booklet are given in mm.

ESW 6114 / ESW 6214


Ovens

H 2* B(P) and H 6* B(P)

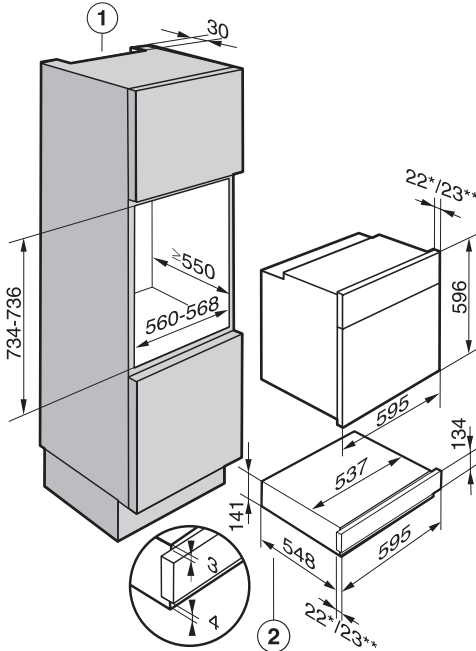

Microwave combi ovens

H 6*BM

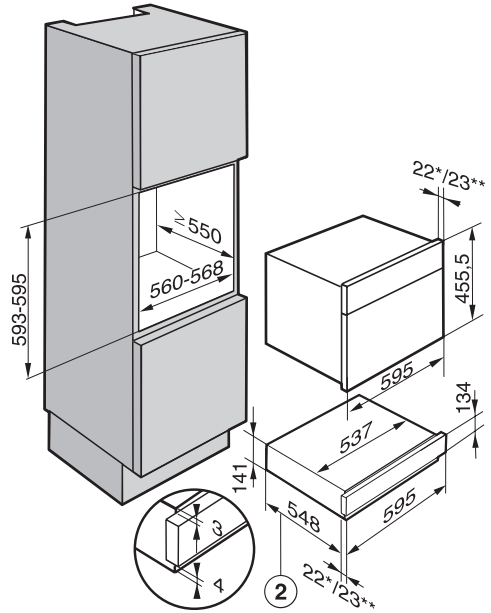

- ① Ventilation cut-out required when installed with a pyrolytic oven
- ② Building-in dimension including mains supply cable connection
Connection cable L = 2200 mm


* Appliances with glass front

** Appliances with metal front

Building-in dimensions


Steam ovens

DG 61*/ DG 62*/ DG 63*/ DG 64*/
DG 65*/ DG 66*/ DG 68*

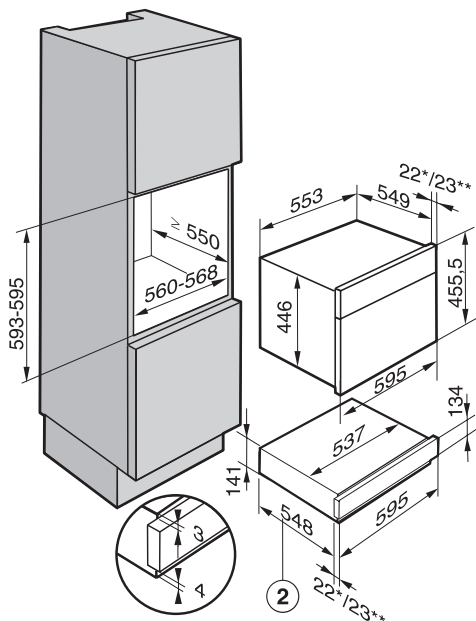

Steam combi ovens

DGC 63* / DGC 64*

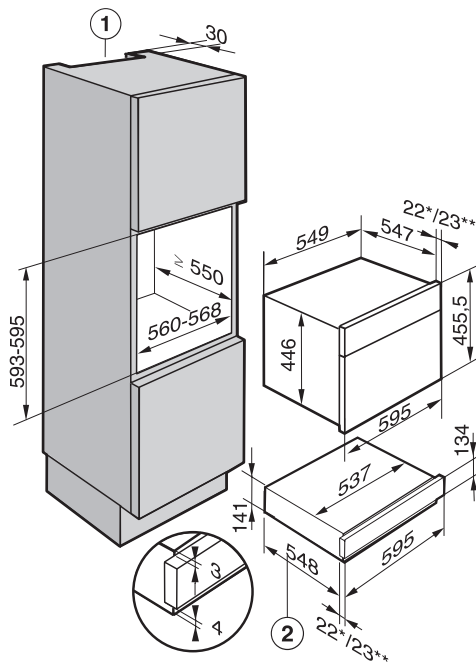

- ② Building-in dimension including
mains supply cable connection
Connection cable L = 2200 mm

* Appliances with glass front


** Appliances with metal front

- ① Ventilation cut-out required when
installed with a steam combi oven


- ② Building-in dimension including mains
supply cable connection
Connection cable L = 2200 mm

Building-in dimensions

XL steam combi ovens DGC 65* / DGC 66* / DGC 68*

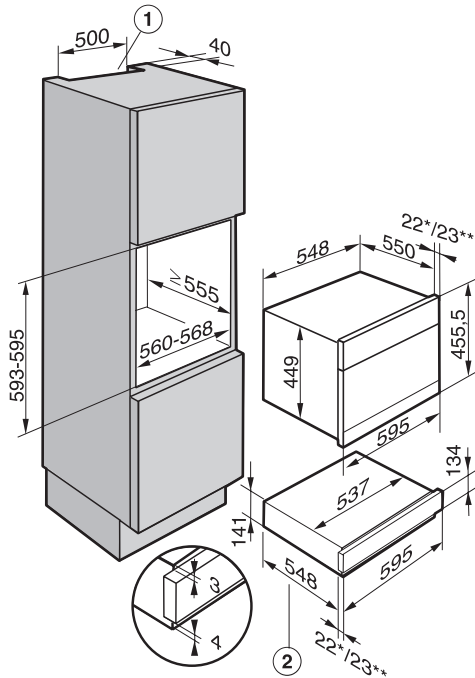

Coffee machines CVA 6401 und CVA 68*

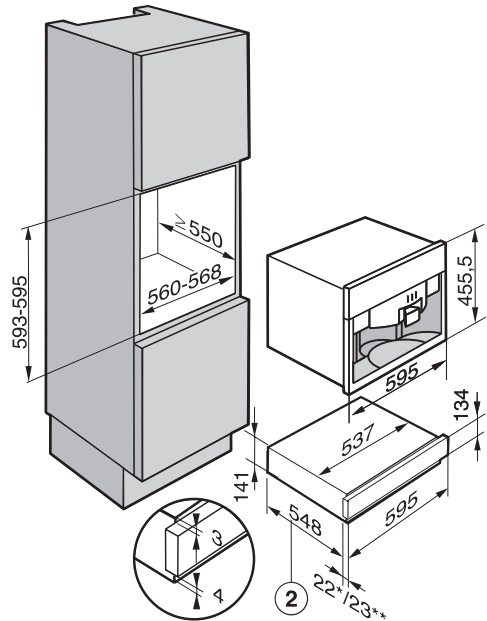

- ① Ventilation cut-out required when installed with an XL steam combi oven
- ② Building-in dimension including mains supply cable connection
Connection cable L = 2200 mm

- ② Building-in dimension including mains supply cable connection
Connection cable L = 2200 mm

* Appliances with glass front

* Appliances with glass front

** Appliances with metal front


** Appliances with metal front

Building-in dimensions

ESW 6129 / ESW 6229


Ovens

H 2* B(P) und H 6* B(P)

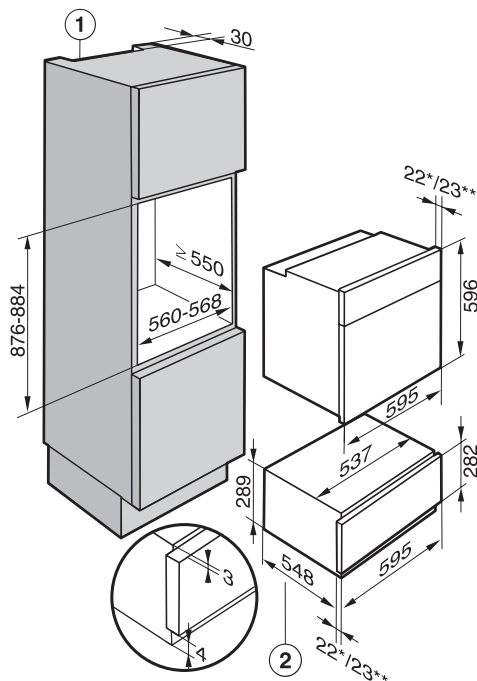

Microwave combi ovens

H 6* BM

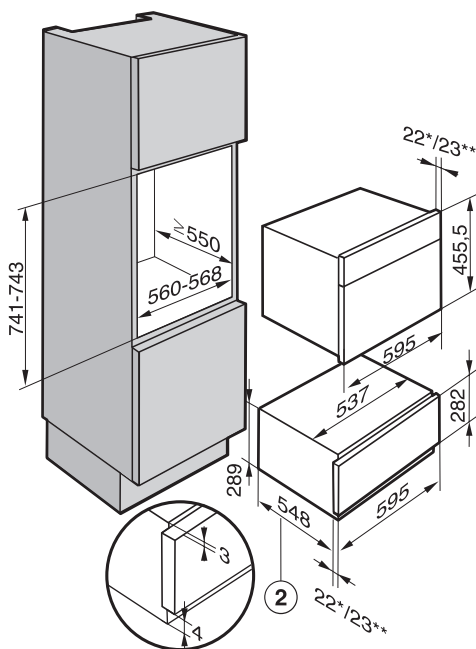

- ① Ventilation cut-out required when installed with a pyrolytic oven
- ② Building-in dimension including mains supply cable connection
Connection cable L = 2200 mm


* Appliances with glass front

** Appliances with metal front

Building-in dimensions


Steam ovens

DG 61*/ DG 62*/ DG 63*/ DG 64*/
DG 65*/ DG 66*/ DG 68*

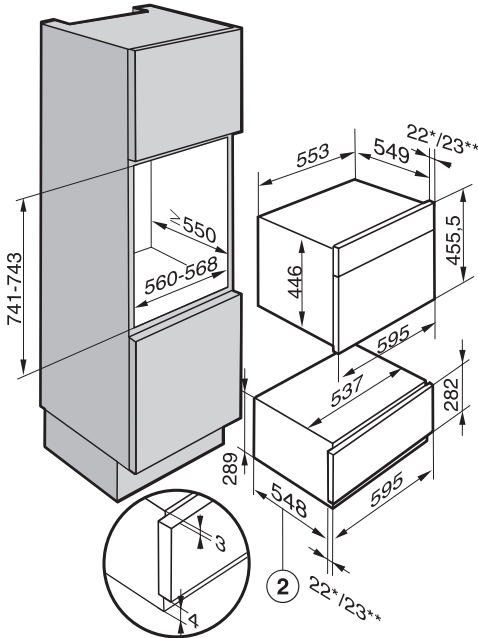

Steam combi ovens

DGC 6300 / DGC 6400

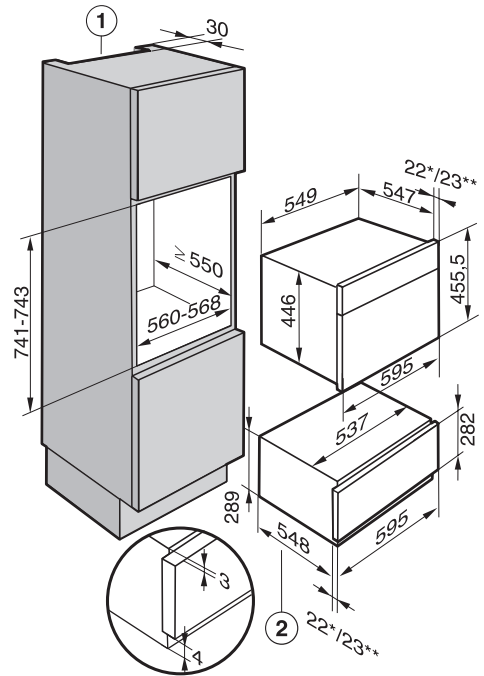

* Appliances with glass front

** Appliances with metal front


① Ventilation cut-out required when installed with a steam combi oven

② Building-in dimension including mains supply cable connection
Connection cable L = 2200 mm

Building-in dimensions

XL steam combi ovens

DGC 65* / DGC 66* / DGC 68*

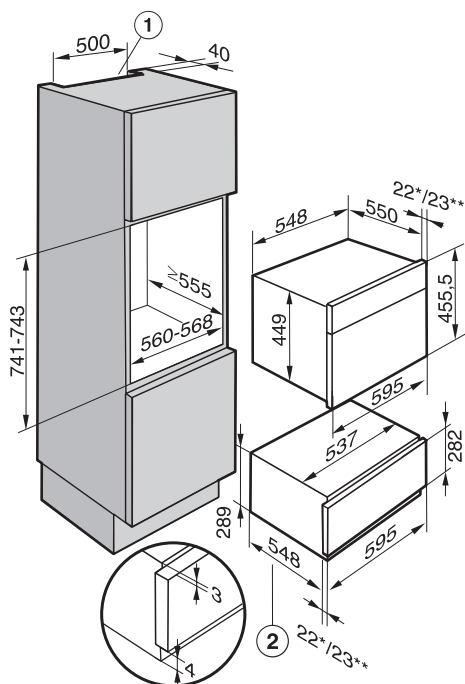


- ① Ventilation cut-out required when installed with an XL steam combi oven
- ② Building-in dimension including mains supply cable connection
Connection cable L = 2200 mm

* Appliances with glass front

** Appliances with metal front

Coffee machines

CVA 6401 und CVA 68*

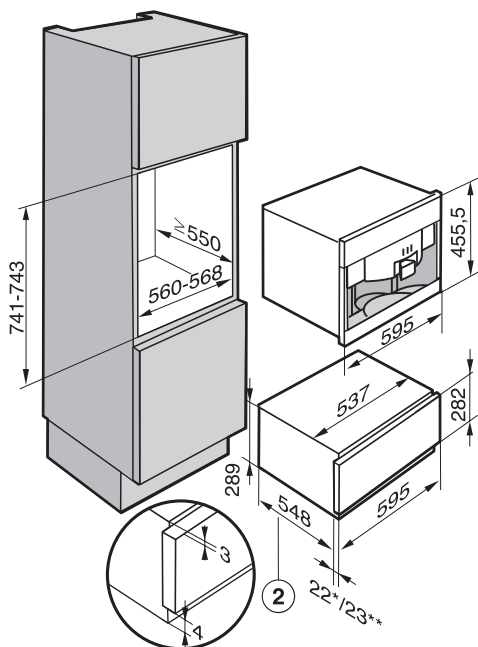

- ② Building-in dimension including mains supply cable connection
Connection cable L = 2200 mm


* Appliances with glass front

** Appliances with metal front

Installing the appliance

Check that the base of the drawer is clean and that it is level (use a spirit level). This is important for the appliance to function correctly.

- Push the appliance into the housing unit as far the vapour strip, and align it.
- Open the drawer, and use the 2 screws supplied to secure the appliance to the side walls of the housing unit.

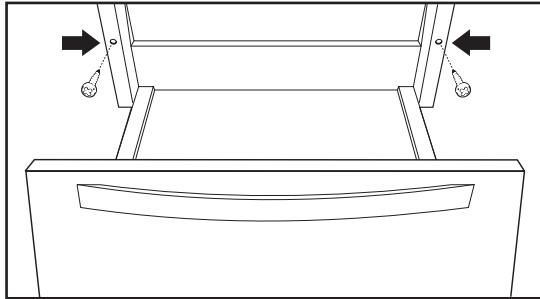

- Build in the combination appliance in accordance with its operating and installation instructions.

Electrical connection

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current local and national safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation work has been carried out.

The appliance must only be operated when built-in. This is to ensure that all electrical parts are shielded. Live parts must not be exposed.

Do not connect the appliance to the mains electricity supply via an extension lead. These do not guarantee the required safety of the appliance.

Please ensure that the connection data quoted on the data plate match the household mains supply.

This appliance is supplied with a cable and moulded plug for connection to a suitable switched socket which should be easily accessible after installation.

It can, if necessary, be connected to a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations by a suitably qualified electrician.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to protect the appliance with a suitable residual current device.

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays).

Important U.K. Connection to an isolator switch or double pole fused spur connection unit:

This appliance is supplied for connection to a single phase 230-240 V 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

WARNING: THIS APPLIANCE MUST BE EARTHED

Non-rewireable plugs BS 1363

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

Important

The electrical safety of this appliance can only be guaranteed when correctly earthed. It is most important that this basic safety requirement is observed and regularly tested and where there is any doubt the household wiring should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system such as electric shock.

The manufacturer cannot be held liable for damage caused by incorrect installation or connection.

After sales service, data plate, guarantee

In the event of any faults which you cannot remedy yourself, please contact:

– your Miele Dealer

or

 
– Miele (see back of manual for contact details).

Please note that telephone calls may be monitored and recorded to improve our service.

When contacting Miele, please quote the model and serial number of your appliance. These are given on the data plate.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the front of these instructions.



Guarantee

For information on the appliance guarantee specific to your country please contact Miele. See back cover for contact details. In the UK, your appliance is guaranteed for 2 years from the date of purchase. However, you must activate your cover by calling 0845 365 6640 or registering online at www.miele.co.uk.

United Kingdom

Miele Co. Ltd.

Fairacres, Marcham Road

Abingdon, Oxon, OX14 1TW

Tel: 0845 365 0555

Customer Contact Centre Tel: 0845 365 6600

E-mail: info@miele.co.uk

Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.

ABN 96 005 635 398

1 Gilbert Park Drive, Knoxfield, VIC 3180

Tel: 1300 464 353, Fax: (03) 9764 7149

Internet: www.miele.com.au

China

Miele (Shanghai) Trading Ltd.

1-3 Floor, No. 82 Shi Men Yi Road

Jing' an District

200040 Shanghai, PRC

Tel: +86 21 6157 3500, Fax: +86 21 6157 3511

E-mail: info@miele.cn

Internet: www.miele.cn

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place

23 Wang Tai Road

Kowloon Bay

Hong Kong

Tel: (852) 2610 1331, Fax: (852) 2610 1013

Email: mielehk@miele.com.hk

India

Miele India Pvt. Ltd.

Ground Floor, Copia Corporate Suites

Plot No. 9, Jasola

New Delhi – 110025

Tel: 011-46 900 000, Fax: 011-46 900 001

E-mail: customercare@miele.in, Internet: www.miele.in

Ireland

Miele Ireland Ltd.

2024 Bianconi Avenue

Citywest Business Campus, Dublin 24

Tel: (01) 461 07 10, Fax: (01) 461 07 97

E-Mail: info@miele.ie, Internet: www.miele.ie

Manufacturer: Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh, Germany



Malaysia

Miele Sdn Bhd

Suite 12-2, Level 12

Menara SapuraKencana Petroleum

Solaris Dutamas No. 1, Jalan Dutamas 1

50480 Kuala Lumpur, Malaysia

Phone: +603-6209-0288

Fax: +603-6205-3768

New Zealand

Miele New Zealand Limited

8 College Hill

Freemans Bay, Auckland 1011, NZ

Tel: 0800 264 353, Fax: 0800 463 453

Internet: www.miele.co.nz

Singapore

Miele Southeast Asia

Miele Pte. Ltd.

163 Penang Road

04 - 02/03 Winsland House II

Singapore 238463

Tel: +65 6735 1191, Fax: +65 6735 1161

E-Mail: infosea@miele.com.sg

Internet: www.miele.sg

South Africa

Miele (Pty) Ltd

63 Peter Place, Bryanston 2194

P.O. Box 69434, Bryanston 2021

Tel: (011) 875 9000, Fax: (011) 875 9035

E-mail: info@miele.co.za

Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.

P.O. Box 11 47 82

Gold & Diamond Park

Sheikh Zayed Road

Building 6 / Offices Nos. 6-214 to 6-220

Dubai

Tel: +971-4-341 84 44

Fax: +971-4-341 88 52

E-Mail: info@miele.ae, Internet: www.miele.ae

ESW 6114 / ESW 6214 / ESW 6129 / ESW 6229