



**THANK YOU FOR BUYING AN INDESIT PRODUCT**  
In order to receive a more complete assistance, please register your product on [www.indesit.com/register](http://www.indesit.com/register)




**Before using the appliance carefully read the Safety Instruction.**

## FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

## CONTROL PANEL

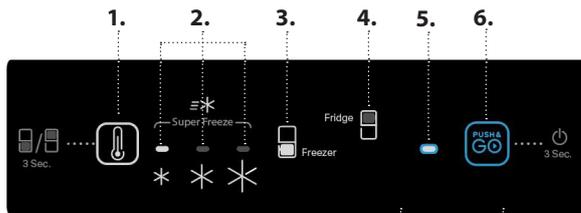

1. Refrigerator Temperature / Freezer Temperature button
2. Temperature Indicator setting
3. Freezer Indicator
4. Refrigerator Indicator
5. Push & GO indicator
6. Push & GO Button

## SETTING THE TEMPERATURES

Press the button (1) for 3 seconds to choose between Refrigerator (3) Freezer compartment (4).

Press the same button to modify the temperature of the zone you have previously selected.

Recommended setting for Refrigerator compartment : MED  
Recommended setting for Freezer compartment : MED

- High Temp
- Med-High Temp
- Med Temp
- Med-Low Temp
- Low Temp
- Fast Cooling/Fast Freezing



## PUSH&GO FUNCTION

Press the Push&Go button (6) to activate the fast temperature recovery function to better preserve your food after a large food shopping. When activated, the led indicator turns on (5). The function is automatically disabled after 10 hours, or can be manually disabled by pressing the Push&Go button (6).

## ON/STAND-BY FUNCTION

Press the Push & GO (6) button for 3 seconds to turn the appliance on stand-by mode.

During Stand-by mode the light inside the cavity of the refrigerator compartment does not work. Press the Push&Go button to switch on again the appliance.

## SUPER FREEZE FUNCTION

In order to preserve at best, please use the Super Freeze function before putting a large quantity of food in the freezer cavity. Press the button (1) until all the three leds are on in order to set the function.


The function turns off automatically after 26 hours, or manually by selecting different freezer TEMPERATURE.

*Note: Please avoid a direct contact between the fresh food and the food already frozen. To optimise freezing speed and get more storage space, the freezer compartment can be used without the freezer drawers.*




*To avoid food waste, please refer to the recommended setting and storage found in the online user manual.*

\* Available only on certain models

# HOW TO STORE FRESH FOOD AND BEVERAGES

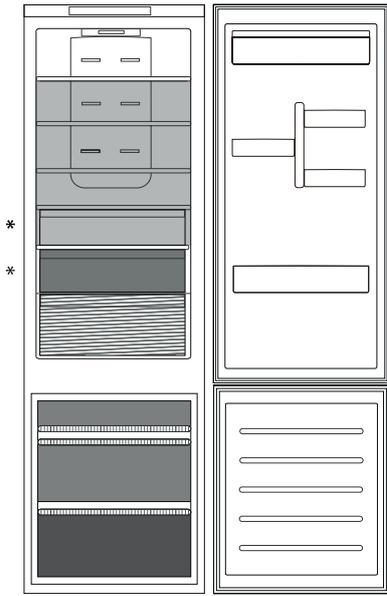


## Legend

   
-  **MINOR COOL ZONE**  
Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
-  **COOL ZONE**  
Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt
-  **COOLEST AREA**  
Suggested for storage of cold cuts, desserts, meat and fish.
-  **FRUIT & VEGETABLE DRAWER**
-  **FREEZER DRAWERS**
-  **FREEZING ZONE DRAWER**  
(Max cool zone)  
Suggested to freeze fresh/cooked food

The load limits are determined by the particular construction (baskets, containers, flaps, drawers, shelves, etc.), or the load limits are determined by natural load limits.

## Light system (depending on model)

 

This product contains a light source of energy efficiency class G

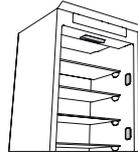

This product contains 2/4 lateral light sources of energy efficiency class F and a top light source of energy efficiency class G



This product contains a light source of energy efficiency class G



This product contains a top light source of energy efficiency class G

## REFRIGERATOR COMPARTMENT

### Multiflow Air Distribution



The multiflow helps to distribute evenly the cold air in the cavity for a better food preservation. Foods can be placed on any shelf of the appliance. Please pay attention to not obstruct the air distribution vents thus ensuring its free movement.

### Extra strong glass

Indesit's extra strong glass shelves are thicker than average supporting a staggering up to 100 kg of weight so they can hold even the heaviest of pans. Extra load of up to 100 kg can be placed on one single shelf, where the shelf is loaded up to full capacity of 100 kg, this can result in the shelf itself bowing.

### Humidity control\*

Turn on the humidity regulator (position B) if you want to store food in a less humid environment, like fruit, or turn it off (position A) if you want to store food in a more humid environment, like vegetables.

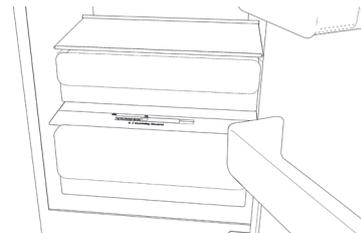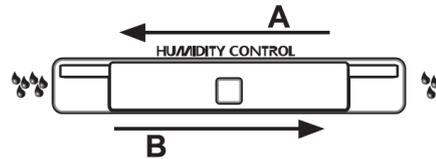

\* Available only on certain models

---

## **FREEZER COMPARTMENT**

### **Ice cubes\***

Fill the ice tray with water and put it in the freezer compartment.  
Do not use sharp or pointed objects to remove ice cubes from the ice tray.

---

### **Easy Take Freezer Tray**

Easy access zone in the freezer: easy to find and grab your favorite items.

---

## **GENERAL INFORMATION**

The drawers, baskets and shelves should be kept in their current position unless otherwise specified in this quick guide.

The light system inside the refrigerator compartment uses LED lights, allowing for better lighting than with traditional light bulbs, as well as for very low energy consumption.

The quantity of fresh food that can be frozen in 12 and 24 hours is written on the rating plate.

### **DISPOSAL**

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.

### **Total No Frost system**

The Total No Frost system effectively prevents ice formation, avoiding the hassle of manual defrosting both in freezer and fridge cavity. Its ventilation system provides perfect circulation of cold air in both cavities thus avoiding ice builds up.

---

### **REMOVING THE DRAWERS**


 
Pull the drawers outwards as far as they will go, lift them up and remove them. To get more volume, the freezer compartment can be used without the drawers.

Make sure that the door is closed properly after putting the food back on the grilles/shelves.

\* Available only on certain models

\*\* Independently tested by IMSL (Industrial Microbiological Services Ltd, UK) using ISO 22196

## TROUBLESHOOTING

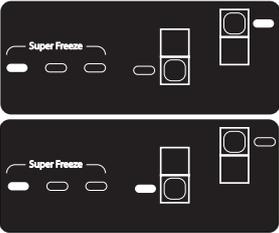What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance could be in On/Standby mode. There may be an appliance power supply problem.	Activate the appliance with the PUSH&GO button. Make sure: <ul style="list-style-type: none"> <li>• there is not a power outage</li> <li>• the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered)</li> <li>• the household electrical system protection devices are efficient</li> <li>• the power cable is not broken.</li> </ul>
The inside light does not work.	The light may need replacing.	Contact the Authorized service center.
	The appliance could be in On/Standby mode.	Activate the appliance with the PUSH&GO button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Cures").	Make sure: <ul style="list-style-type: none"> <li>• the doors close properly</li> <li>• the appliance is not installed near a heat source</li> <li>• the set temperature is adequate</li> <li>• the circulation of air through the vents at the bottom of the appliance is not obstructed.</li> </ul>
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No cure is necessary.
Acoustic signal sounds*.	<b>Door open alarm</b> It is activated when a door remains open for a long period of time.	Close the doors of the product to deactivate the acoustic signal.
	<b>Black Out alarm</b> It is activated in case of a prolonged power outage causing an increase in the freezer compartment temperature.  Note: A different product temperature cannot be set until the Black Out alarm is deactivated.	Before deactivating the acoustic signal, it is advisable to pay attention to the temperature shown on the Freezer temperature display, corresponding to the highest temperature reached in the freezer compartment during the black out. Press the "Stop Alarm" button briefly to deactivate the acoustic signal. After pressing the button, the temperature display shows the set temperatures again. If the freezer compartment has not yet reached the optimum food preservation temperature, the freezer compartment temperature alarm could be activated (see freezer compartment temperature alarm). Check the food before consuming it.
	<b>Freezer compartment temperature alarm</b> The freezer compartment temperature alarm indicates that the compartment temperature is not optimum. This may happen: with first use, after defrosting and/or cleaning, if large amounts of food are placed inside the freezer or when the freezer door has not been closed properly.	Pressing (1) or (6) button the acoustic alarm is snoozed

\* Available only on certain models



**Policies, standard documentation and additional product information can be found by:**

- Visiting our website [docs.indesit.eu](https://docs.indesit.eu)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.

