

Hisense


Hisense

USER'S OPERATION MANUAL

MODEL NO.: HS60240WUK

HS60240BUK

HS60240XUK

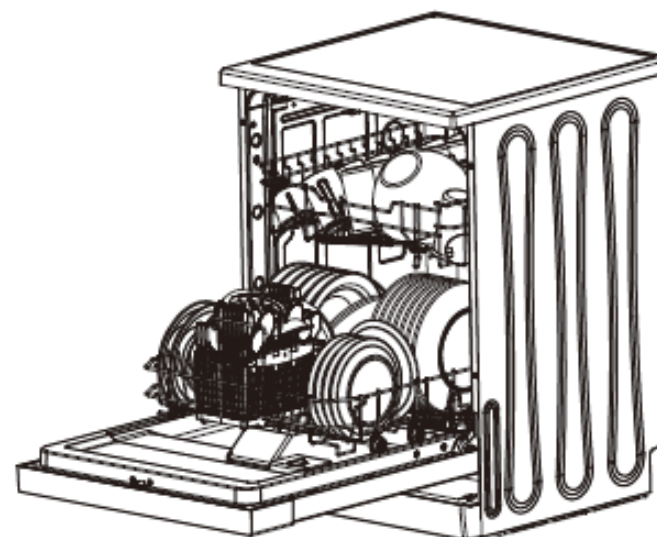

Before operating the unit, please read this manual thoroughly, and retain for future reference.



Read this Manual

Dear Customer,
Please read this User Information carefully and keep it for reference.
Pass it on to any subsequent owner of the appliance.

This manual contains sections of Safety Instructions, Operating Instructions, Installation Instructions and Troubleshooting Tips, etc.

Reading carefully it before using the dishwasher will help you to use and maintain the dishwasher properly.



Before Calling for Service

To review the section on Troubleshooting Tips will help you solve some common problems by yourself and do not need to ask for help of professional technicians.



NOTE:

The manufacturer, following a policy of constant development and up-dating of the product, may make modifications without giving prior notice.

| | |
|---|-------|
| 1) Safety Information | 1-2 |
| 2) Disposal | 2 |
| 3) Operating Instruction..... | 3-4 |
| Control Panel | 3 |
| Dishwasher Features | 4 |
| 4) Prior using for the first time | 4-9 |
| Water Softener | 4-5 |
| Loading the Salt into the Softener..... | 5-6 |
| Fill the Rinse Aid Dispenser..... | 6-7 |
| Function of Detergent | 7-9 |
| 5) Loading the Dishwasher Baskets.. | 10-13 |
| 6) Starting a washing programme | 14-15 |
| Wash Cycle Table | 14 |
| Turning on the Appliance..... | 14 |
| Change Programmes..... | 15 |
| Forget to Add Dish..... | 15 |
| 7) Maintenance and cleaning..... | 16-18 |
| 8) Installation | 18-21 |
| Positioning and leveling | 18-19 |
| Connecting the water and electricity supplies | 19-21 |
| 9) Troubleshooting Tips..... | 21-25 |
| Error codes | 21 |
| Before calling for service | 22-23 |
| Technical information | 24-25 |

1. Safety Information

WARNING !

When using your dishwasher, please follow the basic precautions include the following:

WARNING! HYDROGEN GAS IS EXPLOSIVE

Under certain conditions, Hydrogen gas may be produced in a hot-water system that has not been used for two weeks or more, HYDROGEN GAS IS EXPLOSIVE. If the hot-water system has not been used for such a period, before using the dishwasher, please turn on all hot-water faucets and let the water flow from each for several minutes. This will release some accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame this period.

WARNING! PROPER USE

- Do not abuse, sit on, or stand on the door or dish basket of the dishwasher.
- Do not touch the heating element during washing programme ended immediately.
- Do not operate your dishwasher unless all enclosure panels are properly in place. Open the door very carefully if the dishwasher is operating. There is a risk of water squirting out.
- Do not place any heavy objects or stand on the door when it is open. The appliance could tip forward.
- When loading items to be washed:
 - Locate sharp items so that they are not likely to damage the door seal;
 - Load sharp knives with the handles up to reduce the risk of cut-type injuries;
 - Warning: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.
- When using your dishwasher, you should prevent plastic items from contacting with heating element directly.
- Check that the detergent receptacle is empty after completion of the wash cycle.
- Do not wash plastic items unless they are marked dishwasher safe or the equivalent. For plastic items not marked, please check manufacturer's recommendations.
- Use only detergent and rinse additives designed for an automatic dishwasher. Never use soap, laundry detergent, or hand washing detergent in your dishwasher.
- Other means for disconnection from the supply must be incorporated in the fixed wiring with at least 3mm contact separation in all poles.
- Keep children away from detergent and rinse aid, keep children away from the open door of the dishwasher, there will be some detergent left inside.
- These instructions shall also be got from the manufacturer or responsible Vendor.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with skin and eyes, and keep children away from the dishwasher when the door open.
- The door should not be left in the open position as this could present a tripping hazard.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Please dispose of packing materials properly.
- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not tamper with controls.
- The appliance is to be connected to water mains using new hose sets, and the old hose-sets should not be reused.
- Make sure that the carpet must not obstruct the openings at bottom base.
- Use the dishwasher only for its intended function.
- The dishwasher is intended for indoor usage only
- The dishwasher is not designed for commercial use. It is intended for use in domestic households and in similar working and residential environments.

READ AND FOLLOW THIS SAFETY INFORMATION CAREFULLY
SAVE THESE INSTRUCTIONS

2. Disposal



Dispose of the dishwasher packaging material correctly. All packaging materials can be recycled. Plastic parts are marked with the standard international abbreviations: (e.g. PS for polystyrene, padding material)

This appliance is identified according to the European guideline 2012/19/EU on waste electrical and electronic equipment -WEEE. The guideline specifies the framework for an EU-wide valid return and re-use of old appliances.

WARNING!

Packaging material could be dangerous for children!

For disposing of package and the appliance please go to a recycling centre. Cut off the power supply cable and make the door closing device unusable.

Cardboard packaging is manufactured from recycled paper and should be disposed in the waste paper collection for recycling.

By ensuring this product is disposed correctly, you will help prevent potential negative consequences for the environment and human health, otherwise will be caused by inappropriate waste handling.


For more detailed information about recycling of this product, please contact your local city office and your household waste disposal service

IMPORTANT!

To get the best performance from your dishwasher, read all operating instructions before using it for the first time.


3. Operation Instruction

Control Panel

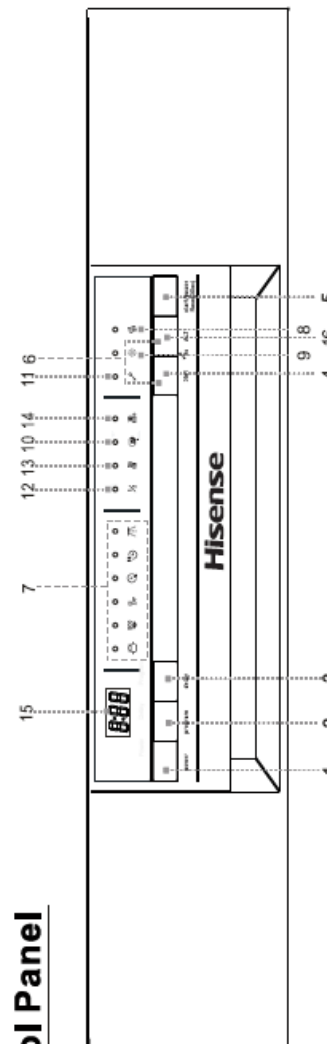

1. Power switch: To turn on/off the power supply.
2. Program key-press: Press the key to scroll through the wash cycles. The corresponding programme light will be ON to indicate which WASH CYCLE has been selected.
3. Delay button: The START DELAY will allow you to delay the start time of any cycle automatically up to 24 hours.
4. "3 in 1" button: Press this button you can choose or cancel the "3 in 1" function.
5. Start/pause button: Press this button to start or pause the dishwasher.
6. Child lock button: Press the two buttons for 3 seconds, the appliance could be locked and any button can not be used.
7. Program indicator light: When you select a washing programme, the corresponding light will display.
8. Salt refill indicator: The indicator lights up when the softener needs to be refilled.
9. Rinse aid refill indicator: The indicator lights up when dispenser needs to be refilled.
10. 3 in 1 indicator: The indicator lights up when the additional function be selected.
11. Child lock indicator: The "Child Lock" will be available when you press the Child lock button for 3 seconds, and the "Child lock" indicator lights up after flashing 6 times.
12. Half-Load indicator: the Half Load indicator lights up when the Half-load additional function be selected.
13. Drying light: To come on when the dishwasher is drying.
14. Dry+ indicator: An increased temperature during the final rinse stage will improve the drying process. The indicator will be available when Dry+ button is selected.
15. Digital display: To display remained running time, malfunction codes and delay time.
16. ALT button: Press this button you can choose the additional functions of Dry+, Half-load, or you can have Dry+ and Half-load functions working at the same time, and the corresponding light flashes.

Dishwasher Features

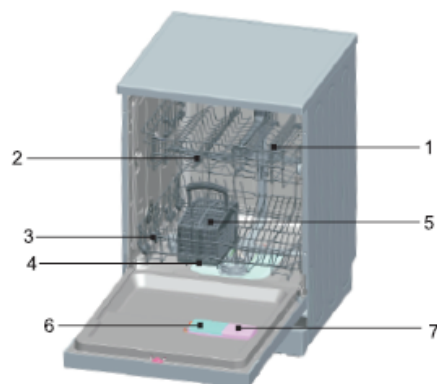

Front View

- 1 Upper Basket
- 2 Spray Arms
- 3 Lower Basket
- 4 Water Softener
- 5 Cutlery Basket
- 6 Detergent Dispenser
- 7 Rinse Aid Dispenser

4. Prior Using for the First Time

Before using your dishwasher:

- A. water softener
- B. Pour 500ml of water inside the salt container and then fill with dishwasher salt
- C. Fill the rinse aid dispenser
- D. Function of detergent

A. Water Softener

The water softener is designed to remove minerals and salts from water, which would have a detrimental or adverse effect during operations. The higher of minerals and salts, the harder the water is. The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise hardness of water in your area.

Setting

The amount of salt dispensed can be set from H0 to H7.

Salt is not required at value H0.

1. Find out the hardness value of your tap water. Your water utility company can help you with this.
2. Set value can be found in the water hardness table.
3. Close the door.
4. Switch on "Power".
5. Hold down "Delay" button and then press "Program" button for 5 seconds, Digital tube display H... flashes on the digital display. (factory setting is H4)

to change the setting:

1. Press "Delay" button.
Each time the button is pressed, the set value increase one level; when the value H7 reaches, the display jumps back to H0(off).
2. Press "Program" button.
The chosen setting will be stored.

Contact your local water board for hardness details of your water supply

Water hardness table

| Water hardness | | Mmol/l | Set value on the machine |
|----------------|--------|---------|--------------------------|
| °Clark | Range | | |
| 0-8 | soft | 0-1.1 | H0 |
| 9-10 | soft | 1.2-1.4 | H1 |
| 11-12 | medium | 1.5-1.8 | H2 |
| 13-15 | medium | 1.9-2.1 | H3 |
| 16-20 | medium | 2.2-2.9 | H4 |
| 21-26 | hard | 3.0-3.7 | H5 |
| 27-38 | hard | 3.8-5.4 | H6 |
| 39-62 | hard | 5.5-8.9 | H7 |

B. Loading Salt into Softener

Always use salt intended for use dishwasher.

NOTE: If your model has no water softener, you may skip this section

WATER SOFTENER

The hardness of water varies from place to place. If hard water is used in the dishwasher, deposits will form on the dishes and utensils.

The appliance is equipped with a special softener that uses salts specifically designed to eliminate lime and minerals

The salt container is located beneath lower basket and should be filled as follows:

Attention!

Only use salt specifically designed dishwashers! All others will damage the water softener especially table salt. In case of damages caused by using of unsuitable salt, the manufacturer does not give nor give any warranty nor is liable for any caused damages.


Only fill with salt before starting one of the complete washing programmes.

This will prevent any grains of salt or salty water, which may be splited, remaining on the bottom of the machine for any period of time, which may cause corrosion.

After the first wash cycle, the control panel light expires.



A. Remove the lower basket then unscrew and remove the cap from salt container. 1

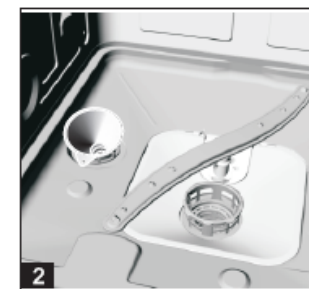

B. Filling the container the first time, please fill 2/3 of its volume with water (around 500ml). 2

- C. Place the end of the funnel (supplied) into the hole and introduce about 2kg of salt. It is normal for water come out of the salt container
- D. Carefully screw the cap back.
- E. Usually, the salt warning light will be off in 2-6 days after the salt container is filled.

NOTE: 1. The salt container must be refilled when the salt warning light in the control panel comes on. Though the salt container is filled enough, the indicator light may not black out before salt fully dissolve. If there is no salt warning light in the control panel (for some models), you can judge by the cycles times that the dishwasher run (see the following schema).

2. If there are spills of salt, a soak program could be run to wipe them out.

C. Fill the Rinse Aid Dispenser

Function of Rinse Aid

Rinse aid is automatically added in last rinse, ensuring thorough rinsing, spot and streak free drying.

Attention!


Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent). It will damage the appliance.

When to Refill the Rinse Aid Dispenser


If there is no rinse-aid warning light on control panel, you can judge the amount of rinse-aid by the color of optical level indicator "D" located next to the cap. When the rinse-aid container is full, the whole indicator will be dark. As the rinse aid diminishes, the size of the dark dot decreases. You should never let the rinse aid get below 1 / 4 full.

As the rinse aid diminishes, the size of the black dot on the rinse aid level indicator changes, as illustrated below.

- Full
- 3 / 4 full
- 1 / 2 full
- 1 / 4 full - Should refill to eliminate spotting
- Empty

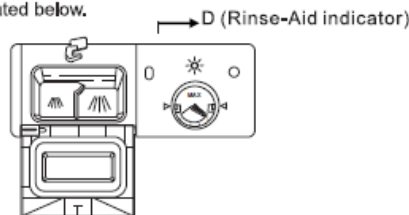

RINSE AID DISPENSER

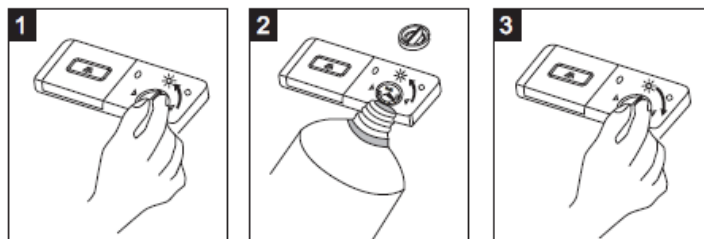

- 1 To open the dispenser, turn the cap to "open" (left) arrow and lift it out.
- 2 Pour the rinse aid into the dispenser, be careful not to overfill.
- 3 Replace the cap by inserting it aligned with "open" arrow and turning it to the "closed" (right) Arrow.

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes that can leave spots and streaks. It also improves drying.

Your dishwashers are designed to use liquid rinse aids. The rinse aid dispenser is located inside the door next to detergent dispenser.

To fill dispenser, open the cap and pour the rinse aid into the dispenser until the level indicator turns completely black. The volume of rinse aid container is about 140ml.


Be careful not to overfill the dispenser, because this could cause over sudsing. Wipe away any spills with a damp cloth. Don't forget to replace the cap before dishwasher door closed.

Attention!

Clean up any rinse aid spill during filling with an absorbent cloth to avoid excess foaming in next wash.

Adjusting Rinse Aid Dispenser

The rinse aid dispenser has four settings and the dose has been set to the maximum position 4 at the factory. If the tableware has sticky white stripes or a blue film on a glassware or knife, reduce the dose.

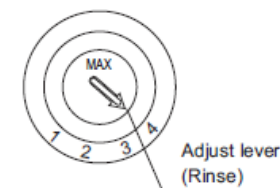

NOTE: Increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce level if there are sticky whitish streaks on the dishes or a bluish film on glassware or knife blades.

D. Function of Detergent

Detergents with its chemical ingredients are necessary to remove dirt, etc. Most of commercial quality detergents are suitable for this purpose.

Concentrated Detergent

Based on their chemical composition, dishwasher can be split in two basic types:

- conventional, alkaline detergents with caustic components
 - low alkaline concentrated detergents with natural enzymes
- "Eco" programme in conjunction with concentrated detergents is good for your dishes. These washing programmes are specially matched to the dirt-dissolving properties of the concentrated detergent. "Eco" programme which concentrated detergents can achieve the same result of using "intensive" programme.

Detergent Tablets


Detergent tablets of different brands dissolve at different speeds. Some detergents

cannot dissolve and develop their full cleaning power during short programmes. Therefore please use long programmes when using detergent tablets, to ensure the complete removal of detergent residuals.

Detergent Dispenser

The dispenser must be refilled before starting washing cycle, please follow the instructions provided in Wash Cycle Table. Your dishwashers use less detergent and rinse aid than conventional dishwashers. Generally, only one tablespoon of detergent is needed for a normal wash load. Also, more heavily soiled items need more detergent. Always add the detergent before starting dishwasher, otherwise it could get damp and will not dissolve properly.

Amount of Detergent to Use

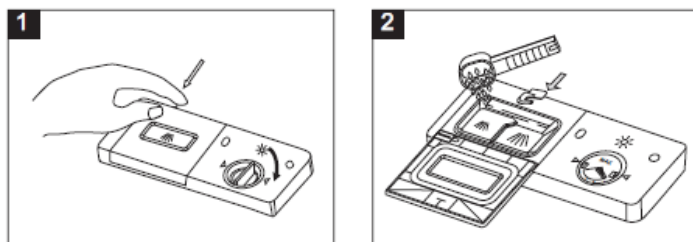

NOTE:

- 1 If the lid is closed: press release button.
- 2 Always add the detergent before starting each wash cycle. Only use branded detergent aid for dishwasher.

⚠ WARNING!


Dishwasher detergent is corrosive! Take care to keep it away from your children

Use only detergent specifically made for dishwashers. Keep your detergent fresh and dry. Don't put powder detergent into the dispenser until you're ready.

Fill in the detergent

Fill the detergent dispenser. It will indicate dosing levels, as illustrated on the right:

- 1 The place of main wash cycle detergent placed, "MIN" means approximately 20g.
- 2 The place of pre-wash cycle detergent placed, approximately 5g.

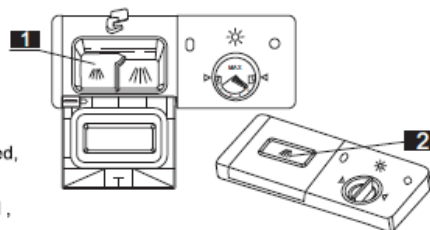

Please observe the manufacturer's dosing and storage recommendations as stated on the detergent packaging.

Close the lid and press until it locks in place.

If the dishes are heavily soiled, place an additional detergent dose in the pre-wash detergent chamber. This detergent will take effect during pre-wash.

NOTE:

The information about the amount of detergent for single programme on last page.

Please be aware it is according to the level of soiling and the specific hardness of water, differences are possible.

Please observe the manufacturer's recommendations on the detergent packaging.

Detergents

There are 3 sorts of detergents

1. With phosphate and with chlorine
2. With phosphate and without chlorine
3. Without phosphate and without chloride

Normally new pulverized detergent is without phosphate. The water softener function of phosphate is not given. In this case we recommend to salt container even when the hardness of water is 6 dH. If detergents without phosphate were used, in case of hard water spots appear at dishes and glasses, please add more detergent to get better results. Detergents without chlorine do only bleach a little. Strong and coloured spots will not removed completely. Please choose a programme with higher temperature.

Half Load Function

1.1 Half Load is an additional Function, ordinary washing machine half load is still ordinary washing, alternate washing machine half load is still alternate washing.

1.2 Heavy, Intensive, Eco, Normal, Light, Crystal, 90min, 30min can add half load function, Pre_Rinse can't add half load function.

1.3 When the Heavy, Intensive, Eco, Normal, Light, Crystal, 90min, 30min add half load function, the procedure is changed as follows:

1.3.1 Each time the water inflow is reduced by 100 n, if the original water inflow is greater than 650 n, and the original water inflow will be changed to more than 650 n and less than 750 n, if the original water inflow is less than 650 n, it won't be changed.

1.3.2 The original washing time of the washing step is more than 3 minutes, and the washing time will be reduced by 30%. The reduced washing time is in minutes, and it is taken down in integer.

1.3.3 Total time reduces by Washing steps total time reduces.

5. Loading the Dishwasher Baskets

For best performance of the dishwasher, follow these loading guidelines. Features and appearance of baskets and silverware baskets may vary from your model.

Attention before or after Loading the Dishwasher Baskets

Scrape off any large amounts of leftover food. It is not necessary to rinse the dishes under running water. Place objects in the dishwasher in the following way:

1. Items such as cups, glasses, pots/pans, etc. are stood upside down.
2. Curve items, or those with recesses, should be at a slant so that water can run off.
3. They are stacked securely and can not tip over.
4. They do not prevent the spray arms from rotating while washing takes place.

Very small items should not be washed in the dishwasher as they could easily fall out of the baskets.


Removing the Dishes

To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first and then the upper basket.


Upper Basket

Loading the Upper Basket

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cup and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they do not get moved by the spray of water.

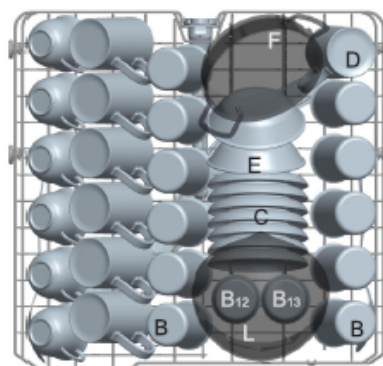


| Upper basket | |
|--------------|--------------|
| Type | Item |
| A | Cup |
| B | Glass |
| C | Saucer |
| D | Mug |
| E | Dessert bowl |
| F | Small pot |
| L | Glass bowl |

 

Adjusting the Upper Basket

If required, the height of the upper basket can be adjusted in order to create more space for large utensils either in the upper basket or lower basket. The upper basket can be adjusted for height by putting wheels of different height into the rails. Long items, serving cutlery, salad servers or knives should be placed on the shelf so that they do not obstruct the rotation of the spray arms. The shelf can be folded back or removed when not be required for use.

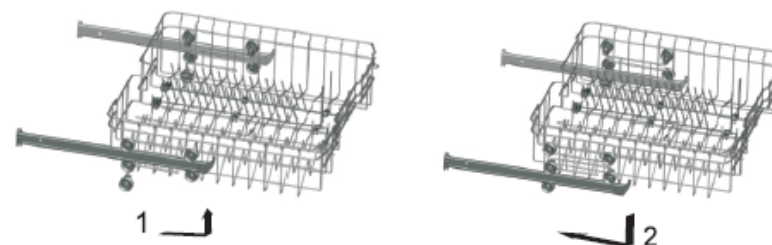

Loading the Lower Basket

We recommend that you place large items which are most difficult to clean in to the lower basket: pots, pans, lids, serving dishes and bowls, as shown in the figure below.


It is preferable to place serving dishes and lids on the side of the baskets in order to avoid blocking the rotation of the top spray arm.

Pots, serving bowls, etc. must always be placed top down.

Deep pots should be slanted to allow water to flow out.

The bottom basket features fold down tine rows so that larger or more pots and pans can be loaded.

Lower Basket

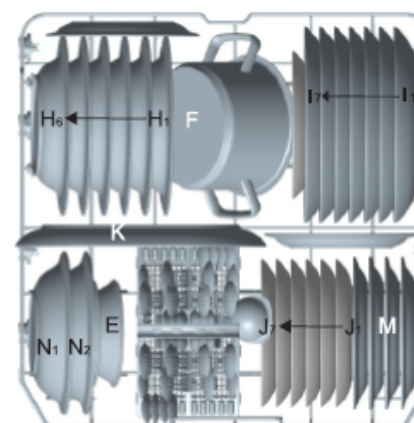


| Lower basket | |
|--------------|------------------------|
| Type | Item |
| E | Dessert bowl |
| H | Soup plate |
| I | Dinner plate |
| J | Dessert plate |
| K | Oval plate |
| F | Small pot |
| M | Melamine dessert plate |
| N | Melamine bowl |

* Lower basket

Folding racks

Folding racks consisting of two parts that are located on the lower basket of your machine are designed in order to let you place big items easier as pots, pans, etc. If requested, each part can be folded separately, or all of them can be folded and larger can be obtained. You can use folding racks by raising them upwards, or by folding.


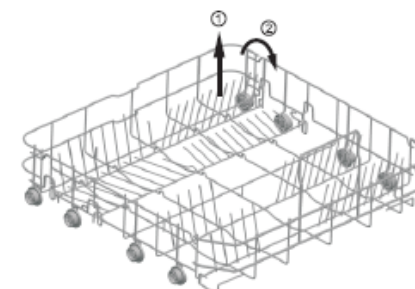


* For optional

Cutlery Basket

Cutlery should be placed in the cutlery basket with handles at the bottom: If the basket has side baskets, the spoon should be loaded individually into the appropriate slots, especially long utensils should be placed in the horizontal position at the front of the upper basket.

Cutlery basket

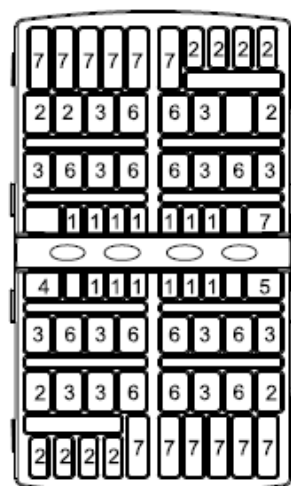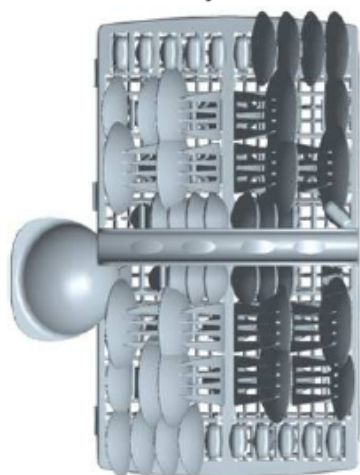

Door side



| Cutlery basket | |
|----------------|----------------|
| Type | Item |
| 1 | Tea spoons |
| 2 | Dessert spoons |
| 3 | Soup spoons |
| 4 | Gravy ladle |
| 5 | Serving fork |
| 6 | Forks |
| 7 | Knives |

For washing in the dishwasher the following cutlery/dishes are not suitable.

Cutlery with wooden, horn china or mother-of-pearl handles
Plastic items that are not heat resistant
Older cutlery with glued parts that is not temperature resistant
Bonded cutlery items dishes
Pewter or cooper items
Lead crystal glass
Steel items subject to rusting
Wooden platters
Items made from synthetic fibre

WARNING!

Do not let any item extend through bottom

Are of limited suitability
Some types of glasses can become dull after many washes

Silver and aluminium parts have a tendency to discolour during washing

Glazed patterns may fade if machine washed frequently

NOTE: Do not put items are dirty of cigarette ash, candle wax, lacquer or paint. If you buy new dishes please make sure they are suitable for dishwashers.

NOTE: Please do not overload your dishwasher. There is only space for 13 standard dishes. Do not use dish that is not suitable for dishwashers. This is important for good results and for reasonable energy consumption.

Loading Cutlery and Dishes

Before loading the dishes, you should:

Remove large left-over

Soften remnants of burnt food in pans

When Loading the Dishes and Cutlery, Please Note:

Dishes and cutlery must not impede rotation of spray arms.

Load hollow items such as cups, glasses, pans etc. with opening downwards, so water will not collect in the container or a deep base.

Dishes and items of cutlery must not lie inside one another, or cover each other

To avoid damage of glasses, they must not touch

Load large items which are most difficult to clean into the lower basket

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee tea cups

Attention!

Long bladed knives stored in upright position are a potential hazard!

Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in upper basket

Damage to Glassware and other Dishes

Possible causes:

Type of glass or manufacturing process. Chemical composition of detergent.

Water temperature and duration of dishwasher programme.

Suggested remedy:

Use glassware or porcelain dishes that have been marked dishwasher-proof by manufacturer

Use a mild detergent that is described as kind of dishes. If necessary, seek further information from detergent manufacturers.

Select a programme with a low temperature.

To prevent damage, take glass and cutlery out of the dishwasher as soon as possible after programme ended.




 


At the End of Wash

When the working cycle has finished, the buzzer of dishwasher will ring for 6 times, then stop. Turn off the appliance using "Power" button, shut off water supply and open the door of dishwasher.

Wait a few minutes before unloading the dishwasher to avoid handling dishes and utensils while they are still hot and more susceptible to breakage. They will also dry better.

6. Starting a Washing Program

Wash cycle table

| Program | Cycle Selection Information | Description of Cycle | Detergent Pre/main | Running Time (min) | Energy (kWh) | Water (L) |
|---|--|--|-----------------------|--------------------|--------------|-----------|
|  Intensive | For the heaviest soiled loads, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for a while. | Pre-wash Main wash(60°C) Rinse1 Rinse2 Hot rinse Drying | 4/17g | 180 | 1,300 | 16 |
|  ECO (*EN60436) (Standard Programme) | For normally soiled loads, such as pots, plates, glasses and lightly soiled pans. standard daily cycle. | Pre-wash Main wash(44°C) Hot rinse Drying | 4/17g | 237 | 0.936 | 11 |
|  Light | Light wash cycle to be used for more delicate items which are sensitive to high temperatures.(Run cycle immediately after use) | Pre-wash Main wash(45°C) Hot rinse Drying | 3/16 (or 3 in 1) | 137 | 0.850 | 14 |
|  60 min | For lightly and normally soiled plates and pans for every day. | Hot rinse 1 Hot rinse 2 Hot rinse(60°C) Drying | 3/16 | 60 | 0.950 | 10 |
|  Rapid | A shorter wash for lightly soiled loads that do not need drying. | Main wash(40°C) Hot rinse | 15 | 39 | 0.500 | 7 |
|  Pre-Rinse | To rinse dishes that you plan to wash later that day | Pre-wash | \ | 11 | 0.010 | 4 |

- 1.The ECO program is suitable to clean normally soiled tableware,it is the most efficient program in terms of its combined energy and water consumption .
- 2.Manual pre-rinsing of tableware items leads to increased water and energy consumption and is not recommended .
- 3.Washing tableware in a household dishwasher usually consumes less energy and water than hand dishwashing when the household dishwasher is used according to this instruction manual.

EN 60436:this program is the test cycle.

The information for comparability test in accordance with EN 60436,as follows:

- Capacity: 13 settings
- Position of upper basket :upper wheels on rails
- Rinse aid setting: 6(or 4 for four setting dispenser)

Turning on the Appliance

Starting a wash cycle...

Draw out the lower and upper basket, load the dishes and then as following:

1. push them back. It is recommended to load the lower basket first, then the upper one (see the section entitled "Loading the Dishwasher"). Pour in detergent (see the section entitled "Salt, Detergent and Rinse Aid").

2. Insert plug into the socket.The power supply is 220-240V AC 50 Hz, the specification of the socket is 12 A 250 VAC,50 Hz.

Make sure that the water supply is turned on to full pressure. Close the door, press "Power"button, Press Programme button to select a desired "Wash cycle". (See the section entitled "Wash Cycle Table") . With a little force to ensure the door is properly closed.

NOTE: A click could be heard when the door is closed perfectly.

When the washing goes over, you can shut off the switch by pressing "Power" button.

Switching on

1. Open the tap, if it is closed.
2. Close the door.
3. Make sure the spray arms are not obstructed.
4. Switch the dishwasher on using the " Start/Pause " button.

Select a Program

Choose your program according to the type of load and how dirty it is.

The different programs and their uses are described in the programme chart later on in this booklet. Use the program button to select the expected program.

Change Program

Premise: A cycle that is underway can only be modified if it has only been running for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained wash water . If this is the case, the detergent dispenser must be refilled (see the section entitled " Fill in the Detergent ").

- 1:Press the "Power" button to cancel the program.
- 2:Turn on it again and restart a new washing cycle (see the section entitled "Starting a wash cycle. . . ") or press program button to change the programme.

▲NOTE: If you open the door when the washing cycle underway, the appliance will pause and emit warning signals, the digital display show "E1" and flash. When you close the door, the machine will keep on working after 10 seconds.

Forget to Add Dish

A forgotten dish can be added any time before the detergent cup opens.

- 1 Open the door a little to stop the washing.
- 2 After the spray arms stop working, you can open the door completely.
- 3 Add forgotten dishes.
- 4 Close the door, the dishwasher will work after ten seconds.

▲ WARNING!

It is dangerous to open the door when washing, because the hot water may scald you.

Switch Off the Dishwasher

The digital display appears "—", only in this case the program has ended,

- 1.Switch off the dishwasher by pressing the " Power " button.
- 2.Turn off the water tap!

Open the door carefully. Hot steam may escape when the door is opened!

■Hot dishes are sensitive to knocks. The dishes should be allowed to cool down around 15 minutes before removing from the appliance.

■Open the dishwasher's door, leave it ajar and wait a few minutes before removing the dishes. In this way they will be cooler and the drying will be improved.

Unloading the dishwasher


It is normal that the dishwasher is wet inside.

Empty the lower basket first then the upper one. This will avoid water dripping from the upper basket onto lower.

7. Maintenance and cleaning

Filtering System

The filter is used to avoid big remnants and other sundries inside the pump. The residue can obstruct the filter in sometime.

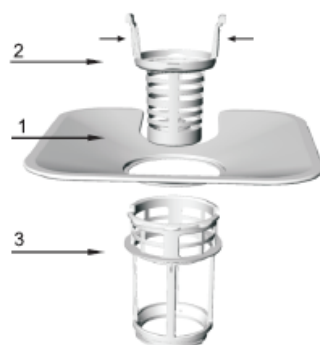

The filter system consists of a coarse filter, a flat (Main filter) and a micro filter (fine filter).

1 Flat filter

Food and debris will be trapped by a special jet on the lower spray arm.

2 Coarse filter

Big debris, such as bone and glass that could clog the drain will be trapped in the coarse filter.

To remove an item caught in this filter, gently squeeze the taps on the top of this filter and lift it out.

3 Micro filter


This filter holds soil and food residue in the sump area and prevents it from being redeposit on the dishes during a cycle.

- Inspect the filters for obstructions every time the dishwasher has been used.

- By unscrewing the coarse filter, you can remove the filter system. Remove any food remnants and clean the filters under running water.



Step 1: contrarotate the Coarse filter, then lift it up;

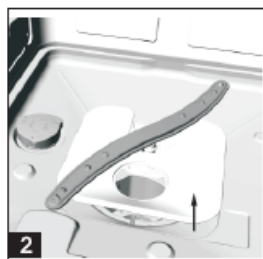

Step 2: lift the Flat filter up

NOTE: If operate from step 1 to step 2, the filter system will be removed; while operate from step 2 to step 1, the filter system will be installed.

Filter assembly

For best performance and results, the filter assembly must be cleaned. The filter efficiently removes food particles from the wash water, allowing it to be recirculated during the cycle. For this reason, it is a good idea to remove the larger food particles trapped in the filter after each wash cycle by rinsing the semicircular filter and cup under running water. To remove the filter assembly, pull on the cup handle in the upward direction. The entire filter assembly should be cleaned once a week. To clean the coarse filter and the micro filter, use a cleaning brush. Then, reassemble the filter parts as shown in the figures above and reinsert the entire assembly in the dishwasher, positioning in its seat and pressing downward. The dishwasher must never be used without the filters. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

⚠ WARNING!

Never run the dishwasher without the filters in place. When cleaning the filters, don't knock on them. Otherwise, the filters could be contorted and the performance of dishwasher could be debased.

Cleaning the Spray Arms

It is necessary to clean the spray arms regularly for hard water chemicals will clog the spray arm jets and bearings.


To remove the spray arms, screw off the nut clockwise to take out the washer on top of the spray arm and remove the arm. Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing thoroughly.

Caring for the Dishwasher

To clean the control panel, use a lightly dampened cloth then dry thoroughly.

To clean the exterior, use a good appliance polish wax.

Never use sharp objects, scouring pads or harsh cleaners on any part of the dishwasher.

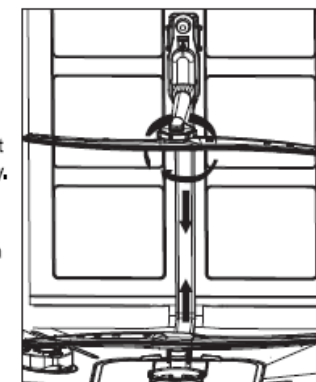

Protect Against Freezing

If your dishwasher is left in an unheated place during the winter, ask a service technical to:

1. Cut off electrical power to the dishwasher,
2. Turn off the water supply and disconnect the water inlet pipe from the water valve.
3. Drain water from the inlet pipe and water valve. (Use a pan to catch the water)
4. Reconnect the water inlet pipe to the water valve.
5. Remove the filter in the tub and the bottom and use a sponge to use up water in sump

Cleaning the Door

To clean the edge around the door, you should use only a soft warm, damp rag. To prevent penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.

Also, never use abrasive cleaners or scouring pads on the outer surfaces because they will scratch the finish. Some papers towels can also scratch or leave marks on the surface.

If the above chart does not solve your problem, contact a dedicated repairman.

⚠ WARNING!

Never use a spray cleaner to clean the door panel for it could damage the door lock and electrical components. It is not allowed to use the abrasive agent or some paper towel because of the risk of scratching or leaving spots on the stainless steel surface.

How to Keep Your Dishwasher in Shape

After Every Wash

After every wash, turn off the water supply and leave the door slightly ajar so moisture and odors are not trapped inside.

Remove the Plug

Before cleaning or performing maintenance, always remove the plug from the socket. Do not run risks.

No Solvents or Abrasive Cleaning

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Use only a cloth and warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little white vinegar, or a cleaning product made specifically for dishwashers.

When You Go on holiday

When you go on holiday, it is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly ajar. This will help the seals last longer and prevent odors from forming in the appliance.

Moving the Appliance

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

Seals

One of the factors that cause odors to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this.

⚠ Attention:

The installation of the pipes and electrical equipments should be done by professionals.

⚠ Warning



Electrical Shock Hazard!
Disconnect electrical power before installing dishwasher. Failure to do so can result in death or electrical shock.

8. Installation

- ⚠ Keep this instruction manual in a safe place for future reference. If the appliance is sold, given away or moved, please ensure the manual is kept with the machine, so that the new owner may benefit from the advice contained within it.
- ⚠ Please read this instruction manual carefully: it contains important information regarding the safe installation, use and maintenance of the appliance.
- ⚠ If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back.

Positioning and leveling

1. Remove the appliance from all packaging and check that it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed and further with the installation process.
2. Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop.

3. Position the dishwasher on a level and sturdy floor. If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees). If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operation.

Connecting the water and electricity supplies


- ⚠ Connection to the water and electricity supplies should only be performed by a qualified technician.
- ⚠ The dishwasher should not stand on top of the water hoses or the electricity supply cable
- ⚠ The appliance must be connected to the water supply network using new piping. Do not use old piping.

★ Connecting the water inlet hose

Connect the cold water supply hose to a threaded 3/4(inch) connector and make sure that it is fastened tightly in place. If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and the appliance could be damaged.



Connecting the water outlet hose

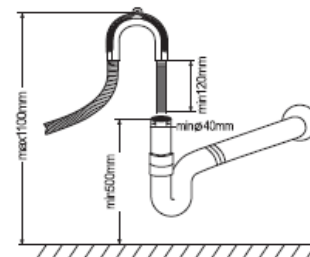

Fit the drainage hose of your machine to the drainage pipe without bending.

If the length of the hose is not sufficient, apply to the authorized service for an extension made from the same material as the original. Remember that the length of the hose should not exceed 4 meters even when with an extension.

If the drainage hose is longer than 4 m. the dishes will not be cleaned properly secure your hose firmly to the drainage pipe to avoid it coming off during the washing process.

Electrical connection

Before inserting the plug into the electrical socket, make sure that:

- ✓ the socket is earthed and complies with current regulations;
- ✓ the socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see description of the appliance);
- ✓ the power supply voltage falls within the values indicated on the data plate on the inside of the door;
- ✓ the socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see assistance); do not use extension cables or multiple sockets.

★ For optional

⚠ Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible.

⚠ The cable should not be bent or compressed.

⚠ If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards. (See Assistance)

⚠ The company shall not be held responsible for any incidents that occur if these regulations are not observed.

Advice regarding the first wash cycle

After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with and add approximately 2 Kg of salt (see Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. It is also normal that the LOW SALT indicator light continues to flash for a few cycles after the salt has been loaded.

Positioning the Appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation.

Leveling the Appliance

Once the appliance is positioned, adjust the feet (screwing them in or out) to adjust the height of the dishwasher, making it level. In any case, the appliance should not be inclined more than 2°.

NOTE: The maximum adjustment height of the feet is 20 mm.

How to Drain Excess Water From Hoses

If the sink is 1000mm higher from the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or a suitable container that is held outside and lower than the sink.

Water Outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water inlet hose is not kinked or squashed.

Extension Hose

If you need a drain hose extension, observe to use a similar drain hose..

It must be no longer than 4 metres; otherwise the cleaning effect of the dishwasher could be reduced.

Syphon Connection

The waste connection must be at a height of between 50cm (minimum) and 100cm (maximum) from the bottom of the dish. The water drain hose should be fixed by a hose clip.

Start of Dishwasher

The followings should be checked before starting the dishwasher:

- 1 Whether the dishwasher is level and fixed
- 2 Whether the inlet valve is opened
- 3 Whether there is leakage at the connections of the conducts
- 4 Whether the wires are tightly connected
- 5 Whether the power is switched on
- 6 Whether the inlet and drain hoses are knotted
- 7 All packing materials and printings should be taken out from the dishwasher


Attention

After installation, please put this manual into the bags of printings.
The content of this manual is very helpful to the users.

9. Troubleshooting Tips

Error codes

When some malfunctions happen, the appliance will display error codes to warn you.



| Codes | Meanings | Possible Causes |
|-------|--------------------|---|
| E1 | Door open | The door is opened when the dishwasher is operating |
| E2 | Water inlet | Water inlet malfunction |
| E4 | Temperature sensor | Temperature sensor malfunction |
| E5 | Overflow/leakage | Overflow occurs/Water leakage occurs |
| E7 | Heating element | Abnormal heating |

⚠ WARNING!

If overflow occurs, turn off the main water supply before calling a service. If there is water in the base pan because of an overflow or small leak, the water should be removed before restarting the dishwasher.

Availability of Spare Parts

Dependant upon the spare part, these are available for a minimum period of seven years for professional repairers or a minimum of ten years for professional repairers and end-users. Contact the Customer Service helpline for assistance.

Before Calling for Service

Reviewing the charts on the following pages may make you be free of calling for service.

| Problem | Possible Causes | What To Do |
|---|--|--|
| Dishwasher doesn't run | Fuse blown, or the circuit breaker acted | Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher. |
| | Power supply is not turned on | Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into wall socket. |
| | Water pressure is low | Check that the water supply is connected properly and water is turned on. |
| Drain pump doesn't stop | Overflow | The system is designed to detect an overflow. When it does, it shuts off the circulation pump and turns on the drain pump. |
| Noise | Some audible sounds are normal | Sound from detergent cup opening. |
| | Utensils are not secure in the baskets or something small has dropped into the basket | To ensure everything is secured in the dishwasher. |
| | Motor hums | Dishwasher has not been used regularly. If you do not use it often, remember to set it to fill and pump out every week, which will help keep the seal moist. |
| Suds in the tub | Improper detergent | Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the tub. Close and latch the dishwasher, then start the "pre-rinse" wash cycle to drain out the water... Repeat if necessary. |
| | Spilled rinse agent | Always wipe up rinse agent spills immediately. |
| Stained tub interior | Detergent with colorant was used | Make sure that the detergent is the one without colorant. |
| Dishes and flatware not clean | Improper program | Select a stronger programme. |
| | Improper basket loading | Make sure that the action of the detergent dispenser and spray arms are not blocked by large dishware. |
| Spots and filming on glasses and flatware | 1 Extremely hard water 2 Low inlet temperature 3 Overloading the dishwasher 4 Improper loading 5 Cold or damp powder detergent 6 Empty rinse agent dispenser 7 Incorrect dosage of detergent | To remove spots from glassware: 1 Take out all metal utensils out of the dishwasher. 2 Do not add detergent. 3 Choose the longest cycle. 4 Start the dishwasher and allow it to run for about 18 to 22 minutes, then it will be in the main wash. 5 Open the door to pour 2 cups of white vinegar into the bottom of the dishwasher. 6 Close the door and let the dishwasher complete the cycle. If the vinegar does not work: Repeat as above, except use 1/4 cup (60 ml) of citric acid crystals instead of vinegar. |

| | | |
|---|--|---|
| Cloudiness on glassware | Combination of soft water and too much detergent | Use less detergent if you have soft water and select a shortest cycle to wash the glassware and to get them clean. |
| Yellow or brown film on inside surfaces | Tea or coffee stains | Using a solution of 1/2 cup of bleach and 3 cups of warm water to remove the stains by hand. ⚠ WARNING You have to wait for 20 minutes after a cycle to let the heating elements cool down before cleaning interior; otherwise, burns will happen. |
| | Iron deposits in water can cause an overall film | You have to call a water softener company for a special filter. |
| White film on inside surface | Hard water minerals | To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent for the risk of foaming or suds. |
| The Detergent dispenser lid cannot be closed properly | Clogged detergent residue is blocking the catch | Clean the detergent from the catch. |
| Detergent left in dispenser cups | Dishes block detergent Cups | Re-loading the dishes properly. |
| Steam | Normal phenomenon | There is some steam coming through the vent by the door latch during drying and water draining. |
| Black or gray marks on dishes | Aluminum utensils have rubbed against dishes | Use a mild abrasive cleaner to eliminate those marks. |
| Water standing on the bottom of the tub | This is normal | A small amount of clean water around the outlet on the tub bottom keeps the water seal lubricated. |
| Dishwasher leaks | Overflow dispenser or rinse aid spills | Be careful not to overflow the rinse aid dispenser. Spilled rinse aid could cause oversudsing and lead to overflowing. Wipe away any spills with a damp cloth. |
| | Dishwasher isn't level | Make sure the dishwasher is level. |

If the above chart does not solve your problem, contact a dedicated repairman.

⚠ Self-maintenance, unprofessional maintenance will affect the safety of the product use, affect the implementation of the warranty policy.

<http://global.hisense.com/>

Technical Data Sheet

Sheet of household dishwasher according to EU Directive 2019/2017:

| | | |
|--|---|-------|
| Manufacture | Hisense | |
| Model | HS60240W/HS60240S/ HS60240X/HS60240B | |
| Standard place settings | 13 | |
| Energy efficiency class 1 | E | |
| PARAMETER | UNIT | VALUE |
| Eco programme energy consumption (EPEC) rounded to three decimal places | kWh/cycle | 0.936 |
| Standard programme energy consumption (SPEC) rounded to three decimal places | kWh/cycle | 1.675 |
| Energy Efficiency Index (EEI) | — | 55.9 |
| Eco programme water consumption (EPWC) rounded to one decimal place | l/cycle | 11.0 |
| Cleaning performance index (IC) | — | 1.13 |
| Drying performance index (ID) | — | 1.09 |
| Duration of the eco programme (Tt) rounded to the nearest minute | h:min | 3:57 |
| Power consumption in off-mode (Po) rounded to two decimal places | W | 0.40 |
| Power consumption in standby mode (Psm) rounded to two decimal places | W | 0.45 |
| Does standby mode include the display of information? | — | No |
| Power consumption in standby mode (Psm) in condition of networked standby (if applicable), rounded to two decimal places | W | — |
| Power consumption in delay start (Pds) (if applicable) rounded to two decimal places | W | 1.00 |
| Airborne acoustical noise emissions | dB(A) re 1 pW | 47 |
| Mounting | Freestanding | |
| Could be built-in | Yes | |
| Height | 84.5cm | |
| Width | 60.0cm | |
| Depth (with connectors) | 60.0cm | |
| Power consumption | 1850 W | |
| Rated voltage / frequency | AC 220-240 V/ 50Hz | |
| Water pressure (flow pressure) | 0.4-10bar=0.04-1.0MPa | |
| Water temperature | Max.62°C | |



NOTE:

1, A(highest efficiency) to G(lowest efficiency).

The device meets the European standards and the directives in the current version at delivery.

-LVD 2014/35/EU

-EMC 2014/30/EU

-EUP 2019/2022

NOTE : The above values have been measured in accordance with standards under specified operating conditions. Results may vary greatly according to quantity and pollution of the dishes, water hardness ,amount of detergent, etc.

The manual is based on the European Union's standards and rules.