

## 35 Inch Digital Tower Fan



### **IGFD6035W/B**

PO Number:

**Please read these instructions carefully before use and retain for future reference**

**Before switching on your appliance,  
always check for any damage which may have been caused in transit**

## **CONTENTS**

Important Safety Instructions.....	3-4
Product Overview .....	5-6
Functions.....	7
Assembly Instructions.....	8
Cleaning and Maintenance .....	9
Trouble Shooting Guide.....	10
Fuse Replacement.....	11
Disposal Information.....	11
Igenix Warranty Terms and Conditions.....	12-13

## **IMPORTANT SAFETY INSTRUCTIONS**

 
Please read this user manual carefully to ensure proper use, maintenance and installation.

### **WARNING: To reduce the risk of fire, electrical shock, or injury to person:**

1. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
2. Keep the appliance and its cord out of reach of children aged less than 8 years.
3. Children shall not play with the appliance.
4. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
5. This product is intended for domestic and light office use **ONLY** and not for commercial, industrial or outdoor use.
6. Do not hold or interfere with the fan, during operation.
7. Make sure the voltage in your home corresponds to the one shown on the rating label of the appliance.
8. Never leave the fan unattended whilst it is in use. Always turn the product to the **OFF** position and unplug from the electrical outlet when not in use.
9. Extreme caution is necessary when any fan is used by or near children, vulnerable or the elderly and whenever the fan is left operating unattended.
10. Do not run cord under carpeting and do not cover cord with throw rugs. Arrange the cord away from traffic area and where it will not be tripped over.


11. Do not operate the fan with a damaged cord or plug, or after the fan malfunctions, has been dropped, or damaged in any manner.
12. If the supply cord is damaged, it must be replaced by a qualified electrician or return appliance to the nearest authorized service facility for examination, repair or adjustment. This is in order to avoid a hazard.
13. Use the fan in a well-ventilated area. Whilst using keep a distance of no less than 20cm from walls and other objects to ensure that the air inlets and outlets are not blocked or covered. Also exhaust openings and oscillation of the fan is not restricted or blocked.
14. Do not insert or allow fingers or any other objects into the grilles or louvres to avoid any mechanical danger or injury during operation.
15. Use the fan on a flat, stable and dry floor only.
16. Unplug the unit from the wall socket when not in use. Please do not pull on the cord.
17. Do not use the unit near a bath, shower, swimming pool or anywhere it could be splashed with water.
18. Do not expose the unit to direct sunlight.
19. The fan should stand upright during operation and never be laid on its side.
20. Do not use the unit near flammable or explosive gases.
21. Before cleaning the unit, switch off and unplug the power cord.
22. Proper installation is required before operation.

# PRODUCT OVERVIEW

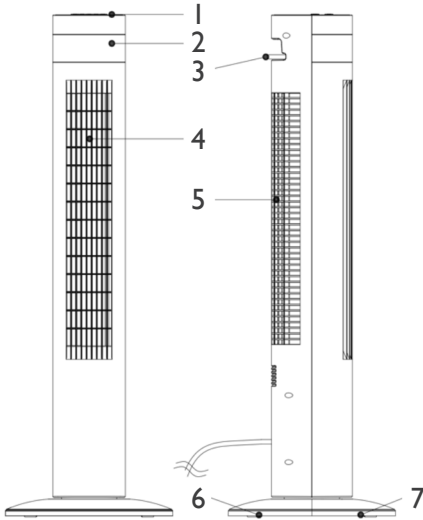


1. Control panel
2. Display
3. Remote control storage / carry handle
4. Air outlet
5. Air inlet
6. Base part A
7. Base part B

## Display

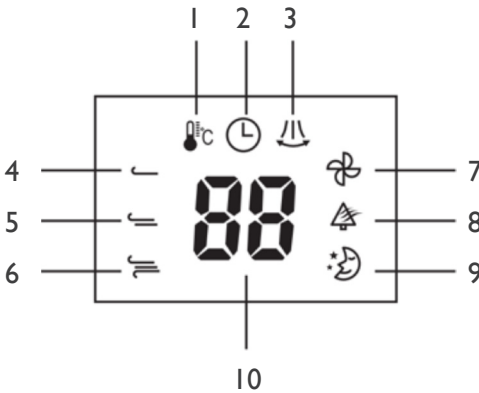 


1. Temperature indicator
2. Timer indicator
3. Oscillation indicator
4. Speed 1
5. Speed 2
6. Speed 3
7. Normal mode
8. Natural mode
9. Night mode
10. Ambient temperature and time display

## Control Panel

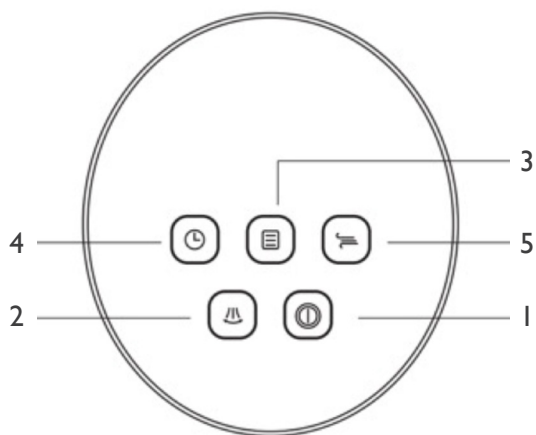 

1. On/Off button
2. Oscillation button
3. Mode button
4. Timer button
5. Speed button


## Remote Control

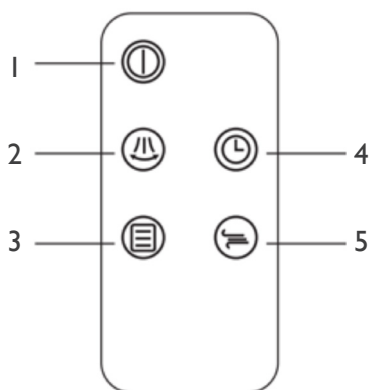 

1. On/Off button
2. Oscillation button
3. Mode button
4. Timer button
5. Speed button

## FUNCTIONS


### **Power button** (On/Off)





Press power button  to turn on the fan, and the fan will operate at speed 2. Press again to turn off the fan and enter into standby mode.

### **Wind speed button**

Repeatedly press the wind speed button  for desired wind speed. For every press the speed will be increased from 1-3.





### **Mode button**

Press mode button  to set mode from Normal wind mode, Night mode and Breeze mode.

-  **Breeze** - The fan alternates periods of more and less power, simulating the feeling of a soft breeze. The amplitude of these shifts depends on the speed selected.
-  **Night** - The Night mode light indicator  will be ON when this mode is selected. When the fan is at speed 3, it runs at this speed for 30 minutes, then at speed 2 for 30 more minutes and finally at speed 1 until it is turned off or the timer runs out.  
When the fan is at speed 2, it runs at this speed for 30 minutes and then it keeps running at low speed until it is turned off or timer runs out.  
When the fan is at speed 1, it simply keeps running at speed 1 until it is turned off or timer runs out.
-  **Normal** - The fan operates constantly at the selected speed

### **Timer button**

The appliance's operating time can be controlled (1-12h).

To programme press Timer button , then press the Timer button  again to set the duration of time. The timer is up to 12 hours. To cancel the set timer, press Timer button , then press Timer button  again to set as 00 Hrs.

 
### **Oscillation**

Press OSC  button to set oscillation from left to right.

# ASSEMBLY INSTRUCTIONS

**Take the unit out of the box, removing any packaging.**


1. Fix the two bases together. (Fig.1)
2. Put the base at the bottom of tower fan. Please ensure alignment with base and power cord hole position. (Fig.2)
3. Fix the base and tower fan with the 4 screws. (Fig.3)

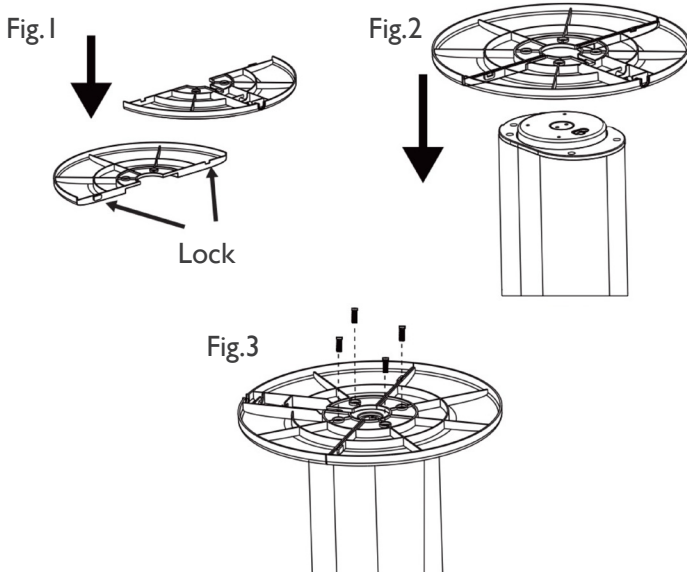

## Remote

Before use, pull out the plastic card from the bottom of the remote. Please make sure the remote is directed towards the fan when operating.

 **NOTE:** this remote does NOT come with a battery as standard - 1 x CR2032 button battery is required for operation

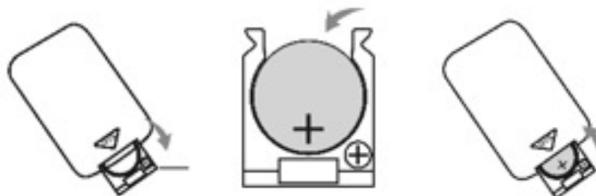

## **CLEANING AND MAINTENANCE**

We recommend cleaning the unit once a month.

1. Always remove the plug from the wall socket and allow the fan to a complete stop before cleaning it.
2. Clean the external surfaces of the fan using a damp cloth, and then wipe it using a dry cloth.
3. When the unit is not in use, make sure that it is unplugged from the wall socket. To store the fan, you may pack it in the original carton and store it in a cool and dry place.

### **WARNING:**

**Do not allow the interior to get wet or immerse the fan in water as this could create a hazard.**

**Do not use any cleaning chemicals such as detergents and abrasives.**

**In case of malfunction, do not try to repair the fan yourself, it may result in a fire hazard or electric shock.**

## TROUBLE SHOOTING GUIDE

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services on 01473 271272:

Problem	Possible Cause	Possible Solution
The appliance does not work.	The appliance is not properly plugged into the wall socket.	Plug the appliance firmly into the wall socket.
	The appliance is not switched on.	Make sure the appliance is switched on.
	There is no electricity running through the mains wall socket.	Check the fuse or breaker.

## MAINS PLUG FUSE REPLACEMENT

### Fuse Replacement (Class II)

Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.



## DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





## Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department  
38 Bluestem Road, Ransomes Europark  
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the PO Number on the front of the manual, and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the warranty period you will be charged for the repair and any carriage costs.



## **Thank you for choosing Igenix**

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **[www.igenix.co.uk](http://www.igenix.co.uk)**





# igenix

38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR  
EU: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR  
Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.  
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.  
All diagrams and images shown in this manual are for illustration purposes only.