


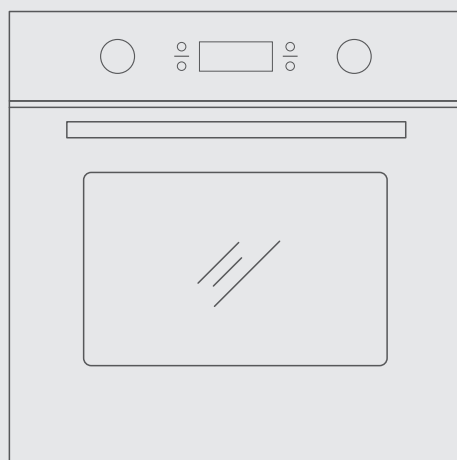

BUILT-IN OVEN

Instruction Manual

MBO65P90E3-BK

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The illustration is for reference only, please refer to the actual product appearance.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	IMPORTANT SAFETY INSTRUCTIONS	01-03
PRODUCT INSTALLATION	Cupboard Diagram (Standing Cupboard)	04
	Cupboard Diagram (Ground Cupboard)	05
	Installation Important Instructions	06
	Installation steps	07
PRODUCT INTRODUCTION	Oven	08
	Accessories	08
	Accessories use	09
	Control Panel	10
	Before using for the first time	11
	Setting the clock	11
	Function setting	12
	Lamp function	12
	Reminder function	12
	Inquiring function	12
	Start/Pause/Cancel function	13
	Energy-Saving function	13
	Child lock function	13
	Reservation function	13
	Pyrolytic function	14
	Air fry	15
CLEANING AND MAINTENANCE	Cleaning	16
	Lamp Replacement	16
TROUBLESHOOTING	TROUBLESHOOTING	17
SPECIFICATIONS	SPECIFICATIONS	18
ENERGY CONSUMPTION	ENERGY CONSUMPTION	18
PRODUCT RECYCLING	PRODUCT RECYCLING	19

IMPORTANT SAFETY INSTRUCTIONS

THESE WARNINGS ARE PROVIDED IN THE INTEREST OF SAFETY. PLEASE READ THEM CAREFULLY BEFORE INSTALLING OR USING THE APPLIANCE.

To maintain the EFFICIENCY and SAFETY of this appliance, we recommend:

- Call only the Service Centers authorized by store where you buy the cooker
- Always use original Spare Parts

1. When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. Please run the new empty product with the conventional cooking function, 250°C, 90 minutes to clean oil impurities inside the cavity.
2. During the first use, it is completely normal that there will be slight smoke and door. If it does occur, you should wait for the smell to be cleared before putting food into the oven.
3. Please use the product under an open environment.
4. The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
5. If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
6. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

7. During use, the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven.
8. Do not allow children to go near the oven when it is operating, especially when the grill is on.
9. Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
10. The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
11. Children should be supervised to ensure that they do not play with the appliance.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
13. Accessible parts may become hot during use. Young children should be kept away.
14. An all-pole disconnection means must be incorporated in the fixed wiring in accordance with the wiring rules.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
17. Only use the temperature probe recommended for this oven.
18. A steam cleaner is not to be used.
19. The appliance is not intended to be operated by means of an external timer or a separate remote control system.
20. The instructions for ovens that have shelves shall include details indicating the correct installations of the shelves.

21. Do not use the oven unless you are wearing something on your feet. Do not touch the oven with wet or damp hands or feet.
22. For oven: Oven door should not be opened often during the cooking period.
23. The appliance must be installed by an authorized technician and put into use. The producer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.
24. When the door or drawer of oven is open do not leave anything on it, or you may unbalance your appliance or break the door.
25. Some parts of appliance may keep its heat for a long time; it is required to wait for it to cool down before touching onto the points that are exposed to the heat directly.
26. If you will not use the appliance for a long time, it is advised to plug it off.
27. The instructions for pyrolytic self-cleaning ovens shall state that excess spillage must be removed before cleaning and shall specify which utensils can be left in the oven during cleaning.
If, for cleaning, the manufacturer instructs the user to set the controls to a position higher than for normal cooking purposes, the instructions shall state that under such conditions the surfaces may get hotter than usual and children should be kept away.
28. Keep the appliance and its cord out of reach of children less than 8 years.


DECLARATION OF COMPLIANCE

When you have unpacked the oven, make sure that it has not been damaged in any way. If you have any doubts at all, do not use it: contact a professionally qualified person. Keep packing materials such as plastic bags, polystyrene, or nails out of the reach of children because these are dangerous to children.

PRODUCT INSTALLATION

If there is any discrepancy between the illustration and the actual product, please refer to the actual product.






Cupboard Diagram (Standing Cupboard)

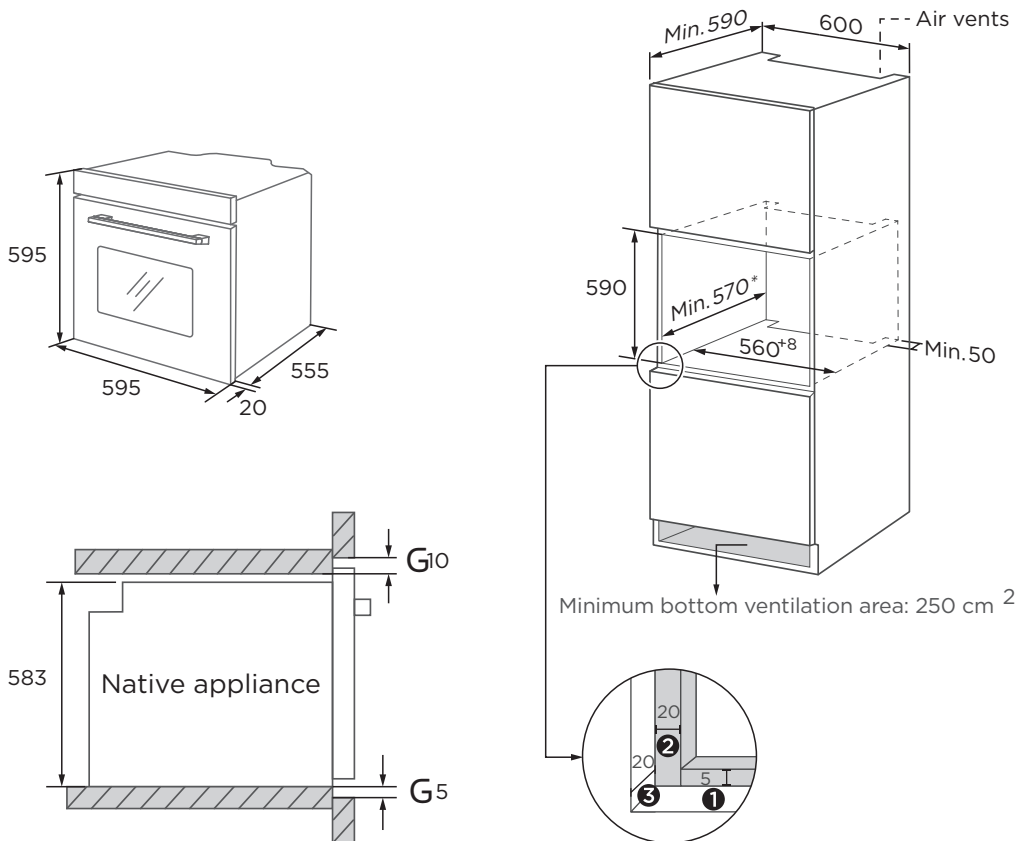

- ❶ Reserve 5 mm for the door panel at the top and bottom respectively.
- ❷ Reserve 20 mm for the door panel on the left and right respectively.
- ❸ Reserve 20 mm for the door panel in thickness.

1. The thickness of the cupboard board is 20 mm.
2. If the power socket is installed on the back of the appliance, the depth of the cupboard opening shall be increased from a minimum of 590 mm to 620 mm.
3. The dimensions in the figures are in mm.

Cupboard Diagram (Ground Cupboard)

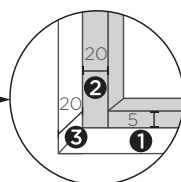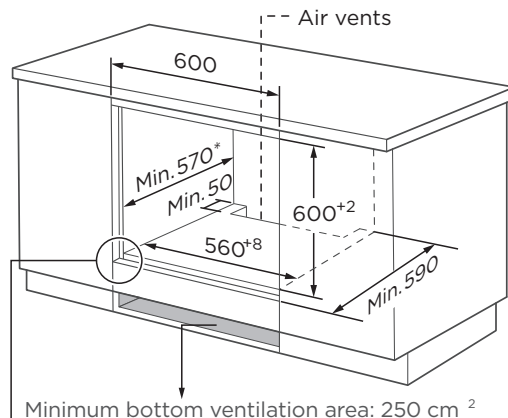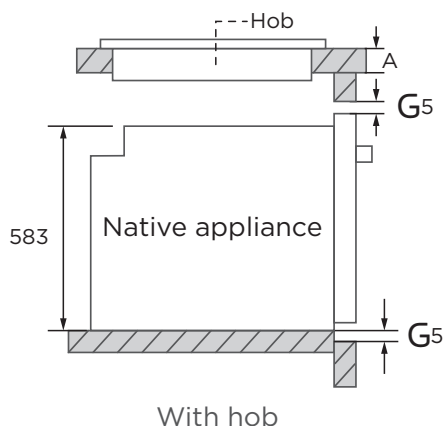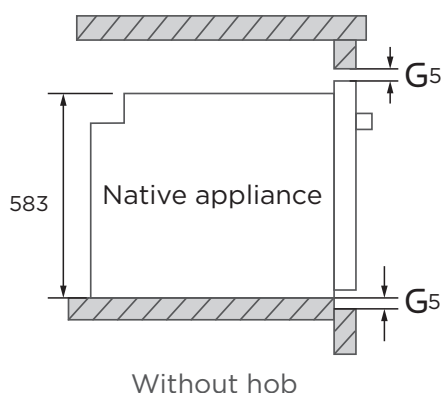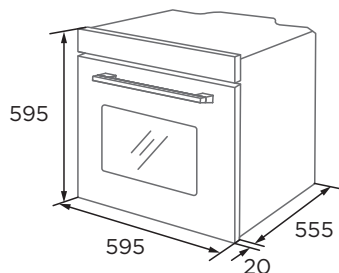

- ❶ Reserve 5 mm for the door panel at the top and bottom respectively.
- ❷ Reserve 20 mm for the door panel on the left and right respectively.
- ❸ Reserve 20 mm for the door panel in thickness.

If the appliance is installed under the hob, the minimum thickness of worktop A is shown below:

Hob type	worktop A
Induction hob	37 mm
Full-surface induction hob	47 mm
Gas hob	30 mm
Electric hob	27 mm

- The thickness of the cupboard board is 20 mm.
- If the power socket is installed on the back of the appliance, the depth of the cupboard opening shall be increased from a minimum of 590 mm to 620 mm.
- The dimensions in the figures are in mm.

Installation Important Instructions

Content that means [mandatory]

1. The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer shall be liable for any damage resulting from incorrect installation.
2. The entire installation process requires two professional installers. Wear dry protective gloves during installation to avoid scratch or electric shock.
3. Fitted units must be heat-resistant up to 90°C, and adjacent unit fronts up to 70°C.
4. Please use a 16A socket.

Content that means [prohibit]


1. Do not install the appliance behind a decorative door or the door of a kitchen unit, as this may cause the appliance to overheat.
2. Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
3. Do not block the vent of the appliance and the gap between the cupboard and the appliance.
4. Use extreme caution when moving or installing the appliance. It is very heavy, do not lift the appliance by the door handle.
5. If the power cord or power plug is damaged, stop using the appliance immediately, to avoid fire, electric shock or other injuries.

Content that means [note]

1. Be very careful when moving or installing the appliance to avoid damage to the appliance or damage to the cupboards.
2. Before starting up the appliance, remove all packaging materials and accessories from the cavity.
3. The power socket shall be accessible to users (such as next to the cupboard) for easy power-off.
4. After installation is complete, make sure that the power plug is firmly inserted into the socket.
5. Please refer to the "Cupboard Diagram" for the requirements of net depth of the cupboard. The clearance between the cupboard bottom board and the rear board (or wall) shall not be less than 50 mm.

Installation steps

1. Please customize the cupboard according to the "Cupboard Diagram".
2. Before installation, please check for normal power sockets and appropriate grounding, and check whether the cupboard dimension meets the installation requirements.
3. Place the appliance in designated locations in the kitchen, install it in a vertical cupboard, and connect the power supply.
4. To locate the mounting fixing holes, open the appliance door and look at the side frame of the appliance (position shown above).
5. Fix the appliance on the Cupboard with two screws.

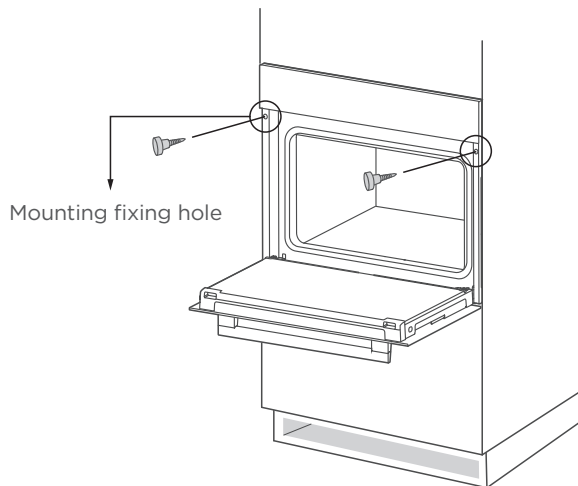


PRODUCT INTRODUCTION

Oven

When removing food, please wear heat insulating gloves to prevent burns!

At the moment of opening the door of the furnace, pay attention to the steam. Please open the door at a small Angle to avoid the steam on your face.

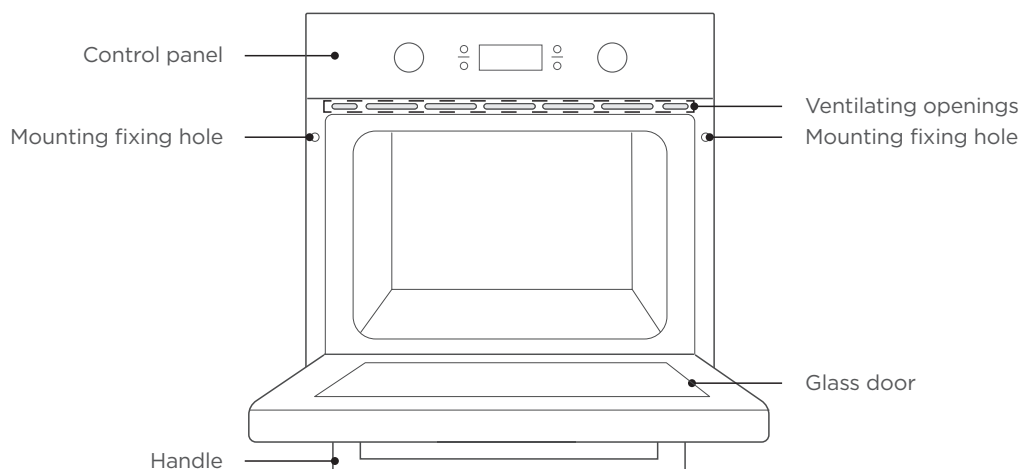


Accessories




Grill rack

 Grill food or place heat-resistant cooking containers




Grill tray

 Cook large portions of food or catch food scraps



Small grill rack

 Cook smaller portions of food










Air fry basket


Air fry function-specific

Accessories use

  For the oven to work properly, the grill rack and Grill tray should only be placed between the first and fifth levels. When used together, place the Grill tray under the grill rack.

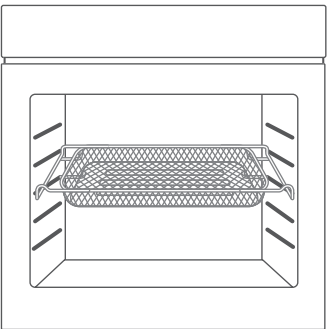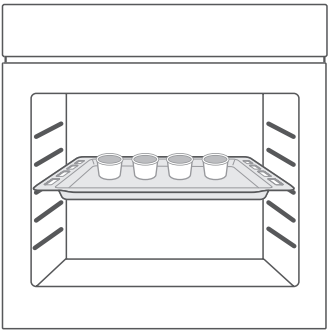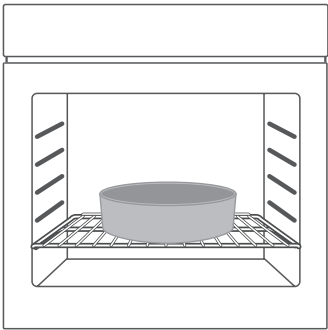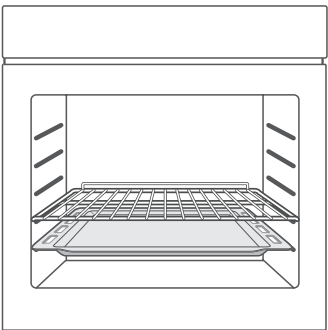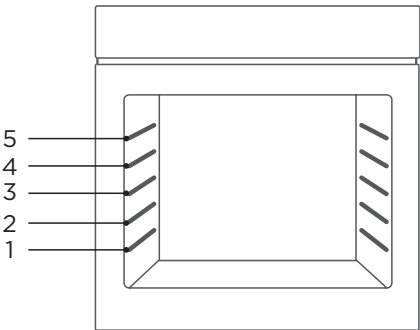

Control Panel

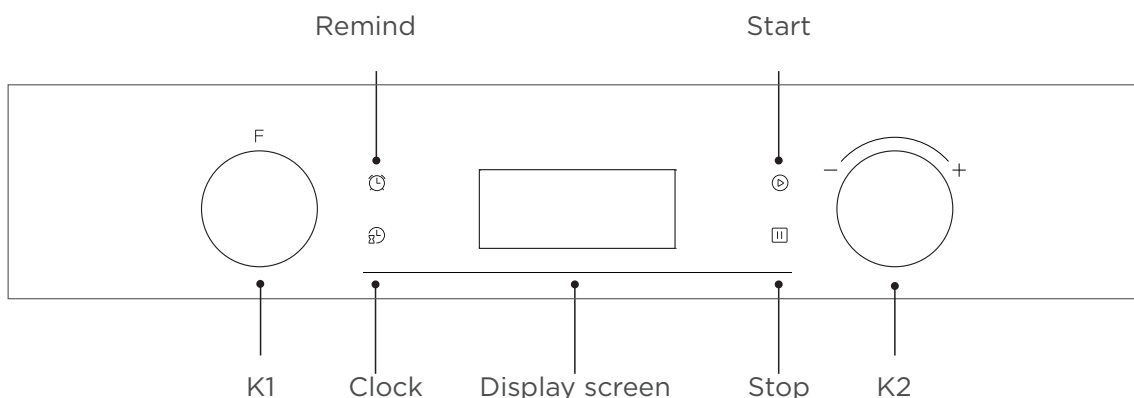

Function	Function introduction
 Lamp	The cooking process can be observed under illuminated conditions. Except Pyrolytic function and ECO function.
 Defrost	The circulation of air at room temperature enables quicker thawing of frozen food (without the use of any heat).
 Double grill with fan	The radiant heating element and top heating element are working with fan.
 Double grill	The radiant heating element and top heating element are working.
 Single grill	The inner grill element switches on and off to maintain temperature. Can be used to grill a small number of food.
 Conventional+fan Air fry	The combination of fan and the top and bottom heating elements provides more even heat penetration and coloration, primarily for cooking meat. Provide fast and even heat distribution. The hot air also takes away the moisture on the surface of the food, generating crunchy and crispy frying. (only for some models)
 Conventional	The top and bottom heating elements work together to provide convectional cooking.
 Bottom heating	Heating is provided by heating pipes at the bottom of the oven. Mainly used for keeping warm and the coloring of the food.
 Convection	In convection mode, the fan turns on automatically to provide even heat for single or multi-layer baking. This is particularly suitable for baking foods that require even coloring.
Pyrolytic	When the function set to prolytic mode, LED screen " PyR ". The default temperature is 450°C . The timer can be set 1:30 or 2:00 hours.
 ECO	For energy-saving cooking. Cooking the selected ingredients in a gentle manner, and the heat comes from the top and the bottom.

Before using for the first time

1. The oven must not be operated until it has been correctly installed.
2. To avoid fire, remove all transport protection materials and ensure that the oven is free of residual packaging items and accessories (e.g. foam, cardboard, grill tray, grill rack, etc.).
3. Clean the oven cavity and accessories with soapy water and a soft cloth.
4. Open kitchen windows and cooker hoods to maintain high ventilation.
5. Do not let children or pets into the kitchen and close the doors of adjacent rooms.
6. After connecting the power, activate the oven mode, time, and temperature in the table below to remove odors in the cavity.
7. After the first use, please open the oven door at a small angle and wait for the cooling to complete.

Function	Temperature	Time
 Conventional	250°C	0.5 Hour

Setting the clock

When the oven is first connected to the electrical supply and powered on, the clock will need to be set.

1. Press the " " key, the hour digit flashes.
2. Turn knob "K2" to adjust the hour digit.
3. Press the " " key, the minute digit flashes.
4. Turn knob "K2" to adjust the minute digit.
5. Press the " " key to complete the clock setting.

Notes:

1. The clock is a 24 hour clock.
2. Before using the oven, please complete the clock setting.
3. During the clock setting process, you can press the " " key to cancel the current clock setting.
4. If you need to reset the clock, please follow the "Setting the clock" steps in standby mode.

Function setting

1. In standby or reminder state, turn knob "K1" to select the function.
2. Turn knob "K2" to adjust the temperature.
3. Press the "▶" key to start cooking.
4. If you skip step 2, press the "▶" key to start cooking. The default time is 9 hours, and the display shows the default temperature.

Notes

1. During cooking, the time can be adjusted by turning the knob "K1". After adjusting the time, please press the "▶" key within 3 seconds to confirm.
2. During cooking, the temperature can be adjusted by turning the knob "K2". After adjusting the temperature, please press the "▶" key within 3 seconds to confirm.
3. As a separate function, Oven light is used by consumers to actively choose to observe food or clean the cavity. After the user opens it, they need to actively close it before exiting and returning to standby mode.
4. After cooking in the oven, the cooling fan will continue to dissipate heat. The oven will only close when the core temperature is below 75°C.

Lamp function

Turning on the lamp can better observe the cooking situation of food. If you need to turn off or turn on the lamp, you can follow these steps:

1. Turn knob "k1" to select "☺".
2. Press the "▶" key to confirm.

Reminder function

This function will help to remind you to start cooking in a certain time. Only when oven in standby mode and clock setting, the reminder can be set.

1. Press the "⌚" key, and the hour digit flashes.
2. Turn knob "k2" to adjust the hour digit.
3. Press the "⌚" key, and the minute digit flashes.
4. Turn knob "K2" to adjust the minute digit.
5. Press the "▶" key to complete the setting, and the icon "⌚" is always on, and the countdown starts. After the countdown is completed, the buzzer sounds and the icon "⌚" goes out.

Notes

1. You can cancel the reminder by pressing the "⏏" key during setup.
2. After setting the reminder, you can press the "⏏" key twice to cancel the reminder.

Inquiring function

1. During cooking process, if the clock has been set, press the "⌚" key to check the current time; If the reminder function is set, press the "⌚" key to check the reminder time.
2. In reminder state, if the clock is set, press the "⌚" key to check the current time.

Start/Pause/Cancel function

1. If the cooking time has been set, press the "▶" key to start cooking. If the cooking is paused, press the "▶" key to continue cooking.
2. During cooking process, press the "⏏" key once to pause the cooking. Press the "⏏" key twice to cancel the cooking.

Energy-Saving function

1. In standby or reminder state, press the "▶" key for 3 seconds to turn off the LED display and enter the energy-saving mode.
2. In the energy-saving mode, press any key or turn the knob to exit the energy-saving mode.

Child lock function

1. Enter the child lock: Press the "▶" and "⏏" keys for 3 seconds at the same time, the buzzer will beep, and the icon "🔒" will light up, indicating that the child lock is entered.
2. Release the child lock: Press the "▶" and "⏏" keys for 3 seconds at the same time, and the buzzer will beep, indicating that the child lock is released.

Reservation function

1. To use the reservation function, you must first set the clock. See "Setting the Clock" for the operation method.
2. Press the "⌚" key to enter the reservation settings.
3. Turn knob "K2" to set the reserved hour time.
4. Press the "⌚" key again.
5. Turn knob "K2" to set the minute time of the reservation.
6. Turn knob "K1" to select the function, , and press "▶" to confirm.
7. Turn knob "K1" to adjust cooking and turn knob "K2" to adjust temperature.
8. Press the "▶" key to start cooking, and the LED shows "⌚". The appointment time can be checked by pressing the "⌚" key, and return to the clock display state after 3 seconds.
9. When it's time to make an appointment for cooking, the buzzer will beep and start automatic cooking, and the icon "⌚" will disappear.

Notes

1. Reminder function is invalid during reservation status.
2. Lamp, defrost, probe can't be reserved.
3. If you skip step 7, you will cook according to the default temperature and time.
4. During the status of reservation, press "⏏" key once, time and temperature of reservation menu will be shown with menu icon lighting constantly. Press the "⏏" key again to return to the clock status, or press the "▶" key to return to the reservation status.

Pyrolytic function

This function allows you to clean thoroughly the oven cavity.

1. Turn knob "K1" to select the pyrolytic function. LED will display " PyR ".
2. Press the "  " key to confirm, and the default working time is 2 hours.
3. Turn knob "K1" to adjust the working time. The time can be set 1:30 or 2:00 hours.

Notes


1. When the oven door is not closed, pressing start button will be invalid, LED display " door ", " PYR ".
2. When the oven's center temperature is higher than 320°C, pressing start button will be invalid. The LED will display " COOL " and " PYR ". When the oven's center temperature is lower than 200°C, press cancel button once, it will pause; press again, it will return to standby state. If higher than 200°C, press cancel button once, it will return to standby state directly.
3. Open the door when the oven is working, the LED will display " door " and the buzzer will sound continuously until the door was closed or press cancel button.
4. Before activating the pyrolytic cleaning function, remove any excessive spillage and make sure that oven is empty. Do not leave anything inside it (e.g. pans, baking tray, dripping pan, slider bracket etc.) as this could heavily damage them.
5. When finished pyrolytic cleaning, don't interrupt the power in an hour.

Air Fry

Air Fry is a special cooking mode that is designed to provide fast and even heat distribution. The hot air also takes away the moisture on the surface of the food, generating crunchy and crispy frying. Follow the recipe or user manual for setting temperature and time.

1. Turn knob K1 to select the “”.
2. Turn knob K2 to adjust the temperature.
3. Mode setting.
4. When cooking is finished, turn all knobs to the closed position.

Menu name	Weight	Mode	Time	Temperature	Preheat
Potato wedges	500g		20min	230°C	Yes (250°C)
French Fries	500g		20min	250°C	Yes (250°C)
Air fry Salmon	400g		13min	250°C	Yes (250°C)
Air fry Bacon	200g		7min	250°C	Yes (250°C)
Air fry Fried fish fillet	400g		10min	250°C	Yes (250°C)

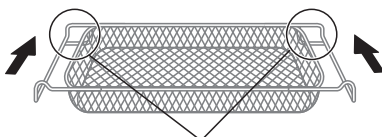

This end faces inward.

Notes

1. Please put the food in the oven after preheating.
2. Please use the Air fry basket and put it to the third floor of the oven and push it to the bottom.

CLEANING AND MAINTENANCE

Cleaning

Disconnect the power supply before cleaning and maintenance.
In order to ensure the life of the oven, it should be thoroughly cleaned frequently.
Cleaning steps are as follows:


1. After cooking, wait for the oven to cool completely.
2. Remove oven accessories, rinse with warm water and dry.
3. Clean up food debris from the oven chamber.
4. Wipe the oven with a soft cloth stained with detergent, then dry with a dry soft cloth.

Notes

1. Do not use sharp cleaning tools, hard brush and corrosive cleaning products, so as not to damage the oven and its accessories.
2. Do not use rough scrubbing agent or sharp metal spatula to clean the door glass.

Lamp Replacement

1. Switch off and disconnect the power from the oven. Ensure that the internal parts are cool before touching internal parts.
2. Remove the lamp cover by turning it counter-clockwise (note, it may be stiff), replace the bulb with a new one of the same type.
3. Insert the new bulb, which should be resistant to 300°C. For replacement bulbs contact your local service centre.
4. If in any doubt, consult a qualified electrician for help.
5. The product contains a light source of energy efficiency class: G.

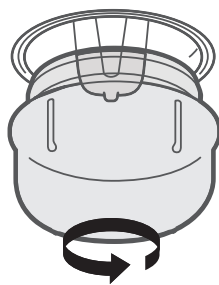

Warning

To avoid electric shocks-please ensure that the electricity supply to the appliance is switched off and the appliance is fully cold. before removing the lamp lens.

TROUBLESHOOTING

If the problem cannot be solved or other problems occur, please contact the after-sales service.

Problem	Possible reason	Solution
Unable to start	• Power is not connected	• connect power supply
	• The main power switch is not turned on	• Turn on the power switch
	• Oven door not closed	• Close the oven door
lamp does not come on	• It's broken	• Contact after-sales service
Has a pungent odor or smoke	• first use	• No processing required
Food is not cooked	• Temperature is too low	• Use a higher temperature
	• Food portion is too large	• Cook food in smaller pieces or extend the cooking time.
Burnt or uneven food	• The temperature is set too high or the heating time is too long	• Adjust the cooking temperature or time
	• The food is too close to the heating tube	• Adjust the placement layers of accessories
The fan did not stop working after stopping the heating	• Fan delays blowing for heat dissipation	• No processing required

SPECIFICATIONS

Product Information and Product Information Sheet according to EU and UK Ecodesign and Energy Labelling Regulations

Supplier's name	Midea
Model identification	MBO65P90E3-BK
Energy Efficiency Index	81.0
Energy efficiency class	A+
Energy consumption with a standard load, conventional mode	0.99kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.68kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	70L
Type of oven	Built-in Oven
RATED VOLTAGE	220-240V~
RATED FREQUENCY	50Hz-60Hz
ELECTRIC POWER	3.2 kW

ENERGY CONSUMPTION

Product information for power consumption and maximum time to reach applicable low power mode.

Off mode	0.5 W
Standby mode	0.8 W
The maximum time needed for the oven to automatically reach the applicable low power mode or condition	20 minutes

PRODUCT RECYCLING

This symbol on the product or instruction manual indicates that your device should be disposed of separately from your household waste at the end of its useful life.

There is a separate recycling system locally for recycling. For more information, please contact the local authority or retailer where you purchased the product.



When you have unpacked the oven, make sure that it has not been damaged in any way. If you have any doubts at all, do not use it: contact a professionally qualified person. Keep packing materials such as plastic bags, polystyrene, or nails out of the reach of children because these are dangerous to children.



make yourself at home



www.midea.com

© Midea 2026 all rights reserved