

THANK YOU
for purchasing the Ninja Crispi Microwave



REGISTER YOUR PURCHASE

 sharkninja.co.uk/product-registration

 Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V- 50 - 60Hz

Watts: Microwave Input: 1750w
Non-microwave: 2060W
Microwave Frequency 2450MHz

The Standby Power consumption is 0.5 W
The appliance will reach automatic standby mode in 10 minutes.

TIP: You can find the model and serial numbers on the QR code label on the back of the unit by the power cord.



This marking indicates this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

SharkNinja Europe Ltd,
1st/2nd Floor Building 3150,
Thorpe Park, Century Way,
Leeds, England, LS15 8ZB
0800 862 0453

sharkninja.co.uk

SharkNinja Germany GmbH,
Rotfeder-Ring 9,
60327 Frankfurt am Main,
Germany

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark in the United Kingdom of SharkNinja Operating LLC.

© 2026 SharkNinja Operating LLC

MW101UK_Series_IB_MP_Mv22



@sharkninjauk

NINJA

NINJA CRISPI MICROWAVE

MW101 Series | Owner's Guide



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY BEFORE FIRST USE AND KEEP FOR FUTURE REFERENCE



Read and review instructions to understand operation and use of product.



Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.



Avoid contact with hot surface. Always use hand protection to avoid burns.



For indoor and household use only

⚠ WARNING

Failure to follow these instructions could result in electric shock, fire or burn hazard which could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

⚠ WARNING

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

- 1 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 2 Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. Close supervision is necessary when used near children.
- 3 Children should not play with the appliance.
- 4 **DO NOT** place or store anything on top of product when in use.
- 5 To prevent fire, **DO NOT** place appliance on or near a gas or electric hob, or in a heated oven.
- 6 **NEVER** use electrical socket below counter.
- 7 **NEVER** connect this appliance to an external timer switch or separate remote-control system.
- 8 **DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children less than 8 years grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- 9 To protect against electrical shock **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid. Air Fry only in the Glass Dish provided.
- 10 Regularly inspect the appliance and power cord. **DO NOT** use the appliance if there is damage to the power cord or plug. If the appliance malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
- 11 ALWAYS ensure the appliance is properly assembled before use.
- 12 **DO NOT** cover the air intake vent or air outlet while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
- 13 Before placing removable Glass dish into the main unit, ensure Glass dish and unit are clean and dry by wiping with a soft cloth.
- 14 Do not touch the exhaust vent during or immediately after use. Hot air is released and can cause burns. Keep hands, face, and other body parts away from the vent. Ensure the appliance is placed in a well-ventilated area, away from walls, curtains, and other heat-sensitive materials.

IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

Failure to follow these instructions could result in electric shock, fire or burn hazard which could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

- 15 This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicles or boats. **DO NOT** use outdoors. Misuse may cause injury.
- 16 Intended for worktop use only. Ensure the surface is level, clean and dry. **DO NOT** move the appliance when in use.
- 17 **DO NOT** place the appliance near the edge of a worktop during operation.
- 18 **DO NOT** use accessory attachments not recommended or sold by SharkNinja. Do not place accessories in a microwave, toaster oven, convection oven, or conventional oven or on a ceramic cooktop, electric coil, gas burner range or outdoor grill. The use of accessory attachments not recommended by SharkNinja may cause fire, electric shock or injuries.
- 19 **ALWAYS** ensure door is properly closed before operating.
- 20 **DO NOT** use this appliance for deep-frying.
- 21 Prevent food contact with heating elements. **DO NOT** overfill when cooking. Overfilling may cause personal injury or property damage or affect the safe use of the appliance.
- 22 Socket voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.
- 23 Should the unit emit black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.
- 24 **DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles.
- 25 Extreme caution must be used when the appliance contains hot food. Improper use may result in personal injury.
- 26 Spilled food can cause serious burns. Keep appliance and cord away from children. **DO NOT** let cord hang over edges of tables or counters or touch hot surfaces.
- 27 The Glass Dish and Crisper Tray become extremely hot during the cooking process. Use oven mitts when removing the Glass Dish and Crisper Tray from the appliance. **ALWAYS** place Glass Dish and Crisper Tray on a heat-resistant surface after removing. **DO NOT** touch accessories during or immediately after cooking.
- 28 Cleaning and user maintenance should not be carried out by children.
- 29 To disconnect, turn off any control to OFF, then unplug from socket when not in use and before cleaning. Allow to cool before cleaning, disassembly, putting in or taking off parts and storage.
- 30 **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating the risk of electric shock.
- 31 Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
- 32 **DO NOT** place any of the following materials in the unit: paper, cardboard, plastic, roasting bags and the like other than cling film when microwaving only. They may cause fire.
- 33 Extreme caution should be exercised when using containers constructed of any materials other than metal or glass.
- 34 **DO NOT** use a steam cleaner to clean the appliance.
- 35 The oven should not be operated if the door seals are damaged. Should the seals become damaged, they must be repaired by a trained repair person.
- 36 Only a trained person should remove covers that provide protection against exposure to microwave energy.
- 37 Liquids or food in sealed containers should not be heated in the microwave as they may explode.
- 38 Only microwave-safe utensils should be used inside the microwave.
- 39 Risk of fire, ignition, and heating hazards when drying clothes, sponges, and warming pads inside the microwave.
- 40 Switch off and unplug the appliance if smoke is observed and to keep the door closed to contain any flames.
- 41 Risk of delayed eruptive boiling in beverages. Act with caution when handling hot liquids.
- 42 Feeding bottles and baby food jars should be shaken or stirred after heating and checked for temperature before consumption to avoid burns.
- 43 Do not Microwave whole eggs in their shell as they may explode, even after microwave heating has stopped.
- 44 Failing to keep the oven clean may cause deterioration of surfaces, potentially leading to hazardous conditions.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE

- 45 This appliance must not be used at or above 900mm from the floor.
- 46 Allow minimum 30cm of free space above the top surface of the oven, and minimum 15cm around the oven.
- 47 Only use utensils that are suitable for use in microwave ovens.
- 48 Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
- 49 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- 50 The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- 51 **DO NOT** operate the oven empty. Running the oven without food or liquid inside may damage the unit or create a safety hazard.

SET UP INSTRUCTIONS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on the sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord that has a grounding wire with a grounding plug. The plug must be plugged into a socket that is properly installed and grounded.

WARNING – Improper use of the grounding can result in risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install a socket near the appliance.

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.


SET UP INSTRUCTIONS - CONT

MICROWAVE SUPERHEATED WATER

- Microwave water and other liquids do not always bubble when they reach boiling point. They can actually get superheated and not produce bubbles. Superheated water and liquids will bubble up out of the cup when it's moved or when a spoon or tea bag is placed inside, which can cause injury. To prevent this from happening, **DO NOT** heat any liquid for more than two minutes per cup. After heating, let the water and cup cool for 30 seconds to a minute before moving or adding anything.



MICROWAVE PLACEMENT

- Place the microwave, at minimum, 30cm (11.81 inches) from any top surface and 15cm (5.9 inches) from any side surface – see image below. This would mean the height from the worktop to bottom of cabinets are 61cm (24 inches) apart. **DO NOT** Block Air Vents All air vents should be kept clear during cooking.
- Microwave should not be wall mounted or installed inside a cabinet.

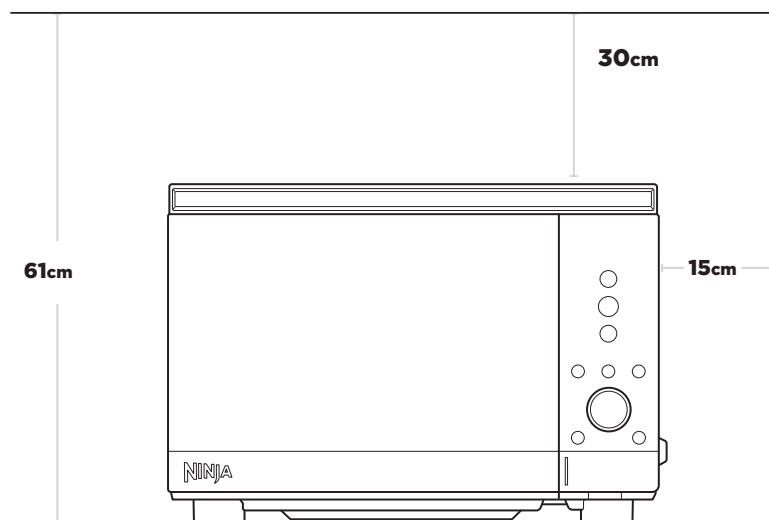

PARTS & ACCESSORIES

- | | |
|------------------------------------|----------------------------|
| A Microwave Flatbed | H Crisper Plate |
| B Control Panel | I Child Lock Button |
| C Door Latches | J Door Button |
| D Top Heater/Convection Fan | K Cool Touch Handle |
| E Window | L Top Rails |
| F Light | M Exhaust Vent |
| G Glass Basket | |

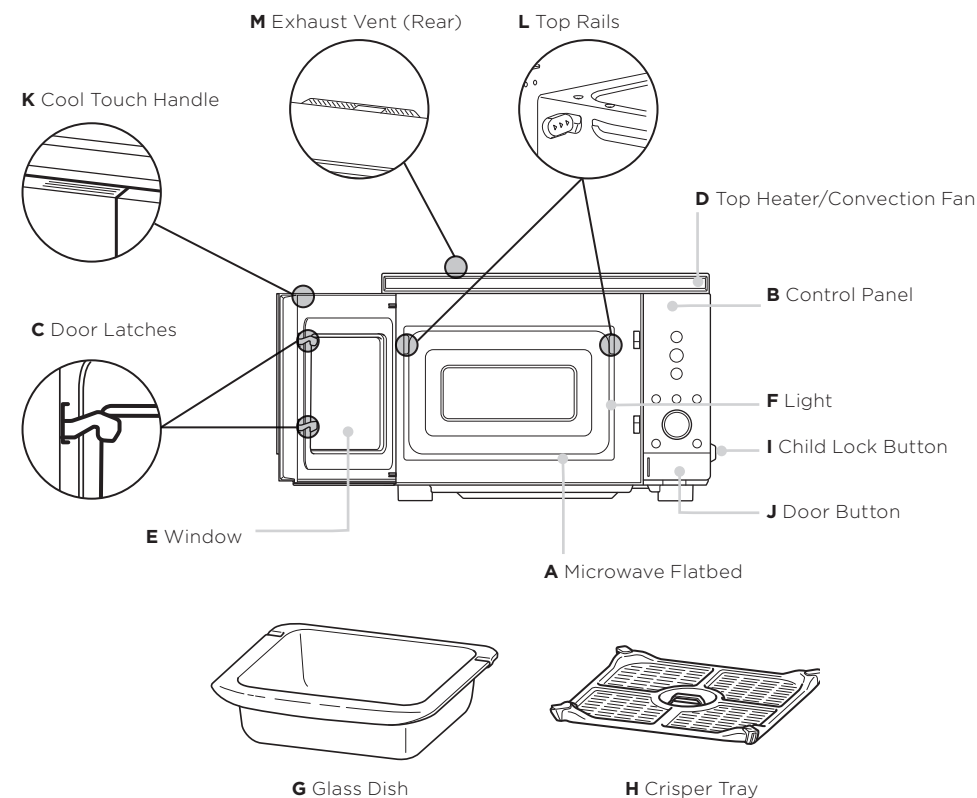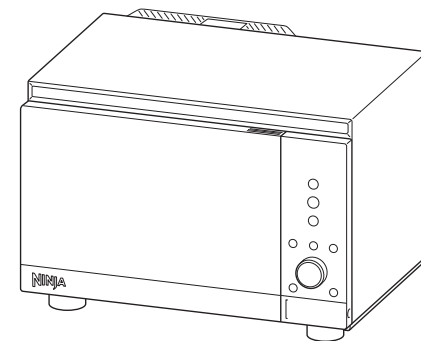

INSERTING & REMOVING THE GLASS BASKET

⚠ ALWAYS use two hands when handling the basket to avoid dropping or tipping the basket.

ALWAYS use oven mitts when handling a hot Glass Basket. The Glass Basket becomes extremely hot during air bake, air roast, air broil, and air fry operation.

INSERTING THE GLASS BASKET


- 1 Hold the basket with both hands and keep it level (misaligned basket may get jammed).



- 2 Align the basket with the Top Rails and inside walls of the microwave.



- 3 Slide it straight in until it reaches the back. Make sure the front handle of the basket is fully inside the microwave.

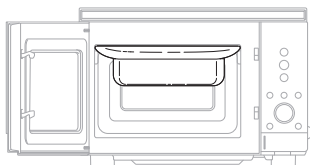


REMOVING THE GLASS BASKET

- 1 With oven mitts, pull the basket to the detent position.



- 2 Lift the basket slightly off the top rails using two hands, and then carefully pull the basket straight out, keeping it level to avoid spills.

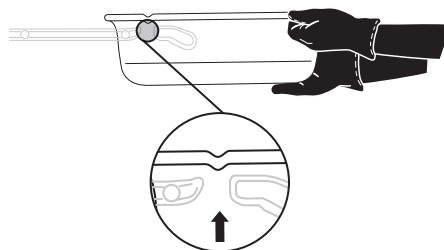

- 3 Carefully set the basket down on a level and heat-safe surface.

GLASS BASKET

Allow glass containers to completely cool before submerging in water. **NEVER** submerge hot glass in cool water as damage may occur.

NOTE: Make sure to insert accessory correctly; front handle should always be facing out toward the door.

MICROWAVE



Use Glass Basket with Crisper Plate installed in the top rails of the microwave. For larger roasts, place on the bottom of microwave. Crisper Plate is microwave safe **ONLY** when seated in Glass Basket.

AIR FRY/MAX CRISP/AIR ROAST/AIR BAKE/AIR GRILL


Use Glass Basket with Crisper Plate installed on the top rails of the microwave. If using other baking accessories, place in the basket in the top rails. Using other accessories may result in poor cooking results.

FUSIONCRISP

Use Glass Basket with Crisper Plate installed in the top rails of the microwave. For larger roasts, place on the bottom of microwave. Crisper Plate is not needed for liquid or sauce-based dishes like casseroles or pasta.

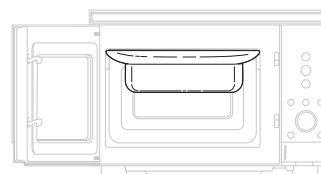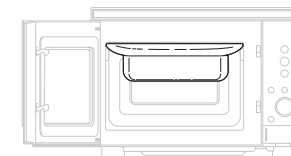

Recommended position for low profile foods

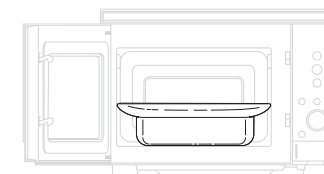


Recommended position for taller profile foods

NOTE: Make sure to insert accessory correctly; front handle should always be facing out toward the door.

CRISPER PLATE


ALWAYS use Crisper Plate nested inside Glass Basket. Best for AIR FRY and FUSIONCRISP functions.

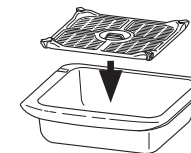

GLASS BASKET SAFETY TIPS



Pull basket out halfway to mix, if needed. Safety catch will hold basket in place when tilted forward.

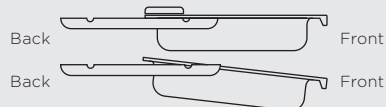

⚠ WARNING



DO NOT place the Glass Basket in backwards.



HOW TO MINIMISE SMOKE



Recommended:
Canola, Refined Coconut, Avocado, Vegetable, and Rapeseed Oils




Not recommended:
Olive Oil, Butter, Margarine, or Cooking Spray

MICROWAVE & OVEN SAFE ACCESSORY LIST

	MICROWAVE	AIR FRY	FUSION CRISP
NINJA ACCESSORIES			
Glass Dish <i>Microwave Safe</i>	✓	✓	✓
Crisper Tray <i>Microwave Safe inside Glass Dish</i>	✓	✓	✓
OTHER ACCESSORIES			
Aluminium Foil	X	✓	X
Baking Pan <i>Oven Safe</i>	X	✓	X
Ceramic Plate	✓	X	X
Disposable plates or containers	✓	X	X
Glass Dishes or Bakeware	✓	✓	✓
Metal Cookware & Utensils	X	✓	X
Cling Film <i>Microwave Safe</i>	✓	X	X
Ninja Glass AirFry Containers <i>FN100 Series, AS100 Series, DD100 Series Products</i>	✓	X	X
Plastic Dishes <i>Microwave Safe</i>	✓	X	X
Paper towels/napkins	✓	X	X
Thermometer	X	✓	X
Parchment Paper	✓	✓	X
Silicone Bakeware	✓	✓	✓

GETTING TO KNOW YOUR NINJA CRISPI MICROWAVE

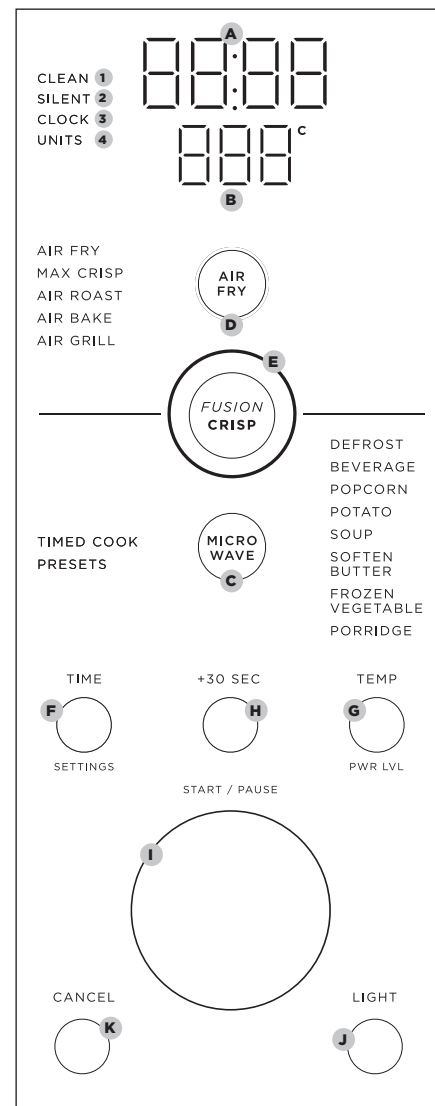

FUNCTION BUTTONS

- A TIME Display:** Displays cook time and clock when microwave is on standby.
- B TEMP/PWR LVL Display:** Displays cook temperature for AIR FRY and AIR GRILL functions.
- C MICROWAVE Button:** Press MICROWAVE button once to change from TIMED COOK to PRESETS and select presets.
- D AIR FRY Button:** Press AIR FRY several times to select AIR FRY, MAX CRISP, AIR ROAST, AIR BAKE, or AIR GRILL functions.
- E FUSIONCRISP Button:** Press FUSIONCRISP to microwave then air fry in stage cooking.
- F TIME/SETTINGS Button:** Press then turn START/PAUSE dial to adjust cooking time. Press and hold to access adjustments for clock, clean function, and silent beeps on the microwave.
- G TEMP/PWR LVL Button:** Press and turn START/PAUSE dial to adjust power on Microwave functions or temperature on Air Fry and Oven functions.
- H +30 SEC Button:** Press to start cooking immediately in 30-second increments with 100% microwave power.
- I START/PAUSE Dial:** Use to adjust time and temp on Convection function and power and time on Microwave function. Press to lock in selection.
- J LIGHT Button:** Press to turn ON/OFF the microwave light.
- K CANCEL Button:** Press to go back to a previous setting or Stop cooking.
- 1 CLEAN:** Press and hold the TIME button and select to start a clean cycle for 10 minutes.
- 2 SILENT:** Press and hold TIME button and select to silent beeps and alerts.
- 3 CLOCK:** Press and hold TIME button and START/PAUSE to adjust clock time.
- 4 UNITS:** Press and hold TIME button and START/PAUSE to adjust unit measurements.

SET UP

SETTING THE CLOCK

- 1 Plug in the Microwave.
- 2 Press and hold the TIME/SETTINGS button to access settings and use the START/PAUSE dial to select CLOCK. Press the START/PAUSE dial to select.
- 3 Turn dial to set hour then minute for clock time. Press START/PAUSE dial to confirm.

CLEAN SETTING

- 1 Press and hold the SETTINGS button to access settings and use the dial to select CLEAN.
- 2 Place 2 cups of room temperature water in a microwave-safe vessel and C it at the bottom of the microwave.
- 3 Press START/PAUSE dial to start clean cycle.
- 4 Once clean cycle has finished, take a soft sponge and wipe all interior walls of the unit.

CHILD LOCK

This unit is equipped with a childproof two-step door opening. Once engaged, the Door will lock automatically once closed.

UNLOCK

- 1 To open, press the Child Lock button on the right-hand side of the Door Button AND the Door Button simultaneously.

LOCK

- 1 After cooking and removing food, close microwave door.
- 2 Child lock is ON when the right-hand side button is not pushed or disabled.

DISABLE CHILD LOCK


- 1 Use a screw driver into the slot and simultaneously push in and turn a quarter turn to the right to LOCK/UNLOCK to disable Child Lock Button.

DOOR OPERATION


TO OPEN THE DOOR

- 1 Press and hold the Child Lock Button, then press the left side of the Door Button and pull the door open using the Cool Touch Handle.

Cool Touch Handle

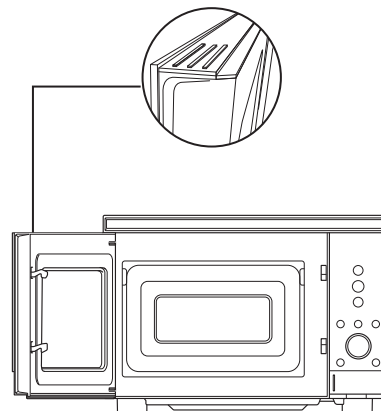


- 2 Swing the door gently past 90 degrees to fully open. A detent will keep the door open when it is swung past 90 degrees.

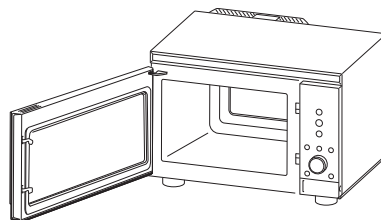

! ALWAYS use the Cool Touch Handle to open the door. **DO NOT** touch the inside metal frame or glass window on the inside of the door after air bake, air roast, air grill, and air fry operation, as they may be hot and cause burns.

TO CLOSE THE DOOR


- 1 Gently push the door closed using either the Cool Touch Handle or the front of the door.

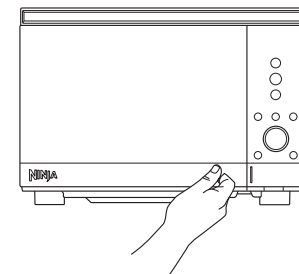

- 2 Make sure it clicks fully into place — **DO NOT** slam the door.

! CAUTION: The metal frame inside the door may be hot after cooking. Always use the Cool Touch Handle to avoid burns.

Cool Touch Handle

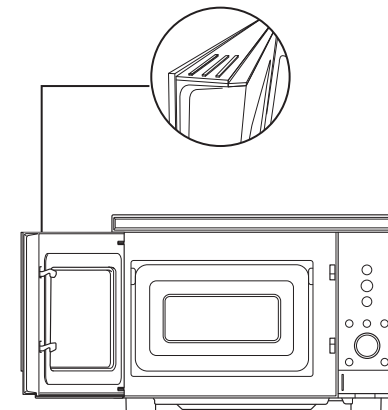

- 3 Confirm the door is fully closed before starting any cooking.

GET TO KNOW YOUR COOKING FUNCTIONS

MICROWAVE

Quickly reheat leftovers, warm beverages, and defrost proteins.

BEST FOR: Reheating, making popcorn & defrosting.

AIR FRY

Crisp your favorite foods to perfection with little to no oil.

BEST FOR: Small proteins & any leftovers.

MAX CRISP

Get an extra-crispy crunch with rapid high heat.

BEST FOR: prepackaged frozen foods.

AIR ROAST

Caramelised outside, tender inside.

BEST FOR: Large proteins and roasted vegetables.

AIR GRILL

Top-down heat for crispy finish.

BEST FOR: pasta bakes, melting cheese and crisping toppings.

AIR BAKE

Evenly bake bread, cookies, and treats.

BEST FOR: Cookies and baked goods.

USING YOUR NINJA CRISPI MICROWAVE

FUNCTIONS

MICROWAVE

Timed: Designed to operate like a traditional microwave and will default to 100% microwave power. Adjust power level and time as needed.

Defrost: Gently defrosts food.

Beverage: Reheat hot drinks such as coffee or tea.

Popcorn: Evenly cooks popcorn. Place popcorn in the centre of the bottom of the microwave.

Potato: Quickly cook a whole potato so the inside is moist and fluffy.

Soup: Cook prepared soups.

Soften Butter: Soften butter to easily cream with mixed baking ingredients.

Frozen Vegetable: Best for steam cooking from frozen vegetables like peas, corn, green beans, and broccoli.

Porridge: Cook the perfect porridge bowl

AIR FRY

Air Fry: Make fast, extra-crispy foods with little to no oil.

Max Crisp: Best for cooking frozen food such as French fries and chicken nuggets, which may need high temperature for extra crunch.

Air Roast: Achieve a crispy outside and perfectly cooked inside for full-sized sheet pan meals, thicker proteins, and roasted veggies.

Air Bake: Evenly bakes cookies, brownies, cakes, and more.

Air Grill: Grill meat and fish and evenly brown tops of casseroles.

FUSION CRISP

Fusion Crisp: Combine microwaving and convection for fast outputs and crispy textures.

HOW TO USE TIMED MICROWAVE AND PRESETS

If Child Lock Button is engaged, unlock microwave door by pressing the button to the right side of the push door button. The Microwave will always default to microwaving and the last setting used within the Microwave function.

TIMED

- 1 To select TIMED, press the MICROWAVE button repeatedly or press MICROWAVE then turn START/PAUSE dial until TIME illuminates.
- 2 Press the TEMP/PWR LVL button then turn START/PAUSE dial to desired power level.
- 3 Press the TIME /SETTING button then turn dial to select your time up to 1 hour. Press START/PAUSE dial to start cooking.

USING YOUR NINJA CRISPI MICROWAVE - CONT.

POPCORN

For best results, put popcorn bag in the centre of the bottom of the microwave and cook one popcorn bag at a time.

- 1 To select POPCORN, press the MICROWAVE preset button repeatedly or press MICROWAVE preset then turn dial until POPCORN illuminates.
- 2 Place popcorn bag in centre of the bottom of the microwave.
- 3 Select 1 bag of popcorn using the START/PAUSE dial.
- 4 Press START/PAUSE to start cooking.

POTATO

For best results, use a fork to poke holes in the raw whole potato.

- 1 To select POTATO, press the MICROWAVE Preset button repeatedly or press MICROWAVE preset then turn dial until POTATO illuminates.
- 2 Place potato on plate and onto bottom centre of the microwave.
- 3 Select weight of the potato in increments of 50g or potatoes using the START/PAUSE dial.
- 4 Press START/PAUSE dial to start cooking.

DEFROST

For best results, remove packaging and place on microwave-safe plate.

- 1 To select DEFROST, press the MICROWAVE button until PRESETS illuminates. Use the START/PAUSE dial to scroll to DEFROST.
- 2 Press the START/PAUSE dial to select weight. You can choose either 200g, 400g, 700g, or 1000g.
- 3 Place START/PAUSE dial rail onto bottom centre of the microwave.
- 4 Press START /PAUSE dial to start cooking.

FROZEN VEGETABLE

For best results, remove from packaging, place in a microwave-safe bowl, cover with microwave-safe cling film, then poke holes in the wrap for ventilation.

- 1 To select FROZEN VEGETABLE, press the MICROWAVE preset button repeatedly or press MICROWAVE preset then turn dial until FROZEN VEGETABLE illuminates.
- 2 Select weight in grams (G) using the dial.
- 3 Press START/PAUSE to start cooking.

SOUP

- 1 To select SOUP, press the MICROWAVE PRESET button repeatedly or press MICROWAVE preset then turn dial until SOUP illuminates.
- 2 Remove soup from any packaging and place in microwave-safe bowl or container. Place bowl in bottom centre of microwave.
- 3 Select weight in grams (G) using the dial.
- 4 Press START/PAUSE dial to start cooking.

BEVERAGE

- 1 To select BEVERAGE, press the MICROWAVE preset button repeatedly or press MICROWAVE PRESET then turn dial until BEVERAGE illuminates.
- 2 Select weight in grams (G) using the dial.
- 3 Press START/PAUSE dial to start cooking.

PORRIDGE

- 1 To select PORRIDGE, press the MICROWAVE preset button repeatedly or press MICROWAVE preset then turn dial until PORRIDGE illuminates.
- 2 Select weight in grams (G) using the dial.
- 3 Press START/PAUSE dial to start cooking

SOFTEN BUTTER

- 1 To select SOFTEN BUTTER, press the MICROWAVE preset button repeatedly or press MICROWAVE PRESET then turn START/STOP dial until SOFTEN BUTTER illuminates.
- 2 Select weight in grams (G) using the dial.
- 3 Press START/PAUSE dial to start cooking.

USING YOUR NINJA CRISPI MICROWAVE - CONT.

AIR FRY

Unlock microwave door by pressing STOP button. The Microwave will always default to microwave and the last setting used within the Microwave function.

Press the AIR FRY button to see all air fry functions. There is no preheat on air fry functions. Use the Glass Dish container in the top position for best results.

AIR FRY

- 1 To select the AIR CRISP function, turn START/PAUSE dial until AIR FRY illuminates. The default time and temperature settings will display.
- 2 Temperature will default to 205°C. To change, press the TEMP/PWR LVL button and use the dial to select a temperature between 120°C and 205°C. Temperature will adjust in 5-degree increments. To confirm the temperature, press the TEMP/PWR LVL button again.
- 3 Press the TIME button and use the dial to select your time up to 1 hour. To confirm the time, press the TIME/SETTINGS button again. Time will adjust in 1-minute increments.
- 4 Place ingredients into the Glass Dish with Crisper Tray. Open Microwave Door and slide Glass Dish into top rails.
- 5 Press START/PAUSE dial to start cooking.

MAX CRISP

- 1 To select the MAX CRISP function, turn START/PAUSE dial until MAX CRISP illuminates. The default time and temperature settings will display.
- 2 Temperature for MAX CRISP is 240°C.
- 3 Press the TIME/SETTINGS button and use the dial to select your time up to 1 hour. To confirm the time, press the TIME/SETTINGS button again. Time will adjust in 1-minute increments.
- 4 Place ingredients into the Glass Dish with Crisper Tray. Open Microwave Door and slide Glass Dish into top rails.
- 5 Press START/PAUSE dial to start cooking.

AIR ROAST

- 1 To select the function, press AIR FRY button repeatedly or press AIR FRY then turn START/PAUSE dial until AIR ROAST illuminates. The default time and temperature settings will display.
- 2 Press the TEMP/PWR LVL button and use the START/PAUSE dial to select a temperature between 120°C and 230°C. To confirm the temperature, press the TEMP/PWR LVL button again. Temperature will adjust in 5-degree increments.
- 3 Press the TIME/SETTINGS button and use the dial to select your time up to 2 hours. To confirm the time, press the TIME/SETTINGS button again. Time will adjust in 1-minute increments under 1 hour and 5-minute increments over 1 hour.
- 4 Place ingredients into the Glass Dish with Crisper Tray. Open Microwave Door and slide Glass Dish into top rails.
- 5 Press START/PAUSE dial to start cooking.

AIR BAKE

- 1 To select the function, press OVEN button repeatedly or press OVEN then turn START/PAUSE dial until BAKE illuminates. The default time and temperature settings will display.
- 2 Press the TEMP/PWR LVL button and use the dial to select a temperature between 120°C and 230°C. To confirm the temperature, press the TEMP/PWR LVL button again. Temperature will adjust in 5-degree increments.
- 3 Press the TIME/SETTINGS button and use the dial to select your time up to 2 hours. To confirm the time, press the TIME/SETTINGS button again. Time will adjust in 1-minute increments under 1 hour and 5-minute increments over 1 hour.
- 4 Place ingredients into the Glass Dish and insert Glass Dish into top rails.
- 5 Press START/PAUSE dial to start cooking.

AIR GRILL

- 1 To select the function, press AIR FRY button repeatedly or press AIR FRY then turn START/PAUSE dial until GRILL illuminates. The default time and temperature settings will display.
- 2 Press the TEMP/PWR LVL button and use the dial to select a temperature between LO (205°C) and HI (230°C). To confirm the temperature, press the TEMP/PWR LVL button again. Temperature will adjust in 5-degree increments.
- 3 Press the TIME/SETTINGS button and use the dial to select your time up to 30 minutes. To confirm the time, press the TIME/SETTINGS button again. Time will adjust in 5-second intervals.
- 4 Place ingredients into the Glass Dish with Crisper Tray. Open Microwave Door and slide Glass Dish into top rails.
- 5 Press START/PAUSE dial to start cooking.

FUSION CRISP

Fusion Crisp combines Microwave and Air Fry functions. Select Fusion Crisp to set the Microwave and Air Fry time.

- 1 Place ingredients onto the Glass Dish with Crisper Tray installed. Open microwave door and slide the Glass Dish into the top rails.
- 2 To start, press FUSIONCRISP and the button will light up. Both MICROWAVE and AIR FRY will illuminate to allow you to setting the function.
- 3 Set microwave time. Turn the START/PAUSE dial to select microwave cook time. Press START/PAUSE dial, or AIR FRY button to confirm microwave time.
- 4 Once Microwave is confirmed, turn the START/PAUSE dial to select the AIR FRY cook time.
- 5 Press START/PAUSE dial to start cooking.

CLEANING, MAINTENANCE & STORAGE

EVERYDAY CLEANING

The unit should be cleaned thoroughly after every use.

- 1 Unplug the unit from the socket and allow it to cool down before cleaning.
- 2 Remove all accessories and clean after each use. Glass Dish is dishwasher safe. The Crisper Tray is hand-wash only.
- 3 To clean the exterior of the main unit and the control panel, wipe them clean with a damp cloth. A non-abrasive liquid cleaner or mild spray solution may be used. Apply the cleanser to the sponge, not the microwave surface, before cleaning.
- 4 Thoroughly dry all parts before placing them back in the microwave.

NOTE: NEVER immerse the main unit in water or any other liquid. **NEVER** clean the main unit in a dishwasher.

SPOT SMOKE?

Sometimes excessive splatter or food buildup can cause your microwave to produce smoke when using Air Fry or FusionCrisp.

DON'T WORRY — THIS USUALLY MEANS IT'S TIME FOR A QUICK CLEAN!

See the steps below on how to minimise any potential smoke.

HOW TO RUN THE CLEAN CYCLE:

1. Press the SETTINGS button to access settings, then use the dial to select CLEAN.
2. Remove crisper tray from Glass Basket. Pour 940 ML of room temperature water into your Glass Basket and install in the upper position.
3. Press START/PAUSE dial to start clean cycle; this will run for 20 minutes.
4. Once clean cycle has finished, take a soft sponge and wipe all interior walls of the unit.

TROUBLESHOOTING & FAQ

ERROR MESSAGES

Power off the unit and call Customer Service at **0800 862 0453**. So we may better assist you, please register your product online at sharkninja.co.uk/product-registration and have the product on hand when you call.

TROUBLESHOOTING

Microwave not turning on?

- Make sure the power cord is securely plugged into the socket.
- Insert the power cord into a different socket.
- Reset the circuit breaker if necessary.
- Press any button on the control panel.

Arcing/Sparkling in Cavity

- Be sure you are using microwave-safe utensils and accessories. See Microwave & Oven Safe Accessory List on Page 8.
- Do not operate oven while it is empty.

Can't unlock Microwave

- To open, press the STOP button to unlock.
- Then push Door Button to open door.

Unevenly cooked foods

- Make sure you are using microwave-safe accessories.
- Use AIR FRY, ROAST or GRILL with the Glass Dish in top rails.

Overcooked foods

- Refer to Quick Start and Inspiration Guide for recommended times and temperatures.
- Change cook time, temperature, or power level.
- Make sure you are using microwave-safe accessories.
- Use AIR FRY, ROAST or GRILL with the Glass Dish in top rails.

FAQ

Can I use a Sheet Pan instead of Glass Dish to Air Fry?

- No, the Glass Dish must be used for the AIR FRY function.

Can I use the Glass Dish for Bake?

- Yes, the Glass Dish can be used for Bake in the top position. If using other oven accessories, place on top of Crisper Tray in Glass Dish. Placing the Glass Dish in the bottom of the microwave may result in under cooking.

Do I need to adjust cook times and temperatures of traditional oven recipes?

- For Bake, you can follow packaging or recipe instructions.
- For best results, keep an eye on your food while cooking. Refer to cook charts in the Quick Start and Inspiration Guide.

Can I use metal pans or foil in this appliance?

- No. Do not use metal pans or foil in microwave, Air Fry, or Bake modes unless specifically labeled microwave-safe. Doing so can cause sparks or damage.

Can I cook raw meat or frozen meals with FusionCrisp?

- Yes. FusionCrisp is designed to handle raw proteins or frozen entrees. Refer to the Quick Start Guide or Recipe Book for guidance on time, rack placement, and temperature.

TROUBLESHOOTING & FAQ – CONT.

How do I clean the Crisper Plate or heating elements?

- Allow unit to cool completely. Use a damp cloth for interior, and follow accessory-specific cleaning instructions (dishwasher-safe vs. hand-wash only).

What accessories can I use?

- Refer to the accessories page. Only use approved accessories included or recommended by the manufacturer.

Why is the exterior of the unit hot after cooking?

- This is normal. The appliance uses convection heat in several modes. Always handle with oven mitts and allow time to cool before cleaning.

Is the Glass Basket microwave-safe?

- Yes. It is designed to be used across all functions. Place it in the top rails for best performance. Avoid placing it directly on the floor of the microwave.

Can I use the Ninja Glass Basket in other appliances?

- Ninja glass containers are freezer safe, microwave safe, and dishwasher safe but NOT oven/stovetop/grill safe.

Can I store glass containers inside my Ninja Glass Basket?

- Avoid stacking non-Ninja glass containers with the Ninja Glass Basket as scratching or damage might occur.

Can I use the Glass Basket if it becomes chipped, cracked, or deeply scratched?

- DO NOT use, as container strength may be compromised, and the container could break or shatter. Handle Ninja glass containers with care. They can break if dropped, hit hard against a surface, or struck with hard utensils. Discard immediately if any damage occurs.

What should I do if the cabinet above the microwave is peeling, warped, changing color, or emitting unusual odors or smoke?

- Stop using the microwave and contact customer service. This may be caused by heat from the Exhaust Vent. See “Microwave Placement” page for clearance requirements.

NINJA

MANUFACTURER'S GUARANTEE

The Ninja Guarantee

When a consumer buys a product in the UK, they get the benefit of legal rights relating to the quality of the product (your “legal rights”). You can enforce your legal rights against your retailer, including Ninja if you bought your Ninja kitchen appliance from sharkninja.co.uk. However, at Ninja we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

The manufacturer's guarantee does not affect your legal rights.

How long are new Ninja machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days.

How do I register my Ninja guarantee?

If you have purchased your Ninja kitchen appliance directly from sharkninja.co.uk your guarantee is registered automatically. If you bought it from anywhere else in the UK, you can register your guarantee online within 28 days of purchase.

- To register online, please visit www.sharkninja.co.uk/register-guarantee or scan the QR code in your instruction booklet.

- Keep a note of the date you purchased the machine.

IMPORTANT:

- Keep your receipt if you bought your Ninja kitchen appliance from anywhere except sharkninja.co.uk. You will need it to claim under your guarantee.
- The free Ninja guarantee only applies in the UK.

What are the benefits of registering my free Ninja guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Ninja kitchen appliance and hear the latest news about new Ninja technology and launches.

What is covered by the free Ninja guarantee?

Repair or replacement (at Ninja's discretion) of your Ninja machine, including all parts and labour.

What is not covered by the free Ninja guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Ninja kitchen appliance which is not in accordance with the Ninja Operating Manual supplied with your machine.
- Damage caused by use of the Ninja kitchen appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.
- Damage caused by use of parts and accessories which are not Ninja Genuine Components
- Faulty installation (except where installed by Ninja).
- Repairs or alterations carried out by parties other than Ninja or its agents.

How can I claim under the free Ninja guarantee?

Contact our customer service helpline on 0800 862 0453. For service hours please visit our website under 'Contact Us'. It's free to call, and you'll be put straight through to a Ninja representative. You'll also find online support at <https://support.sharkninja.co.uk/>. The Ninja representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.

Please remember that the item will need to be boxed when you return it to us. It can be any suitable box, it does not have to be the original packaging.

Where can I buy genuine Ninja spares and accessories?

Ninja spares and accessories are developed by the same engineers who developed your Ninja kitchen appliance. You'll find a full range of Ninja spares, replacement parts and accessories for all Ninja machines at www.sharkninja.co.uk. Please remember that damage caused by the use of non-Ninja spares may not be covered under your guarantee.