 


# Hisense

---

Party Speaker

MODEL: PARTY THUNDER

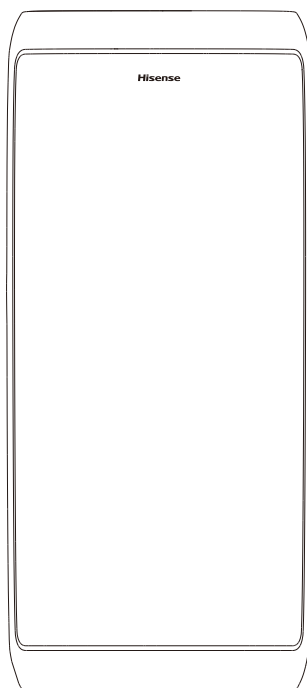

---

## USER MANUAL

---



Read all the safety instructions carefully before use and keep this instruction manual for future reference

EN

XX



 
# Contents

<b>Important Safety Instructions</b>	<b>2</b>
<b>Features</b>	<b>4</b>
Package Contents .....	4
<b>Product Diagram</b>	<b>5</b>
Top View .....	5
Rear View .....	6
<b>Connections</b>	<b>7</b>
Connect Power .....	7
<b>AUX IN/AUX OUT</b> Socket .....	7
<b>MIC</b> Socket .....	8
<b>GUITAR</b> Socket .....	8
<b>Basic Operation</b>	<b>8</b>
Standby/ON .....	8
DJ Effect .....	9
Select Modes .....	9
Adjust the Volume .....	9
Preset Equalizer .....	9
Bass settings .....	9
Adjust the LED light .....	9
This unit can be a standalone subwoofer of Hisense TV .....	9
Vocal fader .....	9
<b>AUX IN Operation</b>	<b>9</b>
<b>Bluetooth Operation</b>	<b>10</b>
Pair Bluetooth-enabled Devices .....	10
Listen to Music from Bluetooth Device .....	10
TWS Connection .....	10
<b>USB Operation</b>	<b>11</b>
USB Operation .....	11
Charging from the USB Port .....	12
<b>Battery Charging For Party Speaker</b>	<b>12</b>
Built-in Battery Charging .....	12
<b>AURACAST Connection</b>	<b>13</b>
<b>Troubleshooting</b>	<b>13</b>
<b>Specifications</b>	<b>14</b>

EN

# Important Safety Instructions

EN

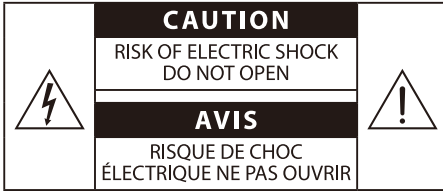


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## 1.1 Safety

- Read these instructions** – All the safety and operating instructions should be read before this product is operated.
  - Keep these instructions** – The safety and operating instructions should be retained for future reference.
  - Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
  - Follow all instructions** – All operating and usage instructions should be followed.
  - Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
  - Clean only with a dry cloth.**
  - Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
  - Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
  - Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety.
- If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  - Only use attachments/accessories specified by the manufacturer.
  -  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
  - Unplug the apparatus during lightning storms or when unused for long periods of time.
  - Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
  - This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
  - The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
  - Minimum distance around the apparatus for sufficient ventilation is 5cm.
  - The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
  - No naked flame sources, such as lighted candles, should be placed on the apparatus.
  - Batteries should be recycled or disposed of as per state and local guidelines.
  - The use of apparatus in moderate or tropical

# Important Safety Instructions

## Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

## 1.2 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

## **Battery usage CAUTION**

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and - as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Remove batteries when the unit is not used for a long time.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Hereby, XinYang (Hong Kong) Co., Ltd. Declares that the radio equipment type is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017 of UK. Please enter the model name at the following internet address to read the full text of the declaration of conformity: <https://global.hisense.com/support/certificate-download/>.

Authorized EU Representative:

Name: Gorenje gospodinjski aparati, d.o.o.

Address: Partizanska cesta 12, 3320Velenje, Slovenija

Email: [info@gorenje.com](mailto:info@gorenje.com)

Please refer to the rating label for Soundbar or Party Speakers model name and find Bluetooth remote control model name on the remote control label or inside the remote control cover.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. We are the licensee to use such marks. Other trademarks and trade names are those of their respective owners.

 
## Features

Thanks for your purchase of our product. Please read through this manual before making connections and operating this product. Retain this manual for future reference.


EN

- Bluetooth playback
- AUX IN
- USB slot
- Microphone function
- Guitar function
- Multiple EQ sound effect mode


## Package Contents

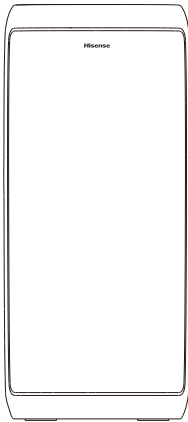


Main Unit

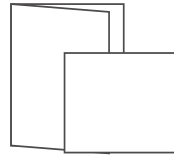 

User Manual  
QSG

 


\* AC power cord

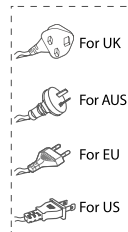 

 \*Power cord quantity and plug type vary by regions.





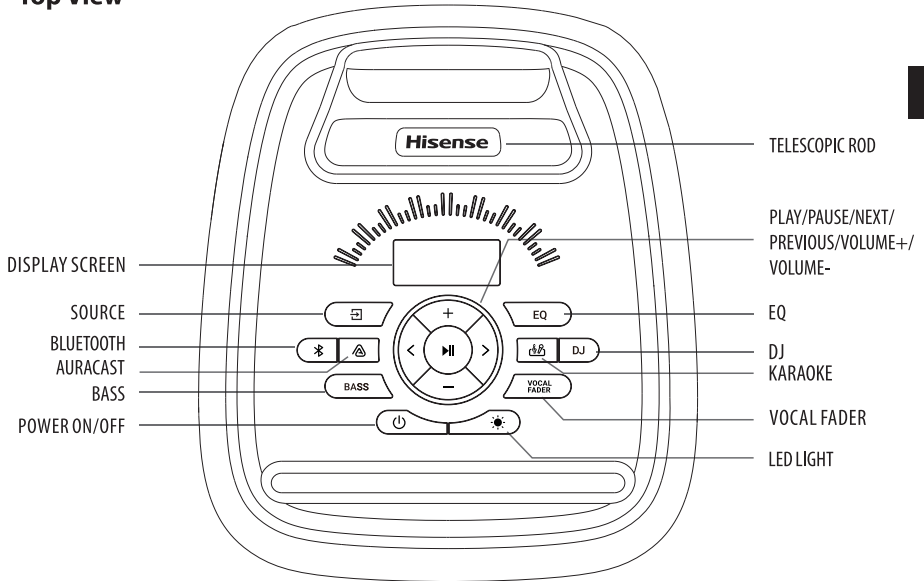




# Product Diagram

## Top View



EN

 
## PARTY THUNDER

LIGHT 	Select the different lighting mode of LED LIGHT
POWER ON/OFF 	Power on/off
SOURCE 	Select a play function
BLUETOOTH 	Enter the Bluetooth mode
AURACAST 	In Bluetooth mode, press to enter the AURACAST mode
MASTER VOLUME +/-	Increase/Decrease the volume level
DJ	DJ effect
PREVIOUS 	Press to the previous track
PLAY/PAUSE 	Play/Pause
NEXT 	Press to the next track
EQ	Equalizer manual mode
BASS	ON/OFF the BASS mode
VOCAL FADER	Switch between vocal fader on and vocal fader off
DISPLAY SCREEN	Display screen
KARAOKE 	Enter the KARAOKE sound effect mode

# Product Diagram

## Rear View

EN

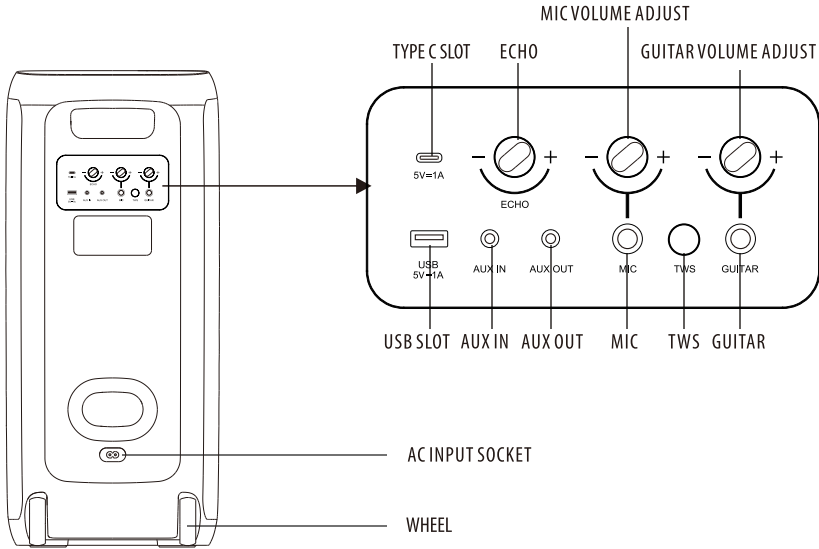


## PARTY THUNDER

TYPE C SLOT	Charging for the external device
ECHO	Increase/decrease the mic echo volume level
MIC VOLUME ADJUST	Increase/decrease the mic volume level
GUITAR VOLUME ADJUST	Increase/decrease the guitar volume level
USB SLOT	USB slot
AUX IN	AUX input socket
AUX OUT	AUX output socket
MIC	MIC socket
TWS	Press to enter TWS pairing mode
GUITAR	Guitar socket
AC INPUT SOCKET	AC power socket

# Connections
 
## Connect Power

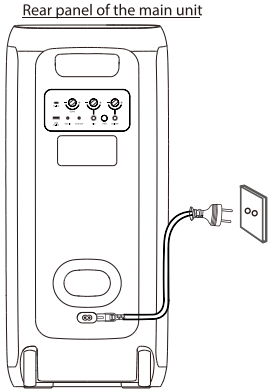


### Risk of product damage!

Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.


Insert the AC power cord into socket .

EN
 
## AUX IN Socket

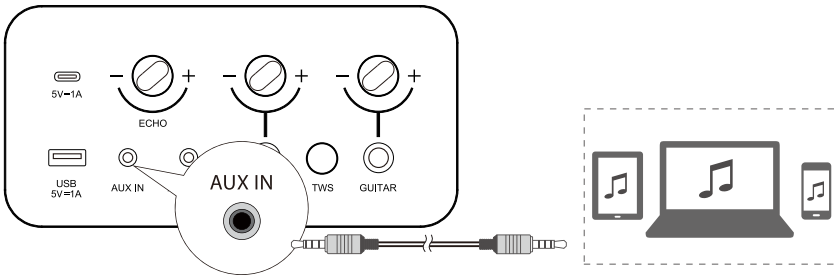


This unit has an audio input terminal. You can input the analogue stereo audio signals from extra devices such as VCD, CD, VCR, MP3 player, etc.

Use the audio cable with a 3.5mm(not supplied) connector to connect the input terminal **AUX IN** on the rear panel of the unit, press  button to select **AUX IN** mode.

## AUX OUT Socket

 Rear View of the Main Unit

Rear View of another Main Unit (not included)

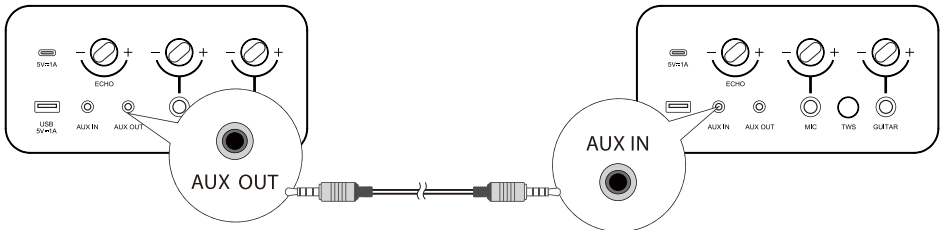


This unit has a **AUX OUT** jack. You can output the analog stereo audio signals to external devices such as an active speaker.

Connect an audio cable (not supplied) to the **AUX OUT** jack on the rear panel of the unit and the **AUX IN** jack of the external device, and the unit will output audio automatically to the external jack of the external device, and the unit will output audio automatically to the external device.

# Connections
 
## MIC Socket


EN

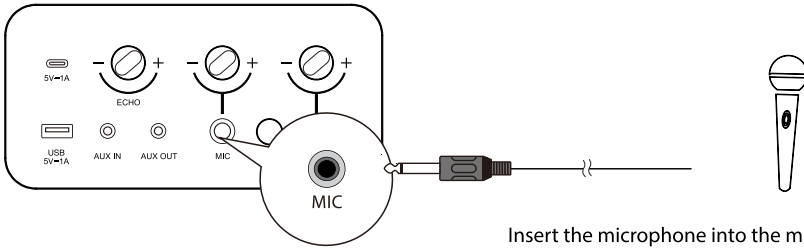

Insert the microphone into the microphone socket on the rear panel and adjust to a low level using the microphone volume knob on the rear panel.

Adjust the microphone volume level to your desired level using the microphone volume knob on the rear panel.


## GUITAR Socket

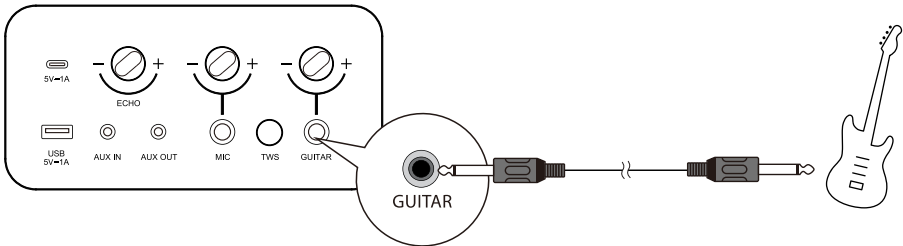 

Insert the guitar cable into the guitar socket on the rear panel.

# Basic Operation

## Standby/ON

- Press the  button on the unit to switch the main unit ON ,Press and hold for 2 seconds to OFF.
- Disconnect the main plug from the main socket if you want to switch the unit off completely.
- When there is no input signal from the unit more than 15 minutes, it will switch to Standby mode automatically.

## DJ Effect

- Press the DJ button to the select different DJ effect.
- Press the DJ key once to play the current DJ. When you press the DJ continuously within 1 second, cycle to select different DJ sound effects. Press the DJ key for 1 second to start playing the current DJ sound effects after no operation;
- DJ sound effect types: DJ1 cheering sound, DJ2 alarm sound, DJ3 drum sound, DJ4 horn sound, DJ5 disc playing sound.

**Select Modes** \* If the Modes are different, the actual situation prevails.

- Press the  button on the unit to select the play function BT→USB→AUX IN.

## Adjust the Volume

- Press the **VOL+/VOL-** button on the unit to adjust the volume.



## Preset Equalizer

- During play, press the EQ button repeatedly to select: ROCK-JAZZ-SAMBA-POP-BALANCE.

## Bass settings

- Press BASS button to select BASS ON / BASS OFF.

## Adjust the LED light

- Press the  button repeatedly to select the LED effect: LED OFF, LED1, LED2, LED3, LED4, LED5.
- Press and hold  to switch ON/OFF the strobe light


## This unit can be a standalone subwoofer of Hisense TV

- Connect the audio cable with a 3.5mm(not supplied) connector to the AUX IN jack on the rear panel of the unit and the headphone jack on the external TV.
- Press the SOURCE button to select AUX IN mode and then press EQ button to switch to the TV equalizer mode.
- The function of switching the speaker and headphone of the TV to produce sound together.  
Google TV: Audio Output>TV Speaker with Wired Headphone, VIDAA TV: Audio Output>TV Speaker
- Adjust the volume of the subwoofer:  
Google TV: Select the TV menu Sound > External Speaker Volume>Wired Headphone to adjust or adjust directly via Party Speaker.  
VIDAA TV: Select the TV menu Audio Output Settings > Headphone Volume to adjust or adjust directly via Party Speaker.  
Note: This function is only available in particular Hisense TV models.

## Vocal fader

- Press and hold VOCAL FADER button on the top panel to switch on the vocal fader mode and the backlight in the button light up, and then press it to active the vocal fader menu and the backlight in the next/previous/vol+/vol- button light up, press it again inactive the vocal fader menu.
- Use the next/previous button to select the desired vocal fader mode, use the vol-/vol+ to adjust vocal fader depth.
- Press and hold KARAOKE button again to switch off the vocal fader and the backlight in the button goes out.

## AUX IN Operation


- 1 Ensure that the unit is connected to the TV or the other audio devices.
- 2 Press the  button on the unit to select the **AUX IN** mode.
- 3 Operate your audio device directly for playback features.
- 4 Press the **VOL+/VOL-** button to adjust the volume to your desired level.

# Bluetooth Operation


## Pair Bluetooth-enabled Devices

The first time you connect your Bluetooth device to this player, you need to pair your device to this player.

### Note:

- The operational range between this player and a Bluetooth device is approximately 8 meters (with any object between the Bluetooth device and the unit).
  - Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.
  - Compatibility with all Bluetooth devices is not guaranteed.
  - Any obstacle between this unit and a Bluetooth device can reduce the operational range.
  - If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- 1 Press the  on the unit to select **Bluetooth** mode.
  - 2 The word "**PAIRING**" will be shown on the display screen, the system has entered pairing mode.
  - 3 Activate your Bluetooth device and select the search mode. "**HISENSE PARTY THUNDER**" will appear on your Bluetooth device.
  - 4 Select "**HISENSE PARTY THUNDER**" in the pairing list, the system is successfully connected and the word "**CONNECTED**" will scroll show on the display screen.
  - 5 Begin playing music from the connected Bluetooth device.

### To disconnect the Bluetooth function, you can :


- Switch to another function on the unit.
- Disable the Bluetooth function on your device.
- Press and hold the " " button on the unit.

### Tips:

- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.

## Listen to Music from Bluetooth Device

If your Bluetooth device supports A2DP, play music via your device.

- To pause/resume playback, press .
- To skip to a track, press < or > .
- Press the **VOL+/-** button to increase or decrease the volume.

## TWS Connection

How to use the TWS audio connection function both speakers?

 
Step 1: Set up the main speaker(master)

- The main speaker signal source can be Bluetooth/USB/AUX IN. When selecting Bluetooth, make sure it is connected to mobile devices such as phones.
- Press the TWS button,the display screen of the main speaker scroll display TWS ON, and then scroll display TWS PAIRING.

Step 2: Connect the secondary speaker (slave)

- Ensure that the slave speaker is in Bluetooth standby mode (cannot be Bluetooth connected to mobile devices such as phones)
- Press the TWS button on the slave speaker, the display screen of the secondary speaker scroll display TWS ON, and then scroll display TWS PAIRING.
- The both speakers once paired successfully, the word MASTER scrolls display on the main speaker at once and then the word BT\_IN keep solid display, the word CONNECT scrolls display on the secondary speaker and the word SLAVE keep solid display.


- The master speaker will act as the left channel during and will receive the bluetooth signal, the slave speaker will as the right channel to play music.
- Press and hold TWS button on the both speakers to disconnect the MASTER and the SLAVE speaker connection in TWS connection mode, the display screen of the both speakers scroll display TWS OFF.

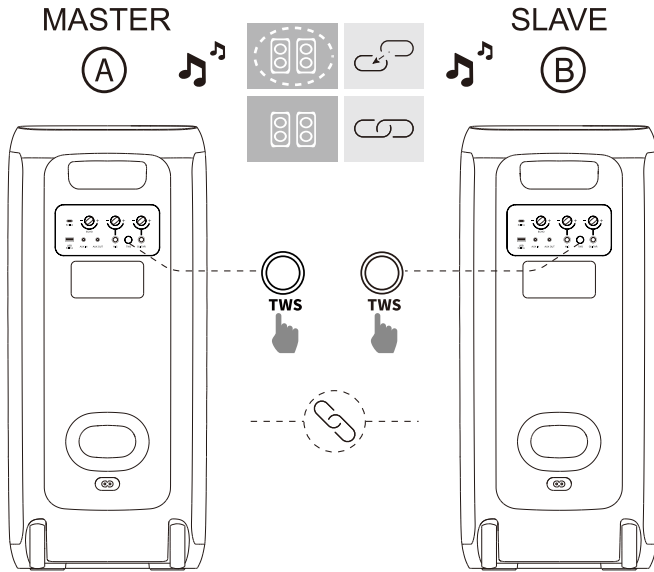

EN

## USB Operation

 
### USB Operation

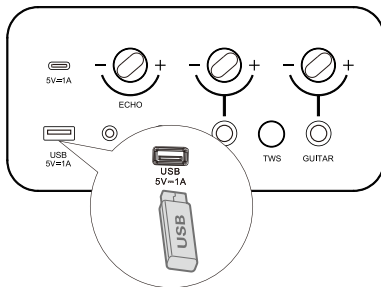

- 1 Insert the USB device and press button to select USB mode.
- 2 Play starts automatically. If play does not start automatically, press button.
  - To skip to the previous/next track, press the buttons on the unit.
  - To skip to the previous/next folder, press and hold buttons on the unit.
- 3 In PLAY/PAUSE state, press and hold button for 3 seconds to switch among in REPEAT 1/REPEAT ALL/RANDOM/NORMAL.

## Charging from the USB Port

 EN

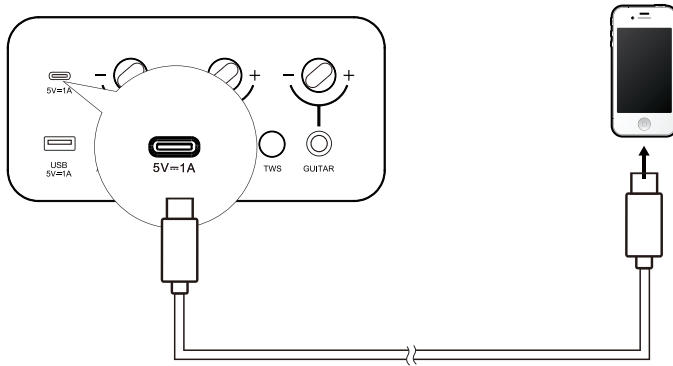

The Charging slot 5V=1A socket is designed for charging mobile devices(e.g. MP3 player, mobile phone, etc). It supplies 5V DC at a charging current up to 1000mA(1A). In power on mode,Use a USB- C cable (not included) to connect mobile device to Charging slot 5V=1A Socket of the unit and the mobile device will start charging.

## Battery Charging For Party Speaker

### Built-in Battery Charging

Use the AC power cord(included) to connect AC power input socket on the unit to AC power outlet in power on state. the bars scroll of the battery icon in the display screen on the unit will flash quickly during charging, and once fully charged, all the bars of the battery icon in the display screen light up.

## AURACAST Connection

How to use the Auracast audio sharing function?

Step 1: Set up the master speaker (broadcaster)

- The master speaker signal source can be Bluetooth/USB/AUX IN. When selecting Bluetooth, make sure it is connected to mobile devices such as phones.
- Press the Auracast button

Step 2: Connect the slave speaker (receiver)

- Ensure that the slave speaker is in Bluetooth standby mode (cannot be Bluetooth connected to mobile devices such as phones).
  - Press the Auracast button on the slave speaker, and the slave speaker will automatically search for and join the master speaker's broadcast.
  - The slave speaker playing the master speaker content indicates successful reception.
- Repeat step 2 to connect more speakers.


Note: In the absence of interference, the effective distance is 10 meters.

EN

## Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, review the following before requesting service.

### No power

- Ensure that the AC cord is properly connected.
- Ensure that there is power at the AC outlet.
- Press  button on the speaker.

### I hear buzzing or humming

- Ensure all cables and wires are securely connected.
- Connect a different source device (Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.
- Connect your device to a different input on the speaker.

### I can't find the Bluetooth name of this unit on my Bluetooth device

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Re-pair the unit with your Bluetooth device.

# SPECIFICATONS

Model name	PARTY THUNDER
------------	---------------

## Power supply

Voltage	AC 100-240 V ~ 50/60Hz;
Power consumption(AC)	80 W
Dimensions(W x H x D)	360x690x330mm

## Amplifier

Max Audio Power	620W
-----------------	------

## Ambient conditions

In operation	min. 0°C – max. +45°C / 60% relative humidity
Not in operation	min. -10°C – max. +60°C / 65% relative humidity
Built-in battery	Li-ion 12500mAh, 7.3V
Battery charge time	4.5 hours
Battery playtime	18 hours*

## System

Frequency range	20Hz to 20KHz
Signal-to-noise	>80dB
USB port	USB 2.0 to 32GB WAV \WMA \ MP3
USB output	Output: 5V 1A max.

## Bluetooth®

Bluetooth Version	5.4
Bluetooth Transmitter Power	15 dBm
Frequency Range	2402MHz-2480MHz

## Proof-water

Top-Panel	IPX4
-----------	------

The product is complies with European Commission Regulation (EU) 2023/826 as a networked equipment.

- 1) Standby mode<0.5W, Standby time<20 minutes
- 2) Bluetooth/TWS/AURACAST mode

The product will enter networked standby after 20 minutes without operation. The power consumption are less than 2.0 Watts, after which it can be re-activated via Bluetooth connection.

\* Design and specifications are subject to change without notice.

\* 18 hrs battery playtime is only for reference and may vary depending on music content and battery aging after numerous charging and discharging cycles. It's achievable with a predefined music source, light show switch off, volume level at 11 and BT streaming source.

\* If only powered by the battery, the Power would lowered automatically to protect the battery.





 


***Hisense***  

---

**PARTY THUNDER**

Party Speaker  
Made In China



410MX989XXXX