 


SAMSUNG



BN68-25133C-01

About the Samsung SolarCell Remote (Samsung Smart Remote)

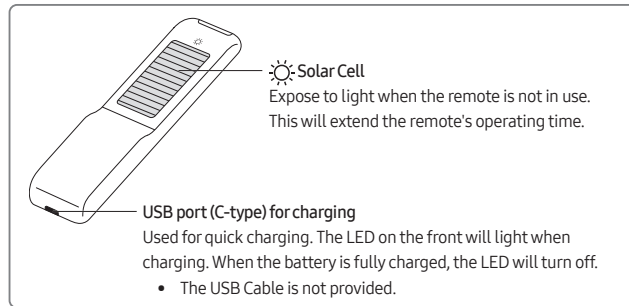 


Fire or explosion may occur, resulting in damage to the remote control or personal injury.

- Do not apply shock to the remote control.
- Be careful not to let foreign substances such as metal, liquid, or dust come in contact with the charging terminal of the remote control.
- When the remote control is damaged or you smell smoke or burning fumes, immediately stop operation and then repair it at the Samsung service centre.
- Do not arbitrarily disassemble the remote control.
- Be careful not to let infants or pets suck or bite the remote control. Fire or explosion may occur, resulting in damage to the remote control or personal injury.
- For details on how to replace the battery of your Samsung Smart Remote Control, refer to the Battery Replacement Guide at samsung.com/support.

The remote control does not work.

- Check if the remote control sensor at the bottom of the TV blinks when you press the button on the remote control.
 - When the remote's battery is discharged, charge the battery using the USB charging port (C-type).
- Try pointing the remote directly at the TV from 1.5-1.8 m away.
- If your Samsung Smart Remote (Bluetooth Remote) does not work, try pairing it with the TV again.

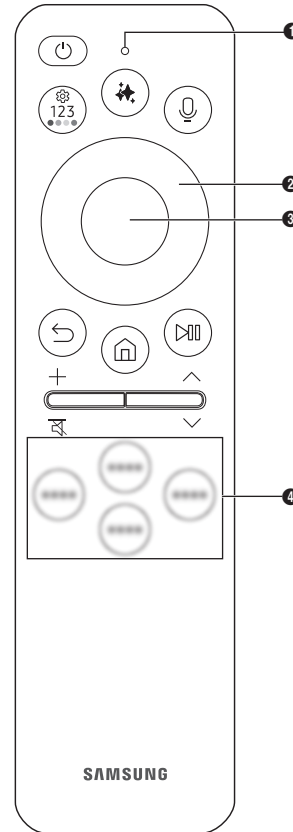

Button	Description
(Power)	Press to turn the TV on or off. For The Frame model, When watching TV, press to switch to Art mode. In Art mode, press to switch to the Home screen. Press and hold to turn off the TV completely.
MIC / LED	Used as MIC when using voice recognition with the remote control. When charging the remote control via the USB port, the LED is lit if charging is in progress. When charging is complete, the LED is turned off. <ul style="list-style-type: none"> Do not impact the MIC hole or use a sharp object to poke into the hole.
(AI)	Opens the AI function. Press the button to open the Samsung Vision AI Companion function. Samsung Vision AI Companion is an interactive AI service that answers your questions and provides the information you need. <ul style="list-style-type: none"> Find out the key AI capabilities from the launched Samsung Vision AI Companion. This function may not be supported depending on the model or geographical area.
(Voice Assistant)	Runs Voice Assistant. Press and hold the button, say a command, and then release the button to run Voice Assistant. <ul style="list-style-type: none"> The supported Voice Assistant's languages and features may differ by geographical area.
(Settings / Number / Colour button)	You can access Setting menu / virtual numeric pad / Colour buttons / Option pad / SmartThings directly. <ul style="list-style-type: none"> Accessing the SmartThings app using this button may not be supported, depending on the model. Use this button to access additional options that are specific to the feature in use. Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select Done or Enter Number to enter a numeric value. Use to change the channel, enter a PIN, enter a ZIP code, etc. When pressed for 1 second or more, the Shortcuts menu screen appears.
(up, down, left, right)	Moves the focus and changes the values seen on the TV's menu.
Select	Selects or runs a focused item. When pressed while you are watching a broadcast programme, detailed programme information appears.
(Return)	Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a programme, the previous channel appears.
(Smart Hub)	Press to switch to the Home Screen. <ul style="list-style-type: none"> If you press this button for more than 1 second, the same function as when pressing the button is achieved.
(Play/pause)	When pressed, the playback controls appear. Using these controls, you can control the media content that is playing. To use Game Bar, press and hold the button in Game Mode. <ul style="list-style-type: none"> Game Bar may not be supported depending on the model or geographical area.
+ / - (Volume)	Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 2 seconds or more, the Accessibility Shortcuts appears. <ul style="list-style-type: none"> may not be present, depending on the model.
^ / v (Channel)	Move the button up or down to change the channel. To see the Guide screen, press the button. <ul style="list-style-type: none"> When pressed for 1 second or more, the Channel List screen appears.
Launch app button	Press each button to run its function. <ul style="list-style-type: none"> Available apps may differ depending on the geographical area or contents provider.
+ (Pairing)	If the Samsung Smart Remote does not pair to the TV automatically, point it at the front of the TV, and then press and hold the and buttons simultaneously for 3 seconds or more.

- Use the Samsung Smart Remote less than 6 m from the TV. The usable distance may vary with the wireless environmental conditions.
- The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.
- The Universal Remote function operates normally only when you use the Samsung Smart Remote that comes with the TV.
- It is recommended to use an original Samsung charger. Otherwise, it may cause performance degradation or failure of the product. In this case, the warranty service is not applicable.
- When the remote control does not work due to low battery, charge it by using the USB-C type port.
- For specific functions of each button on the Samsung Smart Remote, access the Remote Control Guide (> left directional button > Settings > All Settings > Support > Tips and User Guides > Remote Control Guide).

UK Declaration of Conformity

Manufacturer

Name: Samsung
Registered Trade Name: Samsung Electronics Co., Ltd
Address: 129 Samsung-ro, Yeongtong-gu, Suwon-si, Gyeonggi-do, Korea

Product Details

Product: Smart Control
Model(s): VG-TM2660

Declaration and applicable standards

We hereby declare under our sole responsibility that the product above is in compliance with the essential requirements of the Radio Equipment Regulations 2017 by application of:

EMC
EN 301 489-1 V2.2.3
EN 301 489-17 V3.3.1

Safety
EN IEC 62368-1:2020+A11:2020
EN IEC 62368-3 :2020
EN 62479:2010

Radio

EN 300 328 V2.2.2
and the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 by application of EN IEC 63000:2018.

 
Signed for and on behalf of : Samsung
Samsung Euro QA Lab, Saxony Way, Yateley, GU46 6GG, UK *
2025-10-31 (Place and date of signature)

Glenn Bodman – Director
Regulatory Compliance
(Name and signature of authorized person)

* This is not the address of Samsung Service Centre. Please see the address or the phone number of Samsung Service Centre in the warranty card or contact the retailer where you purchased your product.

SAMSUNG

About the Buttons on the Standard Remote Control

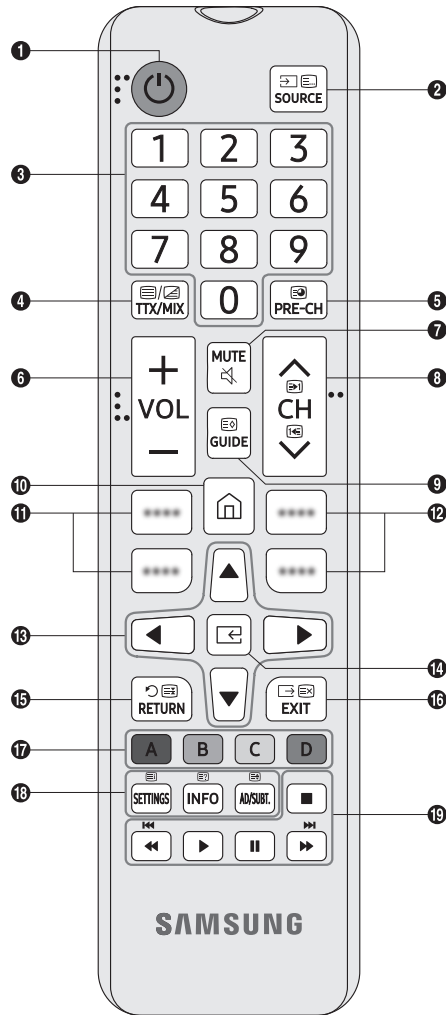

Number	Description
1	⏻ (Power) Turns the TV on and off.
2	Displays and selects available video sources.
3	Gives direct access to channels.
4	Alternately selects Teletext mode, Full TTX / Double TTX / Mix / Live TV. • This function may not be supported depending on the model or geographical area.
5	Returns to the previous channel.
6	Adjusts the volume.
7	Turns the sound on/off.
8	Changes the current channel.
9	Displays the Guide screen.
10	Press to switch to the Home Screen. Press and hold for more than 1 second to launch Samsung Vision AI Companion. • This function may not be supported depending on the model or geographical area.
11, 12	Press each button to run its function. • Available apps may differ depending on the geographical area or contents provider.
13	Moves the cursor, selects the on-screen menu items, and changes the values seen on the TV's menu.
14	⏏ (Select) Selects or runs a focused item.
15	Returns to the previous menu or channel.
16	Exits the menu.
17	Use these buttons according to the directions on the TV screen.
18	SETTINGS Displays the main on-screen menu. INFO Displays information about the current programme or content. AD/SUBT. Displays the Accessibility Shortcuts.
19	Use these buttons with specific features. Use these buttons according to the directions on the TV screen.

- The images, buttons, and functions of the remote control may differ depending on the model or geographical area.
- This remote control has Braille points on the Power, Channel, and Volume buttons and can be used by visually impaired persons.
- If you use the remote control that comes with your TV to control another TV, some functions may not operate normally.

The remote control does not work.

- Check if the remote control sensor at the bottom of the TV blinks when you press the ⏻ button on the remote control.
 - If it does not blink, replace the remote control's batteries. Make sure that the batteries are installed with their poles (+/-) in the correct direction. Alkaline batteries are recommended for longer battery life.
- Try pointing the remote directly at the TV from 1.5-1.8 m away.

