

YOUR RANGEMASTER GUARANTEE

At Rangemaster, we take all our customer feedback seriously. Feel free to contact our Customer Service Team, on **0330 1230 596**, who will be more than happy to assist you.

This product is guaranteed for 24 months from the date of the original purchase.

Register your appliance at <https://rangemaster.dawarranty.co.uk/>

within 28 days of purchase to qualify for an additional year free of charge.

If any defect arises due to faulty materials or workmanship, the faulty product must be

returned to the place of purchase for the first 12 months.

Refund or replacement is at the discretion of the retailer. Thereafter please contact

Customer Services on **0330 123 0596** or visit us at www.rangemaster.co.uk.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

Imported & Produced by Product Care Trading Ltd, Unit 1, Green Bank Business Park,

Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom. Product Care (Ireland) Ltd,

Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland.

Rangemaster is a registered trademark used under license from AGA Rangemaster Ltd

RANGEMASTER

CLASSIC COLLECTION



KETTLE

RANGEMASTER

For Customer Services

please call **0330 123 0596**

Or visit us at

www.rangemaster.co.uk

Show off your kitchen with...

This is
#MyRangemaster

WHY RANGEMASTER?



Since revolutionising everyday cooking in 1830 with our original range cooker, Rangemaster has continued to innovate, enhancing daily life with a wide range of kitchen appliances. Our range cookers are still proudly manufactured in Royal Leamington Spa, Warwickshire, a tradition we've upheld for over 200 years.

Our Classic Collection continues this legacy forward, crafted from the highest-quality materials for lasting durability and designed to withstand the demands of everyday use. The Classic Kettle and Toasters blend exceptional function with thoughtful features while preserving our signature timeless aesthetic. Inspire the joy of cooking with appliances as reliable and lasting as the moments they help create.

The Classic Kettle and Toaster offer a two-year standard guarantee, plus an extra year

if you register within 28 days of purchase. Enjoy worry-free use knowing we're here

to support you every step of the way, because our appliances are made to last – just like us.

*Terms and conditions apply. For more information visit <https://rangemaster.dawarranty.co.uk/>

YOUR RANGEMASTER CLASSIC COLLECTION KETTLE




FOR ALL RMCLDK201 MODELS (Various colours available)

BEFORE YOU START

Remove all stickers & labels, and clean the outside of the kettle with a damp cloth.

Adjust the length of the cord by wrapping around the base as desired, then plug in to a wall socket.

 Ensure the kettle is not too close to power socket as steam from the kettle may cause an electrical hazard

Place the Kettle on the base and ensure that it is stable on the surface.


Fill the kettle to the maximum fill line (1.7L) & switch on to boil the water. Dispose of the water in the kettle – do not drink.


DESCALING YOUR KETTLE

Limescale can build up on the inside of your kettle, especially in hard and medium water areas. This can affect the taste of hot drinks and you may see limescale particles (white particles) and/or film on top of your drink. Limescale can also adversely affect the efficiency and longevity of your appliance.

- Descale as frequently as required by checking inside the kettle.
- Never use a hard object to chip away limescale as this may damage the kettle.

USING YOUR KETTLE cont.


 Boiling water poses a scalding hazard. Take care to ensure the water does not spill or come into contact with your skin.


 The walls of the kettle will become hot after boiling. Take care to ensure the kettle does not come into contact with your skin.

CLEANING & MAINTENANCE

To clean the exterior, wipe with a damp soft cloth or sponge.

Unplug and let the kettle cool before cleaning

 Do not use abrasive detergents or cleaning materials

 Do not use any chemicals containing bleach, chlorine or ammonia


To clean the filter, open the lid and remove from the spout. Place under running water and using a soft brush, wipe clean. Replace back in kettle correctly.

It is safe to use descalers in the kettle. Use the product as described by the manufacturer, then boil 2 kettles of water to remove any residue.

- If the temperature of your drink is not as hot as it was previously, this could be because the kettle switches off before it reaches boiling point. This is another sign there limescale build up and the kettle needs to be descaled.
- If your kettle has a limescale filter this can be removed and soaked in a little vinegar before being rinsed with clean water.

USING YOUR KETTLE

Remove the kettle from the base, and lift the lid to fill from the top.

 We recommend you always fill from the lid; however the spout can also be used but care must be taken to ensure water does not spill down the outside of the kettle.

Fill the kettle with the desired amount of water by using the gauge on the rear, or the 1 & 2 cup indicators inside the kettle.

Close the lid & replace on the base

Press the On/Off switch to start the kettle boiling

When the kettle has boiled, the switch will click off automatically

Pick up the kettle & pour into the desired receptacle taking care not to spill the water

IMPORTANT SAFETY INSTRUCTIONS

Take care opening the lid after boiling as steam may escape which can cause scalding.

Wait a few seconds after boiling before pouring to prevent spitting and spillages caused by the bubbling water

Do not fill above the Max Fill line (1.7L)

Do not under-fill the kettle below the internal 1 Cup marker

Take care when pouring not to over tilt as water may then escape from the lid, or splash out of the spout.

This kettle shall only be used with the power base provided.

Power Consumption (Off Mode)	0W
Power Consumption (Standby)	N/A
The period after which the equipment reaches off mode	1,00 Mins
The period after which the equipment reaches automatic standby mode	N/A

This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

