

**User Manual**

# GETTING STARTED? EASY.



ZFT519X  
ZFT516X

**EN User Manual**  
Cooker Hood

# ZANUSSI

# VISIT OUR WEBSITE TO:



Get usage advice, brochures, trouble shooter, service and repair information:  
[www.zanussi.com/support](http://www.zanussi.com/support)

## SAFETY INFORMATION AND INSTALLATION




### WARNING!

carefully the Safety chapters before any use or maintenance of the appliance.

Refer to the separate Installation Instructions booklet for Safety Information and Installation. Read

## PRODUCT DESCRIPTION

### CONTROL PANEL OVERVIEW

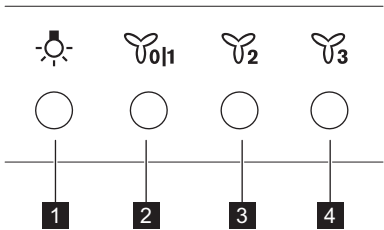




- 1** Lamp
- 2** First motor speed / Off
- 3** Second motor speed
- 4** Third motor speed

## DAILY USE

### USING THE HOOD


Check the recommended speed according to the table below.


	While heating up food, cooking with covered pots.	
	While cooking with covered pots on multiple cooking zones or burners, gentle frying.	
	While boiling, frying big quantities of food without a lid, cooking on multiple cooking zones or burners.	



It is recommended to leave the hood operating for approximately 15 minutes after cooking.

To operate the hood:

1. Press the first speed button  to switch on the appliance.

2. If needed, press the light button  to illuminate the cooking surface.
3. If needed, change the speed by pressing the desired button.

To turn off the appliance press the first speed button again.


## CARE AND CLEANING

### CLEANING THE GREASE FILTER

Each filter must be cleaned at least once a month. Filters are mounted with the use of clips and pins on the opposite side.

**To clean the filter:**

1. Press the handle of the mounting clip on the filter panel underneath the hood (1).

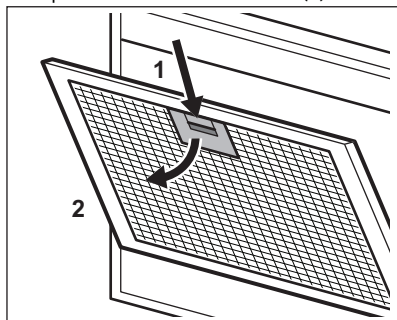

2. Slightly tilt the front of the filter downwards (2), then pull.

Repeat the first two steps for all filters.

3. Clean the filters using a sponge with non abrasive detergents or in a dishwasher.



The dishwasher must be set to a low temperature and a short cycle. The grease filter may discolour, it has no influence on the performance of the appliance.

4. To mount the filters back follow the first two steps in reverse order.

Repeat the steps for all filters if applicable.

### REPLACING THE CHARCOAL FILTER




**WARNING!** The charcoal filter is non-washable!

The time of saturation of the charcoal filter varies depending on the type of cooking and the regularity of cleaning the grease filter.

To replace the filter:

1. Remove the grease filters from the appliance. Refer to "Cleaning the grease filter" in this chapter.
2. press the tab (1) and slightly tilt the front of the filter.

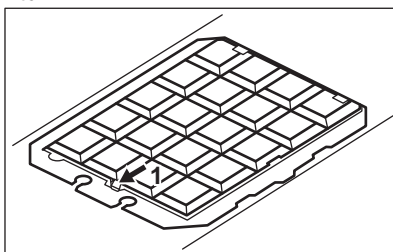


3. To install a new filter, perform the same steps in reverse order.


In any case, it is necessary to replace the filters at least every four months.

### REPLACING THE LAMP

This appliance is supplied with a LED lamp and separate control gear (LED driver). These parts can be replaced by a technician only. In case of any malfunction refer to "Service" in the "Safety Instructions" chapter.

## ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked

with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

**WWW.ZANUSSI.COM/SHOP**



**UK  
CA**

**867351510-A-302021**