


Electric Lawn Mower 1000W

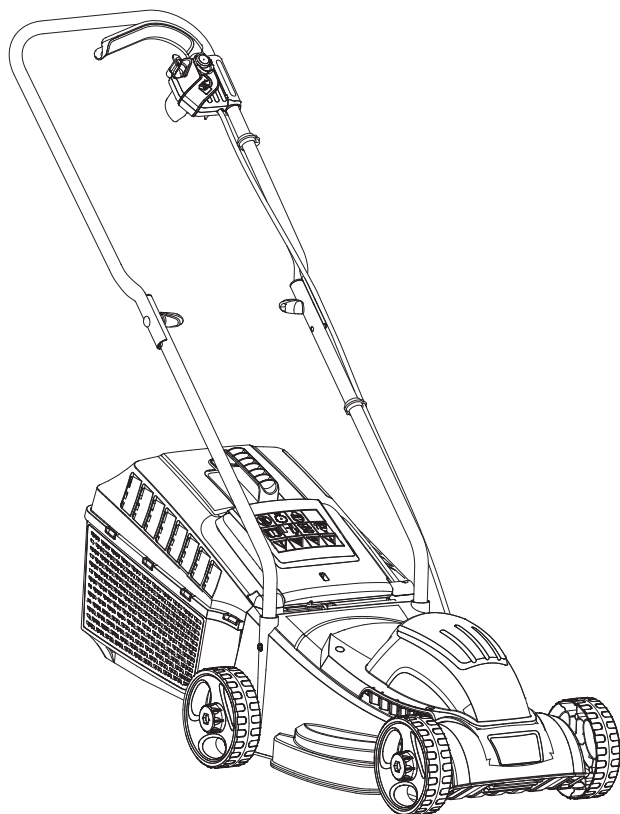

Original Instructions – FPLM1000-4_GB_V04_20191004

FPLM1000-4

EAN: 3663602939313



WARNING: Read the instructions before using the product!

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Getting **Started**...

02

Safety information

03

Your product

10

Before you start

13



In more **detail**...

18

Product functions

19

Operation

23

Care and **maintenance**

25

Trouble shooting

30

Recycling and **disposal**

31

Guarantee

31

EC Declaration **of conformity**

32

Safety warnings

1. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. If an extension cord is used, it cannot lighter than H05VV-F, wire cannot be less than $2 \times 1.5 \text{ mm}^2$ and max. 75 m length.
3. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent

Electrically powered lawnmower safety warnings

IMPORTANT:
Read carefully before use
Keep for your reference

Training

1. Read the instructions carefully. Be familiar with the controls and the correct use of the product.
2. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.
3. Never operate the product while people, especially children, or pets are nearby.
4. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

Preparation

1. While operating the product always wear substantial footwear and long trousers. Do not operate the product when barefoot or wearing open sandals. Avoid wearing clothing that is loose fitting or that has hanging cords or ties.

2. Thoroughly inspect the area where the product is to be used and remove all objects which can be thrown by the product.
3. Before using, always visually inspect to see that the blade, blade bolt and the blade assembly are not worn or damaged. Replace worn or damaged components in sets to preserve balance. Replace damaged or unreadable labels.
4. Before use check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the supply immediately. **DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.** Do not use the product if the cord is damaged or worn.

Operation

1. Operate the product only in daylight or in good artificial light.
2. Avoid operating the product in wet grass.
3. Always be sure of your footing on slopes.
4. Walk, never run.
5. Mow across the face of slopes, never up and down.
6. Exercise extreme caution when changing direction on slopes.
7. Do not mow excessively steep slopes.
8. Use extreme caution when reversing or pulling the product towards you.
9. Stop the blade(s) if the product has to be tilted for transportation when crossing surfaces other than grass, and when transporting the product to and from the area to be used.
10. Never operate the product with defective guards or shields, or without safety devices, for example deflectors and/or grass collector, in place.

11. Do not tilt the machine when switching on the motor, except if the machine has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part, which is away from the operator.
12. Do not start the machine when standing in front of the discharge opening.
13. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
14. Do not transport the machine while the power source is running.
15. Switch on the motor carefully according to instructions and with feet well away from the blade(s).
16. Stop the product, and remove plug from the socket. Make sure that all moving parts have come to a complete stop.
 - whenever you leave the product,
 - before clearing blockages or unclogging chute,
 - before checking, cleaning or working on the product,
 - after striking a foreign object. Inspect the product for damage and make repairs before restarting and operating the product;
17. If the product starts to vibrate abnormally (check immediately),
 - inspect for damage,
 - replace or repair any damaged parts,
 - check for and tighten any loose parts.

Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the product is in safe working condition.
2. Check the grass collector frequently for wear or deterioration.
3. Be careful during adjustment of the product to prevent entrapment of the fingers between moving blades and fixed parts of the product.

4. Always allow the product to cool down before storing.
5. Keep tight grip on the handles/gripping surface.
6. Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
7. Plan your work schedule to spread any high vibration tool use across a longer period of time.
8. When servicing the blades be aware that, even though the power source is switched off, the blades can still be moved.
9. Replace worn or damaged parts for safety. Use only genuine replacement parts and accessories.

Recommendation for class II products

The product should be supplied via a residual current device (RCD) with a tripping current of not more than 30 mA.

Vibration and noise reduction

To reduce the impact of noise and vibration emission, limit the time of operation, use low-vibration and low-noise operating modes as well as wear personal protective equipment.

Take the following points into account to minimize the vibration and noise exposure risks:

1. Only use the product as intended by its design and these instructions.
2. Ensure that the product is in good condition and well maintained.
3. Use correct cutting device for the product and ensure they in good condition.
4. Keep tight grip on the handles/gripping surface.
5. Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
6. Plan your work schedule to spread any high vibration tool use across a longer period of time.

Emergency

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

1. Always be alert when using this product, so that you can recognise and handle risks early. Fast intervention can prevent serious injury and damage to property.
2. Switch off and disconnect from the power supply if there is operation again.

Residual risks

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:










 




1. Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
2. Injuries and damage to property due to broken application tools or the sudden impact of hidden objects during use.
3. Danger of injury and property damage caused by flying objects.



WARNING! This product produces an electromagnetic field during operation! This field may under some circumstances interfere with active or passive medical implants! To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!

Symbols

On the product, the rating label and within these instructions you will find among others the following symbols and abbreviations. Familiarise yourself with them to reduce hazards like personal injuries and damage to property.

V~	Volt, (alternating voltage)	cm ³	Cubic centimetre
W	Watt	/min or min ⁻¹	per minute
Hz	Hertz	mm	Millimetre
A	Ampere	kg	Kilogram
dB(A)	Decibel (A-rated)	m/s ²	Metres per second squared
yyWxx	Manufacturing date code; year of manufacturing (20yy) and week of manufacturing (Wxx).	IPX4	Protection against solid foreign bodies as well as against splashed water from all directions
L	Litre		
	Lock / to tighten or secure		Unlock / to loosen
	Caution / Warning.		Read the instruction manual.
	Wear hearing protection.		Wear eye protection.
	Wear respiratory protection.		Wear protective gloves.
	Wear respiratory protection.		Wear protective, slip-resistant footwear.
	Switch the product off and disconnect it from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.		
	Do not expose the product to rain or wet conditions.		
	Mow across the face of slopes, never up and down.		
	Inspect the area where the product is to be used and remove all objects which could be thrown by the product. If objects are hidden while operating stop the motor and remove them.		



Objects thrown by the product could hit the user or other bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children must not come near the area where the product is.



Beware of sharp blades. Blades continue to rotate after the motor is switched off. Remove plug from mains before maintenance or if cord is damaged.



Keep supply flexible cord away from cutting device.



Cutting device continues to rotate after the product is switched off. Wait until all components have completely stopped before touching the product.



Pay special attention when working on the cutting device!



Guaranteed sound power level value in dB.



This product is of protection class II. That means it is equipped with enhanced or double insulation.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.





WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



FPLM1000-4 **FP** - OPP, **LM** - Lawn mower

Your product

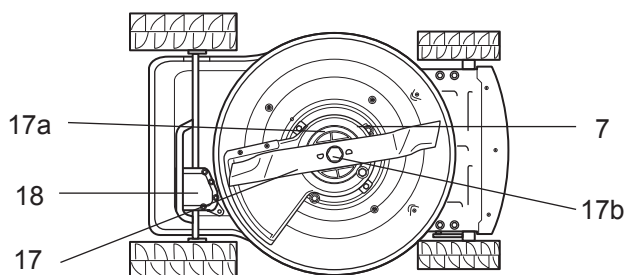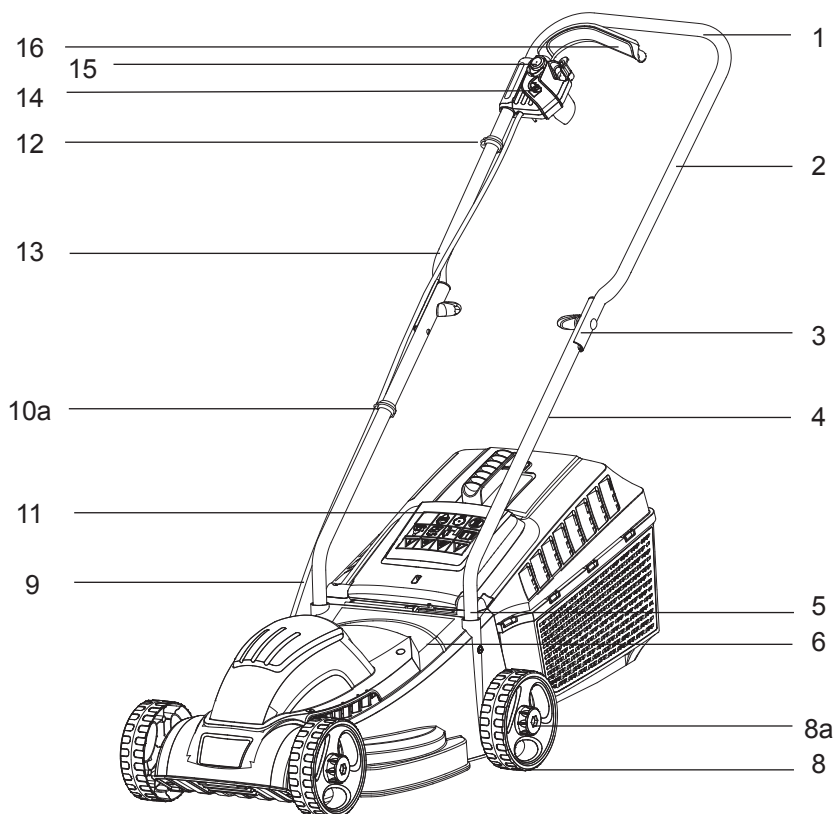

1. Handle

2. Upper handle bar

3. Mounting set (x 2)

a. Knob *

b. Bolt *

4. Lower handle bar

a. Screw (x 2)

5. Support

6. Transportation handle

7. Air vents

8. Wheel (x 4)

a. Knob with bolt(x 4)

b. Mounting plate *

9. Hook
10. Grass catcher

a. Handle

b. Top part *

c. Bottom part *

11. Deflector guard

12. Cord clip (x 2)

13. Interconnection cord

14. Lock-off button

15. Cord strain relief

16. Start lever

17. Cutting device (blade)

a. Spindle

b. Bolt

18. Rear discharge chute



NOTE: Parts marked with * are not shown in this overview. Please refer to the respective section in the instruction manual.

Technical specifications

General

- > Rated voltage:

> Rated input:

> Rated no load speed n_0 :

> Cutting width:

> Cutting height:

> Grass catcher volume:

> Protection class:

> Degree of protection:

> Dimensions:

> Weight:
- 220-240 V~, 50 Hz

1000 W

3500 min⁻¹

320 mm

20/40/60 mm; 3 levels

27 L

II /

IPX4

approx. 110 x 37 x 94 cm

approx. 9.4 kg

Sound values

- > Emission sound pressure level:

> Uncertainty:

> Measured sound power level:

> Uncertainty:

> Guaranteed sound power level L_{WA} :
- 86 dB(A)

K = 3 dB

93.2 dB(A)

K = 2.18 dB

96 dB(A)

Vibration values

- > Hand arm vibration a_h :
- $\leq 2.5 \text{ m/s}^2$

The sound values have been determined according to noise test code given in EN 60335-2-77, using the basic standards EN ISO 11201 and EN ISO 3744.

The sound intensity level for the operator may exceed 80 dB(A) and ear protection measures are necessary.

The declared vibration value has been measured in accordance with a standard test method (according to EN 60335-2-77) and may be used for comparing one product with another. The declared vibration value may also be used in a preliminary assessment of exposure.



WARNING! The vibration emission value during actual use of the tool can differ from the declared value depending on the ways in which the tool is used. Identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time). Depending on the actual use of the product the vibration values can differ from the declared total. Adopt proper measures to protect yourself against vibration exposures. Take the whole work process including times the product is running under no load or switched off into consideration. Proper measures include among others regular maintenance and care of the product and accessories, keeping hands warm, periodical breaks and proper planning of work processes.

Unpack

1. Unpack all parts and lay them on a flat, stable surface.
2. Remove all packing materials and shipping devices if applicable.
3. Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
4. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.

You will need

(items not supplied)

- > Suitable personal protective equipment
- > Suitable wrench
- > Suitable crosshead screwdriver
- > Extension cord for outdoor use
- > Lubrication oil

Assembly



WARNING! The product must be fully assembled before operation! Do not use a product that is only partly assembled or assembled with damaged parts! Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!



Do not connect the product to power supply before it is completely assembled!



NOTE: Take care of small parts that are removed during assembly or when making adjustments. Keep them secure to avoid loss.

Wheel assembly



WARNING! Always check the mounting plates (8b) before assembling the wheels. Never attach the wheel on a damaged or loose mounting plate. The wheels must be assembled on the same height level. Using a product with wheels assembled on different height level may cause damage of the cutting unit (e.g. cutting device, spindle etc.) or unsatisfactory result.

1. Align the axle hole of the wheel (8) with one of the three height adjustment holes in the mounting plate (8b).
2. Insert the knob with bolt (8a) and tighten it to secure the wheel (Fig. 1).
3. Repeat the assembly for the other three wheel assemblies (8).
4. Ensure the four wheels are assembled on the same height level and rotate smoothly.



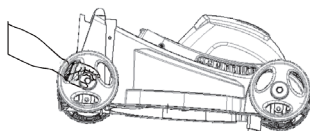


Fig. 1


5. Place the lawnmower on its side when tightening each wheel.

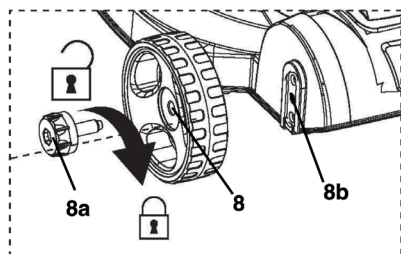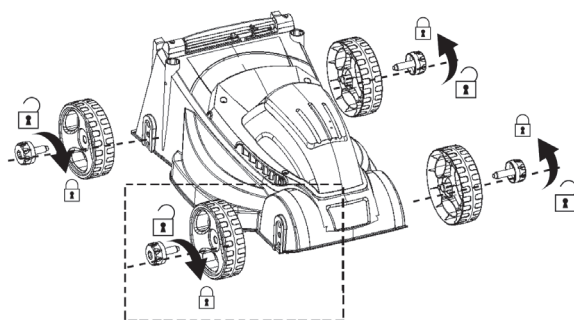

Important: Ensure all four wheels are securely tightened before each use.

Lower handle bar

1. Insert the lower handle bars (4) into the supports (5). Ensure the mounting holes in the lower handle bars (4) are aligned with the ones in the supports (5) (Fig. 2).
2. Secure the lower handle bars (4) with the screws (4a) and tighten them with a proper crosshead screwdriver (Fig. 2).

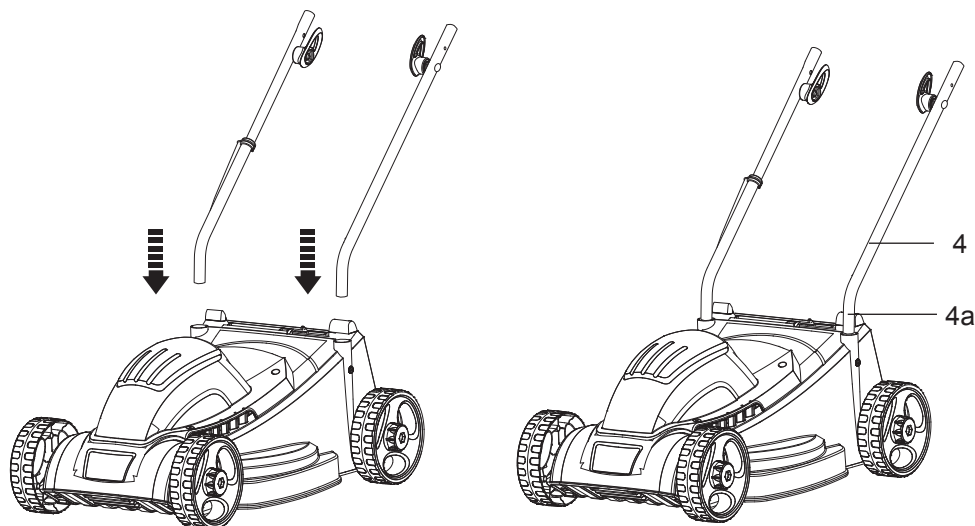**Fig. 2**

Upper handle bar

1. Attach the upper handle bar (2) to the lower handle bars (4) and align the holes in the upper handle bar with the ones in the lower handle bars (Fig. 3).
2. Secure the upper handle bar (2) with the mounting sets (3) to the lower handle bars (4) and tighten the knobs (3a) clockwise (Fig. 3).

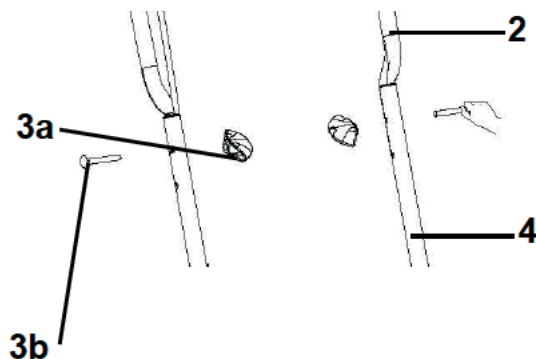


Fig. 3

3. Fix the power cord (13) with the cord clips (12) to the handle bars (2, 4) (Fig. 4).

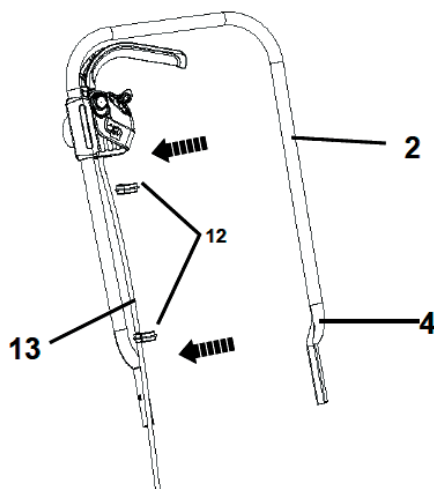


Fig. 4



NOTE: There are two handle height positions in the lower handle bar. Ensure the upper handle is assembled on the same height level on both side of lower handle.

Grass catcher

1. Align the fronts end of the top part (10b) and the bottom part (10c) of the grass box. Clip the two halves together starting at the front.
2. Once the front clips on either side are secure, work back on either side to secure each clip. This method will help to keep the two halves of the box aligned.
3. Fit the handle (10a) into the top of the grass box.
4. Before you fit the grass box onto the mower you must ensure that the motor is switched off and the blade is not rotating. The grass box must be attached to the two hooks on the mower. Open the grass deflector (11) with one hand and attach the grass box with the other hand as shown in Fig. 6. The grass deflector is held against the grass box by a spring.

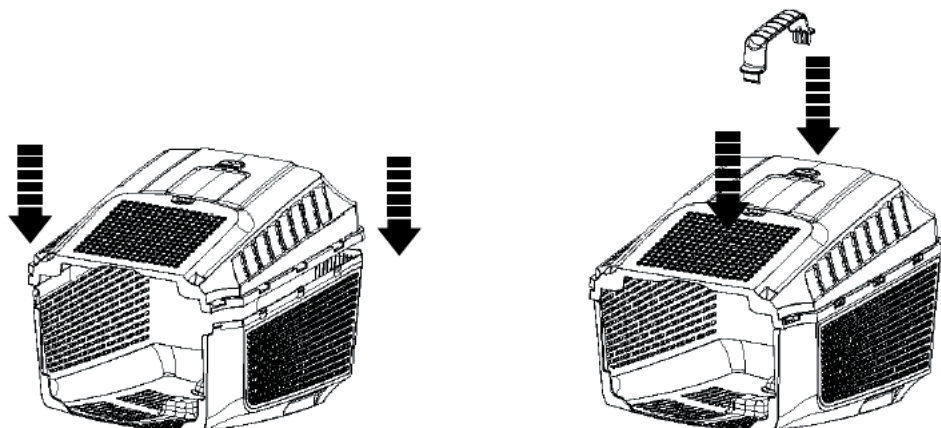


Fig. 5


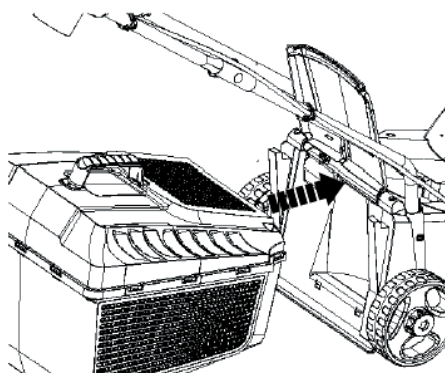


Fig. 6

In more detail...



Product functions	19
Operation	23
Care and maintenance	25
Trouble shooting	30
Recycling and disposal	31
Guarantee	31
EC declaration of conformity	32

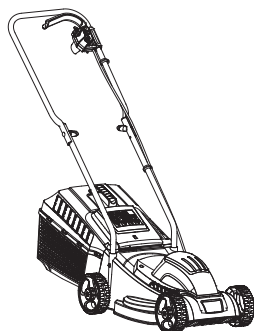

Intended use

This electric lawnmower FPLM1000-4 is designated with a rated input of 1000 Watts.

1. The product is intended for mowing grass in domestic gardens only. It must not be used to mow unusually high dry grass or wet grass, e.g. pasture grass; for shredding leaves or mulching.
2. For safety reasons it is essential to read the entire instruction manual before first operation and to observe all the instructions therein.
3. This product is intended for private domestic use only, not for any commercial trade use. It must not be used for any purposes other than those described.

Cutting height adjustment

Adjust the cutting height according to the needs of your lawn. The cutting height depends on the kind of lawn and its actual height. When mowing high grass, start with the maximum cutting height and make a second cut with lower cutting height.



WARNING! Always check the mounting plates (8b) before assembling the wheels. Never attach the wheel on a damaged or loose mounting plate.

The wheels must be assembled on the same height level. Using a product with wheels assembled on different height level may cause damage of the cutting unit (e.g. cutting device, spindle etc.) or unsatisfactory result.

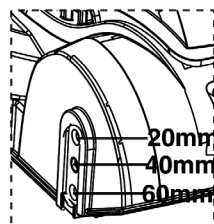
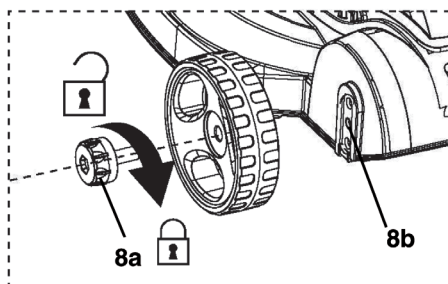
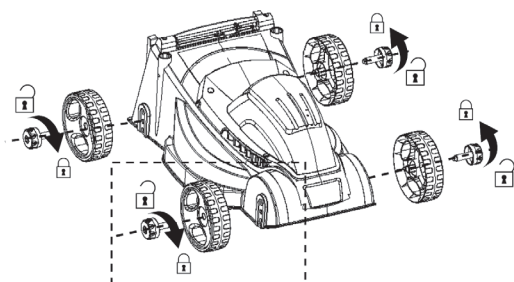


Fig. 10

1. Release the start lever (16) and disconnect the product from the power supply before adjusting the height of the wheels.
2. Loose the knob with bolt (8a) and remove them together the wheel (8).
3. Align the axle hole of the wheel (8) with the required height adjustment hole in the mounting plate (8b) and tighten the knob (8a) (Fig. 10).
4. Repeat the height adjustment for the other three wheel assemblies (8) (Fig. 10).
5. Ensure the four wheels are assembled on the same height level and scroll smoothly without stuck or blockage.

Handle bar adjustment

1. Disconnect the plug from the extension cord and loosen the knobs (3b) anti-clockwise to fold the handle assembly for storage (Figs. 11, 12).
2. Ensure the power cord (13) is not squeezed, and then tighten the knobs (3b) clockwise.

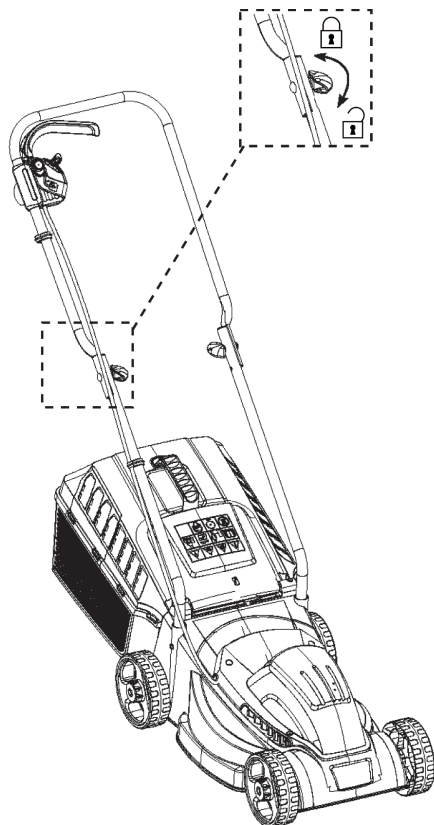


Fig. 11

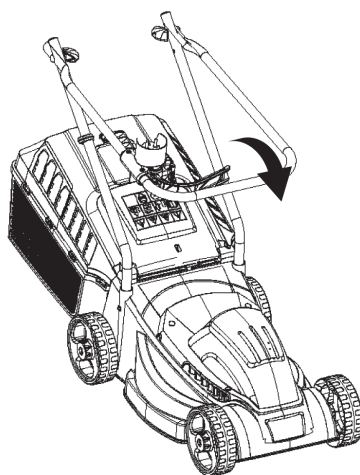


Fig. 12

Grass catcher

Always attach the grass catcher (10) when using the product for grass collection. Always carry the grass catcher by its handle (10a).

Emptying

Empty the grass catcher (10) frequently during use. Do not wait until it is completely full. We recommend emptying it when it is half full.



NOTE: A full grass catcher will reduce the performance of this product.

1. Lift the deflector guard (11) and lift the grass catcher (10) off the hooks (9).
2. Remove the grass clippings from the discharge chute (18) into the grass catcher (10). Use a proper tool such as a brush.



WARNING! Ensure that the lever engages between two of the prongs!



Switch the engine off and wait that the blade had come to a complete stop before adjusting the cutting height!

3. Remove the grass catcher (10).
4. Empty the grass clippings onto a compost heap.
5. Re-fit the grass catcher (10) to the hooks (9).



WARNING! Do not attempt to use the product without the grass catcher attached when collecting grass – danger of flying objects!

Switch the motor off and wait that the blade had come to a complete stop before removing the grass catcher!

General operation

Check the product, its interconnection cord and extension cord and plug as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.

1. Double check that accessories or cutting device are properly fixed.
2. Push the product forward by its handle. Keep the handle dry to ensure safe support.
3. Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.
4. Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to complete stop before averting.
5. Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.

Switching on/off



NOTE: The product can only be started with pressing the lock-off button (14) first followed by squeezing the start lever (16). Reverse operation cannot start the product.

NOTE: The cutting device (17) will continue to rotate for a short period after the product has been switched off.

1. Ensure the start lever (16) is released.
2. Press the lock-off button (14) and hold it in position (Fig. 13, step 1).
3. Squeeze the start lever (16) towards the handle (1) to switch the product on (Fig. 13, step 2). Hold the start lever (16) in position during operation.
4. Release the start lever (16) to switch the product off.

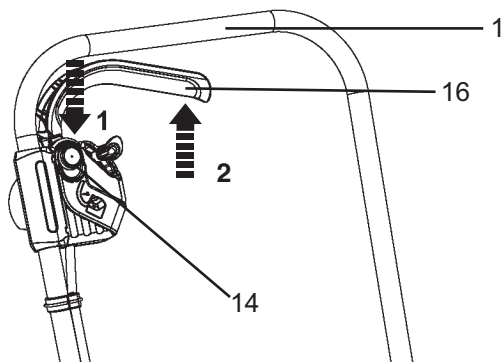


Fig. 13

Mowing

1. Make sure that the lawn is clear of stones, sticks, wire or other objects that could damage the product or its motor.
2. Do not cut wet grass because it tends to stick to the underbody of the product, preventing the proper discharge of grass clippings, and it could also cause you to slip and fall.
3. Never cut off more than one-third of the total length of the grass for a healthy lawn. In the autumn, lawns should only be cut as long as there is growth.
4. Slowly push the product forward.
5. Mow in slightly overlapping rows. The most effective pattern for mowing lawns is straight lines along one of the sides. This will keep the rows even and ensures that all the lawn is cut without missing any spots (Fig. 14).

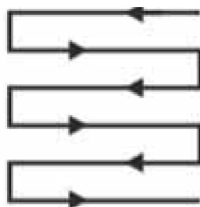


Fig. 14

6. Circle around flower beds. When reaching a flower bed in the middle of the lawn, cut a row or two around the circumference of the bed.
7. Pay special attention when changing direction.





WARNING! If the product strikes a foreign object stop the motor! Switch the product off, disconnect it from the power supply and let it cool down. Inspect the product thoroughly for damage! Have any damage repaired before restarting!

Extensive vibration of the product during operation is an indication of damage! Stop the motor. The product should be promptly inspected and repaired!

After use


1. Switch the product off, disconnect it from the power supply and let it cool down.
2. Check, clean and store the product as described below.

The golden rules for care



WARNING! Always switch the product off, disconnect it from the power supply and let the product cool down before performing inspection, maintenance and cleaning work!


1. Keep the product clean. Remove debris from it after each use and before storage.
2. Regular and proper cleaning will help ensure safe use and prolong the life of the product.
3. Inspect the product before each use for worn and damaged parts. Do not operate it if you find broken and worn parts.



WARNING! Only perform repairs and maintenance work according to these instructions! All further works must be performed by a qualified specialist!

General cleaning

1. Clean the product with a dry cloth. Use a brush for areas that are hard to reach.
2. In particular clean the air vents (7) after every use with a cloth and brush.
3. Remove stubborn dust with high pressure air (max. 3 bar).



NOTE: Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this product as they might be harmful to its surfaces.

4. Check for any damage and wear. Repair damages in accordance with this instruction manual or take it to an authorised service centre before using the product again.

Spare parts/Replacement parts

The following parts of this product may be replaced by the consumer. Spare parts are available at an authorized dealer or through our customer service.

Description	Model no. or Specification
Cutting device (blade)	GD65BX.00.03

Underbody and cutting device



WARNING! Wear safety gloves when working on the cutting device and close to it! Use proper tools to remove debris, e. g. a wooden stick! Never use your bare hands!

Always use original spare parts for replacement. The cutting device must be replaced by an identification no. ref. GD65BX.00.03. Do not attach any other type of cutting device!

The replacement of the cutting device should be done by an experienced user! Rework or sharpening blades is not recommended unless it is done by a repair service or a similarly qualified specialist!

1. Keep the underbody and cutting device (17) clean and free of debris. Remove clippings from the discharge chute (18).
2. Check all nuts and bolts periodically for tightness before operation. After prolonged use, especially in sandy soil conditions, the cutting device will become worn and lose some of the original shape. The cutting efficiency will be reduced and the cutting device should be replaced.
3. Keep the cutting device (17) sharp to ensure a good cutting performance. Replace a worn or damaged cutting device with a new one of the same type or have it sharpened by a qualified specialist.
4. Loosen the bolt (17b) anti-clockwise using a suitable wrench and remove it together with cutting device (17) (Fig. 15).
5. Replace the cutting device with a new one of the same type.
6. Reattach the cutting device (17) onto the spindle (17a), pay attention to correct alignment. Then retighten the fastening bolt. The tightening torque should be approximately 25 N m.
7. Replace this cutting device after 50 hours mowing or 2 years whichever is sooner regardless of condition. If the cutting device is cracked or damaged, immediately replace it with a new one.

8. Lubricate the cutting device (17) after each use to prolong the life span of cutting device and product. Apply light machine oil along the edge of the cutting device.

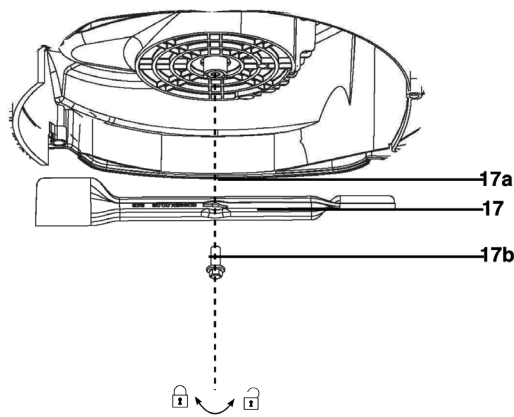


Fig. 15

Grass catcher

Inspect the grass catcher (10) before each use. Do not use it if you find any damage.

Power cord

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

UK plug


If you need to replace the fitted plug, then follow the instructions below.

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral

Brown – Live

As the colours of the wire in the mains lead of this product may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows. The wire, which is coloured blue, must be connected to the terminal, which is marked with **N** or coloured black. The wire, which is coloured brown, must be connected to the terminal, which is marked **L** or coloured red.

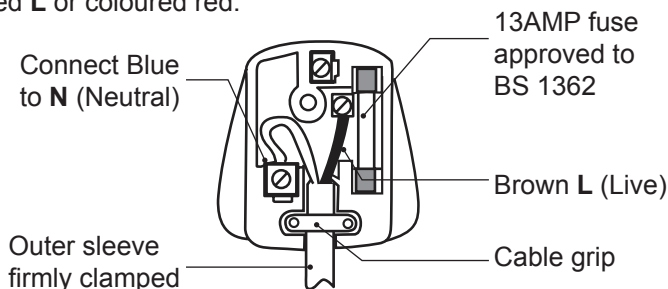

WARNING! Never connect live or neutral wires to the earth terminal of the plug.

Only fit an approved 13 Amp BS 1363 or BS 1363/A plug and the correctly rated fuse. If in doubt, consult a qualified electrician.



NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

Repair

This product does not contain any parts that can be repaired by the consumer. Contact an authorised service centre or a similarly to have it checked and repaired.

Storage

1. Clean the product as described above.
2. Store the product and its accessories in a dry, frost-free place.
3. Always store the product in a place that is inaccessible to children. The ideal storage temperature is between 10 and 30 °C.
4. We recommend covering the product with a suitable cloth or enclosure to protect it against dust.
5. Fold the upper handle bar (2) and fix it in position as described above.

Transportation

1. Switch the product off and disconnect from power supply before transporting it anywhere.
2. Adjust the cutting height to the highest position as described above.
3. Always transport the product by its handle. When lifting the product use the transportation handle (6) as an aid.
4. Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
5. Secure the product to prevent it from slipping or falling over.

Trouble shooting

Suspected malfunctions are often due to causes that the user can fix themselves. Therefore check the product using this section. In most cases the problem can be solved quickly.



WARNING! Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!

Problem	Possible cause	Solution
1. Product does not start	1.1 Not connected to power supply	1.1 Connect to power supply
	1.2 Power cord or plug is defective	1.2 Check by a specialist electrician.
	1.3 Other electrical defect to the product	1.3 Check by a specialist electrician
	1.4 Lock-off button not pressed	1.4 Press the lock-off button first, then the start lever
2. Product does not reach full power	2.1 Extension cord not suitable for operation with this product	2.1 Use a suitable extension cord
	2.2 Power source (e.g. generator) has too low a voltage	2.2 Connect to another suitable power source
	2.3 Air vents are blocked	2.3 Clean the air vents
3. Unsatisfactory result	3.1 Cutting device is worn	3.1 Replace with a new one
	3.2 Cutting material exceeds capacity	3.2 Only cut materials according to capacity of the product
	3.3 Cutting height is incorrect	3.3 Adjust cutting height
	3.4 Wheels on different height level	3.4 Adjust the wheels on the same height level

Recycling and disposal



Old products are potentially recyclable under WEEE and do not, therefore, belong in your household rubbish. You are requested to assist us and our contribution to saving resources and protecting the environment by handing in this appliance at an equipped collection centre (if there is one available).

- > The product comes in a package that protects it against damage during shipping. Keep the package until you are sure that all parts have been delivered and the product is functioning properly. Recycle the package afterwards.

Guarantee

This product carries a guarantee of 12 months starting from the day of purchase. Please retain your receipt as a proof.

This guarantee specifically excludes losses due to:

- Normal wear and tear, including accessory wear
- Overload, misuse or neglect
- Failure of consumable items (such as batteries)
- Repairs attempted by anyone other than an authorized agent
- Accidental damage caused by foreign objects or substances
- Lack of routine maintenance
- Failure to follow manufacturer's guidelines
- Loss of use of the goods

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

This guarantee does not affect your statutory rights.

For any inquiries relating to the guarantee please contact your retailer : If you purchased this product in B&Q store or website then call 0333 0143101. If you bought this product in SFX outlet or website then call 03330 112 112.

EC declaration of conformity



We

Kingfisher International Products B.V.
Rapenburgerstraat 175E, 1011 VM Amsterdam, The Netherlands

Declare that the product
1000 W 32 cm Lawnmower FPLM1000-4
Serial number: from 000001 to 999999

Complies with the essential health and
safety requirements of the following directives:

The Machinery Directive 2006/42/EC
The EMC Directive 2014/30/EU
The Outdoor Noise Directive 2000/14/EC & 2005/88/EC
The RoHS directive 2011/65/EU

- Conformity assessment procedures: Annex VI of the directive
- Measured Sound Power Level: 93.2 dB(A)
- Guaranteed Sound Power Level: 96 dB(A)
- Certificate registration number: OR/006931/038
- Test report No.: 704031503670
- Notified body: 0036, TÜV SÜD Industrie Service GmbH,
Westendstraße 199, 80686 München, Deutschland

The standards and technical specifications refer to:

EN 60335-1: 2012+A11: 2014

EN 55014-2: 1997+A1: 2001+A2: 2008

EN 60335-2-77: 2010

EN 61000-3-2: 2014

EN 62233: 2008

EN 61000-3-2: 2013

EN 55014-1: 2006+A1: 2009+A2: 2011

Authorized Signatory and technical file holder

Signed for and on behalf of:

Kingfisher International Products B.V.

Rapenburgerstraat 175E


1011 VM Amsterdam

The Netherlands

Jean-Christophe Ferrer

Director of Group Quality

on: 11/10/2016

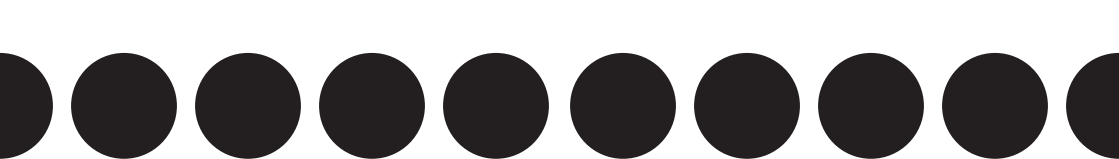

Manufacturer:
Kingfisher International Products Limited
3 Sheldon Square
London
W2 6PX
United Kingdom

Kingfisher International Products B.V.
Rapenburgerstraat 175E
1011 VM Amsterdam
The Netherlands



Distributor: **B&Q plc**
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com

SFD Limited
Trade House, Mead Avenue
Yeovil
BA22 8RT, UK