




TEMPLATE

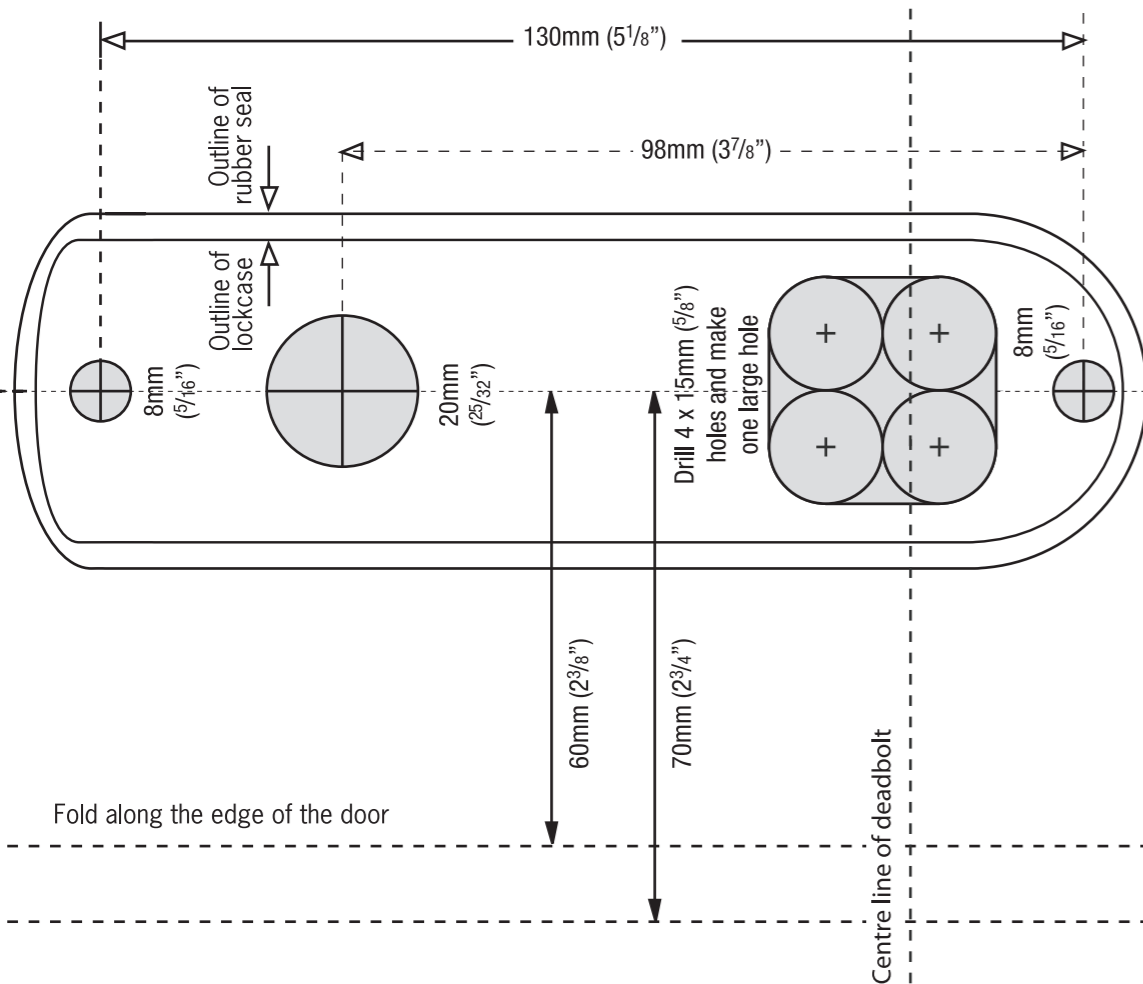

3. DEADBOLT SUPPORT POST

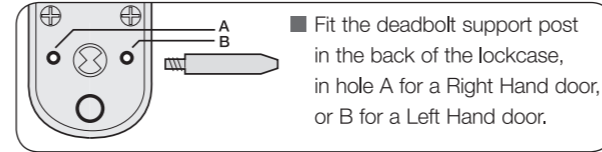


4. POSITIONING THE SPINDLE

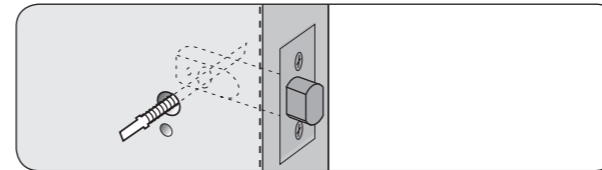


- For doors more than 65mm (2 1/2") thick, ring the Helpline for advice. The spring keeps the spindle firmly engaged in the outside handle when the lock is assembled on the door.
- Insert the spindle, with the spring on the code side, through the slot in the deadbolt.

5. FIXING THE LOCK

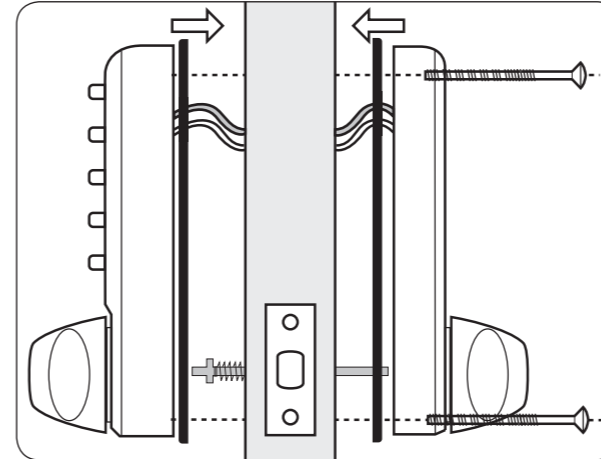

- Cut the fixing bolts to suit the door thickness, allowing at least one, but no more than two, threaded sections to enter the lock case.
- Remove the battery cover from the back plate, and remove the battery pack. Apply the front plate over the spindle, if using the 60mm backset pass the deadbolt support post through the deadbolt and the cable through the door. Place the back plate over the spindle, pull the cable through, and screw the fixing bolts through to the front plate.
- Using the inside knob check that the spindle moves freely, and that the deadbolt retracts and projects smoothly. If it is tight, loosen the fixing bolts slightly and adjust the position of the back plate until the spindle will turn freely. Tighten the fixing bolts. Test the spindle again. **DO NOT** over-tighten the bolts as this may cause the door to distort and affect the lock function.
- DO NOT CLOSE THE DOOR UNTIL YOU ARE SURE THAT THE CODE WORKS**
- Connect the cables, storing any excess cable within the door. Then install the battery pack.

6. FIXING THE KEEPER PLATE

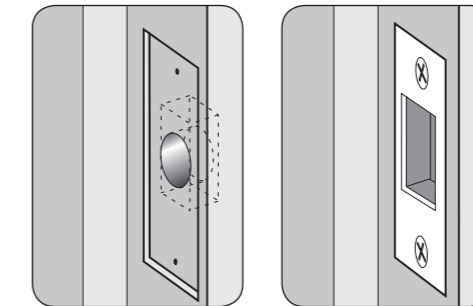

- Position the keeper plate on the frame so that it lines up with the deadbolt.
- Mark the inner and outer edges of the keeper plate and cut a rebate so that it fits flush with the surface of the door frame.
- Drill or cut a recess 25mm (1") deep for the deadbolt.
- Fit the keeper plate using only one wood screw at first to ensure that it is positioned accurately. The deadbolt should enter the aperture easily. When satisfied secure the keeper with the second screw.

CODELOCKS
control + convenience

INSTALLATION INSTRUCTIONS

II-2K-0812

CODELOCK
2000
ELECTRONIC

Electronic Mortice Deadbolt

Helpline, service & spares
FREephone 0800 393 405

CODELOCKS LTD UK
Tel 01635 239645
Fax 01635 239644
sales@codelocks.co.uk

CODELOCKS INC USA
Tel +1 714 979 2900
Fax +1 714 979 2902
sales@codelocks.us
www.codelocks.com



II-2K-0812-V01


MORTICE LATCHSET

CONTENTS

SPECIAL NOTES

2. APPLY THE TEMPLATE


TEMPLATE

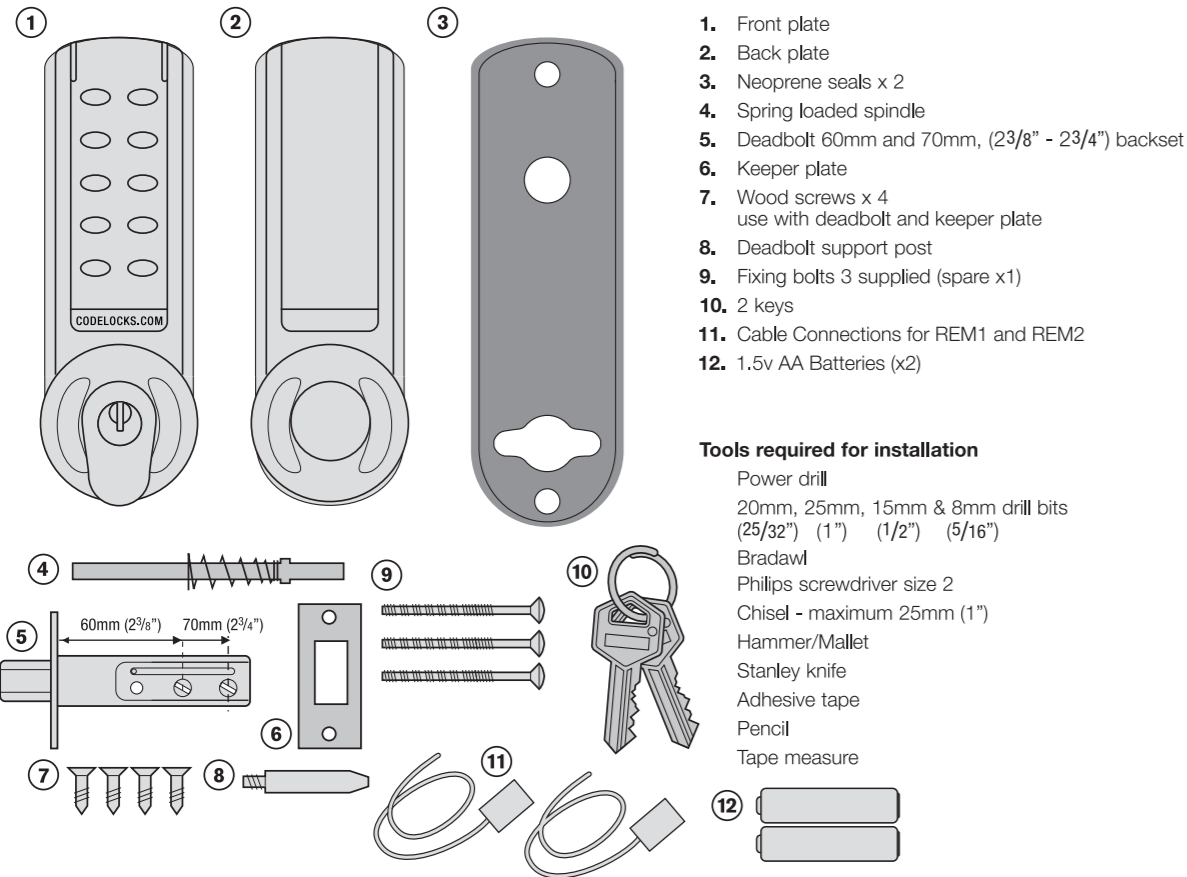


You are advised to familiarise yourself with the instructions before starting work.

- Remove the battery cover from the back plate and install the 2 x AA cells supplied.
- Connect the cables from the front plate and back plate. A BLEEP should be heard when you do this. If no BLEEP is heard then check that the batteries are correctly installed.
- Enter the factory Master Code, 1234 (**note; when programming the badge bar CODELOCKS.COM must prefix the Master Code**). The blue light will flash and the front knob will be able to be Turned using finger and thumb.
- Disconnect the cables.
- Check that the deadbolt moves freely by turning the flat spindle in the cam.

1. CHECK THE HAND OF YOUR DOOR

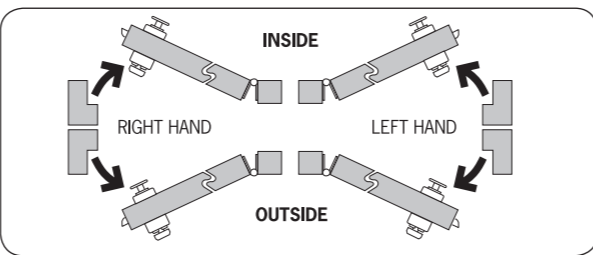

Viewed from outside, a door is right handed if the hinges are on the right, and left handed if the hinges are on the left.

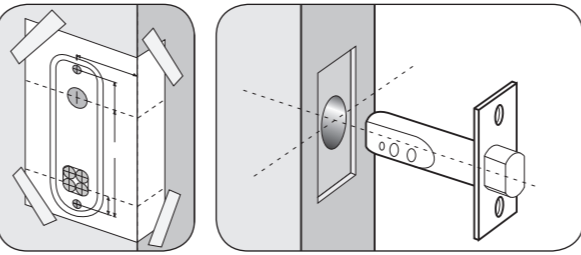

- Crease the template along the line marked Door Edge, using either the 60mm (23/8") or 70mm (23/4") backset line and tape it to the door.
- Mark the 2 x 8mm (5/16"), 4 x 15mm (5/8") holes and the 20mm (25/32") hole. Mark the centre line of the deadbolt in the middle of door edge. Now apply the template to the other side of the door, aligning it with your first mark in the middle of the door edge. Mark the 7 holes again.
- Keeping the drill level and square to the door, drill holes from both sides to avoid splintering out of door face.

Positioning and fixing the deadbolt

- Mark a central point on the 'centre line of deadbolt' on the door edge.
- Mark the depth of 90mm (31/2") on the drill bit with tape to act as a visible depth limit. Drill a 25mm (1") hole, 90mm (31/2") deep, keeping the drill level and square to the door.
- Insert the deadbolt into the hole, and with the edges parallel to the door, draw around the face plate.
- Remove the deadbolt. Score the pencil line with a Stanley Knife to avoid splitting prior to chiselling. Chisel a 3mm (1/8") rebate to fit the deadbolt face flush to the door edge.
- Fix the deadbolt with the wood screws, with the arrow pointing up.

