

LUBE FREE AIR HOIST USER MANUAL

MODEL - TCS-980-LF



FRONT COVER

CONTENTS

INTRODUCTION & SPECIFICATION

SECTION 1:	GETTING STARTED
1.1 1.2 1.3 1.4 1.5 1.6 1.7	UNPACKING & SPECIFICATION OPERATION CHECKS BEFORE USE & HOSE SUPPORT BRACKET INSTALLATION TECHNICAL CHARACTERISTICS HOIST CHECKS HOIST CONTROLS ADDITIONAL INSTALLATION INSTRUCTIONS
SECTION 2:	LUBRICATION
SECTION 3:	SAFE OPERATION
3.1 3.2 3.3 3.4 3.5	HOIST OPERATORS & FORESEEABLE INCORRECT USE SAFETY EQUIPMENT - PPE LIFTING GEAR BELOW THE HOIST MOUNTING ON TROLLEYS OPERATIONAL BREAKDOWN OR ACCIDENT
SECTION 4:	MAINTENANCE
4.1 4.2 4.3 4.4 4.5 4.6 4.7 4.8	GENERAL REPAIRS SILENCING CHANGING THE SILENCERS FITTING OR REPLACING LOAD CHAIN TYPES OF CHAIN HOIST COMPONENTS AND CHAIN SERVICE DATA
SECTION 5:	LAYING UP THE HOIST
SECTION 6:	CHAIN COLLECTORS
SECTION 7:	SPEED ADJUSTMENT
SECTION 8:	OPERATIONAL BREAKDOWN / TROUBLESHOOTING THE TCR & TCS HOIST
SECTION 9:	PERIODIC EXAMINATION & TESTING
9.1 9.2 9.3	EXAMINATION SIX MONTHLY OFFSHORE INSPECTION TESTING
SECTION 10:	DUTY RATINGS
SECTION 11:	EXPLOSION PROTECTION
SECTION 12:	DATA SHEET
SECTION 13:	DRAWINGS & PARTS LIST
SECTION 14:	ACCESSORIES
SECTION 15:	LOG BOOK



INTRODUCTION AND SPECIFICATION

Thank you for choosing the TCS pneumatic chain hoist which are available as 500 kg to 980 kg.

Provided that the hoist is used and maintained in accordance with this manual it will afford you many years of reliable service.

Red Rooster hoists comply with the latest standards and are designed for safe and efficient operation.

Before installing the unit, please ensure that both the personnel responsible for installation, maintenance and operation are fully acquainted with the sections of this manual which are relevant to them.

This manual should be accessible at all times to the relevant person, in case of loss ask your dealer for a new copy.

SWL (KG)	MODEL	CHAIN FALLS	WEIGHT (KG)		WEIGHT (KG)		FULL LOAD LIFTING SPEED	FLR SIZE	MINIMUM HOSE SIZE
			3M HOL	EXTRA P/M	(M/MIN)		(ID)		
500	TCS-500-LF	1	19	0.8	17.0	0.5"	0.5"		
980	TCS-980-LF	2	23.5	1.6	8.5	0.5"	0.5"		

Specification sheet gives full details of actual model supplied.

The nameplate fitted to the hoist gives the details to identify and gives further information on the hoist.

The following notations are used throughout this manual. Notations:



DANGER

Failure to follow this instruction may result in a dangerous occurrence or fatal injury



CAUTION

Failure to follow this instruction may result in premature wear of the hoist or a component part of the hoist



GETTING STARTED - UNPACKING & SPECIFICATION

1.1 UNPACKING THE HOIST

The hoist will have been packed into a cardboard box or palletised (see weight details in specification) Handling of all models of hoist & trolley will require lifting equipment and shouldn't be moved by hand.

WHEN UNPACKING:

Ensure that both hoist and any ancillary equipment are recovered from the packaging. Small or delicate items may have been packed separately. Check the contents against the supplier's delivery note and advise the supplier immediately of any shortages.

Ensure that the hoist and ancillary equipment are undamaged. If the goods do not reach you in perfect condition, notify your supplier immediately of any damage. Do not proceed with installation if the goods are damaged.

DANGER

Ensure that a certificate of Thorough Examination together with a UKCA or a CE Declaration of Conformity is included with the goods. Hand these to a 'responsible person' for safe keeping. Check that the identifying mark (serial number), the Safe Working Load (Rated Load) and that the UKCA or CE marking appears on the hoist or hoist and trolley.

SUPPLIER / MANUFACTURER Red Rooster Lifting Ltd Red Rooster Lifting Ltd

ADDRESS Nauta House, The Meadows Unit 26 Kelvin Way Trading Estate Oldmeldrum, Aberdeenshire Kelvin Way, West Bromwich

UK, AB51 0EZ

West Midlands, U.K. B70 7TW

TEL NO 01651 872101 0121 525 4162

MODEL TCS-980-LF

SERIAL NO

SWL 980 KG

DATE OF PURCHASE

NAME PLATES

The name plate gives important information which must be retained. Hoist serial number, SWL, model, air pressure, air flow, hoist rating, chain size, speed, year of manufacture and the manufacturers name and address.

UK Ex / ATEX - Explosive protection

In the UK the use of non-electrical equipment in a hazardous area is covered by 'Products Intended for use in Potentially Explosive Atmospheres 2016 (UK SI 2016 No 1107 as amended by UK SI 2019 No 696)

In Europe and several other parts of the world the use of non-Electrical equipment in a hazardous area is covered by the ATEX Directive 2014/34/EU.

The main standards covering both the UK Ex and ATEX are currently the same: BS EN 80079-36, BS EN 80079-37, BS EN 1127-1 and BS EN 1127-2.

Standard hoists are suitable for use in ZONE 2 Gas areas certified as Ex Group II 3 G Ex h IIB T4 Gc Standard hoists are suitable for use in ZONE 22 Dust areas certified as Ex Group II 3 D Ex h IIIB T135°C Dc

With extra protection can be used in ZONE 1 Gas areas certified as Ex Group II 2 G Ex h IIB T4 Gb With extra protection can be used in ZONE 21 Dust areas certified as Ex Group II 2 D Ex h IIIB T135°C Db

Further protection allows the hoist to work in ZONE 1 Gas areas certified as Ex Group II 2 G Ex h IIC T4 Gb Further protection allows the hoist to work in ZONE 21 Dust areas certified as Ex Group II 2 D Ex h IIIC T135°C Db (not suitable for TCR Mini or TCS range, IIC or IIIC areas)

The following models can also be rated for mining (Ex Group I M2 Ex h I Mb) – TCR-500 to TCR-2000/2 and TMH models. These hoists can be used according to Equipment Group I Category M2 where equipment is intended to be de-energised in the event of an explosive atmosphere.

The TCR-250, TCR-500/2, TCS-500 and TCS-980/2 models cannot be rated for mining.

CERTIFICATION

All new hoists are supplied with standard certification: Thorough Examination, EU or UKCA Declaration of Conformity, which can include either ATEX or UK Ex certification where required. Other documentation is available by agreement.

IN THE EVENT OF ANY PROBLEMS OR SHOULD YOU REQUIRE ASSISTANCE CONTACT THE SUPPLIER AS DETAILED ABOVE QUOTING THE HOIST MODEL AND SERIAL NUMBER.

PACKAGING MATERIALS SHOULD BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL REGULATIONS.



GETTING STARTED - OPERATION

1.2 OPERATION

Red Rooster pneumatic hoists and trolleys are designed for the lifting and lowering of loads within the capacity of the model selected. The range of hoists and trolleys can be UKCA, or CE marked and conform with 'Supply of Machinery (Safety) Regulations 2008 (As they apply to machinery being supplied in or into Great Britain from 1st January 2021) for UKCA marking and also the Machinery Directive 2006/42/EC for CE marking. At present both the UK and EU use the same standards with BS EN 14492-2 being the main standard for powered hoisting equipment.

Our range of hoists and trolleys are available as hook suspension units, trolley mounted, built into low headroom units and cranes. Nearly all hoist models are also available as Ex ZONE 1 or 2 hoists for use in hazardous areas, with corrosion protection, and can work in temperatures of -20°C to +60°C. When used outdoor or offshore hoists should be protected against the weather and examination and maintenance interval should be reduced.

Our hoists are extremely robust being developed over many years in the harshest of environments and will require little maintenance if kept lubricated on a regular basis. Noise levels can be found in the technical specification. In certain circumstances and temperatures there is a danger of icing of the motor and exhaust silencer. This can be prevented by fitting a dryer to the air supply to remove moisture from the air supply.
CAUTION



GETTING STARTED - CHECKS BEFORE USE & HOSE SUPPORT BRACKET

1.3 CHECKS BEFORE USE

These checks should be carried out during installation and on a frequent and regular basis thereafter. If the hoist is used daily then it is recommended that they are carried out daily as the checks take only minutes to complete and not only help avoid repair bills but significantly reduce the possibility of an accident or dangerous occurrence. Thoroughly examine the equipment prior to installation to ensure that no damage has occurred during transit. Hoists and trolleys should not be altered in any way without contacting Red Rooster for clearance, as this may affect the certification of the unit.

AIR SUPPLY CHECKS:

- Inlet pressure: 4 to 6 bar (there will be pressure losses across the air set and on long hoses) The supply pressure should not
 exceed 7 bar.
- Air flow: Check air flow requirement and minimum hose diameter also check that small bore fittings are not strangling the air flow.
- The filter should be checked regularly and manual units drained of water as required.
- THE AIR HOSE SHOULD BE SUPPORTED SO THAT THE WEIGHT OF HOSE IS NOT HANGING FROM THE AIR SET AND
 FITTINGS. THE AIR SET IS NOT DESIGNED TO SUPPORT THE WEIGHT OF THE HOSE. SEE PAGES 7 AND 12 IF A HOSE
 SUPPORT BRACKET AND MANIFOLD IS FITTED TO THE HOIST.
- The air supply should be clean and relatively dry. Where the compressor produces a lot of water action should be taken to remove the excess water.
- Check air connection size and type are compatible.
- Check security of air hose connection.

AIR SUPPLY CONNECTION:

Every installation is different, so the correct method of supporting the air hose should be reviewed while installing the hoist. This needs to take into account the weight and size of the hose, obstructions both at deck and hoist level, connections, operating conditions and any likely movement of the hoist and air hose.

The fittings and filter regulator are not designed to take the weight of the hose.

If the air supply hose length is over 10 metres the hose ID should be increased to the next size.

AIR SUPPLY:

Vane type air motors are designed to function using clean, dry air. The installation of an 'in line' air service unit although essential cannot in itself compensate for serious contamination in the air supply. When operating the compressor in moist (humid) or dusty atmospheres seek the advice of your compressor supplier with regard to the fitting of a dryer and filter. A CAUTION

AIR PRESSURE:

The hoist is designed to operate best in the pressure range of 5 to 6 bar (72 to 90 p.s.i). The speeds quoted on the manufacturer's literature are obtainable only at 6 bar (90 p.s.i) inlet pressure. The hoist will operate at much reduced speed at pressures below this figure.

AIR FLOW:

Refer to the hoist data sheet, to select the hose diameter which ensures adequate air flow. Failure to provide adequate airflow will result in a pressure drop in the supply line and cause the hoist to stall and the brake to apply until the pressure increases. In addition, the brake will not release cleanly and will overheat. (Although not in itself a hazard [the brake will fail safe] it may prove frustrating to the operator and a hazard may arise as a consequence.) A CAUTION

AIR SUPPLY HOSE SUPPORT BRACKET

Where a hose support bracket and manifold have been fitted to the hoist to take the weight of an air supply hose several checks must be done.

- Check the hose hangs freely and does not interfere with the hoist chain.
- Check the hose is clear of the load to be lifted.
- Check the pendant hose is not obstructed by the air supply hose.
- Check the air hose is supported.

! DANGER

- DO use exclusively correctly rated and certified pneumatic hoses and fittings in the air supply line.
- DO support the air line up to the hoist, as the fitting and filter regulator are not designed to take a load and may not support the weight of the hose.
- DO maintain the internal diameter (as per the table throughout the supply length) or reduce from the larger diameter to the smaller diameter in the direction of the hoist.
- DON'T use hydraulic fittings. These often have a reduced orifice size resulting in a down line drop in air pressure.
- DON'T increase from smaller to larger diameter or insert a length of smaller diameter hose in the supply line as this will result in reduced flow and pressure.
- DON'T create low points in the air supply line where water may be trapped (or if unavoidable install a drain tap).
- DON'T rely on pneumatic fittings to support airlines; they are not designed for this purpose.
- DON'T shorten the pendant by forming a loop or a coil. This will prevent the strainer wire from supporting the pendant and will
 cause the hoses to become detached or kinked.



GETTING STARTED - INSTALLATION & TECHNICAL CHARACTERISTICS

1.4 HOIST ASSEMBLY

Normally our hoist or hoist and trolleys will arrive complete ready to be fitted into position, but sometimes for transportation it may be necessary to disconnect the chain collector, trolley or the pendant control system.

- Chain collectors will be supplied with the necessary bolts and fittings to assemble on site along with any safety slings as shown in section 1.8 and chain collectors in section 7.4.
- Due to the size of some trolleys it is easier to ship split from the hoist, the trolley GA drawings show the load bar and top eye details for refitting and the control and supply air lines are numbered or colour coded for re-connection.
- When lifting into position either use the lifting points on the hoist or hoist and trolley, if the hoist does not have lifting points fitted securely fit slings to the body of the hoist or use the top hook if possible. Do not lift by the controls, valves, or the air set.



DANGER

MOUNTING THE HOIST

The air hoist is designed as a LIFTING MACHINE and as such is designed exclusively for the lifting loads vertically. Non vertical lifting will result in premature wear of the chain and chain guide and may result in damage to the limit arms or a failure of the limit arms to operate.

- Site the hoist immediately above the load which is to be lifted.
- Ensure that the point from which the hoist is suspended has been designed and tested to at least the same safe working load as the hoist itself.
- Ensure that the suspension point or shackle fits snugly into the bowl of the hoist top hook and that the safety catch closes to prevent escape.
- Use only certified lifting gear with a SWL in excess of the load to be lifted to connect to the load itself.
- Ensure that the lifting gear fits snugly into the bowl of the hoist bottom hook and that the safety catch closes to prevent escape.
- Ensure that the control length (pendant or cords) is adequate to allow the operator to stand away from the load, in a safe and secure position with the cords or pendant at waist height.

CLOSE HEADROOM WORKING

The lower hook of the TCS hoist includes a swivel arrangement. This allows the load to turn without twisting the chain. However, when repeatedly handling loads with the bottom hook close to the hoist, especially when rotation of the load is prevented, there is tendency for the chain to attempt to enter the guide at an angle. This is particularly pronounced on two fall units. If this problem is noticed when doing a trial lift, a high guality ball bearing swivel should be mounted below the bottom hook of the hoist.

CHAIN COLLECTORS

If the hoist has been supplied with a chain collector bag or bucket, and the chain has been stored within it during shipment, remove all the chain from the collector by hand, and remove any knots or twists.

In all cases carefully feed the chain over the load wheel allowing it to fill the collector without any interference as it emerges from the wheel. This way the collector will fill normally. If the chain within the collector is disturbed great care must be taken the next time that the chain is fed out of the collector to ensure that it is not twisted or knotted. Chain bags and buckets are fitted with one or two brackets depending on the model and HOL of the hoist. A DANGER See additional instructions (Section 6) for large collectors.

1.5 TECHNICAL CHARACTERISTICS

The WLL of the hoist will be marked on the hoist name plate and also in the hoist specification supplied.

The reactions on the powered hoist on the support, runway beam or crane should have been taken into account in the design of the structure. The structure should be at least 25% stronger than when using manual equipment due to the shock loading applied by the operational speeds and the starting and stopping of the hoist.

All Red Rooster hoists are fitted with the following safety features

- Upper and lower mechanically operated travel limits. These are ultimate stops and should not be used to stop the hoist on a regular basis
- The disc brake is spring applied so when the controls are not operated or in the event of loss of air supply the brake is applied holding the load in position.
- On pendant controlled hoists an emergency stop button is fitted which connects to a normally open valve either located in the hoist valve chamber or connected to the hoist. When the emergency stop button is pushed or if the air supply to the hoist is cut off then the valve will close stopping the hoist.
- Red Rooster hoists have a 5:1 factor of safety.



GETTING STARTED - HOIST CHECKS

1.6 HOIST CHECKS BEFORE USE

HOIST CHECKS (AIR SUPPLY OFF)

- Hook swivels satisfactorily and the safety catches work correctly.
- Load chain is undamaged and lubricated (light mineral oil).
- The load chain is not twisted through (two fall or more models) and that the load chain passed through the limit lever (All models).
- The load chain anchor is sound (both live and slack end).
- Check for damage to the hoist, pendant and control lines.
- Do not operate below -20°C or above 60°C without contacting Red Rooster.

HOIST CHECKS (AIR SUPPLY ON)


- The pendant buttons, levers or cords should be smooth to operate and return to neutral when released (hoist stops and does not run on).
- The hoist is run up and down on a regular basis. Where hoists are hanging in a dry and protected area they should be run weekly, where the hoist is outside and not protected it should be checked and run daily.
- The emergency stop button / valve operates immediately.
- Upper and lower limit switches / levers work satisfactorily.
- Load chains run smoothly over the pocket wheel.
- The load chain should be examined periodically for cracks, gouges and wear.
- Chain collectors should be checked for security and chain capacity.
- Check chain runs in and out of the chain collector smoothly.
- For hoists with a long drop of chain or a large chain collector a separate suspension point may be required (see section 1.8).
- Cord control hoists should have the toggles marked for raise and lower.
- On cord controls check the spool valve returns to neutral and the hoist stops when the cord is released. (hoist stops and does not run on).
- Check the silencer is not partially blocked by comparing the running speed without load against the speed in the manual. A DANGER

NEVER RELEASE THE EMERGENCY STOP BUTTON UNTIL IT IS SAFE TO DO SO

Hoist swivels satisfactorily.

Hoist safety claws functional and undamaged.


Safety claw

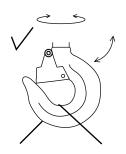




Chain undamaged

 Chain not twisted through (two fall models see sketch)



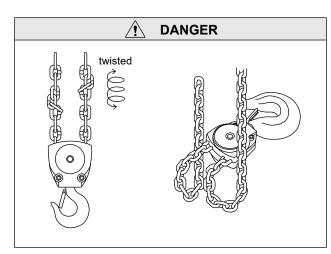



GETTING STARTED - HOIST CHECKS & INSTALLATION INSTRUCTIONS

1.7 HOIST CONTROLS

Air hoists can be controlled by either a pull cord or a pendant control operating the spool valve of the hoist operating raise and lower. The diagram in section 1.8 shows the set up for both types of control and the location on the hoist body.

Cord or pendant hose lengths should be long enough for the operator to stand away from under the load but still with the cord toggles or the pendant suspended at a height of around 1 metre from the operating level. Where the controls have to be to the side of the hoist or where the operator cannot see the load travelling the full range of the lift a banksman should be appointed to assist the operator using a reliable means of communication.

Both toggles on the cord controls should be marked for correct operation of the hoist. The emergency stop button on the pendant control should also be marked.

1.8 ADDITIONAL INSTALLATION INSTRUCTIONS

Hook suspension with long chain drops.

Problem:

When a long heavy chain is fitted, and the 'raise' is pressed with the hoist in an unloaded condition, due to the centre line of the hoist having been affected by the weight of chain, the upper limit switch, may fail to operate. In addition, the slack load chain may on some modules foul the limit lever arms, thus preventing it from returning to the centre (neutral position).


Resolution:

A short length of wire rope, 6mm diameter, is fitted to the hoists and bulldog grips have been supplied.

Suspend the hoist in its final location and with as much chain as possible in use. Apply a small load to the hoist and lift it clear of the ground. Connect the wire rope sling to the support steel alongside the top hook using bulldog grips.

The tension in this sling should be enough to counteract most of the weight of the slack chain produced in the fully raised position, but it must not be tensioned such that it is carrying any of the load supported by the hoist. i.e. if fitted correctly, in an unloaded condition, the sling will be tensioned with the hoist ALMOST in the vertical position. When the load is applied, the tension in the sling will be slack.

THE SLING IS NOT CAPABLE OF HOLDING THE LOADS CARRIED BY THE HOIST

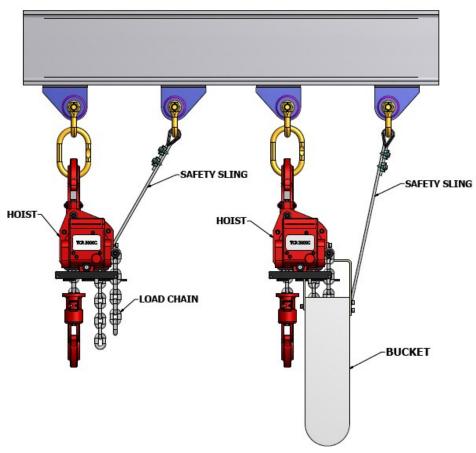



LUBRICATION

2.1

Item	Oil Type	Frequency
Load Chain	Normal industrial - any light mineral oil Clean areas - wax based, semi setting Food industry - suitable vegetable oil (See note 2)	Weekly / monthly subject to environment / use
Limit Lever Linkages and Anchor pins	No. 2 grease	Monthly or more frequently in aggressive environments
Gearbox	High temperature EP2 grease	Only at major overhaul

Note 1

All Red Rooster hoist chain must be lubricated to prevent wear.


A DANGER

Keeping load chain clean and lubricated will greatly increase the lifetime of the chain and prevent costly replacement. Very little lubricant is needed and can be easily applied to the chain by cloth, brush or spray.

In areas of high corrosion, plated chain can be used along with special lubricants to prevent corrosion from sea water and spray. Chains used in these areas should be re-lubricated on a regular basis.

NEVER use heavy grease or bitumen based products to lubricate the chain as these will foul the chain guide, idler and load wheels and bearings. \triangle **DANGER**

Remove dust and water drops on the Load Chain and then apply lubricant. Application of lubrication influences on the life of the Load Chain considerably. Apply the lubricant sufficiently.

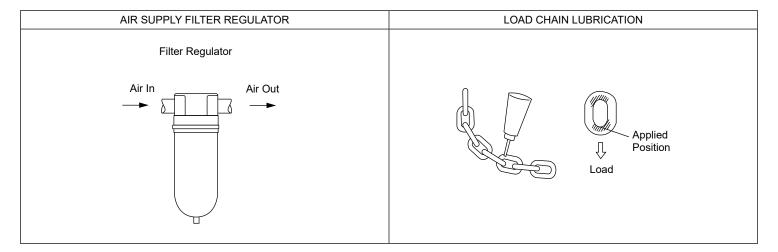



SAFE OPERATION

3.1 The contents of this section are designed for the guidance of personnel using the hoist. For the most part, they are 'common sense' procedures. Most dangerous occurrences involving lifting machines are not as a result of defect developing in the machine itself but are as a result of an error or act of carelessness by the operator. As such, the vast majority of accidents or dangerous occurrences are avoidable. The operator is responsible for his safety and the safety of others in the area of the hoist.

It is further recommended that only authorised personnel should be permitted to use the hoist and that all staff should be properly trained and have adequate knowledge in both safe use and visual examination.

ALWAYS - follow company procedures, work safely, report faults and comply with regulations.

• DANGER

GUIDELINES FOR PERSONNEL USING AIR HOIST

- Read the instruction manual before use.
- Test run the equipment prior to application of a load and ensure that the equipment, including its control and safety devices are functioning correctly.
- Do not touch the hoist body immediately after extensive use, as it may be hot or very cold.
- Do not wear loose clothing (ties, scarves etc.) which may get dragged into the hoist or bottom block.
- Wear safety boots or shoes (together with a safety helmet if lifting overhead).
- Ensure that a positively engaged isolator requiring an appropriate operation to re-engage, is fitted between the air supply and
 the machine (lever, button or quarter turn valve). The isolator should isolate only the machine itself or where the safety of other
 machines may be affected by isolation of the machine, all machines affected must be isolated at the same time.
- Large hoists and trolleys have lifting eyes that can be used for handling and installation. Where no lifting eyes are fitted, a sling
 may be fitted round the hoist body using a choker hitch.
- Ensure that the load is securely supported by certified lifting gear (slings and shackles) with a higher safe working load in the
 configuration used, than the load to be lifted and that it cannot 'escape' whilst being lifted.
- Stand clear of the load when lifting or lowering and ensure that the point at which you are standing is secure. Do not touch
 moving chain.
- When there is a brief pause in the lifting operation where the operator lets go of the pendant control, he must stay in the area and make sure the pendant hangs vertically and cannot swing or get blown against anything.
- When there is a longer break in the lifting operation and the load has been landed, then the emergency stop button should be actuated so that a positive action is required before the hoist or hoist and trolley can be operated.
- If the hook is still attached to an item then a sign should be attached to the pendant and depending on the circumstances the power supply locked off.
- Ensure that other personnel cannot enter the immediate area where the lift is taking place.
- Never lift the load higher than necessary.
- Ensure that the control length (cord or pendant) is adequate to allow the operator to stand away from the load in a position to see
 the load at all stages of lift.
- The pendant should hang from the hoist and not be placed onto objects where the controls could be activated.
- If it is not possible to site yourself in a position where you can see the load at all stages, appoint a 'banksman' to cover the area which you cannot see and establish a reliable method of communication (verbal or hand signals) before starting the lift.
- If you suspect that the equipment is defective or is developing a fault, stop the lifting operation immediately.
- In the event of an emergency make the area safe by returning the load to a rest position, but if this is not possible the area should be cordoned off and the advice of your superior or safety officer sought. Never repair a hoist with the load suspended.
- If it is not possible to lower a load to the ground to make it safe, then a lifting plan must be in place to recover the load or make it safe in case of hoist failure.
- In the case of complex lifting operations a lifting plan must be in place to control the lift stipulating the hoists to be used, operating conditions, operator instructions and the different parts of the lift taking part in the agreed sequence. Carry out a practice lift with a small load if necessary to confirm the lifting operation.
- The starting and stopping of the hoist and taking up of slack chain at high speed can apply high forces which could be higher than the load being lifted. Always operate hoists smoothly and in a controlled manner.
- The attachment points must be capable of withstanding the expected forces.
- External vibration can affect the hoist and can cause damage and wear.
- Do not use the hoist outside in high winds, bad weather conditions, or when temperatures are likely to be outside the operating temperature of the hoist.
- Only use the hoist to make a lift safe when a warning alarm has been activated in the area and then isolate the hoist.

AT ALL TIMES THINK BEFORE YOU ACT - PLAN EVERY LIFT



SAFE OPERATION - HOIST OPERATORS


• DANGER

- 3.1 Hoist operators must be healthy and not under the influence of alcohol, drugs or medication when operating the hoist.
 - Hoist operators should be trained in the operation of hoists proper rigging procedures for the attachment of loads to the hoist.
 - The operator is always responsible for his own safety and anybody else in the operating area.
 - Always start the lowering or lifting movement slowly and smoothly.
 - When using the hoist jointly with another person, use signals agreed upon at the job site (standardized signals).
 - When using the hoist without chain collector, avoid the slack chain to fall, catch or impact as this can cause hazards.
 - In case of air pressure loss, secure the load and area. Ensure that turning the air supply back on cannot result in a dangerous
 occurrence.
 - Stop using the hoist in case of abnormal sounds.

SAFE OPERATION - FORESEEABLE INCORRECT USE

N DANGER N CAUTION

- 3.1 Where the supporting steel work transfers a vibration or oscillation through the hoist this can cause increased wear between the links of the load chain.
 - Where the hoist or hoist and trolleys are fitted with lifting points they should only be used for lifting the hoist and trolley, they are not designed to take the full WLL of the hoist.
 - Before carrying out any work on the hoist the main air should be turned off and the residual are vented or the hoist run to dissipate the air pressure.
 - Do not exceed the stated SWL or duty rating. (Fig. A)
 - Operate the hoist smoothly. Do not suddenly change direction as this may exert both shock loads acceleration forces may well in excess of the weight of the load being lifted.
 - Do not use the hoist to lift / lower personnel. (Fig. B)
 - Only use the hoist to lift a load vertically. It is not designed to pull or drag loads without modification and or a lift plan being used for special lifting operations, such as cross hauling. (Fig. C)
 - Ensure that the load is securely supported by its lifting gear (slings shackles etc.) and that it cannot escape whilst being lifted.
 - Ensure that the lifting assembly (slings, shackles etc.) has a higher safe working load in the configuration used than the load to be lifted
 - Ensure that the point at which the hoist is to be suspended has an equal or greater safe working load than the hoist.
 - Ensure that the load is free to move and will clear all obstructions.
 - Avoid swinging the load or hook.
 - Do not use the hoist if the chain is damaged, twisted, kinked or worn.
 - Ensure that the load is stable and in balance at starting lifting or setting down as tilting or falling loads can cause accidents.
 - Never allow loads to "fall" into the load chain. (Fig. D)
 - Never lock the control elements of the pendant or controls.
 - Never use the chain, hooks or hoist as an electrical ground for welding or electricity.
 - Do not use the limits as a means of stopping the hoist (these are safety devices).
 - Do not use controls as a means of moving the hoist (the pendant is designed to support its own self weight only).
 - Stand clear of the load when lifting and lowering and ensure that the point at which you are standing is safe and secure. (Fig. E)
 - Do not hold onto the load chain when controlling a load (fit a tag to the load if necessary to ensure that the load is controlled).
 - Do not apply a load to the tip of the Bottom Hook or the Hook Latch. (Fig. F)
 - Do not bind a load with the load chain directly. (Fig. G)
 - Do not operate the Load Chain while it is in contact with any sharp edges. (Fig. H)

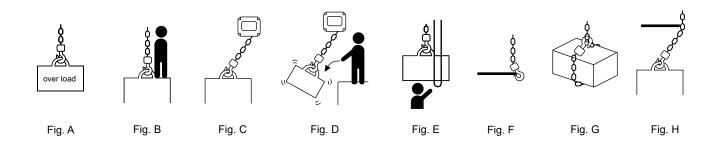



SAFE OPERATION

DANGER

3.2 SAFETY EQUIPMENT - PPE

Safe systems of work should be appropriate for the working conditions that the hoist is being used in with method statements stating what the hoist is being used for, the authorisation of staff to operate hoists and the PPE requirements in place. In general overalls, safety shoes, hearing protection and gloves are normal but other sites will require safety glasses and hard hats.

DANGER

3.3 LIFTING GEAR BELOW THE HOIST

Where lifting gear is connected into the bottom hook of the hoist it should be sized for at least the capacity of the hoist and physically fit well into the body of the hook allowing the safety catch to close.

 
Where a larger item such as a spreader beam is used this may have an effect on the lifting capacity of the hoist, so the SWL should be reduced to reflect this.

HOW TO SLING THE LOAD PROPERLY



120° or less

DO NOT CARRY OUT DANGEROUS HOOKING AS SHOWN BELOW



Improper hooking Angle exceeding 120° position of the lifted Angle too wide load or the sling



Unable closing of the hook latch



Hooking of the load at the tip of the hook

DANGER

3.4 MOUNTING ON TROLLEYS

Sling the load at

the extended line

of the hook shaft

- Ensure that the trolley is properly mounted on the beam and set correctly for the beam with adequate wheel clearance.
- Ensure that the stops for the trolley mounted on the runway beam are correctly positioned and securely installed.
- Ensure that the top hook or link plate of the hoist fits properly on the suspension point of the trolley and is assembled properly with the hoist at the centre of the load bar.
- Ensure that the load bar and tie bar nut have been secured and the trolley side plates are set parallel to the beam web.
- Ensure that the tie bars are correctly adjusted in the slots with the anti-tilt roller close under the beam with enough clearance to allow the trolley to run along the beam.

DANGER

3.5 OPERATIONAL BREAKDOWN OR ACCIDENT

If an unloaded hoist stops working then it should be removed from location and sent for repair if none of the remedies in the trouble shooting guide have an effect.

When the hoist is still holding a load then an additional hoist should be used to take the weight of the load so it can be safely lowered and the faulty hoist removed for repair. If another hoist cannot be used to lower the load it is possible to release the brake by slackening the brake cover screws but this should only be done by a RRL engineer or after discussions with Red Rooster as it is not always possible or

The main air supply line to the hoist should be fitted with an easily accessible valve to cut off the air supply to the hoist in case of emergency or for maintenance. Pendant control hoists also have a main air shut off valve.

There should be a safe access to the hoist to carry out maintenance, inspection and lubrication.



MAINTENANCE

4.1 The TCS hoists are very fast so suited to production, long height of lift and are built to require little maintenance if they are kept lubricated and maintained. The maintenance required will depend on daily operating times, the conditions, quality of the air supply and the percentage of the WLL regularly being lifted. The operators daily checks and the monthly maintenance checks are necessary to check the condition of the hoist. Maintenance work should be carried out by trained and qualified personnel.

DANGER

It is recommended that in the case of the TCS hoist and air trolleys inspections are carried out in accordance with the following schedule, although the frequency of the 'six month inspection' should be increased in high risk environments, aggressive environments or where the usage is particularly heavy to between one and three months. **A CAUTION**

EVERY DAY / WEEK (DEPENDING ON USAGE) 1 CAUTION

The items listed under 'checks before use' in Section 1 (Getting Started) of the manual should be examined.

AT LEAST ONCE PER MONTH FOR HOISTS IN CONSTANT USE OR EVERY THREE MONTHS LIGHTLY USED UNITS

• DANGER

LOAD CHAIN - Thoroughly examine throughout its length for wear in the links, corrosion, cracks or distortion. If the wear in the links exceeds that stated in the chair, the chain should be replaced. If there are any visible cracks or distortion the chain should be replaced. Any wear should be measured and checked against section 10.1.

BRAKE - With a load applied check the brake efficiency. If there is any delay in actuation or slippage, the brake is defective and the hoist must be thoroughly overhauled before being returned to service.

HOOKS, SWIVELS AND CLAWS - Examine hooks for wear, deformation (refer to chart), nicks and gouges. Ensure that the hooks swivel smoothly and that the safety claw opens fully and closes under spring tension.

CHAIN ANCHOR PIN - Examine for wear and deformation.

NUTS AND BOLTS - Using suitable spanner and Allen key, check for any loose nuts and bolts.

UPPER AND LOWER LIMIT - Ensure that it functions correctly in both the fully raised and fully (chain lever) lowered positions.

CHAIN COLLECTOR - Check security and condition.

It is recommended that the load chain and linkages are lubricated as part of this inspection routine.

When repairing Red Rooster air hoists only original Red Rooster products should be used.

4.2 Only minor repairs such as silencers, safety catches, pendant repairs, replacing shorter lengths of load chain and inspections should be done in location after this the hoist should be lowered to ground level and taken to a workshop. (A CAUTION

If the hoist is taken out of service it should be sent to an approved repairer to be fully dismantled, repaired and tested. 🛕 CAUTION

Only Red Rooster approved parts should be fitted to the hoist but good quality European or Japanese load chain and bearings can be used but other than that only Red Rooster supplied parts should be used. **A CAUTION**



SAFE OPERATION

4.3 SILENCING

The TCS hoist is fitted with an internal silencer; the noise output being less than 83 dB at one metre (this conforms to E.C. noise regulations).

TCS-500 & TCS-980

The silencer comprises four nylon pads.


The life expectancy of the silencer correlates closely with the quality of air supplied.

Periodic examination of the silencer is not required, nor is it recommended (see below). As the silencer becomes contaminated a reduced speed of operation will be noted. At this point the nylon silencer should be cleaned or replaced and the gauze silencer should be changed.

4.4 CHANGING THE SILENCER(S) - see parts list.

TCS-500 & TCS-980

Located at the end of the motor, the silencers are behind the exhaust plate.

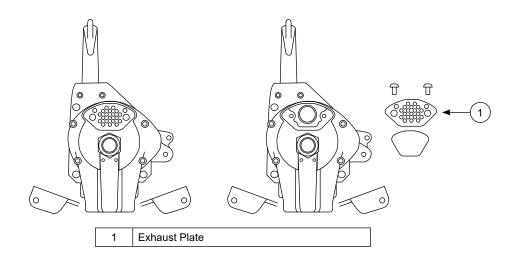

♠ CAUTION

ADJUSTMENTS AND MAINTENANCE OPERATIONS

Before carrying out any work on the hoist the main air supply should be turned off and the residual air vented or the hoist run to dissipate the air pressure.

Red Rooster hoists normally do not require any adjustment as the brake springs take up any wear and the load limiter and limits should not need adjustment once set.

The load chain should be checked monthly for lubrication and oiled if necessary. Where the load chain is not lubricated for operational reasons the chain should be inspected weekly as a dry chain can wear rapidly.

The top and bottom hooks should only be lubricated if required during checks.

The hoist gearbox is greased during assembly or repair and should not need greased during operation.

There are no hazardous substances in Red Rooster hoists.



MAINTENANCE

4.5 FITTING OR REPLACING LOAD CHAIN

The hoist will require to be hung up with an airline connected.

The chain stopper will require to be fitted at least 13 links from the unloaded end of the chain. (See chain fitting drawing)

The chain must be fed over the pocket wheel from the slack end anchor side with the weld of every second link facing away from the wheel axis i.e. weld outwards.

Care must be taken not to twist the chain during installation. This is best achieved by holding the live end of the chain as it emerges from the hoist, if the hoist is reeved on two parts of chain, feeding it through the free limit lock, through the bottom block wheel and again as it emerges, thereafter feeding it up to the anchor pin. If the chain cannot be fitted to the anchor without rotating it through 90 degrees, the end link should be removed.

Run the chain through the hoist, leaving a short tail at the 'slack' end. Anchor the slack end without twisting the chain.

On single fall hoists the live end is fed through the limit lock, through the sleeve and secured in the bottom hook holder by the sleeve pin. (Thereafter the sleeve is pushed down over the holder to retain the pin and secured by a locking ring)

Feed the chain over the load wheel.

It is very easy to trap or damage the chain if extreme care is not exercised. Always examine the first link of chain after passing it over the load wheel. If damaged, remove the damaged link(s). (DANGER

REPLACING EXISTING CHAIN

Cut away the centre portion of a link of the old chain to allow a chain diameter to pass through. Connect the spare link to the last link of the old chain and the first link of the replacement chain. Use the old chain to draw the replacement chain though the hoist. (Retain the spare link to be re-used). A DANGER

FITTING CHAIN TO AN UNCHAINED HOIST

A handy tool comprises a length of either soft insulated wire (about 2mm diameter) or a piece of flexible nylon tube of the same diameter approximately 500mm long. To the end of this attach a similar length of strong twine.

The soft wire or tube is fed over the wheel, its flexibility allows it to follow the chain guide and re-emerge at the opposite side. The twine is attached to the end of the chain and drawn through, pulling the chain against the wheel. By applying power VERY SLOWLY in the same direction of winding, the load chain is dragged into the first pocket and over the load wheel. If any resistance is felt as the chain attempts to enter the pocket it is imperative that the chain is released from the pocket before trying again. Otherwise the chain will become trapped and damaged. \triangle **DANGER**

Only use quality load chain approved by Red Rooster for use on our hoists.

	<u>^</u>	DANGER	
ITEM	CHECK METHOD	CRITERIA	WHEN FAILED
Deformation Flaw Entanglement	Check visually Flaw Crack Wear Check visually for no foreign matter as attached sputter.	No deep notch No deformation such as twist No attached sputter No entanglement No crack Wear (see 4.6 + 4.8)	Replace the load chain



HOIST COMPONENTS AND CHAIN

4.6 TYPES OF CHAIN

Only the correct size and grade of load chain should be used. \triangle DANGER All chain is to EN818/7 - EN1677 standard

TCS-980	STANDARD		HEAVY DUTY		STAINLESS STEE	L
	RUD		KITO		RUD	
Nominal diameter:	6.3 + 0.1 / - 0.25	mm	6.3 + 0.3 / - 0.3	mm	6.3 + 0.1 / - 0.25	mm
Pitch:	19.1 + 0.2 / - 0.1	mm	19.0 + 0.37 / - 0.00	mm	19.1 + 0.2 / - 0.10	mm
Max dia at weld:	6.8	mm	6.8	mm	6.8	mm
Min breaking force:	50.0	kN	50	kN	40 (G60)	Kn
Surface hardness:	500-650HV5		Grade 80T		ca250HV5	
Grade:	EN818/7 ISO 3077		EN818-7 ISO 3077		DIN5684 - 8 + EN8	18/7 ISO 3077

NOTE:


Spark resistant hoists are fitted with KITO nickel plated heavy duty chain or 60 stainless steel chain. Please refer to supplier.

When supplied new, only quality chain from a reputable supplier has been fitted to the hoist. Your supplier will be able to offer replacement chain of like quality.




HOIST COMPONENTS AND CHAIN

4.7 TCS-980

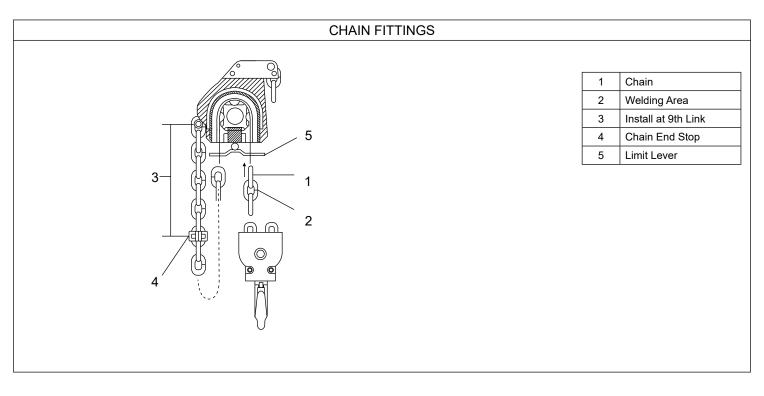

TCS-980

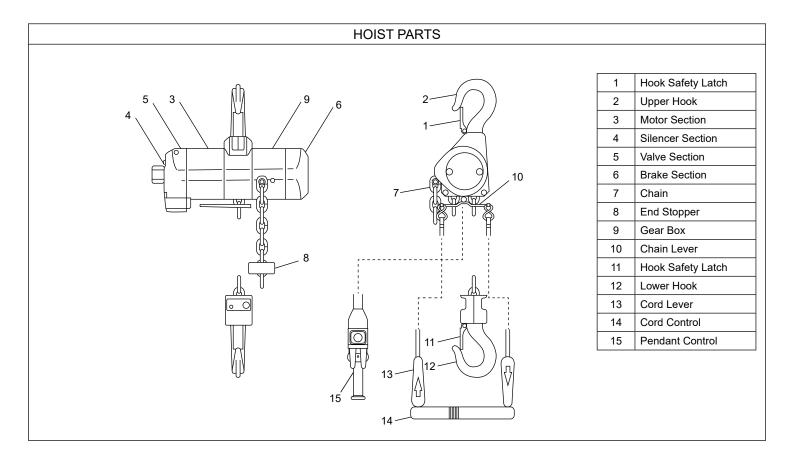



SERVICE DATA

Maintenance chart TCS-980

NO.	DESCRIPTION	CHECK POINTS	STD DIMENSIONS & MAX FOR REPLACEMENT
53 201	Rotor 1st Pinion	W	Replace when wear exceeds 0.2 mm. At this time replace the 102 coupling and 201 first pinion.
55	Vane	T V	STD L = 81mm MIN L = 80.3mm STD W = 19mm MIN W = 17.5mm STD T = 4mm MIN T = 3.5mm Replace if any of the width, length and thickness is less than the stated minimums.
152	Brake Disc		STD T = 8mm MIN T = 7.3mm STD W = 2.4mm MIN W = 2.9mm Below minimum for replacement.
209	Cage		Replace when there is a large or uneven play in the pin hole.
201 202 204 205 206 208	1st Pinion 1st Star Gear 1st Link Gear 2nd Pinion 2nd Star Gear Ring Gear		Replace if there is a step on the surface of the gear teeth.
203 207	1st Pin 2nd Pin		Replace if there is a step on the surface of the pin. If the pin is replaced, replace the needle bearing and star gear at the same time.
91	Wheel		Replace if load-sheave part is badly damaged or worn.



SERVICE DATA

Maintenance chart TCS-980

NO.	DESCRIPTION	CHECK POINTS	STD DIMENSIONS & MAX FOR REPLACEMENT
103	Chain Guide		Replace if the wear of any part of the chain guide exceeds more than 1mm.
104	Chain Separator		STD L = 12.8mm MAX L = 15mm Replace if any of the above dimensions exceed maximum wear.
250 260	Hook Swivel Hook	L H	Dimensions: STD L = 40mm MAX L = 40.8mm STD H = 30mm MIN H = 28.8mm Check dimensions as casting size can vary. Replace if beyond maximum 'L' or 'H'. There is some variation in the 'H' size on hooks so it is best to measure the hook when new and then allow up to 0.5mm of wear.
274 257	Sleeve Pin Sleeve Pin	Wear	Measure the contact area of the pin and the chain. Replace if the wear exceeds 1mm.
111	Spring Pin		Replace when the following limits are exceeded: Usage of 10 years, 400 hours operation, 500000 cycles. If external wear exceeds 1mm, replace.
114	Load Chain	5 links L	STD L = 95mm MAX L = 96.9mm Replace if L exceeds MAX L. STD D = 6.3mm MIN D = 5.9mm Replace if D exceeds MIN D Also replace if the link chain is severely damaged.
		D D	Measure the chain diameter (d) with point caliper.



LAYING UP THE HOIST

5.1 LAYING UP THE HOIST

Whenever the hoist is unused for a period (weekends, holidays or in store), a little preparation will ensure that the hoist operates correctly and safely, either before being put into service for the first time or when being put back into service after a layup.

SHORT LAY UP PERIOD (2 TO 90 DAYS):

Air hoists should be kept clean, lubricated and stored in a clean and dry location.

When not in use seal off from the air supply inlet as per lay up instructions.

Wherever possible keep the hoist protected when in use and installed in an exposed location, protecting controls and hoses from damage.

LONG TERM LAY UP PERIOD (3 MONTHS TO 24 MONTHS):

- If the hoist is contaminated with dirt or chemicals, wash with a propriety mild solvent or detergent and thoroughly rinse off with fresh water. Allow to dry and spray lightly with penetrating fluid.
- Lubricate the load chain, limit shafts, safety latches, and hook swivels.
- Disconnect the air supply and plug the inlet port.
- If required, dismantle the chain collector, pendant, air set and trolley for storage.
- Store in a dry ventilated area.
- Secure hoist in a crate or suitable pallet.

Transportation - Moving your Red Rooster hoist between locations.

Carefully disconnect from suspension point and lower under control to ground level.

Be sure that chain collector, valves and trolley drives are not damaged.

Carefully lay the pendant on top of the hoist making sure tubes or hoses are not damaged.

Secure the hoist and chain to the shipping container or pallet.

For long term storage corrosion inhibitors (wax coatings) can also be applied to suitable surfaces and then removed before use.


If being stored long term especially outside ask for a copy of the full procedure - AHLU-15



CHAIN COLLECTORS

6.1 When supplied new the chain bag will have been sized to suit the HOL of the hoist with spare capacity to allow for some bunching up of the chain. The use of a chain collector can make the operation of the hoist more efficient preventing dangerous occurrences with the chain getting caught or falling from the load being lifted as it mounts up on top of the load.

On TCS hoists from 500 kg to 980 kg PVC bags are used with a chain size of 6.3mm diameter.

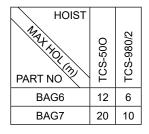

On arrival at site the load chain should be removed from the chain collector either manually or by carefully running out of the hoist checking for snagging. The chain should then be run back into the collector by the hoist checking there are no twists in the chain that the bottom hook is not twisted through the chain fall on multi-fall blocks. **A CAUTION**

Hoists with long drops of chain and heavy loads in the chain collectors will require a secondary suspension point to hold the hoist in a vertical position when unloaded. These may be as shown in section 1.8 or a secondary trolley on a runway beam. 🛕 **CAUTION**

If operating without a chain collector the slack end of the chain may catch or get caught on top of a load. Always make sure the unloaded chain is running freely.


DANGER


- Do not exceed the chain collector capacity.
- When the load chain is dry it may not run freely into the chain collector and over fill the collector, so the chain must be kept lubricated to
 prevent it running out of the collector.
- Make sure the chain collector brackets have not been damaged during installation.
- Make sure the chain collector is free to move when the hoist is loaded and un-loaded.
- Make sure the bottom hook does not connect with the chain collector. Limit the lifting height of the bottom hook if necessary.
- For any assistance required on chain collectors please contact Red Rooster Lifting Ltd.



CHAIN COLLECTORS

TCS-980

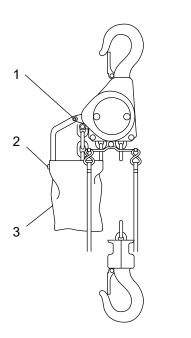

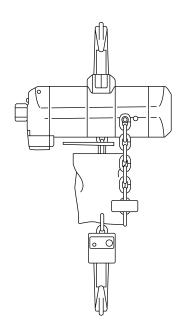

TCS-980				
1	M8 x 65			
2	M6 x 25			
3	Chain Bag			




SPEED ADJUSTMENT

7.1 SPEED ADJUSTMENT

Every TCS hoist is checked at the factory to ensure the maximum hoisting speed is in accordance with the specification.

CORD CONTROL HOIST

The speed of the hoist is proportional to the amount of downward movement in the control cord, which via the cord lever controls the amount by which the valve is opened.

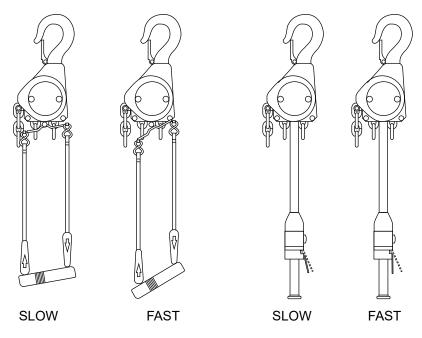

For the pendant control, adjust the speed by varying the amount the lever is depressed. By depressing the lever slightly, you will be able to control the hoists motions slowly with more precision. By depressing the lever further, the speed of the hoist will be increased until the lever is fully depressed.


The TCS series is equipped with a speed adjustment mechanism. If you feel the lifting or lowering speed is too fast, the speed can be adjusted slower as needed variably. Also please note that the speed can be adjusted separately for lifting and lowering.

 
HOW TO ADJUST THE SPEED


Referring to the diagram below, looking at the hoist from the valve side, the speed adjustment screw for lifting is on the RIGHT, and the lowering adjustment screw is on the LEFT. Both adjustment screw are covered with a red plastic cover and can be removed using a pair of pliers. Behind the plastic cover is a 'minus' groove and can be adjusted using a standard flat screw driver. In relation to the air hoist, as shown in the drawing below, the vertical direction means the highest speed, and the horizontal position means the lowest speed. (Note: the hoist will stop if the speed is adjusted too low) The adjustment can be made between these positions.

Adjust the speed only when the hoist is in stop mode. If the adjustment is made when the hoist is moving, it will be difficult to rotate the screw since the air pressure increase the friction on the o-ring.

NOTE: When adjusting the speed adjustment screw, the o-ring friction may make the rotation of the screw difficult, but this is not abnormal. NOTE: The speed adjustment mechanism is set at the highest speed when shipped from the factory.

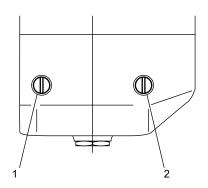



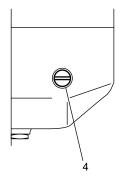

1	Adjust screw lowering speed
2	Adjust screw lifting speed
3	Highest speed setting
4	Lowest speed setting



OPERATIONAL BREAKDOWN / TROUBLESHOOTING THE TCR & TCS HOIST

8.1 We list below a number of faults which may occur during use, together with the probable cause and the cure. If you experience a fault and cannot identify the cause, or if you do not feel confident to remedy the fault, please revert to your hoist supplier.

Description of fault noted	Possible cause of fault	Remedy
Hoist fails to start	Air supply switched off	Switch on air supply.
(when newly installed)	Damaged or kinked pendant hose	Disconnect pendant from control valve and check if there is pressure. Replace as necessary.
	Emergency stop actuated	Re-set emergency stop.
	Control valve sticking	With air supply switched off, open and close the valve using a spanner on the limit lever. Do not use excessive force. If this fails, refer to dealer.
	Air pressure too low	Increase air pressure to the required valve. (6 bar)
	Hand control is faulty	Have hand control repaired.
Hoist starts but slows down and stops (when newly installed)	Inadequate air supply	Check compressor output against hoist requirements. Check air hose size against table. Ensure fittings are matched to hose size. Replace incorrect items.
	Regulator set in excess of 7 bar	Reduce to 6 bar / Fit regulator.
	Air supply hoses leaking or loose	Check connections of air supply hose and control hoses and connect properly.
	Silencer is clogged	Replace or clean silencer elements, improve air quality if necessary.
Hoist starts but will not stop	Sticking valve on pendant	Clean and lubricate valve, replace if necessary.
	Contamination within the control valve	Dismantle, clean and lubricate .
Hoist sometimes refuses to start	Worn vanes or damaged vane springs	Dismantle and replace as necessary.
	Control valve on motor	Have control valve replaced / serviced
Load chain jumps or makes a clicking	Worn load chain or guide	Dismantle and replace as required.
sound	Chain twisted	Incorrectly fitted - remove and refit (examine). Bottom block twisted through chain parts (2 fall models only).
	Chain sprocket worn	Replace chain sprocket, check chain guide, replace if necessary.
Motor 'stutters' and recovers periodically	Excessive moisture in air supply	Increase infiltration or fit a dryer.
Premature wear in load chain	Inadequate lubrication of load chain	Lubricate the chain.
	Support Vibration	Find cause of vibration.
	Hoist constantly operating at close headroom	Fit a ball bearing swivel below the hook.



PERIODIC EXAMINATION AND TESTING

9.1 EXAMINATION

UK & European Law requires that a thorough examination of the hoist should be carried out by a competent person:

- Before being put into service.
- At a frequency not exceeding 12 months (6 months for equipment used offshore).
- After being put into service at a new site.
- After involvement in an accident or dangerous occurrence.
- After a significant change in the conditions of use.
- After long periods out of use (time not specified).

Lifting operations and lifting equipment regulations 1998, section 9 refers. (LOLER 1998 №2307)

The record of such examination must be retained for as long as the employer continues to operate the equipment. The regulations also call upon the employer to carry out a risk assessment; to adjust the frequency of inspection according to the potential risk, to determine the nature of inspections and to ensure that the persons carrying out the inspection are competent to do so.

9.2 SIX MONTHLY OFFSHORE INSPECTION

Arrange to have the hoist examined by a person specifically trained and experienced in the examination of lifting machines. This can be done by a Red Rooster engineer or an independent competent person. Ensure that the party is operating to a detailed inspection procedure or code of practice.

SERVICE

We would recommend the hoist is returned every 5 years for a full inspection and service.

9.3 TESTING

LOLER 98, section 4 calls for the employer to ensure that the hoist is of adequate strength and stability for each load. No frequencies or test or proof loads are specified.

In the case of the TCR, TCS + TMH hoists the hoist is functionally tested with a proof load of 125% of the safe working load prior to delivery (Test certificate refers).

It is recommended that the test is repeated along with a thorough examination if the hoist is substantially repaired (i.e. any repair which may affect the hoists ability to lift, lower and sustain a load).

REPEAT PROOF LOAD TESTING OF THE HOIST SHOULD BE AVOIDED

NOTE!

If your hoist is a "spark resistant" zone 1 version; check the bronze coating of the lower and upper hook on signs of wear. A worn out coating is NOT spark resistant anymore and can cause dangerous situations. Therefore let the bronze coating be renewed by your supplier in time.



DUTY RATINGS

10.1 FEM 9.511 classifies the theoretical loading conditions and operating time in hours per day.

FEM 9.755 classifies the theoretical duration of service for safe operation.

APPLICATION OF FEM RULES TO PNEUMATIC HOISTS

With most mechanical equipment, the limiting factor with regard to operating time is that of HEAT GENERATION. For example, an electric motor if not periodically allowed a 'rest period' to allow it to cool down after each period of use will cease to function due to irreversible damage arising as a consequence of the heat.

Air motors perform differently. Although heat is generated, no damage will ensue. The expanding air at the outlet manifold also has a cooling effect on the motor

As a result pneumatic motors are commonly referred to as 100% duty rated or continuous rated, which means simply that they may be used continuously without a cooling down period and without damage arising as a consequence.

Incorporated into the TCS hoist are three classes of components:

- 1. Sacrificial components These components are designed to incur wear to either protect other components or to function by means of friction generation. They require periodic inspection and replacement and comprise of the rotor vanes and the brake disc.
- 2. Load chain Whilst adequate lubrication of the load chain will reduce friction and thereby limit the wear occurring between the bearing points of adjacent links, it will not totally eliminate it. Hence it will require regular inspection and will also require replacement within the service life of the hoist.
- 3. Structural and mechanical components These comprise all other parts of the hoist, including gearbox and bearings, rotor and housing, valve, hooks, pins etc. A theoretical service life for every component has been calculated (available on request). For the purposes of the summary, the SHORTEST service life of any component has been included.

10.2 TABLES OF DUTIES - TCS-500 & TCS-980 Hoist

FEM standard	For all mentioned TCS models
FEM 9.511	1 Am (M4)
Theoretical duration of service	
FEM 9.755	
Sacrificial components	1Am (M4)
Load chain	1Bm (M3)
Structural & mechanical components*	1Am (M4)
·	

^{*}Shortest duration stated.

IMPORTANT NOTES

- A hoist is deemed to be operating when it is in motion.
- All ratings are based on a clean, dry, air supply.
- Load chain must be to manufacturer's specification.
- Special chains are excluded (consult your supplier).
- ▶ Mode of use must be in accordance with manufacturer's recommendation.



EXPLOSION PROTECTION

11.1 The UK is now covered by the UK Ex scheme for the use of non-electrical in hazardous areas and is covered by the 'Product Intended for use in Potentially Explosive Atmospheres Regulation 2016' (UK SI 2016: No 1107 as amended by UK SI 2019 No 696 Schedule 25, schedule 3A, Part 6)

For Europe and many other parts of the world we also offer ATEX Non-electrical equipment certified under the ATEX 2014/34/EU Directive.

For both the UK Ex and ATEX this is split into two categories of equipment available from Red Rooster – Group – I mining (I M2 De-energised in an emergency) and group II – Zone 1 + 21 & Zones 2 + 22)

The Explosive Protection Level (EPL) has been set when the effective ignition sources are identified and when they become effective in normal operation and in the case of expected malfunctions. The normal ambient temperature range for Red Rooster air hoists is -20°C to +60°C.

As standard all Red Rooster air hoists are certified as Group II Category 3 (Zone 2 Gas or 22 Dust) This excludes the TMM-140 & TCR-250 ME. (standard only)

Standard hoists are suitable for use in ZONE 2 Gas areas certified as Ex Group II 3 G Ex h IIB T4 Gc Standard hoists are suitable for use in ZONE 22 Dust areas certified as Ex Group II 3 D Ex h IIIB T135°C Dc

With extra protection can be used in ZONE 1 Gas areas certified as Ex Group II 2 G Ex h IIB T4 Gb With extra protection can be used in ZONE 21 Dust areas certified as Ex Group II 2 D Ex h IIIB T135°C Db

Further protection allows the hoist to work in ZONE 1 Gas areas certified as Ex Group II 2 G Ex h IIC T4 Gb Further protection allows the hoist to work in ZONE 21 Dust areas certified as Ex Group II 2 D Ex h IIIC T135°C Db (not suitable for TCR Mini or TCS range, IIC or IIIC areas)

Red Rooster hoists will cover temperature classes T1 to T4 so can be certified to work with all Gases with the exception of Carbon Disulphide which is in temperature class T6.

The glow temperatures for dusts must be above 220°C or ignition temperatures above 202°C for use in Zones 21 and 22.

Mining - Ex Group I M2 Ex h I Mb (Mechanical equipment de-energised in an emergency)

TROLLEYS AND OVERHEAD CRANES

Red Rooster trolleys and overhead cranes use standard steel wheels for use in a Zone 2 + 22 area and normally with Bronze wheels in a Zone 1 + 21 area with a Gas group of IIB or IIC and Dust group IIIB or IIIC. The normal running speeds of our trolleys and overhead cranes are less than the 1 m/s that the standard allows. (Steel wheels can be acceptable for Zone 1 Gas Group IIB / Dust Group IIIB)

When built into an assembly such as an overhead crane the UK Ex / ATEX rating will be for the complete assembly, which may be less than some of the individual parts.

SPECIAL INSTRUCTIONS

This section of the manual refers to special instructions, exclusions or warnings about the equipment.

LUBRICATION

Lubrication oil should not have an ignition temperature below T135°C (T4) BS EN80079-36:2016.

Several gases such as hydrogen sulphide and ethylene oxide are at the very top of the IIB temperature class and are extremely flammable so you may wish to include them in the higher IIC temperature class. This is also relevant for impact sensitive dusts, around light metals, dusts with glow temperatures less than 210°C and ignition temperatures below 202°C. In an area where combustible dusts are present the surface temperature cannot exceed two thirds of the minimum ignition temperature of the dust and air mixture or the glow temperature of the dust.

Ambient temperature range for air hoists and air trolleys is -20°C≤Ta≤+60°C

Some models of Red Rooster equipment can only be certified for use in temperature class T5 or T6 when a special assessment has been completed.

Air motors, control valves and hoses are all positively pressurised so gas or dust cannot penetrate internal parts when operating or when under pressure.

Red Rooster hoists and trolleys are constructed to avoid the build-up of dust deposits. But where dust does build up, provision shall be made for removal of the dust and keeping the hoist, trolley and pipework clean.

External influences such as heat from direct sunlight or exhausts can affect the hoist so the ambient temperature should be checked. Other influences such as cold, wind, water, compressor air temperature, contact with chemicals and mechanical hazards can all have an affect on the hoist operation.



EXPLOSION PROTECTION

11.1 EARTHING

The hoist or hoist and trolley should normally earth through the top hook or the running wheels of the trolley into the supporting steel structure. If this does not happen then the hoist can earth through the load chain of the hoist, when grounded. If the chain is rusty it can affect the earthing of the hoist. During inspection the chain may need cleaning, oiling or replaced to allow adequate earth leakage. If the earth leakage is less than that recommended a separate earth strap should be fitted. Neither the running surface of beams nor the wheels should be painted. During lifts the load may be required to be earthed if there is any doubt as to the earth leakage from the hoist.

IMPACT HAZARDS

The materials chosen and their coverings should help to prevent an ignition hazard so that a corroded section of steel does not impact against a light metal or high grade steel. The selected materials and the design should exclude as far as possible mechanical sparks due to impact, sliding or friction. Where external housings are made of aluminium then the possibility of impact should not be possible.

PLASTIC SURFACES

Where plastic has been used for the pendant, control boxes or on the hoist these surfaces must only be cleaned with a damp cloth (water), which reduces electrostatic charging due to friction from wiping with a cloth.

COMPRESSED AIR HOSES

All air hoses used in a Zone 1 + 21 & 2 + 22 areas should be 'Anti-Static' with a sufficiently low surface resistance to prevent an electrostatic ignition hazard. The Hose should always have a higher Safe Working Pressure that the hoist and above that of the air supply from the compressor.

Air supply hoses need to be certified with a current report on the condition of the hose and checked before fitting to the hoist. The burst of a hose or connection failure can create a dust cloud and also create a static charge.

Hose safety whip cables should be used to prevent hoses flying if a connection fails to limit the dust cloud and the flying hose. *Red Rooster hoists should only be operated with compressed air.

MINING APPLICATIONS

In general most standard Red Rooster hoists can be used for underground mining operations along with the surface buildings and services. The equipment is certified for Group I M2 use, so must be switched off / isolated in the event of an emergency. The equipment has to be robust, non-sparking, taking into account the conditions and the handling underground and be built to survive along with explosive protection from Methane gas / dust - Firedamp. The maximum surface temperature of 150°C for coal dust atmospheres will not be reached where a coal dust layer can be formed or 450°C where coal dust will not form a layer.

For mining hoists the lubrication oil shall be replaced with non-flammable substances or substances not capable of forming explosive atmospheres (BS EN 1127-2:2014). Hoist lubrication is controlled by the drip setting on the lubricator and set as per the manual.

\wedge

DANGER

- During use the operator must avoid loads or the bottom hook impacting with surrounding steel equipment and structural steel
 which may result in sparking or frictional sparks caused by dragging loads past fixed structures.
- Any impacts involving light metal or cast iron should be avoided and these materials either protected or removed from the area.
- Damaged or badly corroded coatings or chain should be replaced or repaired to keep up the UK Ex / ATEX rating of the
 equipment. For assistance contact RRL.
- Earthing of hoists is not usually required as the hook connection to structure allows the hoist to connect to earth.
- The running surfaces of beams and cranes should not be painted to allow wheels to earth to the structure.
- Stainless steel 'C' track systems should be applied with an earth wire to connect onto the structure.
- Plastic junction boxes should only be cleaned with water and a clean cloth to reduce any electrostatic charge coming from the rubbing of the plastic surface.
- Dust should not be allowed to accumulate on the hoist, trolley, crane or junction boxes.
- Only use a damp cloth for wiping plastic surfaces.

CS-980-LF LUBRICATION FREE AIR HOIST



The TCS-980-LF is a 980 kg lubrication free high speed chain hoist from Red Rooster Lifting. This is part of our air hoist hook suspension range for lifting equipment applications in industry.



The oil free operation allows the hoist to run whilst preventing any oil being exhausted into the atmosphere, making the units ideal for use where a clean environment is a requirement. These new air hoists are suitable for food, chemical, pharmaceutical and painting industries where there are dusty atmospheres and production lines in operation.

STANDARD FEATURES

- Precise variable speed control
- Optimum control of the load
- Robust and reliable
- Mechanical end stop
- 100% oil free
- Low noise level 83 dBA
- Working air pressure 6 bar
- Robust slackened anchor
- High quality RUD hoist chain
- Supplied with a filter / regulator

OPTIONAL FEATURES

- Paint systems for C3 Industrial to CX Offshore
- UK Ex scheme or ATEX Zones 1 & 2
- Pendant / cord control systems
- Chain collectors
- Hook or clevis options
- Air supply systems and valves
- Piped away exhaust air



MECHANICAL LIMIT SWITCH

Mechanical shut off to prevent over hoisting or lowering


EXHAUST INSTALLATION


New exhaust cover design for easy maintenance and 0.5" PT threaded port for piped away exhaust

TCS-980-LF LUBRICATION FREE AIR HOIST



All measurements are in mm Information subject to change without notice

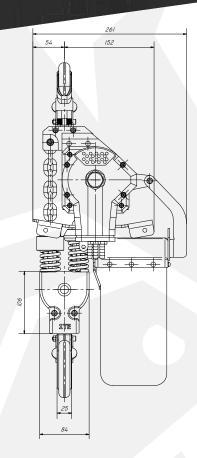

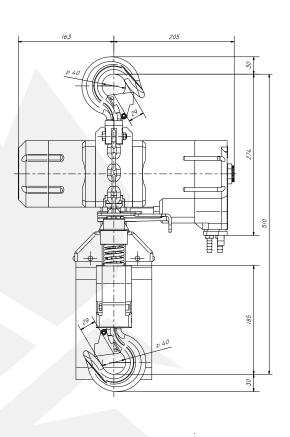

HOIST MODEL	TCS-980-LF
WLL	980 kg
CHAIN FALLS	2
LIFTING SPEED WITH LOAD	6.5 m/min
LIFTING SPEED WITHOUT LOAD	12.0 m/min
LOWERING SPEED WITH LOAD	12.0 m/min
AIR CONSUMPTION LIFTING	26 l/sec
AIR CONSUMPTION LOWERING	30 l/sec
WORKING PRESSURE	6 Bar
AIR CONNECTION	1/2" BSP
MINIMUM HOSE DIA.	1/2"
WEIGHT 3M HOL	23.5 kg
ADDITIONAL METRE HOL	1.6 kg


C = CORD CONTROL PE = PENDANT CONTROL

ADDITIONAL INFORMATION

The air motor should be inspected after 13,000 cycles. 1 cycle = 1 metre up and down




DRAWINGS & PARTS LISTS

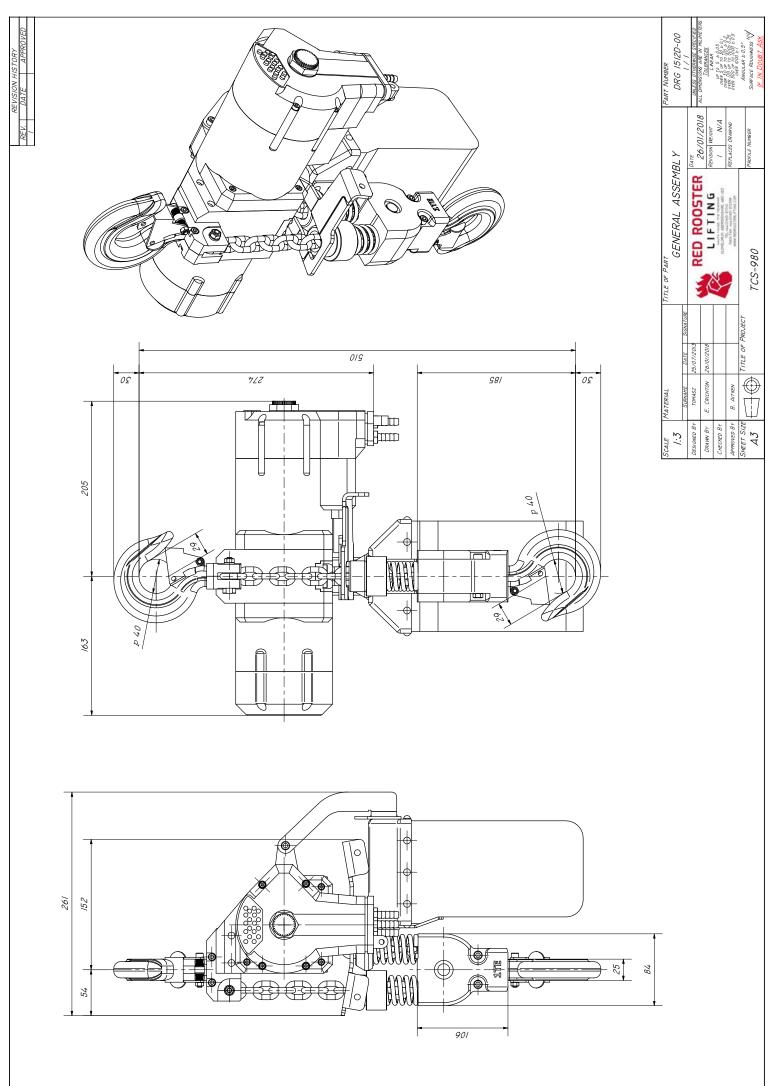



Brake Gears Suspension Body - TCS-980-LF

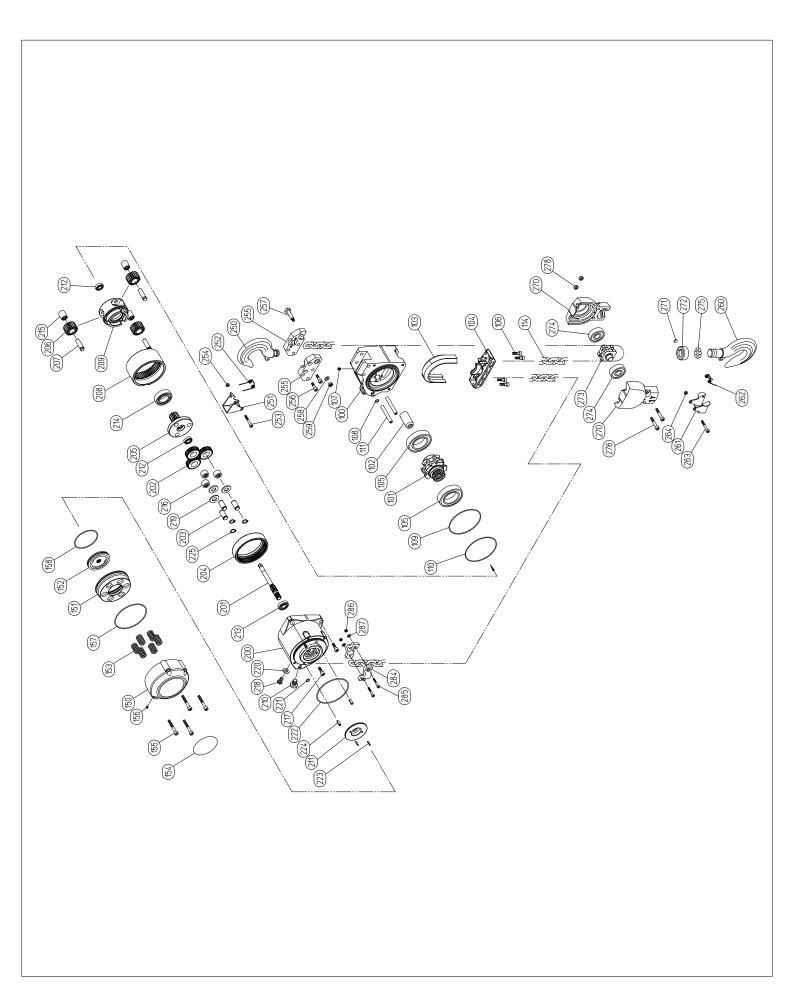



Brake Gears Suspension Body - TCS-980-LF


Fig. No.	Part Number	Part Name	Parts Per Hoist
100	426230A00	CENTRE HOUSING	1
101	426230A50	LOAD SHEAVE	1
102	426230200	COUPLING	1
103	426230350	CHAIN GUIDE	1
104	426230360	CHAIN SEPARATOR	1
105	130106009	BEARING 6008ZZ	2
106	131706020	HEX SOCKET HEAD CAP SCREW M6X20	4
107	132106006	HEX SOCKET SET SCREW M6X6	1
108	131103006	O-RING S-8	1
109	131103052	O-RING S-90	1
110	131117043	O-RING AS568-043	1
111	130608060	SPRING PIN 8X60	2
114	AHC63/80	CHAIN 6.3mm	HOL
150	426230410	BRAKE COVER	1
151	426230400	BRAKE PISTON	1
152	426230430	BRAKE DISC	1
153	130802213	DISC SPRING	6
154	137301065	NAME PLATE	1
155	131706045	HEX SOCKET HEAD CAP SCREW M6X45	4
156	132105005	HEX SOCKET SET SCREW M5X5	1
157	131103052	O-RING S-90	1
158	131103045	O-RING S-65	1
200	426230310	GEAR CASE	1
201	426230A60	FIRST PINION	1
202	426230A70	FIRST STAR GEAR	3
203	426230A80	FIRST PIN	3
204	426230E10	FIRST RING GEAR	1
205	426230E20	SECOND PINION	1
206	426230E30	SECOND STAR GEAR	3
207	426230E40	SECOND PIN	3
208	426230E50	SECOND RING GEAR	1
209	426230240	CAGE	1
210	426230890	LOCK SCREW	1
211	426230900	BRAKE PLATE	1
212	130113001	BEARING 6009	2
213	130120004	BEARING EE-4	1
214	130104006	BEARING 6005	1
215	130131020	NEEDLE BEARING TA1020Z	3
216	130131212	NEEDLE BEARING TA1212	3
217	131706020	HEX SOCKET HEAD CAP SCREW M6X20	3
218	131908015	HEX SOCKET BUTTON SCREW M8X15	1
219	131307012	WASHER M12	3
220	131307008	WASHER M8	1
221	131103006	O-RING S-8	1
222	131103052	0RING S-90	1
223	130606015	SPRING PIN 3X14	2
224	130606015	SPRING PIN 6X15	2
225	130302012	RETAINING RING S-12	3
250	426261S20	UPPER HOOK	1
	3-LF REV0 17.09.15		Ι.

Fig. No.	Part Number	Part Name	Parts Per Hoist
251	426221S30	HOOK SAFETY CLAW	1
252	130802258	HOOK SPRING	1
253	131705035	HEX SOCKET HEAD CAP SCREW M5X35	1
254	134501005	U-NUT M5	1
255	426251570	HOOK END PIECE	1
256	131706020	HEX SOCKET HEAD CAP SCREW M6X20	2
257	426224580	HOOK JOINT BOLT	1
258	131307006	WASHER M6	1
259	134501006	U-NUT M6	1
260	426221S20	SWIVEL HOOK	1
261	426221S30	HOOK SAFETY CLAW	1
262	130802258	HOOK SPRING	1
263	131705035	HEX SOCKET HEAD CAP SCREW M5X35	1
264	134501005	U-NUT M5	1
270	426251590	HOOK CASE	1
271	420846PY0	SWIVEL HOOK PLUG	1
272	420846PW0	SWIVEL HOOK OUTER RACE	1
273	426251F70	FREE CHAIN WHEEL	1
274	1301120036	BEARING 6302ZZ	2
275	130502020	STEEL BALL 5/16	8
276	131706035	HEX SOCKET HEAD CAP SCREW M6X35	2
278	134501006	U-NUT M6	2
284	420620JF0	CHAIN DOWN STOPPER	2
285	131705022	HEX SOCKET HEAD CAP SCREW M5X22	2
286	134401005	HEX NUT M5	2
287	131301005	SPRING WASHER M5	2

D01-AH13-LF REV0 17.09.15



Motor Valve Body - TCS-980-LF (Pendant)

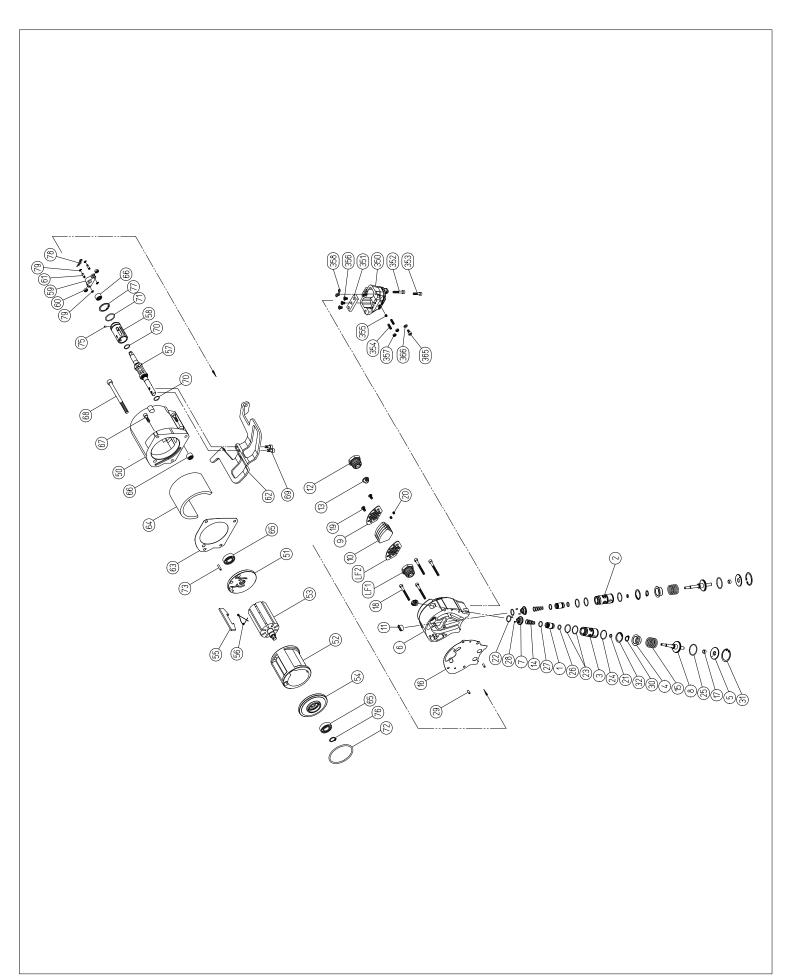



Motor Valve Body - TCS-980-LF (Pendant)


Fig. No.	Part Number	Part Name	Parts Per Hoist
001	420215VB0	THROTTLE VALVE	2
002	426320E90	VALVE BUSHING (U)	1
003	426230F00	VALVE BUSHING (D)	1
004	426230C70	SPRING SEAT	2
005	426230A20	VALVE CAP	2
006	426230061	VALVE BODY	1
007	426230A30	BUSH CAP	2
008	426230C60	PISTON	2
009	426230810	EXHAUST PLATE	1
010	137402023	SILENCER (S)	4
011	426230A10	ADJUST CAP	2
012	134703070	INLET BUSHING	1
013	136803032	NET SCREEN	1
014	130802221	VALVE SPRING	2
015	130802224	SPRING 26X20X2.6	2
016	136102165	VALVE GASKET	1
017	130219705	DU BUSH DUB0705	2
018	131705050	HEX SOCKET HEAD CAP SCREW M5X50	4
019	131905010	HEX SOCKET BUTTON SCREW M5X10	2
020	132105005	HEX SOCKET SET SCREW M5X5	2
020	131103005	O-RING S-7	2
021	131103003	O-RING S-15	2
022	131103013	O-RING S-13	4
023	131103017	O-RING S-22	2
_			2
025	131117023	O-RING AS568-023	2
026	131118012	O-RING AS568-012 (HS90)	1
027	131103011	O-RING S-12.5	4
028	130602004	SPRING PIN 2X4	ļ ·
029	130604010	SPRING PIN 4X10	2
030	130301032	RETAINING RING LL 22	
031	130301032	RETAINING RING H-32	2
032	130301025	RETAINING RING H-25	2
050	426230790	MOTOR CASE	1
051	426230180	REAR PLATE	1
052	426230160	CYLINDER	1
053	426230150	ROTOR	1
054	426230170	FRONT PLATE	1
057	426230460	LIMIT SHAFT	1
058	426230A40	LIMIT SHAFT BUSHING	1
059	426230140	LIMIT LEVER	1
060	130128104	BEARING MR104ZZ	2
061	426230120	ROLLER SHAFT	2
062	426251110	CHAIN LEVER	1
063	136102166	MOTOR GASKET	1
064	137402024	SILENCER (M)	1
065	130104003	BEARING 6002	2
066	130151210	NEEDLE BEARING TLA1210	2
067	131706020	HEX SOCKET HEAD CAP SCREW M6X20	3
068	131708110 3-LF REV0 17.09.15	HEX SOCKET HEAD CAP SCREW M8X110	1

Fig. No.	Part Number	Part Name	Parts Per Hoist
069	131706014	HEX SOCKET HEAD CAP SCREW M6X14	2
070	131103012	O-RING S-14	2
071	131103019	O-RING S-24	1
072	131102009	O-RING G-65	1
073	130604016	SPRING PIN 4X16	1
075	130603005	SPRING PIN 3X5	1
076	130302015	RETAINING RING S-15	1
077	130301028	RETAINING RING H-28	1
078	130790008	SNAP PIN 8	1
079	130303003	RETAINING RING E-3	4
350	426230470	UNDER COVER	1
351	137402033	PILOT SILENCER	1
352	131705030	HEX SOCKET HEAD CAP SCREW M5X30	1
353	131705020	HEX SOCKET HEAD CAP SCREW M5X20	2
354	132105016	HEX SOCKET SET SCREW M5X16	2
355	132105005	HEX SOCKET SET SCREW M5X5	1
356	132905206	CROSS HEAD FLAT MACHINE SCREW M5X6	3
357	134403205	HEX NUT M5	2
358	131103004	O-RING S-6	3
365	131705010	HEX SOCKET HEAD CAP SCREW M5X10	1
366	131307005	WASHER M5	1

Lube	Free Kit		
Fig. No.	Part Number	Part Name	Parts Per Hoist
055	KITTCS/LF	VANE	8
056	KITTCS/LF	LIFT SPRING	8
LF1	KITTCS/LF	EXHAUST PLUG	1
LF2	KITTCS/LF	EXHAUST GAUZE	1



Motor Valve Body - TCS-980-LF (Cord)

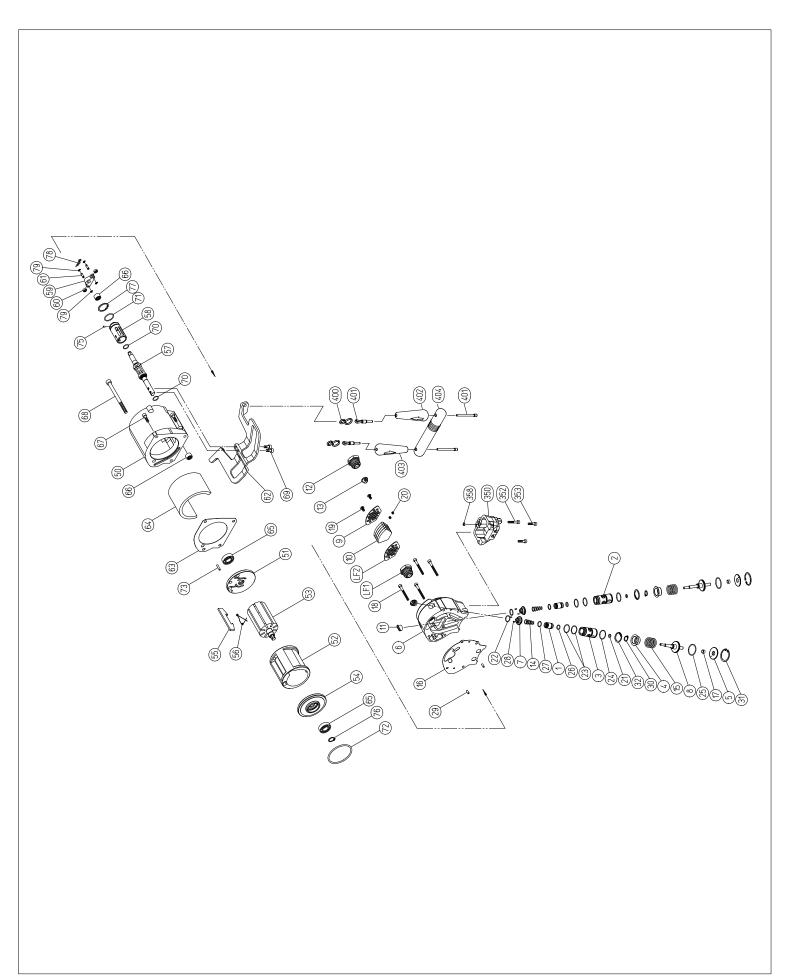




Motor Valve Body - TCS-980-LF (Cord)

Fig. No.	Part Number	Part Name	Parts Per Hoist
001	420215VB0	THROTTLE VALVE	2
002	426320E90	VALVE BUSHING (U)	1
003	426230F00	VALVE BUSHING (D)	1
004	426230C70	SPRING SEAT	2
005	426230A20	VALVE CAP	2
006	426230060	VALVE BODY	1
007	426230A30	BUSH CAP	2
008	426230C60	PISTON	2
009	426230810	EXHAUST PLATE	1
010	137402023	SILENCER (S)	4
011	426230A10	ADJUST CAP	2
012	134703070	INLET BUSHING	1
013	136803032	NET SCREEN	
014	130802221	VALVE SPRING	2
015	130802224	SPRING 26X20X2.6	2
016	136102165	VALVE GASKET	1
017	130219705	DU BUSH DUB0705	2
018	131705050	HEX SOCKET HEAD CAP SCREW M5X50	4
019	131905010	HEX SOCKET BUTTON SCREW M5X10	2
020	132105005	HEX SOCKET SET SCREW M5X5	2
021	131103005	O-RING S-7	2
022	131103013	O-RING S-15	2
023	131103016	O-RING S-20	4
024	131103017	O-RING S-22	2
025	131117023	O-RING AS568-023	2
026	131118012	O-RING AS568-012 (HS90)	2
027	131103011	O-RING S-12.5	2
028	130602004	SPRING PIN 2X4	
029	130604010	SPRING PIN 4X10	
030	130301032	RETAINING RING S-12	
031	130301032	RETAINING RING H-32	2
032	130301025	RETAINING RING H-25	2
050	426230790	MOTOR CASE	
051	426230180	REAR PLATE	
052	426230160	CYLINDER	1
053	426230150	ROTOR	1
054	426230170	FRONT PLATE	1
057	426230460	LIMIT SHAFT	1
058	426230A40	LIMIT SHAFT BUSHING	1
059	426230140	LIMIT LEVER	1
060	130128104	BEARING MR104ZZ	2
061	426230120	ROLLER SHAFT	2
062	426251110	CHAIN LEVER	1
063	136102166	MOTOR GASKET	1
064	137402024	SILENCER (M)	1
065	130104003	BEARING 6002	2
066	130151210	NEEDLE BEARING TLA1210	2
067	131706020	HEX SOCKET HEAD CAP SCREW M6X20	3
<u> </u>	131708110	HEX SOCKET HEAD CAP SCREW M8X110	1

Fig. No.	Part Number	Part Name	Parts Per Hoist
069	131706014	HEX SOCKET HEAD CAP SCREW M6X14	2
070	131103012	O-RING S-14	2
071	131103019	O-RING S-24	1
072	131102009	O-RING G-65	1
073	130604016	SPRING PIN 4X16	1
075	130603005	SPRING PIN 3X5	1
076	130302015	RETAINING RING S-15	1
077	130301028	RETAINING RING H-28	1
078	130790008	SNAP PIN 8	1
079	130303003	RETAINING RING E-3	4
350	426230470	UNDER COVER	1
352	131705030	HEX SOCKET HEAD CAP SCREW M5X30	1
353	131705020	HEX SOCKET HEAD CAP SCREW M5X20	2
358	131103004	O-RING S-6	1
400	130802081	S-TYPE WIRE	2
401	138001015	CHANGE CORD (HOL)	2
402	136602625	GRIP (W)	1
403	136602626	GRIP (R)	1
404	136602627	HANDLE	1

Lube	Free Kit		
Fig. No.	Part Number	Part Name	Parts Per Hoist
055	KITTCS/LF	VANE	8
056	KITTCS/LF	LIFT SPRING	8
LF1	KITTCS/LF	EXHAUST PLUG	1
LF2	KITTCS/LF	EXHAUST GAUZE	1

Pendant - VRD-2R

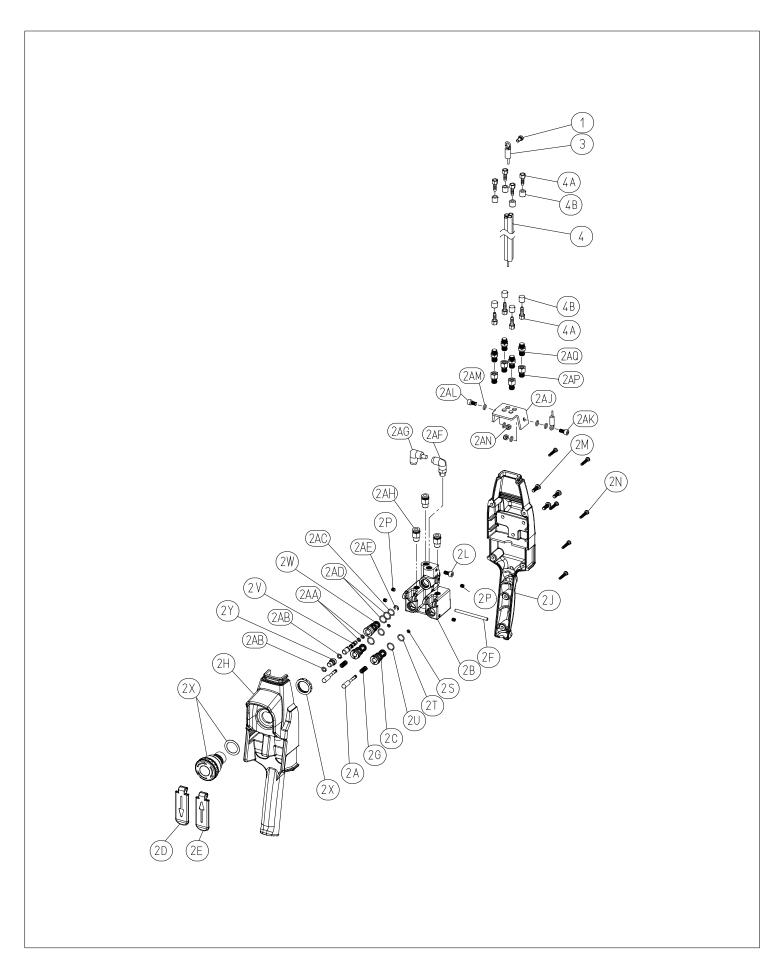




Pendant - VRD-2R

Fig. No.	Part Number	Part Name	Parts Per Hoist
1	131705008	HEX. SOCKET HEAD CAP SCREW M5X8	1
2	420228VRD	PENDANT VALVE ASSEMBLY	1
2A	420218VB0	THROTTLE VALVE	2
2B	420228VR0	VALVE BODY	1
2C	420218VF0	BUSHING	2
2D	420223W40	LEVER D	1
2E	420223W30	LEVER U	1
2F	130402053	LEVER PIN	1
2G	130802220	SPRING 6X14X0.6	2
2H	420228W50	FRONT CASE	1
2J	420228W60	REAR CASE	1
2L	131705010	HEX. SOCKET HEAD CAP SCREW M5X10	1
2M	132405014	PHILLIPS PAN HEAD MACHINE SCREW M5X14	3
2N	132904220	PHILLIPS PAN HEAD SELF-TAPPING SCREW 4X20	6
2P	132105005	HEX. SOCKET SET SCREW M5X5	4
2S	131109001	O-RING S-3 (HS90)	2
2T	131103008	O-RING S-10	2
2U	131103009	O-RING S-11.2	2
2V	420224V61	EMERGENCY STOP VALVE	1
2W	420228V50	EMERGENCY STOP BUSHING	1
2X	136690503	EMERGENCY STOP BUTTON	1
2Y	420228W00	PUSH ROD	1
2AA	131103002	O-RING S-5	2
2AB	131103004	O-RING S-6	2
2AC	131103008	O-RING S-10	1
2AD	131103009	O-RING S-11.2	2
2AE	130303004	RETAINING RING E-4	1
2AF	304P	1/8 BSP TO 6MM PUSH FIT ELBOW	1
2AG	P118	6MM PLUG IN ELBOW	1
2AH	P087	1/8 BSP TO 6MM PUSH FIT	3
2AJ	DRG- SI10394-T2	2 STATION PENDANT BRACKET	1
2AK	113/1	HEX. SOCKET HEAD CAP SCREW M6X16	1
2AL	113P	HEX. SOCKET HEAD CAP SCREW M6X20	1
2AM	145P	FLAT WASHER M6	5
2AN	139P	NYLOC NUT M6	2
2AP	P245	6MM TO 1/8 BSP BULKHEAD ADAPTOR	4
2AQ	P071/1	1/8 BSP HEX NIPPLE C/W 60° CONE	4
3	426230F1B	STRAINER WIRE	1
4	1/4-HOSE	1/4 ANTI-STATIC RUBBER HOSE	4
4A	P016/1	1/8 BSP TO 1/8 HOSETAIL SWIVEL	8
4B	P002/1	1/4 HOSE FERRULE	8

Pendant - VTP2M

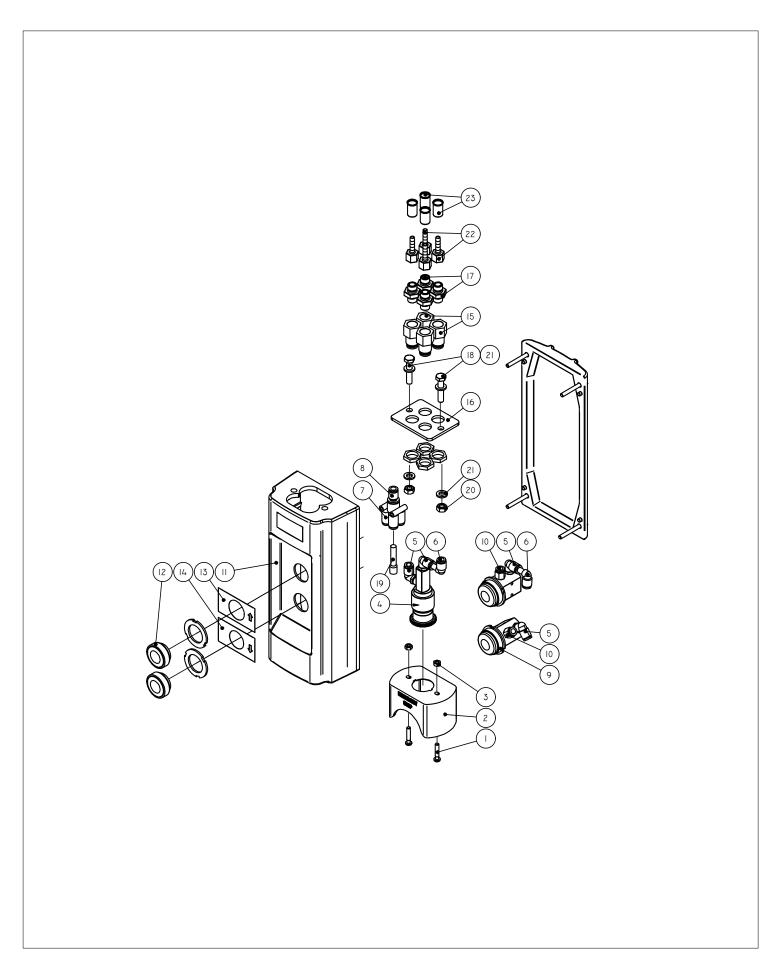



Pendant - VTP2M

Fig. No.	Part Number	Part Name	Parts Per Hoist
1	105P	M4 X 20 CHEESE HEAD SCREW	2
2	E/STOP/GUARD01	YELLOW E-STOP GUARD	1
3	113/1P	M4 NYLOCK NUT	2
4	BIK3206P-BS54	EMERGENCY STOP BUTTON	1
5	304P	8mm TO 6mm BANJO	4
6	P118	90° ELBOW 6mm	2
7	P112	4 WAY JUNCTION	1
8	301P	8mm TO 6mm REDUCER	1
9	BIK-3209-P-VALVE	PENDANT VALVE	2
10	P087	1/8" TO 6mm PUSHFIT	2
11	TP/HOUS/M	2 STATION MACHINED PENDANT	1
12	BIK-3209-294-B-COVER	COVER FOR BIK VALVES	2
13	XAC-B-LEGEND-UP	UP LEGEND	1
14	XAC-B-LEGEND-DOWN	DOWN LEGEND	1
15	P245	1/8" TO 6mm BULKHEAD AND NUT	4
16	DRG 2652-01	PLATE	1
17	P071/1	1/8" BSP NIPPLE C/W CONE	4
18	112P	M6 x 20 HEX BOLT	2
19	P117	8mm BLANKING PLUG	1
20	139P	M6 NYLOCK NUT	2
21	145P	M6 WASHER	2
22	P016/1	1/8" BSP SWIVEL TO 1/4" HOSE TAIL	4
23	P002/1	1/4" HOSE FURRULE	4

USER MANUAL



ACCESSORIES

USER MANUAL



ACCESSORIES

DUMP VALVES

On hoists fitted with 1/4" air hose in place of tubes, dump valves are fitted to the control lines to reduce operating delays.

Valve model: DV/0.25

AIR SERVICE EQUIPMENT

An air set should be used with all Red Rooster hoists and trolleys.

AIR SERVICE UNITS:

The correct size of air service unit for each hoist type is stated in the table on page 4.

FILTER UNIT (WATER TRAP)

Manual drain units

As the name implies, these units must be drained by the operator as the filter bowl becomes full of water. The frequency of draining is entirely dependent upon the usage of the hoist and the moisture level of the air supply. \bigwedge CAUTION

In clean environments e.g. laboratories, paint spray booths, manual drain filters are essential to prevent contamination.

Automatic drain units

These units are automatically self-purging. When the filter bowl is full it will automatically drain itself. Although very convenient to the user, the unit must be sited such that either the purged water is captured by a tray or it purges into an area away from personnel, equipment (particularly electrical equipment) and goods. If contamination from purged water is not a problem then automatic drain units should be selected.

Failure to fit and drain the filter will result in excessive moisture being carried into the hoist valve, motor and brake actuator resulting in internal corrosion and premature failure. A DANGER

USER MANUAL



AIR SERVICE EQUIPMENT

REGULATOR UNIT

Most compressors are supplied with a regulator on the output. However, where a number of different pneumatic tools are supplied from the same compressor it is good practice to maintain the supply line or remain at a higher pressure and to fit a regulator to the supply at each tool.

The operating pressures stated for the air hoist are the pressures required at the hoist inlet manifold. Subject to the type of airline, a pressure drop in the line between 0.1 and 0.35 bar (2 and 5 p.s.i) per 10 metres of line should be anticipated (as a result of the frictional resistance of the walls).

MOUNTING / ADJUSTMENT - WARNING

- 1. Set the regulator while verifying the displayed values of the inlet and outlet pressure gauges. Turning the regulator knob excessively can cause damage to the internal parts.
- 2. Do not use tools on the pressure regulator knob as this may cause damage. It must be operated manually.

MOUNTING / ADJUSTMENT - CAUTION

- 1. Be sure to unlock the knob before adjusting the pressure and lock it after setting the pressure. Failure to follow this procedure can cause damage to the knob and the outlet pressure may fluctuate.
- Pull the pressure regulator knob up to unlock. (You can visually verify this with the 'orange mark' that appears in the gap.)
- Push the pressure regulator knob down to lock. When the knob is not easily locked, turn it left and right a little and then push it. (When the knob is locked, the 'orange mark', i.e. the gap will disappear.)
- 2. Pulsation will generate when the difference between the inlet and the outlet pressure is large. In this case, reduce the pressure difference between the inlet and the outlet. Please consult with SMC if pulsation problem is not resolved.
- 3. When the bowl is installed, install them so that the lock button lines up to the groove of the front (or the back) of the body to avoid dropping or damage of the bowl.

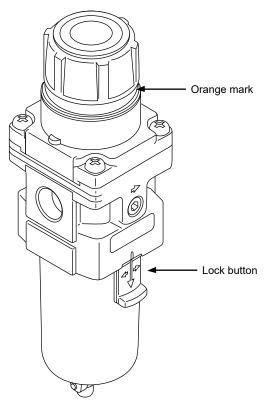


Image for illustration purposes only



LOG BOOK



PNEUMATIC HOIST AND TROLLEY INSPECTION REQUIREMENTS

Pneumatic hoists, trolleys and overhead cranes should be inspected as specified in the 'Supply of Machinery (Safety) Regulations 2008 and The Provision of Use of Powered Machinery (PUWER) S12306 sections 5 & 6 and the results recorded in the log book.

External inspection by a competent person every 12 months or as per the examination scheme. The Lifting Operations and Lifting Equipment Regulations S12306 - 1998.

DAILY OR SHIFT INSPECTION

At the same time each day at the start of each working day of shift operator should carry out a basic inspection of the equipment, its operation and lubrication as required.

MONTHLY OR 3 MONTHLY CHECKS

Depending on the frequency of use and the working conditions, inspection and maintenance should be done at suitable intervals to ensure any deterioration of the equipment will be detected and remedied in good time.

ANNUAL INSPECTION

A competent person with the requisite knowledge of the equipment should carry out a full inspection of powered lifting equipment every 12 months or after any exceptional circumstances which could jeopardize the safety of the lifting equipment. A report should be issued and sent to the customer / employer.

DAILY HOIST AND TROLLEY INSPECTION REQUIREMENTS

The items listed below are intended as a guide for performing daily visual inspections of the components that have a direct bearing on the safety of the hoist and or trolley where the status may change with day to day use. The equipment items listed below do not necessarily need to be restricted to these items, but they should form the basis of the inspection.

OPERATING CONTROLS: Check for malfunction, excessive wear, broken or damaged components and control function labels.

HOIST CHAIN: Check chain lubrication, twisted chains (multi fall blocks).

AIR SET: Check air pressure.

SAFETY CATCHES: Check operation and for damage.

NOISE / OPERATION: Check for any unusual noise and speeds during function tests.

HOIST OPERATION: Check the hoist starts and stops quickly.

EXTRA CHECKS FOR TROLLEY

OPERATION: Check movement and control of the trolley (no load). TROLLEY MOVEMENT: Check the trolley moves smoothly along the beam.

CHECKS ON UK Ex / ATEX EQUIPMENT

In addition to the standard checks UK Ex / ATEX hoists and trolleys should also have the following checks carried out:

Check the Bronze, Copper or Zinc coating of the hook is not damaged or worn (or the bottom block for IIC/IIIC equipment).

Check safety catches.

Check the UK Ex / ATEX rating on the nameplate is still legible.

Check the rubber buffers or limits on the trolley are in good condition.

Check the condition of the Bronze trolley wheels.

Check the condition and setting of the anti-tip rollers.

Check air supply lines and control lines for fitting, wear or damage.

Check load chain for excessive corrosion.

Check hoist body for excessive corrosion.



PNEUMATIC HOIST AND TROLLEY MAINTENANCE REQUIREMENTS

TO BE CARRIED OUT MONTHLY OR THREE MONTHLY DEPENDING ON THE HOIST WORKING CONDITIONS

DAMAGE: External inspection of hoist for damage or wear.

HOIST CHAIN: Check chain lubrication, twisted chains (multi fall blocks) and excessive wear or damaged chain links. (Light mineral oil).

HOOKS: Check hooks swivel, hook opening and safety catch.

AIR SET: Check regulator and filter condition.

FITTINGS/HOSES: Check all air-line fitting are secure and there are no air leaks.

BOLTS: Check security of bolts, chain collector and chain anchor.

AIR MOTOR: Check air motor and silencers - replace as required.

OPERATION: Function test hoists running speed and control operation without load and then check lifting a load of around 50% of SWL to

check brake operation and controls when loaded.

LIMIT SWITCHES: Check operation of upper and lower limits at slow speed.

EXTRA CHECKS FOR TROLLEY

RUNWAY BEAM: Check the beam is smooth and flat without obstruction and that the end stops are in place and secure.

DIVE PINION: Check drive pinion and wheels are fitting correctly and not worn, grease if required.

ADJUSTMENT: Check flange adjustment, anti tilt roller setting, load bar nuts - adjust or tighten if required,

AIR LINES: Check security of control lines and supply hoses and fittings.

OPERATION: Function test over the complete range of travel.

SUPPLY HOSES: Check air lines are supported and the weight is not hanging from the air set.

TROLLEY CHAIN: Check geared trolley hand chain and drive.

When detecting any abnormality during inspection due to erroneous use, instruct the operator and user for correct use of the chain hoist.



							DAII	N √	, NAL	NSPE	DAILY VISUAL INSPECTION REQUIREMENTS	N REG	UIRE	MEN	ပ												
	MONTH:	 ÷												YEAR:	يخ												
DAY	1	က	4	2	9	7	∞	6	10	11 12	2 13	41	15	16	17	18	19 2	20 21	1 22	2 23	24	25	56	27	28 2	29 30	0 31
AIR HOIST CHECKS																											
HOOK SWIVEL																											
AIR LEAKS																											
AIR REGULATOR																											
SAFETY CATCHES																											
NOISE / OPERATION																			_								
PENDANT OPERATION / E-STOP																											
CHAIN LUBRICATION																											
CHAIN NUT TWISTED																		-									
SUPPLY HOSE																											
CHAIN COLLECTOR																			_								
TROLLEY CHECKS																!								!			
OPERATION / NOISE			L						\vdash		L	_						\vdash	-	_							
FESTOON SYSTEMS																											
MOVEMENT (IF FITTED)																											
OPERATOR'S NAME																											
1.																											
2.																											
3.																											
4.									Н									H	\vdash								
										=																	
COMMENTS																					Z	INITIALS			DATE		



MAINTENANCE CHECKS

TO BE CARRIED OUT MONTHLY IN PRODUCTION OPERATIONS WHERE HEAVILY USED OR IN HARSH WORKING CONDITIONS. TO BE CARRIED OUT THREE MONTHLY WHEN THE HOIST IS ONLY USED OCCASIONALLY.

PLEASE CONTACT RED ROOSTER TO CONFIRM IF MONTHLY OR THREE MONTHLY MAINTENANCE CHECKS ARE REQUIRED IF YOU ARE NOT SURE.

MONTHLY / 3 MONTHLY CHECKS CARRIED OUT AS PER MANUAL	NAME	DATE
MONTHEL / 3 MONTHEL CHECKS CARRIED COT ACT ER MARCAE	IVAIVIL	DAIL
		I



Head Office:Nauta House
The Meadows

Oldmeldrum Aberdeenshire, AB51 0EZ

Depot: Unit 26

Kelvin Way Trading Estate

Kelvin Way West Bromwich, B70 7TW T: +44 (0) 1651 872101 E: sales@redroosterlifting.com W: www.redroosterlifting.com

T: +44 (0) 121 525 4162