

It is possible to remove menu options and to choose which menu the unit shall return to after a period of inactivity. To access the configuration menu, hold down both the Function control (1) and the Level control (2) for three seconds. You will find five options:

Press and hold down for 3 seconds



1 Select standard function

To select which menu the unit will return to after a period of inactivity: Rotate the Function control (1) until the unit says "standard function" and then press the control. Rotate the Function control again until the desired option is read aloud and then press the control. It is possible to choose between volume, speed and navigation.

2 Remove function

To remove functions, rotate the function control (1) until the unit says "remove functions" and then press the control. Press the control to remove or restore the selected function. When you have selected the functions you wish to be available, navigate with the function control (1) until the unit says "back" and press the control. When you have done this you will return to the main menu for configuration.

3 Restore factory settings

To restore the configuration to the factory settings, rotate the function control (1) until the unit says "restore factory settings" and then press the control.

4 Save and go back

To save and leave the configuration settings, rotate the function control (1) until the unit says "save and go back" and then press the control.

5 Go back without saving

To leave the configuration without saving, rotate the function control (1) until the unit says "go back without saving" and then press the control.

