

SMS alarm



L-53

2014-06-23

intab^o

1. Description

A1000 is a simple & easy to use GSM Detector which sends SMS and calls you in case of alarm events.

Alarm event occurs in case of NO and NC ports changes. Up to 3 users can be registered.

Only a local GSM SIM card is required to operate the device.

A1000 operates with both batteries and power adaptor.

A1000 also operates as Power Failure Detector. Sends you POWER FAIL message in case of power adaptor fails and sends you POWER OK message in case of power restored.

Once battery is low, device sends you LOW BATTERY message and sends you weekly KEEP ALIVE messages.

Device also sends you "GSM Signal Strength Level" while making configuration.

2. Getting started

2.1. Insert SIM Card

A local SIM card is required to operate the system. Before inserting the SIM card, try it with a mobile phone and:

- Disable PIN code protection
- Send an SMS to a mobile number for testing

After above steps; please open the screws on the back of the item and please insert SIM card into your device.

2.2. Connect Devices on Ports

NO PORT (Port1): Connect two wires of your NO type device output or cable into terminal block 5 & 6.

It does not matter which one is first. This port is a “Normally Open” port and checks if there is any short-circuit between terminal 5 & 6.

NC PORT (Port2): Connect two wires of your NC type device output or cable into terminal block 7 & 8.

It does not matter which one is first. This port is a “Normally Closed” port and checks if there is any open-circuit between terminal 7 & 8.

Device provides required voltage by itself. Do not apply any external power on these terminal blocks which might cause damages. Also make sure that your external device does not apply any voltage, or sink or sank any currents. Your external device should only provide a relay output or short or open circuit.

2.3. Connect Power

Connect 12V DC power adaptor into terminal block numbers 1 and 2. Number 1 is positive voltage and 2 negative (GND).

Please note power adaptor current should be at least 1500 mA.

Then insert two pieces of CR123A batteries included in the package. (If power adaptor is not used, insert batteries only).

2.4. Register Admin Number

Admin number is authorized to make configurations, change & delete settings of the device. And also will receive all alerts with SMS. Other users will only receive alerts and will not be able to make configurations.

The LED will blink a few times until it is connected to an available network. Please wait for LED becomes solid ON. Once LED is ON; that means device is connected to a GSM network and ready to work.

Now please call the device's number with your phone. Once you hear the ringing volume, your number is registered to device's memory as ADMIN NUMBER.

Then the LED will blink and device will send you an SMS including "ADMIN OK" message. After you receive this message; please wait for LED becomes solid ON again. If done; you ready for next step.

2.5. Send Configuration Commands

Now your device is waiting for a configuration SMS from you (note that timeout is 2 minutes).

Please note all commands should start with an admin password (except RESET command). Default password is "1111". Also, it is possible to send one or several commands in one SMS.

Commands should be written in "big letters" (correct one: 1111 NEWP:3333, wrong one is: 1111 newp:3333).

There should be a space character between independent commands e.g.: 1111<space>NEWP:1234<space>DEL1<space>DISABLE

Device is case sensitive; please pay attention to text message ingredients.

Attention: If you write the password wrong you will receive an SMS including "WRONG PSWR" text. In that case device will keep in configuration mode. Please wait until LED becomes solid again and send a configuration SMS with correct password. Otherwise device will keep the same settings and continue operation after 2 minutes timeout and LED will become OFF.

THE LIST OF COMMANDS (table 1)

| DESCRIPTION | COMMAND | DEFAULT |
|---------------------|------------------|-----------------|
| Change password | NEWP:XXXX | 1111 |
| Add / change user 1 | TEL1:+XXXXXXXXXX | |
| Add / change user 2 | TEL2:+XXXXXXXXXX | |
| Delete user 1 | DEL1 | |
| Delete user 2 | DEL2 | |
| Enable Keep Alive | ENABLE | Enable (weekly) |
| Disable Keep Alive | DISABLE | Enable (weekly) |
| Reset device | RESET | |

EXAMPLES:

1) QUICK CONFIGURATION:

1111

Above example means you didn't change any configuration but you know the password. Once you sent this SMS to the device; it will reply you with an SMS including "CONFIG OK <XX>" text (where XX is GSM signal strength, see "Table-2" for further details). Now LED will turn off and your device is ready to operate.

2) EXTENDED CONFIGURATION:

1111 NEWP:5555 TEL1:+906661234567 TEL2:+907771234567 DISABLE

Above example means:

o New admin password is now "5555" and you have to use this new password to make new configurations in the future. Please note it carefully.

- You added a new user1 number +906661234567.
- You added a new user2 number +907771234567.
- Weekly keep alive messages are disabled.

Once you sent this SMS to your device, it will reply you with an SMS including "CONFIG OK <XX>" text (where XX is GSM signal strength, see "Table-2" for further details). Now LED will turn off and your device is ready to operate.

Finally close the cover and insert screws on the back.

SIGNALSTYRKA - GSM (tabell 2)

| <XX> | BETYDELSE | RÅD |
|---------------|------------------|--|
| Between 19-31 | Excellent signal | |
| Between 14-18 | Good signal | |
| Between 9-13 | Workable signal | Try changing location |
| Between 1-8 | Weak signal | Check antenna / change device location |
| 99 | | |

3. Normal operation and alarms

Now your device will continuously check for:

- NO and NC port changes
- Temperature Restorations
- Power failure and restorations
- Low battery
- And keep alive message periods

In case of NO port is closed (short-circuit) you and other users (if registered) will receive SMS including "PORT1 ALARM" texts.

In case of NC port is open (open-circuit) you and other users (if registered) will receive SMS including "PORT2 ALARM" texts.

In case of power failure, power restoration, keep alive period exceeds and low battery case; you and other users will only receive SMS including "POWER FAIL", "POWER OK", "STILL ALIVE" and "LOW BATTERY" texts.

3.1. Re-configure Your Device

Press at least 1 second to the Configuration Button on your device anytime. LED will blink a few times and please keep waiting for LED becomes solid ON. Then you might send a new configuration SMS to device with using your latest password. The procedure of sending configuration SMS is same with article "2.5. Send Configuration Commands".

3.2. Check GSM Signal Strength

Please follow article 3.1 and then only send your last password with SMS. You will receive "CONFIG OK <XX>" text message where <XX> indicates GSM Signal Strength. For further description please see "Table-2".

3.3. Reset Your Device

Press Configuration button at least 1 second. LED will blink a few times and please keep waiting for LED becomes solid ON. Then send an SMS to the device including "RESET" command. LED will blink a few times and become solid ON. Now your device has been reset, it is ready to start. Please follow instructions starting from "2.4. Register Admin Number".

Technical specification

| Intab SMS-alarm | |
|------------------------|--|
| Power supply | <ul style="list-style-type: none"> • 2 x CR123A batteries • 12 V 1500 mA DC adaptor |
| Inputs | <ul style="list-style-type: none"> • SMS in case of NO Port Failure • SMS in case of NC Port Failure • Power adaptor input |
| Outputs | <ul style="list-style-type: none"> • Not available |
| GSM module | <ul style="list-style-type: none"> • GSM 900/1800 MHz Dual Band (A1400) • GSM 850/900/1800/1900 MHz Quad Band (A1400-Quad) |
| Event alerts | <ul style="list-style-type: none"> • SMS in case of NO Port Failure • SMS in case of NC Port Failure • SMS for Power Failure • SMS for Power Restored • SMS for Low Battery • SMS for Keep Alive Messages • SMS for GSM Signal Strength (while configuration) |
| Configurations via SMS | <ul style="list-style-type: none"> • Change security password • Register & delete user phone numbers (up to 2) • Enable & disable weekly keep alive messages • Reset device |
| Operating temperature | <ul style="list-style-type: none"> • -10°C to +50°C (non-condensing) |
| Dimensions | <ul style="list-style-type: none"> • 109x54x30 mm |
| Package content | <ul style="list-style-type: none"> • 1 x A1400 GSM Temperature Detector • 2 x CR123A Lithium Batteries • 1 x User Manual • 4 x Fixing Screws & Insertion Pies |

My data:

Admin telephone number:

Password:

Telephone number SIM:

intab^o