

User Manual

MagniLink AIR - PC

LVI America Inc.

302 Saunders Road, Suite 200 Phone: (888) 781-7811 info@lviamerica.com

Riverwoods, IL 60015, USA www.lviamerica.com

LVI Low Vision International

 Verkstadsgatan 5
 Tel: +46 470-727700
 info@lvi.se

 SE-352 46 Växjö
 Faks: +46 470-727725
 www.lvi.se



Table of Contents

1	About LVI	5		
2	2 Introduction to MagniLink AIR			
3	Information	7		
	3.1 Reuse, installation and maintenance			
	3.2 Cleaning	7		
	3.3 Safety information	7		
4	Unpacking	9		
	4.1 Packaging	9		
5	Accessories	10		
6	MagniLink AIR Distance	12		
7	Control unit	14		
	7.1 Connection	14		
8	MagniLink PCViewer	15		
	8.1 Minimum system requirements	15		
	8.2 Recommended system requirements	15		
	8.3 Installation of software	16		
	8.4 Licensing	19		
	8.5 Using the software	21		
	8.6 Update software	47		
9	Ergonomics	50		
1(0 Technical information	51		
1	1 Declaration of Conformity	52		





1 About LVI

LVI Low Vision International AB was founded in 1978 and is one of the world's leading manufacturers of equipment for persons with visual impairments. Development of new products takes place in close cooperation with users and professional staff within the low vision rehabilitation industry. LVI is quality-certified in accordance with ISO 9001 and environmentally-certified in accordance with ISO 14001.

The information in this manual has been carefully checked and is believed to be accurate. However, LVI assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will LVI be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual. In the interest of continued product development, LVI reserves the right to make improvements in this manual and the products it describes at any time, without notice or obligation.



2 Introduction to MagniLink AIR

Thank you for choosing this camera system. Our aim is for you to be satisfied with your choice of supplier and vision aid.

MagniLink AIR is a product line of magnifying camera systems designed for people with visual impairment. The system is available with several different cameras that can be combined in various ways. MagniLink AIR Uno with a combined distance and reading camera. MagniLink AIR Duo with a distance camera and a reading camera. MagniLink AIR Distance is a distance camera that connects to a computer via a network cable. You can also connect various LVI reading cameras to the system. The system offers features such as the ability to pan and tilt the camera, magnification settings, autofocus, several artificial colours, reading mode, mirror mode and distance mode settings, amongst other things. MagniLink AIR can stream video to a PC or a Mac.





The systems complies with all CE certification requirements for medical devices in accordance with EU regulation 2017/745.



3 Information

3.1 Reuse, installation and maintenance

The device may only be technically overhauled and prepared by an authorized company. Re-use may only be carried out after appropriate inspection and cleaning / disinfection.

3.2 Cleaning

Before equipment cleaning and maintenance note:

- Disconnect the device from the power supply before cleaning.
- Use a slightly damp (not wet) cloth and a cleaning / disinfectant agent intended for monitors and computers.
- Do not allow any liquids to enter the device.

3.3 Safety information

- If the product is moved from the cold into a warm room, condensation (moisture) can form inside the unit or on the camera lens. To prevent problems with condensation, the apparatus should be installed in the room at least 30 minutes prior to usage.
- Please follow the instructions in the document called "Assembly and Installation".
- Store cables and power supplies securely.
- LVI recommends having two persons present when mounting the unit to a ceiling.
- Make sure the system is installed correctly.
- Do not pull or hang on the system after installation.
- Be aware of crushing.
- Do not cover the system.



- Never operate the product if it has been exposed to water or other liquids. Damaged or wet product can cause electric shocks or fire.
- If the system requires cleaning, pull out all cables and use a slightly damp (not wet) cloth. Use only water or a cleaning agent that is intended for monitors and computers.
- Do not rely 100 per cent on the results of an OCR conversion; the OCR engine can misinterpret the text. This is particularly important to bear in mind when processing sensitive information such as a medical prescription.
- Make no further adjustments, even if the product does not function normally after following the functional descriptions. Pull out the power cable and contact service staff or the product distributor.
 Only use spare parts that are specified by LVI.

If in doubt, contact your supplier.

Warning



The product is supplied packed in a plastic bag. To avoid risk of suffocation, keep the bag out of the reach of children and infants.



4 Unpacking

The system is supplied in a box with the following contents:

- Camera system
- User Guide
- USB memory stick with software

Make sure there is no external damage before opening the box. In the event of damage, contact the courier to report the damage. Open the box, take out the MagniLink AIR and remove the packaging parts. For further information, please see the chapter on Installation.

4.1 Packaging

The packaging consists of the following packaging material (LVI recommends that the packaging be kept in case you have to return the system or you need to move it):

- Packing material (EPEL E)
- Box (corrugated cardboard)
- Polyethylene (LDPE4)

For sorting and collection of packaging material, please call the packaging collection customer service department for information on the rules that apply in your municipality.

Note that the product and its accessories must be recycled as electronic waste. A worn-out battery is recycled as electronic waste.



5 Accessories



The controller (MLAIR-A013) can be used to control the system if you don't want to control the system from the computer.



The control unit (MLAIR-A012) is used if the system is not directly connected to a computer. The control unit contains pre-installed



software and cameras are connected to the control box, which in turn is connected to a screen. Includes a hand held control



MagniLink Framegrabber (MLAIR-A004). Used to transfer images from an external video source (e.i. a projector/smartboard) to the software.



Roof bracket (MLAIR-A014). Used if the ceiling is not using 60x60cm panels.



Text To Speech for PC (TTS-PC) or Mac (TTS-MAC).



6 MagniLink AIR Distance

The distance camera is connected using the included network cable. The distance camera is available with various brackets.



Table bracket (MLAIR-DISTANCE).



Ceiling bracket (MLAIR-DISTANCE-C).





Wall bracket (MLAIR-DISTANCE-W).



7 Control unit

Used to control the system if it is not directly connected to a PC. Comes with pre-installed software.

The control unit can be supplied with PC compatibility as an added extra. It can be controlled using a hand held controller, a mouse or keyboard.

The control unit along with the software offers the possibility of split function.

7.1 Connection



On/Off button. Turns the system on and off.

Power supply The power adaptor plugs in here.

USB 3.1 Used to connect the control box, mouse, keyboard or a USB

camera.

Sound Connects your headphones.

HDMI Used to connect an external monitor.

Ethernet Used to connect a distance camera.

Thunderbolt 3 Like USB 3.1, but also used to connect a monitor.



8 MagniLink PCViewer

MagniLink PCViewer is a computer programme that displays images from a MagniLink camera system. The programme can control the camera properties, such as magnification level, artificial colours and brightness. If the system supports OCR, the OCR can process a text and read it aloud through speech synthesis (text to speech). The programme can also share the computer screen with ZoomText or SuperNova software.

8.1 Minimum system requirements

- Microsoft Windows 7.
- Network adapter: Ethernet 10 Mbps.
- i3 processor, 1 GB RAM (32 bit) 2 GB RAM (64 bit).

8.2 Recommended system requirements

- Microsoft Windows 10.
- Network adapter: Ethernet 100 Mbps.
- i5 or i7 processor, 4 GB RAM, external graphics card with at least 512 MB built-in memory.

LVI has tested the software on several computers without any issues, but that is no guarantee that the system will function on every computer that complies with the specifications. LVI recommends testing the software with the computer that the system will be used on, in order to ensure compatibility. Higher computer performance enables higher camera performance.

MagniLink PCViewer can display video from multiple video sources. The more video sources that are connected, the better computer performance is required. Video recording and screen magnification programs ZoomText or SuperNova require additional performance. If performance is insufficient, LVI recommends disabling ZoomText or SuperNova.



8.3 Installation of software


NOTE



Installation requires administrator privileges on the computer in question and is performed on the user account currently in use.


Insert the USB stick containing the software into one of the computer USB ports. Initiate the installation by clicking on "Setup" in the MagniLink PCViewer folder.

When the installation program starts, follow the instructions on the screen to complete software installation, or see below for a more detailed description.

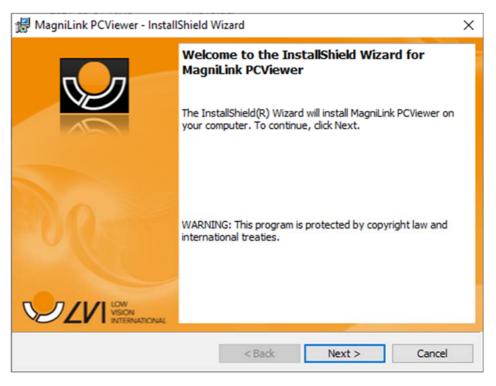


Select "Next" in the dialogue box "Welcome to the InstallShield Wizard for MagniLink PCViewer".



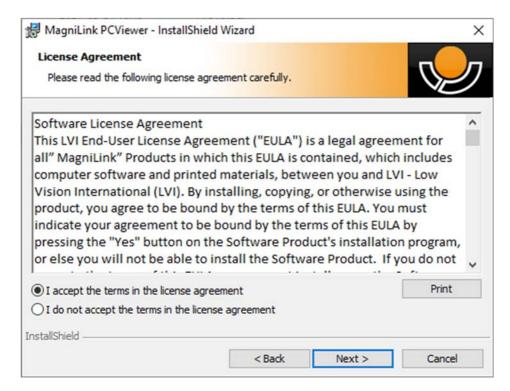


Read the text in the "License Agreement" and approve by selecting "I accept the terms of the license agreement" and click on "Next" to start the installation.

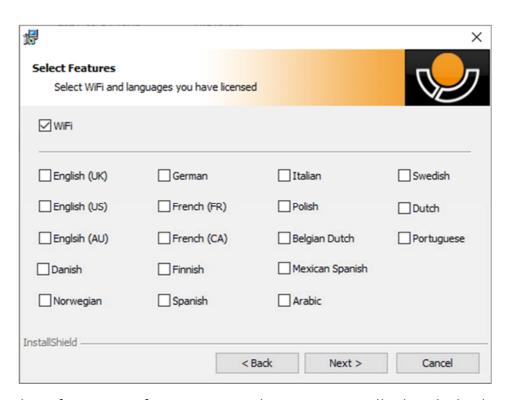


Tick the box for Wi-Fi. If your camera has OCR installed, tick the box of the language(s) included in your license. Do not tick a language if you do not have OCR installed. Click "Next" to continue the installation.



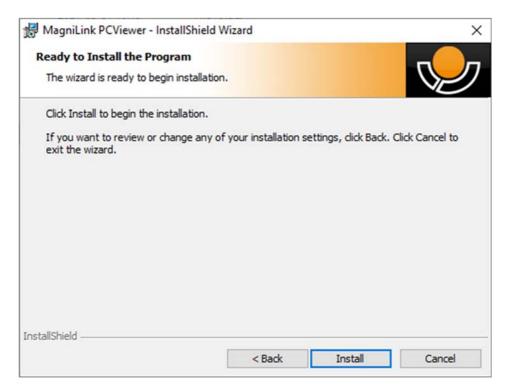

Select "Install" in the dialogue box "Ready to Install the Program".

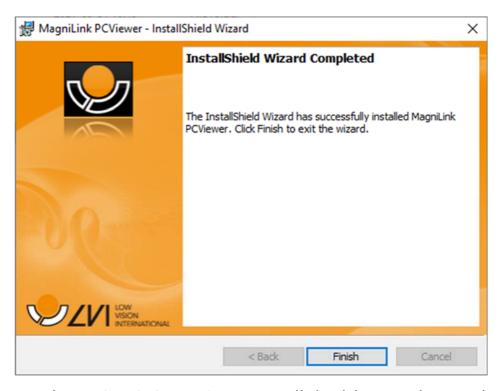

Select "Finish" in the dialogue box "InstallShield Wizard Complete".



8.4 Licensing


The camera system that is used with the software can be licensed with different functions.

- It is possible to license the system with or without OCR functionality.
- It is possible to license the system so that the software does not communicate with the internet.
- It is possible via the licence to remove the functions video recording and take picture.
- It is possible to license the system with voices in the following languages:
 English (US), English (UK), German, French, Finnish, Italian, Dutch (BE), Dutch (NL), Swedish, Danish, Polish, Spanish, Portuguese, Norwegian, English (AU), Russian, French (CA), Arabic, Hebrew, Hungarian, Rumanian, Bulgarian, Czech, Slovakian, Croatian, Turkish, Greek.

8.4.1 Computer license


By licensing the software to a computer, you can use the software without a connected camera. To license the software you will need an activation key. Activation keys can purchased from your LVI distributor.

To activate a computer license, launch the application without a camera connected. The following dialogue will be displayed.

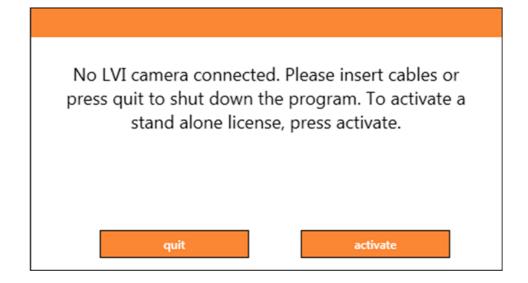




Click on "activate". If the application establishes contact with the activation server, the following dialogue box will be displayed.

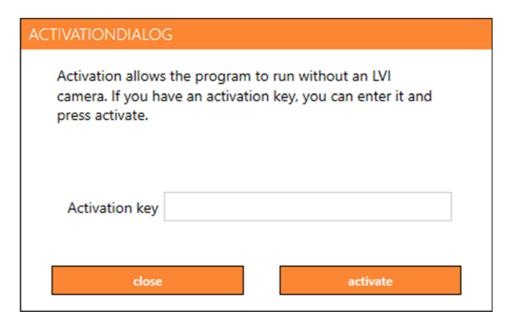

Enter your e-mail address and your activation key, then click on "activate". You can now start using the software without a camera.

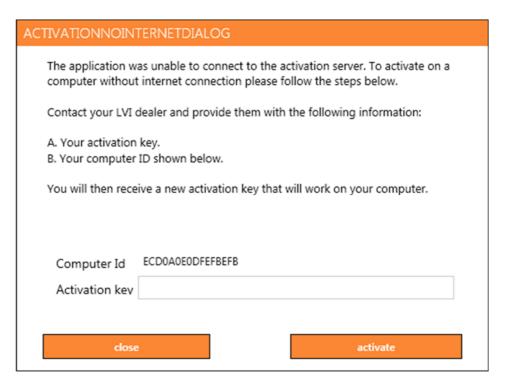

The following dialogue box is displayed if there is no internet connection or the application is unable to connect to the activation server. Follow the instructions and contact your LVI distributor in order to activate the applications.



8.5 Using the software

The software can be started from the icon on the desktop, from the start menu or using the short cut command Ctrl + Alt + S.

8.5.1 Functions via menus

The application consists of a window with tabs and groups of buttons. There is a tab for application settings and another tab for handling the camera. Depending on whether the system is licensed for OCR, there is also a tab for handling the OCR processed text.

8.5.1.1 Camera tab

The following tab will only appear if there are one or more cameras connected.





Change colours

Used to change between natural and artificial colours.



Decrease magnification



Increase magnification



Overview mode

Reduces magnification to overview mode. Click again to restore the magnification. When overview mode is active, a sight is displayed in the middle of the video window.



Change Image Source

Used to swap image sources (if there are more than two sources).





Change camera

Used to swap cameras.



Change split mode

Change between vertical and horizontal split mode.



Move split left

Moves split mode to the left.



Move split right

Moves split mode to the right.



Pan left



Pan right



Tilt down



Tilt up



Position 1

To save the position, hold down "Ctrl" while pressing the button. The camera image will then move into the saved position when pressing the button.





















Position 2

To save the position, hold down "Ctrl" while pressing the button. The camera image will then move into the saved position when pressing the button.

Position 3

To save the position, hold down "Ctrl" while pressing the button. The camera image will then move into the saved position when pressing the button.

Lock autofocus

Locks the autofocus mode. This can be used when you wish to write by hand. In this way, autofocus is not affected by the pen or your hand. Press the button a second time to reactivate autofocus.

Focus up

Reduce focus distance. When this function is used, autofocus is turned off.

Focus down

Increase focus distance. When this function is used, autofocus is turned off

Reduce brightness/contrast

Increase brightness/contrast

Reference line/bar left/up

Adjust the position of the reference line. Press the button to move the reference line to the left. Hold the button in to change the reference line to horizontal and move it upwards. The reference line then becomes a vertical bar which diminishes the viewing area. To make the bar horizontal, press the button again.

Reference line/bar right/down

Same as the previous command but in the opposite direction.







A dialogue box "Save pictures" opens. A file name (with the day's date and time) and a folder (My Pictures) are automatically suggested. Just press "Enter" to save the picture. If you wish to save the picture somewhere else, or with another name or in another format, (the standard is JPG), you can change this manually. To save a picture quickly, hold down "Shift" when you press the button.



Show pictures

Press to view the saved pictures. Mark the picture you wish to view and press Enter or select Open. The picture is normally opened in Windows' standard picture-viewing programme where, among other things, the picture can be enlarged. To view the most recently saved picture quickly, hold down "Shift" when you press the button.



Start/stop video recording

Press to open the "Save video clip" dialogue box. A file name (with the day's date and time) and a folder (My video clips) are automatically suggested. Press Enter to save with the suggested name. If you wish to save the video in a different folder, or with another name, you can change this in the dialogue box. Stop the recording by pressing the button again. To start video recording quickly, hold down "Shift" when you press the button.



Show video recording

Press to view the saved video files. Mark the video you wish to view and press Enter or select Open. The video is normally opened in Windows' standard media player software. To view the most recently saved video recording quickly, hold down "Shift" when you press the button.



Rotate the camera image

Rotates the camera image clockwise. To rotate anticlockwise, hold down Shift when you press the button. To rotate steplessly, hold down Ctrl.



Mirror the camera image

Press again to reverse the mirror image.





Freeze the camera image

Press again to release the freeze.



OCR process (Only shown if the system has a licence for OCR)

When OCR processing is complete, the programme changes to the OCR tab and the text is read. If there is already text under the OCR tab this is replaced. Hold down Shift when you press the button to insert the text on a new page.



Whole image (Only shown if the system has a licence for OCR)

When this is active, the whole camera image is shown. Otherwise edit in the image, depending on how large the camera window is.



Notepad

Opens images from the camera in the notes tool.



Next split screen mode

Switches to the next split screen mode. In order to switch to the previous mode, hold down Shift when clicking on the button.



Always on top

Activates/deactivates "always on top"



Help

Opens the user guide in the standard application for showing PDF files.



8.5.1.2 OCR tab

The following tab is only shown if the system has an OCR licence.















Save documents

A dialogue box opens. A file name (today's date and time) is suggested automatically. It is possible to save the text as a Word file (.docx), PDF file, text file (.txt), WAV file (.wav) or zip file.

Open document (with OCR processing)

A dialogue box opens. From the dialogue box, select the file you wish to open. It is possible to open PDF files and image files, .bmp, .jpg, .png, .gif and .tiff, as well as saved zip files.

Change colours

Changes colours of the OCR processed text.

Font

Used to change the font of the OCR text. It is also possible to choose bold and italic text. The used font does not impact the OCR result.

Start/Pause reading

Stop reading

The next reading will begin from the start of the text.

Change display mode

Changes the display mode for OCR processed text. The display modes available are "page view", "row view", "word view", "image view", "image and word" and "image and row".



















Silent display mode

Switches to silent display mode. There are two silent modes; one where the text is moved horizontally on one line and one where the text is moved vertically in a column.

Read previous

With this button, the user can go backwards through the text. If the reading mode is set as character, one character is read for each keystroke. If the reading mode is word, you move backwards through the text word by word. If the reading mode is sentence, you move backwards one sentence. If the reading mode is block, you move backwards one block.

Read next

With this command, the user can move forward in the text. If the reading mode is set as character, one character is read for each keystroke. If the reading mode is word, you move forward through the text word by word. If the reading mode is sentence, you move forwards one sentence. If the reading mode is block, you move forwards one block.

Switch reading mode

This command selects the reading mode that is to be employed when the "Read previous" or "Read next" command is entered. The modes available are: character, word, sentence, block and view. The modes that can be selected change depending on the display mode.

Volume and speed

The upper slider sets the volume and lower regulates the speed of the speech.

Pages

Shows all OCR processed pages. Click one of the pages to change page.

Notepad

Opens the OCR page in the Notes tool. Hold shift to open all pages.

Next split screen mode

Switches to the next split screen mode. In order to switch to the previous mode, hold down Shift when clicking on the button.





Always on top


Activates/deactivates "always on top"



Help

Opens the user guide in the standard application for showing PDF files.

8.5.1.3 Notepad tab

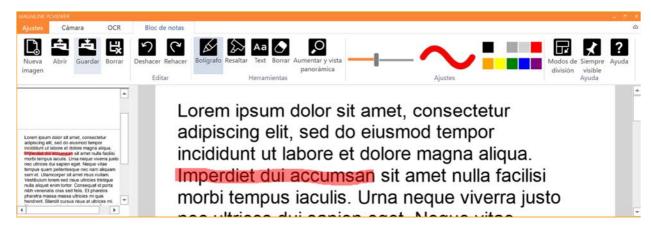

The notes tool consists of three components.

- At the top is a menu bar with buttons.
- On the left is a list of pictures. By clicking a picture, you can navigate to it. You can delete an image by clicking in the upper right corner.
- A surface where you can draw, enlarge and pan in the picture.



New image

Opens a new blank page.



Open

Opens the bild. The system can open images in .jpg and .png format.





Save image

The system can save images in .jpg and .png format.



Delete

Deletes the current page.



Undo



Restore

Restores after pressing undo.



Pen

Draw with a pen.



Highlight

Highlight with a highlighter.



Text

Insert text. You can move text around after inserting.



Delete



Magnify and pan

Magnify and pan the image.



Size

Sets the size of pens and text.





Color

Changes the pen and text colour



Next split screen mode

Switches to the next split screen mode. In order to switch to the previous mode, hold down Shift when clicking on

the button.



Always on top

Activates/deactivates "always on top"



Opens the user guide in the standard application for showing PDF files.

8.5.2 Functions via the keyboard

Most functions can be handled using the keyboard. The shortcut commands can be changed in settings. Below are the standard settings for shortcut commands.

F1 Natural colours

F2 Positive colours forwards

Shift + F2 Positive colours backwards

F3 Negative colours forwards

Shift + F3 Negative colours backwards

Up arrow Increase magnification

Down arrow Reduce magnification

Ctrl + O Overview mode

C Change camera

Χ Change split mode

Ζ Change image source

Shift + left arrow Move split left/up

Shift + right arrow Move split right/down



Ctrl + 1 Save position 1

Ctrl + 2 Save position 2

Ctrl + 3 Save position 3

Shift + 1 Go to position 1

Shift + 2 Go to position 2

Shift + 3 Go to position 3

Ctrl + J Autofocus on/off

Shift + up arrow Reduce focus distance

Shift + down arrow Increase focus distance

Right arrow Increase brightness/contrast

Left arrow Reduce brightness/contrast

Ctrl + left arrow Reference line left/up

Ctrl + right arrow Reference line right/down

Ctrl + 6 Reduce lamp brightness

Ctrl + 7 Increase lamp brightness

Ctrl + R Rotate image clockwise

Ctrl + Shift + R Rotate image anti clockwise

R Rotate image clockwise steplessly

Shift + R Rotate image anticlockwise steplessly

Ctrl + I Mirror camera image

Ctrl + F Freeze camera image

Ctrl + A Always on top

Ctrl + H Hide menus

F12 Open user guide

F9 Settings

F11 Standard settings

F7 Take a picture and open in Notepad

Ctrl + C Copy image or text

Ctrl + M Minimise application

F8 Next view



Ctrl + F8 Previous view

Ctrl + Minus Reduce menu size

Ctrl + Plus Increase menu size

F5 Save picture

Shift + F5 Save picture quickly

F6 Open picture

Shift + F6 Open picture quickly

Ctrl + F5 Start video recording

Ctrl + Shift + F5 Start video recording quickly

Ctrl + F6 Open video

Ctrl + Shift + F6 Open video quickly

The following commands are only available together with cameras that are licensed for OCR.

F4 Start OCR

The text from OCR processing replaces existing text.

Shift + F4 Start OCR enter

The text from OCR processing is entered on a new

page.

Ctrl + L Whole image

Changes between whole image and cropped image.

Ctrl + V Paste

The pasted text replaces existing text.

Ctrl + Shift + V Paste and add

The pasted text is added to a new page.

Ctrl + S Column selector

Activates or deactivates the column selector. When the column selector is active, only those columns that are intersected by the column selector are OCR-processed.

V Changes between camera tab and OCR tab

Alt + F5 Save documents

Alt + F6 Open documents

Up arrow Increase magnification

Down arrow Decrease magnification



Shift + Plus Increase font size

Shift + Minus Decrease font size

1 Start reading

2 Stop reading

B Change display mode

N Silent mode

3 Read previous

4 Read next

5 Switch reading mode

Page Down Next page

If several pages have been scanned, you move to the

next page.

Page Up Previous page

If several pages have been scanned, you move to the

previous page.

Delete Remove current page

If several pages have been scanned, you remove the

current page.

8 Reduce volume

9 Increase volume

6 Reduce speaking speed

7 Increase speaking speed

Ctrl + 0 Next voice

A Pan left

(If the document is magnified)

D Pan right

(If the document is magnified)

W Pan up

(If the document is magnified)

S Pan down

(If the document is magnified)

The following commands are used to control Notepad functions.

Ctrl + N New Page



Ctrl + O Open image

Ctrl + S Save image

Ctrl + Z Undo

Ctrl + Shift + Z Redo

Ctrl + P Select pen tool

Ctrl + L Select the highlighter tool

Ctrl + T Select text tool

Ctrl + E Select the eraser tool

Ctrl + F Select the pan tool

8.5.3 Functions via the mouse

Certain functions can be controlled with the mouse.

In camera mode.

- Pan the image using the left mouse button.
- Zoom in or out using the scroll wheel.
- Zoom using the right mouse button.

In OCR mode

- Start och stop the speech using the left mouse button.
- The scroll wheel can be used to enlarge or shrink the image and font size.
- By holding down the right mouse button or scroll wheel and then moving the mouse cursor you can pan in the picture (If it is enlarged).

Open documents by dragging and dropping it into the application.



8.5.4 Using the hand held control



The hand held controller can be connected to your computer via USB or Bluetooth.

The left trigger (VA) and right trigger (HA) modify the commands of the other buttons.

You can also press the left and right joysticks. They are then referred to as the left and right control buttons.

General

VA + HA + Left edge button Change left between tabs.

VA + HA + Right edge button Change right between tabs.

Left joystick Used to pan.

Right joystick Move the stick up or down to change the

magnification. Move the stick left or right to

change the contrast mode.

Up button Natural colours

Down button Artificial colours

Menu button Open settings Press again to exits the

settings.

Back button Shows and hides the menu.



Camera view

VA + Right joystick Move the stick up or down to change manual

focus.

Left edge button Change image source.

VA + Left button Change split position.

HA + Left edge button Rotate the camera image.

VA + Left edge button Change image source (if there are more than

two sources).

Right edge button Change split mode.

VA + Right button Change split position.

HA + Right edge button Rotate the camera image.

Left button Move the reference line left/up.

Right button Move the reference line right/down.

Right joystick Change to overview mode.

VA + Right control button. Change full-screen.

Left control button Change autofocus.

VA+ Left control button Image mirroring.

HA + Left control button Freeze the image.

VA + X button Save position 1

X button Go to position 1

VA + Y button Save position 2

Y button Go to position 2

VA + B button Save position 3

B button Go to position 3

A button Start OCR

OCR view

Left button Read previous.

Right button Read next.

VA + Left button Slow down speech.

VA + Right button Increase speech.



VA + Down button Reduce volume.

VA + Up button Increase volume.

X button Stop speech.

Y button Start/Pause speech.

B button Change reading mode.

A button Change display mode.

VA + A button Change to silent mode.

VA + Right joystick Move the stick up or down to change the font

size.

In the settings

Right edge button Like Tab on a keyboard. Used to tab to the

next control.

Left edge button Like Shift + Tab on a keyboard. Used to tab to

the previous control.

Left button Like left arrow key on a keyboard. Used to set

the value of a control.

Up button Like up arrow key on a keyboard. Used to set

the value of a control.

Right button Like right arrow key on a keyboard. Used to set

the value of a control.

Down button Like down arrow key on a keyboard. Used to

set the value of a control.

A, B, X and Y buttons Like space on a keyboard. Used to activate a


control.



8.5.5 Information and settings window

The Information and settings window consists of a number of different tabs that contain application information and alternative settings.

8.5.5.1 About the application

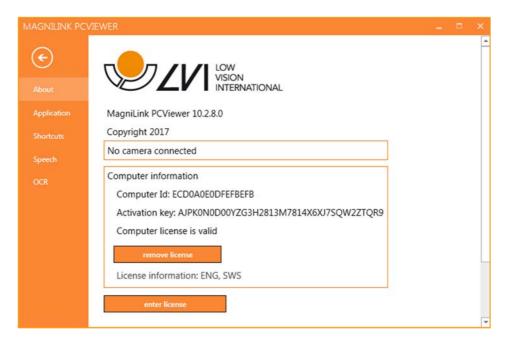


Information regarding the software version and license can be found under this tab.

To deactivate a computer license, press "remove license". The license will then be deactivated on the server and it will be possible to activate it on another computer.

If you want to update the camera license or activate a computer license, you can do it by pressing the "enter license" button.



8.5.5.2 Application Settings

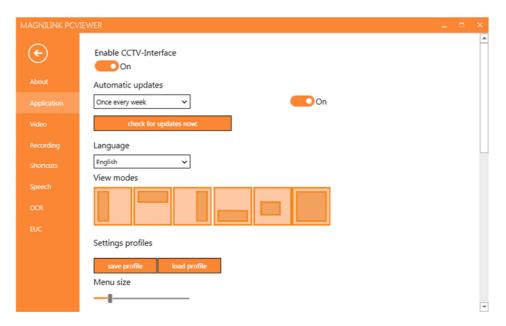

Activate CCTV interface

If this function is activated, MagniLink PCViewer supports working with the magnification software from ZoomText and SuperNova.

Automatic updates

This can be set if MagniLink PCViewer is to search for updates. You can also set how often it will search: "Once per day", "Once per week" or "Once per month". You can also choose to make updates manually by clicking "search for updates now" (note: an internet connection is needed for both automatic and manual updates).

Language

Change the language of the software. The software is set to use the same language as the computer's default. If this language is not available, English is automatically selected as default.

Available languages:

- English
- German
- Danish
- Spanish
- Finnish
- French
- Dutch



- Norwegian
- Swedish

Split screen mode


It is possible to choose the mode you want when changing split screen mode.

Settings profiles

It is possible to save and load settings profiles.

Menu size

The size of the menus and buttons can be changed here.

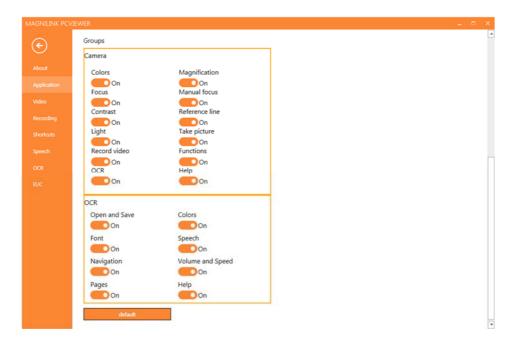


Groups

40

It is possible to choose which groups of buttons appear in the menus.



8.5.5.3 Video Settings

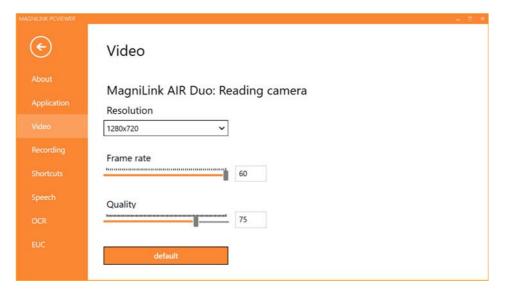

Resolution

Select from the camera's various resolution options. At resolution 1280x720, the frame rate can be set up to 60 Hz. At resolution 1920x1080, only 30 Hz is possible.

Frame rate


This setting allows the user to limit the frame rate. For the best video quality, the frame rate should be 60 Hz, but it may be appropriate to set the frame rate at 30 Hz for computers with a lower level of performance.

Quality

Depending on performance, you may want to use a lower video quality.



8.5.5.4 Recording Settings

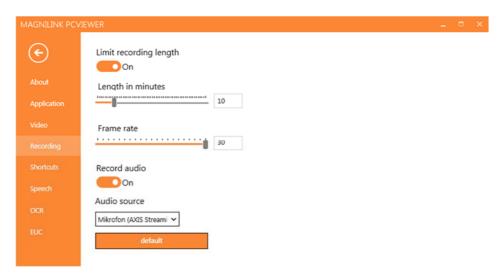

Limit recording length

Activate this function if you wish to limit the length of recording.

Length in minutes

If you chose to limit the recording length, you can set the limit in minutes here, from 1 to 60 minutes.

Frame rate

The recording frame rate, the number of images recorded per second, can be set from 10 to 30 frames per second. A lower frame rate means a poorer quality video recording, but takes up less space on the hard disc.

Record sound


If your computer has a microphone (internal or external), sound can be added to the recording.

Sound source

Select which microphone is to be used to record sound for the video. Normally only one sound source may be selected.




8.5.5.5 Short cut commands

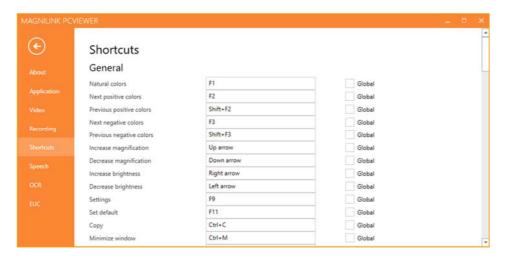

Here the short cut commands used for the application can be changed. To change a short cut command, tab to the command that is to be changed and enter the new keyboard combination. It is possible to set two different combinations for the same command. If a combination already being used for another command is entered, the other command will be erased. A new keyboard combination will need to be entered for the other command.

It is also possible to make a keyboard shortcut global. A global keyboard shortcut can be used also when the application is inactive.

8.5.5.6 Speech Settings

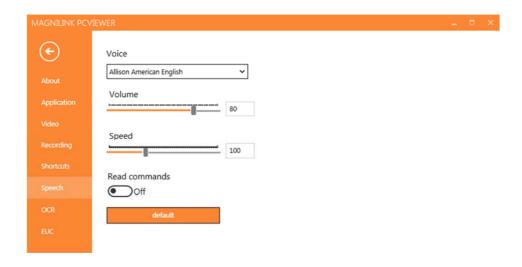

Voice

If several voices are available, the user can choose between them.



Volume

Setting the sound level of the voice.

Speed

Setting the speaking speed.

Read command

When this is checked, the application reads out the menus when you use them.

8.5.5.7 OCR Settings



Font

Here the user can set which font is to be used to display the OCR processed text. The font that is used has no effect on the result of the OCR processing.

Column mode

When this setting is active, the OCR engine processes the text by column, which is useful if text from a newspaper is to be OCR processed.

Start speech after OCR

If this box is ticked, text will automatically be read aloud after an image has been OCR processed.

Automatic language identification

When this function is activated, the application attempts to identify the language that has been OCR processed and change the voice accordingly.



8.5.5.8 EUC



The camera can be configured under this tab. If you wish to save changes in the camera, press "Save". When you do this, the camera restarts and the configuration has been saved.

Artificial colours

It is possible remove and change the cameras artificial colours.

- To remove a colour combination, press X
- To add to a colour combination, press enter.
- To change a colour combination, press one of the triangular zones and a colour dialogue will appear. Select colours and press OK.
- To remove either the positive or the negative component. Click out box P or N.
- To restore the colours, press Standard.

Grey scale

Choose if you wish to have grey scale or not.

Reference line

Set the size and colour of the reference line and choose if you wish to have reference line, bar or both.

Magnification

Set the maximum and minimum magnification.



8.5.6 Quality of OCR processing

In order to optimize the results of the OCR conversion, you should bear in mind the following.

- Ensure the magnification is sufficient. Very small text produces poor results in the OCR software. A minimum of 12pt is recommended for the lowest magnification on the reading camera.
- Avoid glossy paper as this results in reflections in the image. This
 impairs the results of the OCR conversion. If you intend to use
 glossy paper, we recommend that the light on the unit is switched
 off.
- Certain fonts can be difficult for the OCR engine to interpret.
- It is important that the text contrast is sufficient.
- It is important that the OCR engine's language is the same as that of the text.
- The camera's resolution should be set to at least 1280x720, see Video settings for more information.




8.6 Update software

When a new version of the software is released, an update can be made. Follow the instructions below when the application finds a new version.




Click "Next" in the dialogue box "Welcome". If there is an update, the following dialogue box is shown.



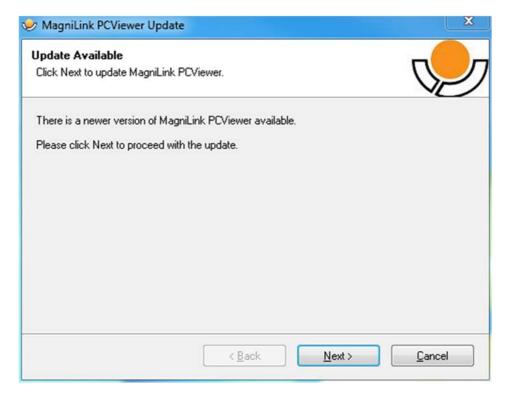

Click "Next" in the dialogue box "Update available" to start downloading the update.

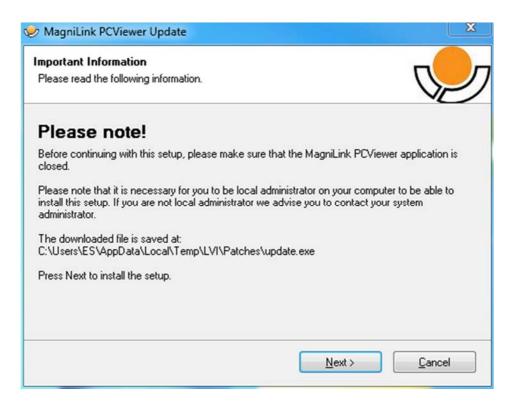


Ensure that you close MagniLink PCViewer before clicking "Next" in the dialogue box "Important information".





Click "Next" in the dialogue box "Welcome to the Patch for MagniLink PCViewer".

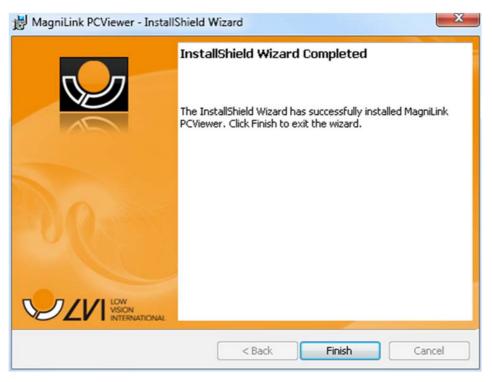

Click "Finish" in the dialogue box "Installshield Wizard Completed".



9 Ergonomics

Your reading camera is now ready to use. It is important that the workplace around your MagniLink is comfortable, and that you sit correctly. This is so that you can use the camera for as long as possible without putting undue strain and stress on your neck and back.

You should bear the following in mind:

- Your chair should be positioned close to the table on which the equipment is located, and you should not sit in the chair for too long. We recommend a good office chair with adjustable height.
- The seat of the chair should be at a height that does not cause your legs to become numb; legs should be at an angle of 90 degrees and you should rest your feet on the floor.
- The reading table should be at a height at which you can rest your lower arm horizontally on it. It is important that the table is neither too high nor too low for you. The ideal solution is if the screen is slightly below eye level and in as straight a line in front of you as possible.
- Shield off daylight. Lights in the ceiling, table lamps and light from windows can cause reflections on the monitor. For this reason, avoid placing lights where they shine directly at the screen or at yourself.
- If you use the device for long periods of time, there is a risk of repeated movements causing you pain in your neck, shoulders and back. Your eyes can also get tired from looking at a screen for too long.



10 Technical information

Magnification, distance camera 30x optical zoom + 12x digital zoom

Resolution, distance camera HD (1280x720)

Frequency, distance camera 50 Hz

Weight, distance camera 2 kg


Power source AC

Power consumption 30 W

Acceptable temperature ranges Transport and storage $-20 \,^{\circ}\text{C} - +60 \,^{\circ}\text{C}$

Operation: +5 °C - +35 °C



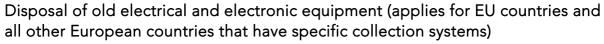

If the product or its packaging has this symbol on it, it is not to be handled as regular domestic waste. It should instead be deposited at a suitable collection centre for the recycling of electrical and electronic equipment. By ensuring that this product is properly taken care of, you are helping to prevent the negative impact on health and the environment that might otherwise result from inappropriate disposal of this product. Recycling helps in the management of our natural resources. For more detailed information regarding the recycling of this product, you can contact your municipality, your waste management company or the store where you purchased the product.



11 Declaration of Conformity

DECLARATION OF CONFORMITY

Manufacturers name:		LVI Low Vision Inte	ernational AB
Manufacturers Address	5:	Verkstadsgatan 5 S-352 46 Växjö Sweden	
Web:		http://www.lviglo	bal.se
SRN (Single Registratio	n Number):	SE-MF-000004178	3
Basic UDI-DI (GMN):		7330724MLAIRV9	
Brand name or tradem	ark:	MagniLink	
Product code:		MLAIR	
Classification:		Class 1	
Type of equipment:		Reading Aid	
Conformity assessment route:		LVI Low Vision International AB uses the following procedures for the CE-labeling of their products according to the Regulation MDR 2017/745:	
		Class [1]: EC conford Annex I + Annex II +	mity declaration according to Annex VII
hereby declare that he med	lical device(s) specified es. This declaration is	d above meet the prov supported by the Qua	LVI Low Vision International AB. We vision of the Regulation (EU) MDR lity System approval to ISO 9001 mises of the manufacturer.
Manufacturer	Manufacti	urer's authorized r	epresentative
Date	Signature		Position
8-06-2021		n	Managing Director
	Clarification		
	Henrik Blomdahl		



Alphabetical index

About LVI	5
About the application	38
Accessories	
Application Settings	39
Camera tab	
Cleaning	7
Computer license	19
Connection	14
Control unit	14
Declaration of Conformity	52
Ergonomics	
EUC	45
Functions via menus	21
Functions via the keyboard	30
Functions via the mouse	
Information	7
Information and settings window	38
Installation of software	16
Introduction to MagniLink AIR	6
Licensing	19
MagniLink AIR Distance	12
MagniLink PCViewer	15
Minimum system requirements	15
Notepad tab	28
OCR Settings	44
OCR tab	26
Packaging	9
Quality of OCR processing	
Recommended system requirements	15
Recording Settings	42
Reuse, installation and maintenance	7
Safety information	7
Short cut commands	43
Speech Settings	43
Technical information	
Unpacking	9
Update software	
Using the hand held control	35



Using the software	. 21
Video Settinas	.41